

Quick Start Guide

For more information about how to use the cellphone, please go to www.alcatelone-touch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.



ALCATEL one touch

English - CJB31H1ALAAA

Table of contents	
1	Your cellphone..... 3
2	Getting started..... 8
3	Making a call..... 10
4	Message..... 10
5	Email..... 11
6	Palringo..... 12
7	Contacts..... 12
8	Call log..... 13
9	Media applications..... 13
10	Internet..... 14
11	Entertainment..... 16
12	Camera..... 17
13	Profiles..... 17
14	File manager..... 17
15	Bluetooth..... 18
16	Wi-Fi..... 18
17	Others..... 18
18	Settings..... 20
19	Making the most of your cellphone..... 21
20	Latin input mode..... 22

Your cellphone.....

1.1 Keys and connectors

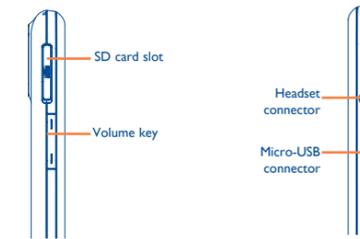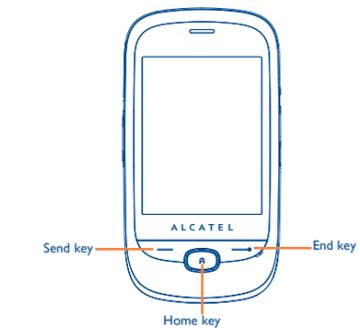

- Answer/Send a call
- Enter Call log
- Press to light up the cellphone screen
- Press: End a call
- Lock the screen
- Return to the previous Home screen
- Press to light up the cellphone screen
- Press and hold: Power on/off
- Press to return to the middle Home screen
- Press to light up the cellphone screen
- Volume up/down
- Zoom in/out
- Scroll up/down
- Press to light up the cellphone screen

1.2 Home screen

You can bring all the items (shortcuts and widgets) you love or use most frequently to your Home screen for quick access.



The Home screen is provided in an extended format to provide you with more space for adding widgets and shortcuts. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the bottom of the screen indicate which screen you are viewing.

1.2.1 Status bar icons⁽¹⁾

- Battery charge level**
- Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm.
- Bluetooth status (Activated).**
- Bluetooth status (Connected to an audio device).**
- Java status (Activated).**
- Headset connected.**
- Call forwarding activated:** your calls are forwarded.
- Alarm or appointments programmed.**
- Level of network reception.**
- Wi-Fi connected⁽²⁾.**
- Wi-Fi disconnected⁽²⁾.**
- Voicemail message arrived.**
- Missed calls.**
- Call in progress.**
- Stopwatch is active.**
- Radio is on.**
- Email unread.**

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.
⁽²⁾ Depending on your model.

1.2.2 WAP messages⁽¹⁾.

- Roaming.**
- SD card scanning in progress.**
- SD card scanning completed.**
- SIM card unavailable.**
- Line switching⁽¹⁾:** indicates the selected line.
- GPRS connection status (Activated).**
- GPRS connecting.**
- EDGE connecting.**
- EDGE attached.**
- 2G network available.**
- 3G network available.**
- Music player active.**
- MMS receipt in progress.**
- Sending a SMS.**
- Sending a MMS.**
- Silence mode:** your cellphone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.**
- MMS unread.**
- (Flickering) Message list is full:** your cellphone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- Flight mode.**

⁽¹⁾ Depending on your network operator.

3 Making a call.....

To place a call, you may touch from tool bar. Enter the desired number on the on-screen keypad directly or select a contact from Call log or Contacts by touching or respectively, then touch or press key to place the call. The number you entered can be saved to Contacts by selecting . If you make a mistake, you can delete the incorrect digits by touching . To hang up the call, press the key. When making, receiving or during a call, press to return to the middle Home screen, and then touch or press to retrieve the call.

Muting the ringtone
You may mute ringtone of current incoming call by touching . Answer the call by pressing the key.

Rejecting a call
Press the key once to reject the call, or reject call with SMS by touching .

4 Message.....

4.1 Access
You may access this menu using the following options:
- Touch to enter the main menu screen, and then select .
- Access from tool bar by selecting .

4.2 Conversational On (Off) mode

In conversational on mode, you can view chat history in chronological order. In conversational off mode, you can access the following folders: **Inbox, Outbox, Sent, Broadcast SMS, Voicemail, Drafts**, etc. You can switch between these two modes by selecting "Switch view mode" via . Conversational on mode is set as the default mode and the following instructions are based on this mode.

4.3 Write message

Touch to create text/multimedia messages. Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient. An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

Timer send
Schedule an SMS/MMS to be sent out at predefined time (select "Timer send" via .

5 Email.....

Your cellphone has an email client with the settings predefined for a few popular email services like - GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

6 Palringo⁽¹⁾.....

Palringo Instant message (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, GTalk, iChat, etc. Please note that the services accessible to you will depend on your client version and dynamic Palringo server options.

7 Contacts.....

7.1 Consulting your Contacts
To access the Contacts, touch from tool bar to enter the main menu, and select "Contacts".
7.2 Adding a contact
You can add a new contact by touching .

Birthday reminder
You can set a birthday reminder when editing contact information. This will remind you at regular intervals during the day prior to the set date.

7.3 Importing, exporting and sharing contacts

From the cellphone contacts screen, select "More" via and touch "Import from SIM card" or "Export to SIM card". From the SIM contacts screen, select "More" via and touch "Copy to phone". From a detailed Contact view screen, you can share the contact information with others by selecting "Share contact" via and then send it by Bluetooth, MMS, Email, etc.

⁽¹⁾ Depending on your network operator.

8 Call log.....

8.1 Access
You may access this function from the main menu "Call log" or by pressing from the Home screen.
8.2 Available options
When you touch , you may have access to **Delete, Send message, Save to Contacts, Edit before call**, etc.

8.2.1 Billing⁽¹⁾
You can access different items with this option: **Last call cost, Total cost, Max cost, Reset cost, Price per unit, Duration, GPRS counter, Beep duration**.

8.2.2 Call settings⁽¹⁾
You can access a number of items with this option: **Call waiting, Call forwarding, Call barring, Caller ID, Line switching, Auto redial**, etc.

9 Media applications.....

9.1 Music player.....
To access this function, touch to enter the main menu and select . You will have full flexibility of managing music both on your cellphone and SD card.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.
⁽²⁾ Depending on your network operator and market.
⁽³⁾ Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

9.2 Image viewer.....

A library links to the images in "My creations" in cellphone to be shown in list, slide, or thumbnail, set as Wallpaper, Power on/off display, and Contact ID, or sent by MMS, Email, Bluetooth.

9.3 Video player.....
"My videos" album contains video clips recorded, received or downloaded. All video clips in this folder can be played, set as Power on/off display, sent, deleted, renamed, sorted.

9.4 Radio.....
Your cellphone is equipped with a radio⁽¹⁾ with RDS⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

10 Internet⁽³⁾.....

10.1 Opera.....
Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

10.2 Wap.....
Access Wap options: **Homepage, Bookmarks, Go to URL, Last web address, Recent pages, Offline pages, Service inbox, Settings**.

10.3 News.....
It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!
10.4 Weather.....
Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.
10.5 Facebook.....
Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.
To open an account online, please go to: <http://www.facebook.com/>.
10.6 mTweet.....
Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.
To open an account online, please go to: <http://twitter.com/>.

10.7 Snaptu⁽¹⁾.....

Snaptu is a free mobile application platform that turns your favorite websites into ultra fast mobile applications that work on your cellphone. It allows you to access popular services, ranging from social networks like Facebook, Twitter, Flickr and Picasa to entertainment news, blogs, sports and local guides. In addition, cellphone users are free to add or remove application or website links.
To open an account online, please go to: <http://www.snaptu.com/>.

10.8 ShoZu⁽¹⁾.....
ShoZu means you can share the moment, whether it's a photo, video or a blog. You can send your stuff to friends and family, email or social networks simply by pressing the button. Add tags, titles and descriptions before or after uploading them. Then see in real time what your friends are saying about your uploads, and reply to them from your cellphone anywhere and anytime.
To open an account online, please go to: <http://www.shozu.com/>.

11 Entertainment.....

11.1 Stopwatch.....
The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.
11.2 Ebook.....
A bookshelf contains the electronic books (.txt file only). While reading the book, you may add bookmark, or reach the text by searching words, phrases (Options)Find, Options)Jump to).

11.3 Java.....
Your Alcatel cellphone may include⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your cellphone.

11.4 Camera.....
Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:
• store them in your "File manager/My creations".
• send them in a multimedia message (MMS) to a cellphone or an email address.
• send them directly by Email or Bluetooth.
• customize your Home screen.
• select them as incoming call image to a contact in your contacts.
• transfer them by data cable or microSD card to your computer.
• upload them directly to an available SNS⁽²⁾ (Social network service).

⁽¹⁾ Depending on your model.
⁽²⁾ Depending on your model.

2 Getting started.....

2.1 Set-up
Removing or installing the back cover

Inserting or removing the SIM card
You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.

Installing or removing the battery

• Insert and click the battery into place, then close the cellphone cover.
• Unclip the cover, then remove the battery.

2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2.2.2 Status list
Touch the status bar and drag down to open, drag up to close. To open an application, touch it from the list.
2.2.3 Toolbar
Toolbar with 4 fixed shortcuts to access **Main menu, Calls, Message, Edit Home screen**.
2.2.4 Personalize your home screen
Adding items
To add an item, touch and hold an empty area of the Home screen or select from the toolbar.
• **Add shortcuts** To add a shortcut to the Home screen, such as Alarm, Bookmarks, Contacts, etc.
• **Add widgets** To add a widget to the Home screen, such as the World clock, Music player, etc.
Editing/Removing/Re-organizing items
Press and hold the application on the Home screen to edit/remove/re-organize it, touch to edit (only for my favorites), touch to remove. Touch and hold the application and drag it to the location you desire, and then confirm by touching "Done".
Customizing wallpaper
To personalize your wallpaper, you can select one of the following two ways:
• Touch and hold an empty area from the Home screen, select "Wallpaper", then touch a folder to select an image as your wallpaper.
• Touch from the tool bar, select "Wallpaper", then touch a folder to select an image as your wallpaper.

2.3 Charging the battery

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.
2.2 Power on your cellphone
Hold down the key until the cellphone powers on.
2.3 Power off your cellphone
Hold down the key from the Home screen.
2.4 Using the touchscreen
Touch To access an application, touch it with your finger.
Drag Place your finger on the screen to drag the object to the destination.
Scroll Slide the screen to scroll up and down the applications, images, web pages... at your convenience.
⁽¹⁾ Depending on your model.

2 Getting started.....

2.1 Set-up
Removing or installing the back cover

Inserting or removing the SIM card
You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.

Installing or removing the battery

• Insert and click the battery into place, then close the cellphone cover.
• Unclip the cover, then remove the battery.

2.2 Status list
Touch the status bar and drag down to open, drag up to close

