


### Quick Start Guide

For more information about how to use the phone, please go to [www.alcatelonetouch.com](http://www.alcatelonetouch.com) to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.

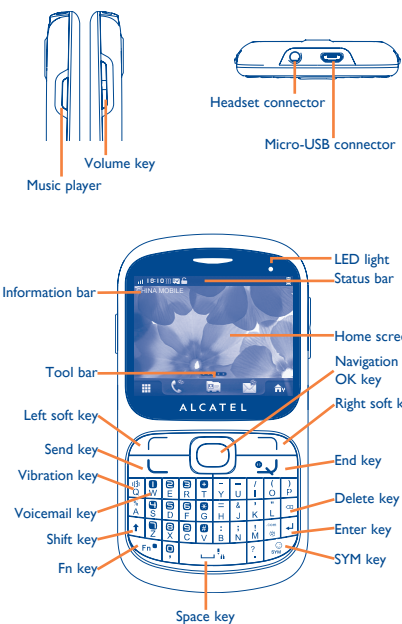

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

ALCATEL one touch.

English - CJB31MIALAA

#### 2.2 Power on your cellphone

Hold down the **Power** key until the cellphone powers on.

#### 2.3 Power off your cellphone

Hold down the **Power** key from the main screen.

#### 2.4 Using the touchscreen

**Tap** To access an application, tap it with your finger.

**Scroll** Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

### 3 Making a call.....

Enter the desired number on the hardware keypad directly. The number you entered can be saved to Contacts by selecting **"Save"**. If you make a mistake, you can delete the incorrect digits by pressing **[Delete]** or **[Back]**. To hang up the call, press the **Power** key.

### 4 Menu arrange.....

The main menu is designed to vary according to your preference. To access this function, select **[Menu]** to enter the main menu, then tap **[Edit]**.

#### Change the order

Access the main menu, focus on the main menu item you want to move, and then tap **"Options|Move"**, it will go to the main menu screen and tick **"v"** will be shown on the main menu you selected, then release it to your favourite destination.

### Your cellphone.....

- Left soft key
- Right soft key
- Answer/Send a call
- Enter Call log
- Short key press: End a call
- Return to the main screen
- Long key press: Power on/off
- Long key press: Access your voicemail

- Press once: Input a capitalized character
- Press twice: Lock the keyboard in capital letter input mode
- Short key press: Press once: Input a top-half character
- Press twice: Lock the keyboard in top-half key input mode

- Fn + B: Access Bluetooth
- Fn + M: Access Music player
- Fn + P: Access Profiles
- Fn + J: Access Java applications
- Navigation key
- Confirm an option (press the middle of the key)
- Short key press: Enter a space
- Unlock the screen
- Long key press: Access language list
- Lock the screen

- Hold down Fn key, then press Space key to select input method
- Enter symbol table
- Hold down Fn key, then press SYM key to enter emotion table
- Confirm an option
- Enter the next line
- Vibration alert

- Volume up/down

- Press to enter Music player

#### Show/Hide

Access **"Menu arrange"**, tap the left check box of the selected menu once to show/hide, then tap **"Done"** to save the operation.

### 5 Messaging.....

#### 5.1 Conversational On (Off) mode

In conversational on mode, you can view chat history in chronological order. In conversational off mode, you can access the following folders: **Inbox, Outbox, Sent, Drafts**, etc. You can switch between these two modes by selecting **"Options|Settings|Conversational mode On (Off)"**. Conversational mode is set as the default mode and the following instructions are based on this mode.

#### 5.2 Write message

Select **"Messaging|Write message"** to create text/multimedia messages. An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

#### Timer send

Schedule a SMS/MMS to be sent out at predefined time (**"Option|Timer send"**).

### 6 Email.....

Your cellphone has an email client with the settings predefined for a few popular email services like - GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

#### 1.1 Status bar icons (1)

##### Battery charge level

**Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm.

**Bluetooth status (Activated).**

**Bluetooth status (Connected to an audio device).**

**Java status (Activated).**

**Headset connected.**

**Keypad & LCD touch locked.**

**Keypad & LCD touch unlocked.**

**Call forwarding activated:** your calls are forwarded.

**Alarm or appointments programmed.**

**Level of network reception.**

**Wi-Fi connected.**

**Wi-Fi disconnected.**

**Voicemail message arrived.**

**Missed calls.**

**Stopwatch is active.**

**Radio is on.**

(1) The icons and illustrations in this guide are provided for information purposes only.

#### Email unread.

#### WAP alerts (1).

#### Roaming.

#### SD card scanning in progress.

#### SD card scanning completed.

#### SIM card unavailable.

#### Line switching (1): indicates the selected line.

#### GPRS connection status (Activated).

#### GPRS connecting.

#### EDGE connecting.

#### EDGE attached.

#### Music player active.

#### Message receipt in progress.

#### MMS receipt in progress.

#### Sending a SMS.

#### Sending a MMS.

#### Silence mode: your cellphone does not ring, beep or vibrate with the exception of the alarm.

#### SMS unread.

#### MMS unread.

(1) Depending on your network operator.

### Internet (1).....

#### 11.1 My friends.....

It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace, etc.

#### 11.2 Opera.....

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

#### 11.3 Wap.....

Access Wap options: **Homepage, Bookmarks, Go to URL, Last web address, Recent pages, Offline pages, Service inbox, Settings.**

#### 11.4 News.....

It is a huge time saver providing news updates from a website in a simple form. Once subscribed to a channel, it gives you the ability to track and manage all your favourite RSS content on your cellphone at anytime, anywhere!

#### 11.5 Weather.....

Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favourite cities.

#### 11.6 Facebook.....

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc. To open an account online, please go to: <http://www.facebook.com/>.

(1) Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

#### (In red) Message list is full: your cellphone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.

#### Flight mode.

#### A2DP connected.

#### Broadcast is on.

#### 1.2 Status list

Tap the status bar and drag down to open, drag up to close.

To open an application, tap it from the list.

#### 1.3 Home screen

##### Adding items

To add an item from the main menu, you can select one of the following ways:

- Tap and hold an item from the main menu list.
- Tap **[Home]** from the tool bar and select **"Add widgets/Add shortcuts"**.
- Touch and hold an empty area from the main screen, select **"Add widgets/Add shortcuts"** from the window that opens, then tap the item you want to add to the Home screen.

##### Editing/Removing items

To edit/remove an item from the main screen, you can select one of the following ways:

Long press the application on the Home screen, touch **[Edit]** to edit (only for my favourites), touch **[X]** to remove, and then confirm by tapping **"Done"**.

Tap **[Home]** from the tool bar and select **"Delete shortcuts and widgets"**.

#### Wallpaper

To personalize your wallpaper, you can select one of the following two ways:

- Touch and hold an empty area from the Home screen, select **"Wallpaper"**, then tap a folder to select an image as your wallpaper.
- Tap **[Home]** from the tool bar, select **"Wallpaper"**, then tap a folder to select an image as your wallpaper.



Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the bottom of the screen indicate which screen you are viewing.

 
#### 1.4 Toolbar

Tool bar with menu items by default as a shortcut for quick access.

## 2 Getting started.....

#### 2.1 Set-up

##### Removing or installing the back cover



#### Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

##### Installing or removing the battery



- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

##### Charging the battery



Connect the battery charger to your phone and mains socket respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

