

one touch | 900A
 one touch | 901A
 one touch | 901S

Quick Start Guide

For more information about how to use the cellphone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.

ALCATEL **onetouch**

English - CJB31NIALAA

Muting the ringtone

To mute ringtone of current incoming call, press Right softkey. Answer the call by pressing the **Send** key.

Rejecting a call

Press the **Send** key once, or reject it by SMS (**Options**|**Reject call with SMS**).

4 Menu arrange

It is designed to vary according to your preference.

Change the order

Access the main menu, focus on the main menu item you want to move, select **Options**|**Move**, and tick "✓" will be shown on the item you selected, then release it to your favorite destination.

Show/Hide

Access the main menu, select **Options**|**Add and remove menu**, and select the left check box of the selected menu once to show/hide, and then select **Done** to save the operation.

5 Messages.....

5.1 Access

You may access this menu using the following options:

- Access from the main menu by selecting **"Messages"**.
- Select **Messages** from widget bar, and then enter the sub-menu you require.

Table of contents

1	Your cellphone.....	3
2	Getting started.....	8
3	Making a call.....	9
4	Menu arrange.....	10
5	Messages.....	10
6	E-mail.....	11
7	Pairing.....	12
8	Contacts.....	12
9	Call log.....	13
10	Media applications.....	13
11	Internet.....	14
12	Entertainment.....	16
13	Camera.....	16
14	Profiles.....	17
15	File manager.....	17
16	Bluetooth™.....	19
17	Wi-Fi.....	19
18	Others.....	19
19	Settings.....	20
20	Making the most of your cellphone.....	21
21	Latin input mode.....	22

Warning: Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

5.2 Conversational On (Off) mode

In conversational mode, you can view chat history in chronological order. In conversational off mode, you may have access to the following folders: **Inbox**, **Outbox**, **Sent**, **Drafts**, **Voicemail**, **Broadcast SMS**, **Empty folder**, **Templates**, **Settings**, etc. Conversational view mode is set as default. You may switch to conventional mode by selecting **Options**|**Settings**|**Conversational mode**|**On(Off)**.

5.3 Write message

You can select **Messages**|**Write message** from the main menu or access from widget **Write** to write text/multimedia message. One or more recipients can be added from contact list and you can remove a recipient by pressing **Back**. Press **Contacts** through **Back** key to multi-select recipients from Contacts.

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted. Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

 
 
Timer send

Schedule a SMS/MMS to be sent out at predefined time (**Options**|**Timer send**).

6 E-mail

Your cellphone has an email client with the settings pre-defined for a few popular email services like – GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

Your cellphone

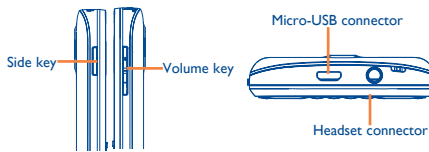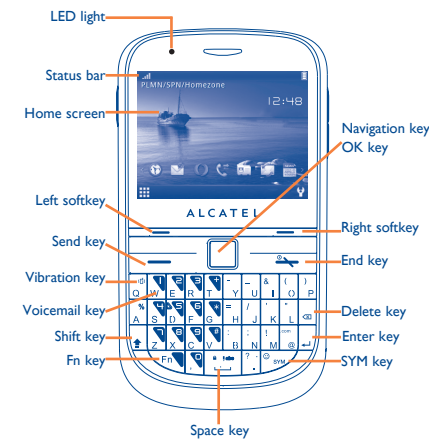

- Flick to go left/right/up/down
- Press to confirm an option
- Answer/Send a call
- Enter Call Log
- Press: End a call
- Return to the Home screen
- Press and hold: Power on/off
- Press and hold: Access your voicemail
- Press once: Input a capitalized character
- Press twice: Lock the keyboard in capital letter input mode
- Press once: Input a top-half character
- Press twice: Lock the keyboard in top-half key input mode
- Fn + B: Access Bluetooth
- Fn + M: Access Music
- Fn + P: Access Profiles
- Fn + J: Access Java applications
- Press: Enter a space (on edit mode)
- Unlock the keypad (on Home screen)
- Press and hold: Access language list (on edit mode)
- Lock the keypad (on Home screen)
- Hold down Fn key, then press Space key to select input method
- Enter symbol table
- Hold down Fn key, then press SYM key to enter emotion table
- Confirm an option
- Enter the next line
- Vibrate alert

⁽¹⁾ The **Send** key mentioned on the following chapters stands for Send key only..

- Volume up/down
- Scroll up/down
- Press to enter One Touch Mail/WAP function ⁽¹⁾
- Status bar icons ⁽²⁾
- Battery charge level
- Vibrate alert: your cellphone vibrates, but does not ring or beep with the exception of the alarm.
- Bluetooth status (Activated).
- Bluetooth status (Connected to an audio device).
- Java status (Activated).
- Headset connected.
- Call forwarding activated: your calls are forwarded.
- Alarm or appointments programmed.
- Level of network reception.
- Wi-Fi connected.
- Wi-Fi disconnected.

⁽¹⁾ Depending on your network operator.
⁽²⁾ The icons and illustrations in this guide are provided for informational purposes only.

- Voicemail message arrived.
- Missed calls.
- Call in progress.
- Stopwatch is active.
- Radio is on.
- Email unread.
- WAP messages ⁽¹⁾.
- Roaming.
- SD card scanning in progress.
- SD card scanning completed.
- SIM card unavailable.
- Line switching ⁽¹⁾; indicates the selected line.
- GPRS connection status (Activated).
- GPRS connecting.
- EDGE connecting.
- EDGE attached.
- 2G network available.
- 3G network available.
- Music active.

⁽¹⁾ Depending on your network operator.

- Sending a MMS.
- MMS receipt in progress.
- Sending a SMS.
- Silence mode: your cellphone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.
- MMS unread.
- (Flickering) Message list is full: your cellphone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- Flight mode.
- Home screen
- You can customize your Home screen by selecting **Widget** through Right softkey.
- 1.2.1 Widget bar
- Widgets are convenient shortcuts for quick access from the Home screen.
- 1.2.2 Change wallpaper
- You can select a folder to choose one image as favorite wallpaper by selecting **"Change wallpaper"**.

2 Getting started.....

2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.



 
Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press the bottom and slide it out.

Installing or removing the battery



Insert and click the battery into place, then close the cellphone cover. Unclip the cover, then remove the battery.

Charging the battery

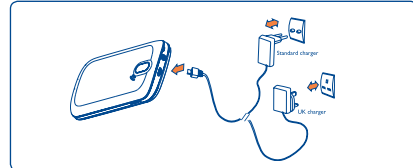

Connect the battery charger to your cellphone and outlet respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi ⁽¹⁾, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

2.2 Power on your cellphone

Hold down the **Send** key until the cellphone powers on.

2.3 Power off your cellphone

Hold down the **Send** key from the Home screen.

3 Making a call

Dial the desired number then press the **Send** key to place the call. The number you entered can be saved to Contacts by selecting **"Save"**. If you make a mistake, you may press Right softkey to delete the incorrect digits one by one, or you may press and hold Right softkey to delete all.

To hang up the call, press the **Send** key.

⁽¹⁾ Depending on your model.

7 Pairing ⁽¹⁾.....

Pairing Instant messaging (IM) allows you to chat with other people using Pairing account. You can also connect to other popular IM services through Pairing, like Yahoo, AIM, GG, ICQ, GTalk, iChat, etc.

Please note that the services accessible to you will depend on your client version and dynamic Pairing server options.

8 Contacts

8.1 Consulting your contacts

You can access to this function from the main menu by selecting **"Contacts"** or select **Contacts** from widget bar, and then enter the sub-menu you require.

8.2 Adding a contact

You can add a new contact by selecting **Options**|**Create new**.

Adding birthday reminder

You can set a birthday reminder when editing contact information. This will remind you at regular intervals during the day prior to the set date.

⁽¹⁾ Depending on your network operator.

9 Call log

9.1 Access

You can access the function using the following options:

- Select **Call log** from main menu
- Press **Call log** key from Home screen
- Select **Call log** from widget bar, and then enter the sub-menu you require.

9.2 Available options

When you press **Options**, you can have access to **Delete**, **Send message**, **Save to Contacts**, **Edit before call**, etc.

9.2.1 Call settings ⁽¹⁾

You can access a number of items with this option: **Call waiting**, **Call forwarding**, **Call barring**, **Caller ID**, **Line switching**, **Auto redial**.

Billing ⁽¹⁾

You can access different items with this option: **Last call cost**, **Total cost**, **Max cost**, **Reset cost**, **Price per unit**, **Duration**, **GPRS counter**, **Beep duration**.

⁽¹⁾ Contact your network operator to check service availability.

10.2 Image.....

A library links to the images in **"My creations"** in cellphone to be shown in list, slide, set as wallpaper, power on/off display and incoming call image or sent by MMS, Email, Bluetooth.

10.3 Video

Contains all video clips both in cellphone and SD card and enables you to play, send, set as power on/off display, delete, rename, sort, etc.

10.4 Radio.....

Your cellphone is equipped with a Radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional Radio with saved channels or with parallel visual information related to the radio program on the display, if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

11 Internet ⁽³⁾

11.1 My friends
 It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace, Flickr, etc.

11.2 Opera
 Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.
⁽²⁾ Depending on your network operator and market.
⁽³⁾ Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

11.3 WAP.....

Access WAP options: **Homepage**, **Bookmarks**, **Go to URL**, **Last web address**, **Recent pages**, **Offline pages**, **Service inbox**, **Settings**.

11.4 News.....

It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!

11.5 Weather.....

Your cellphone is equipped with a weather function for consulting up to 3-day forecast of favorite cities.

11.6 Facebook.....

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.
 To open an account online, please go to: <http://www.facebook.com/>.

11.7 mTweet.....

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.
 To open an account online, please go to: <http://twitter.com/>.

12 Entertainment.....

12.1 Stopwatch.....

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

12.2 Ebook

A bookshelf contains the electronic books (.txt and .pdb file only). While reading the book, you may add bookmark, or reach the text by searching words, phrases (**Options**|**Find**, **Options**|**Jump to**).

12.3 Java

Your Alcatel cellphone may include ⁽¹⁾ some Java™ applications and games. You can also download new applications and games to your cellphone.

13 Camera.....

Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them in your **"File manager|My creations"**.
- send them in a multimedia message (MMS) to a cellphone or an email address.
- send them directly by Email or Bluetooth.
- customize your Home screen.
- select them as incoming call image to a contact in your Contacts.
- transfer them by data cable or microSD card to your computer.

⁽¹⁾ Depending on your country or your operator.

14 Profiles

With this menu, you may personalize ringtones for different events and environments.

15 File manager

You will have an access to all audio and visual files stored in cellphone or SD card in File manager. You can access a number of items with this option: **My audios**, **My images**, **My videos**, **Ebook**, **My creations**, **Others**, **Phone**, **SD card** and **Memory status**.

Inserting the SD card:



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.
 All rights reserved © Copyright 2011 TCT Mobile Limited.
 TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

Warning: Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your cellphone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.



16 Bluetooth™

Access this feature by pressing through Left softkey from the Home screen to enter the main menu, then selecting "Bluetooth".

17 Wi-Fi (1)

To access this function, press to enter the main menu, and select .

18 Others

18.1 Calendar

Once you enter this menu from main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

18.2 Calculator

Access this feature by selecting "Calculator" from the main menu. Enter a number, select the type of operation to be performed using the navigation keys, and enter the second number, then select "=" to display the result.

18.3 Notes

You can create a note in text or voice format by accessing "Notes" from main menu.

⁽¹⁾ Depending on the model.

18.4 Tasks

Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.

18.5 Clock

Your cellphone has a built-in alarm clock with a snooze feature.

18.5.1 Alarm
Your cellphone has a built-in alarm clock with a snooze feature.

18.5.2 World clock
The World clock shows current local time and the time zone in different cities.

18.5.3 Date and time
Allows you to have settings of date and time, including 12/24h format.

18.6 Converter

You can use the Weight and Length conversion by selecting the unit you wish to convert, then press to input the digits. Finally confirm with "OK".

19 Settings

From the main menu, select the menu icon and select the function of your choice in order to customize your cellphone: **Phone settings, Call settings, Security, Network, Connectivity.**

- Service selection** ⁽¹⁾
- GSM/GPRS** Only GSM/GPRS network service is available.
 - WCDMA** Only WCDMA network service is available.
 - Dual mode** Both GSM/GPRS and WCDMA network service are available, with priority to WCDMA.

19

20 Making the most of your cellphone

PC suite
You can download software upgrade for free from the website. The PC suite includes:

- Backup/restore**
You can backup the important data in your cellphone and restore them when needed.
- 3G (WCDMA)/EDGE/GPRS modem**
Use your cellphone to connect PC to the internet.
- Multimedia Personalization**
Customize your cellphone with images, animations and melodies.
- Messages**
You can compose SMS/MMS easily on your PC and transfer them to your cellphone.

Supported Operating Systems
Windows XP/Vista/Windows 7.

One Touch Upgrade
Using One Touch Upgrade tool you can update your cellphone's software from your PC.

Download One Touch Upgrade from ALCATEL website (www.alcatelnetouch.com) and install it on your PC. Launch the tool and update your cellphone by following the step by step instructions (refer to the User Guide provided together with the tool).
Your cellphone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

Webcam ⁽¹⁾
You can use your cellphone as a webcam for instant messaging on your PC.

⁽¹⁾ The using of webcam may vary according to the operating system of your PC.

20

- Connect your cellphone to PC via USB cable.
- Go to "My computer" folder on your PC and find USB video device (Under Scanners & Cameras).

21 Latin input mode

There are two text entry methods that can be used to write messages:

- Normal:** this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
- CooTek mode:** this mode can perform predictive input in hardware keypad and supports multi-language input.

Keypad inputting:

Shift key : Press once: Input a capitalized character
Press twice: Lock the keyboard in capital letter input mode

Fn key : Press once: Input a top-half character
Press twice: Lock the keyboard in capital letter input mode

Del key : Press: Delete one by one
Press and hold: Delete all

Space key : Press: Enter a space
Press and hold: Access language list
Hold down Fn key, then press space key to select input method

Enter key : Confirm an option
Enter the next line

SYM key : Enter symbol table
Hold down Fn key, then press sym key to enter emotion table

21

Alcatel Mobile Phones Limited Warranty

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.
How to obtain Support: Contact the customer care center by calling (877-702-3444) or going to www.alcatelnetouch.com. We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of warranty repair options.
To obtain hardware repairs or replacement within the terms of this warranty, contact TCT Mobile to get an RMA number, include a copy of the original proof of warranty coverage (e.g. original copy of the dated bill of sale, invoice), the consumer's return address, your wireless carrier's name, alternate daytime cellphone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center. TCT Mobile is not responsible for wireless devices that do not arrive at the service center. Upon receipt, the service center will verify the warranty conditions, repair, and return your wireless device to the address provided.

My cellphone will not connect to a network

- Press until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

My screen is difficult to read

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

22

Safety and use

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

***TRAFFIC SAFETY:**
Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless cellphones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

***CONDITIONS OF USE:**
You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts. Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere. When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable

23

medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider. To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage. It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place. Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself. Do not drop, throw or try to bend your cellphone. Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries. Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.
- When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:
 - Take a minimum of a 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

My cellphone will not charge properly

- Make sure that your battery is not completely discharged; if the battery is flat, it may take around 20 minutes to display the battery charge indicator on the screen
- Make sure charging is carried out under normal conditions (0°C (32°F) – +40°C (104°F))
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger in the box
- When abroad, check that the electrical current is compatible

24

Troubleshooting

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the cellphone from time to time to optimize its performance.
- You are advised to fully charge the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect the performance of your cellphone.

and carry out the following checks:

- My cellphone will not switch on**
 - Press until the screen comes on
 - Check the battery charge level
 - Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

My cellphone has not responded for several minutes

- Press the key
- Remove the battery and re-insert it, then switch the cellphone back on

My screen is difficult to read

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

My screen is difficult to read

- Clean your screen
- Use your cellphone in accordance with the recommended conditions of use

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone
- Check the battery charge level

25

- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

Prolonged exposure to music at full volume using the music player with prolonged wear hearing Set your cellphone's volume to its lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and its affiliates.

*** PRIVACY:**
Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

BATTERY AND ACCESSORIES:
Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.

This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:
These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:
Items of equipment with this symbol are not be thrown into ordinary bins if

26

Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the key
- Check the network strength

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

When I select a number from my contacts, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable add a contact in my contacts

- Make sure that your SIM card contacts is not full; delete some files or save the files in the cellphone contacts (i.e. your professional or personal contacts)

My cellphone will not charge properly

- Make sure that your battery is not completely discharged; if the battery is flat, it may take around 20 minutes to display the battery charge indicator on the screen
- Make sure charging is carried out under normal conditions (0°C (32°F) – +40°C (104°F))
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger in the box
- When abroad, check that the electrical current is compatible

27

your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you can learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

*** CHARGERS**
Home A.C./Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F).

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):
Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A
Output: 5V, 400/550 mA
Lithium 1000 mAh

*** RADIO WAVES:**

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone. Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

I am unable to send and receive MMS

- Check your cellphone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters
- Verify the server center number or your MMS profile with your operator
- The server center may be saturated; try again later

The flickering icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the cellphone memory

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my cellphone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

I am unable to connect my cellphone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

I am unable to connect my cellphone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

28

The highest SAR value for this model cellphone when tested is 1.19 W/kg (one touch 901A/one touch 900A), 1.07 W/kg (one touch 901S) for use at the ear and 0.664 W/kg (one touch 901A/one touch 900A), 0.758 W/kg (one touch 901S) for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body (see sheet #193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/pem-ef>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. For other devices, they bear the following statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference (2) this device must accept any interference received, including interference that may cause undesired operation.

29

I am unable to download new files

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

The cellphone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your cellphone is visible to other users

My cellphone is frozen, can't power on

- Make sure your battery is not completely used up or damaged
- Remove your battery, remove your SIM card then reinstall them to power on again
- Hold down # and press power on/off key at same time to reset it

ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently.

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Switch on the backlight up to request.
- Extend email auto-check interval to as long as possible.
- Update news, weather information upon demand manually or set its auto-check interval longer.
- Exit Java background-running applications if unused for a long time.
- Deactivate Bluetooth when not in use.

30