

one touch | 909B

www.alcatelonetouch.com

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade, etc.

ALCATEL **onetouch.**



my world in one touch

ALCATEL **onetouch.**

Table of Contents

Safety and use.....	4
General information	10
1 Your Cellphone.....	12
1.1 Keys and connectors.....	12
1.2 Getting started	14
1.3 Home screen.....	18
1.4 Applications list.....	27
2 Text input.....	29
2.1 Using Hardware Keyboard.....	29
2.2 Using Onscreen Keyboard.....	30
2.3 Text editing.....	31
3 Phone call, Call log and Contacts.....	32
3.1 Phone.....	32
3.2 Call log.....	37
3.3 Contacts.....	37
4 Google Messaging, Gmail/Email, Google Talk	45
4.1 Google Messaging	45
4.2 Gmail/Email	51
4.3 Google Talk.....	56
5 Google Calendar & Alarm clock & Calculator	59
5.1 Google Calendar	59
5.2 Clock.....	61
5.3 Calculator.....	63
6 Getting connected	65
6.1 Connecting to the Internet	65
6.2 Browser.....	67
6.3 Connecting to Bluetooth devices	74

6.4 Connecting to a computer via USB.....	75
6.5 Sharing your cellphone's mobile data connection.....	77
6.6 Connecting to virtual private networks.....	78
7 Android Market	80
7.1 Locate the item you want to download and install.....	80
7.2 Download and install.....	81
7.3 Manage your downloads.....	83
8 Multimedia applications	85
8.1 Camera/Camcorder.....	85
8.2 Gallery	88
8.3 YouTube.....	90
8.4 Music	91
8.5 Sound Recorder	94
8.6 Videos	94
9 Google Maps.....	95
9.1 Get My Location	95
9.2 Search for a location	96
9.3 Star a location.....	97
9.4 Get driving, public transport or walking directions.....	98
9.5 Arrangement of Layers	100
9.6 Join Latitude to see your friends' locations and share yours with them.....	101
10 Others	104
10.1 FileManager.....	104
10.2 Notes	104
10.3 SyncMLClient	105
10.4 FmRadio.....	105
10.5 Traffic Manager.....	107
10.6 LEDTorch	107
10.7 Other applications	107
11 Settings	108
11.1 Wireless & networks	108

11.2	Call settings	110
11.3	Sound	112
11.4	Display	113
11.5	Location & security	113
11.6	Applications	115
11.7	Accounts & sync	117
11.8	Privacy	118
11.9	SD card & phone storage	119
11.10	Language & keyboard	120
11.11	Voice input & output	124
11.12	Accessibility	125
11.13	Date & time	126
11.14	About phone	127
11.15	Home screen settings	127
12	Making the most of your cellphone	128
12.1	PC suite	128
12.2	One Touch Upgrade	129
13	Alcatel Mobile Phones Limited Warranty	130
14	Accessories	132
15	Troubleshooting	133
16	Specifications	137

Safety and use.....

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless cellphones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage. It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.

Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not use the cellphone if the glass made screen, is damaged, cracked or broken to avoid any injury. Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by

TCT Mobile Limited and its affiliates and are compatible with your cellphone model.

TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones.

All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to its lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and its affiliates.

• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

• **BATTERY AND ACCESSORIES:**

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).

- Do not puncture, disassemble or cause a short-circuit in a battery.

- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment

- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• CHARGERS

Home A.C./Travel chargers will operate within the temperature range of 0°C (32°F) to 40°C (104°F).

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 550/1000 mA

Battery: Lithium 1300 mAh

• RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone.

Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested for use at the ear is 1.24 W/Kg @ 1 gram and when properly worn on the body is 1.22 W/Kg @ 1 gram

To meet RF exposure guidelines during body-worn operation, the device should be positioned at least 1.5cm away from the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 15 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 15 mm away from the body.

• LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

one touch 909B

Bluetooth QD ID B018148



TouchPal™ and CooTek™ are trademarks of Shanghai HanXiang (CooTek) Information Technology Co., Ltd. and/or its Affiliates.



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Google, the Google logo, Android, the Android logo, Google Search™, Google Maps™, Gmail™, YouTube, Android Market, Google Latitude™ and Google Talk™ are trademarks of Google Inc.

Hearing Aid Compatibility

Your cellphone is rated: «For Hearing Aid», to assist hearing device users in finding cellphones that may be compatible with their hearing devices.

One touch 909B is HAC M3 and T3 compatible.

For more information please refer to «Hearing Aid Compatibility with Mobile Phones» leaflet or visit our website <http://www.alcatelonetouch.com>

General information

- **Website:** www.alcatelonetouch.com
- **Facebook:** <http://www.facebook.com/alcatelonetouchusa>
- **Twitter:** <http://www.twitter.com/alcatel1touch>
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com

Your cellphone is a transceiver that operates on following networks:

CDMA in dual-band (850/1900MHz) (BC0/BC1)

Protection against theft ⁽¹⁾

Your cellphone is identified by an MEID (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

⁽¹⁾ Contact your network operator for service availability.


Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

Your Cellphone

1.1 Keys and connectors

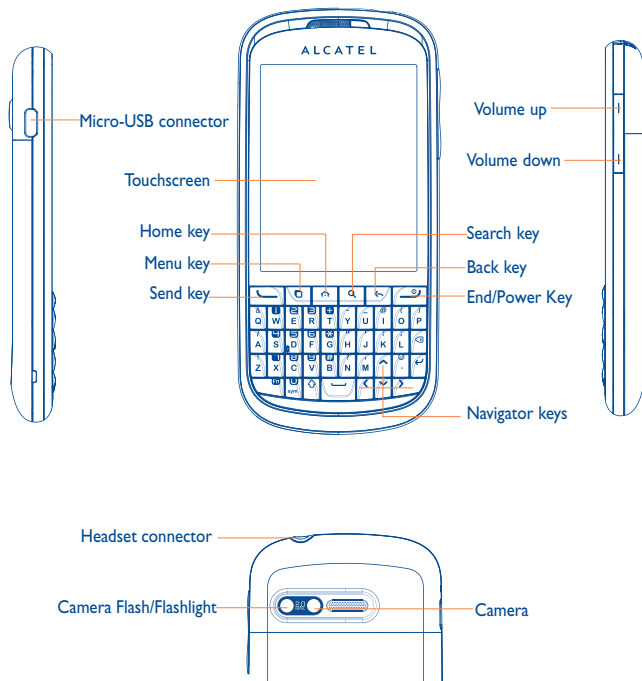



Send key

- Go to the Phone Dial screen when in the Home screen;
- Go to the call log when you have missed call(s);
- Pick up an incoming call;
- Send an outgoing call;
- Swap two calls when one is put on hold and the other is activated;
- While in a call, press to put the call on hold, and press again to resume the call.



Menu key

- Open a list of actions which the user can do on the current screen or the options menu.



Home key

- While on any application or screen, press to return to the Home screen;
- Press and hold to open the recently-used applications window.
- When the screen is locked and the backlight is off, press **Home** or **Power/End** key to light the screen.



Search key

- Search information on the current screen or application.



Back key

- Press to go back to the previous screen, or to close a dialog box, options menus, the notification panel, or the onscreen keyboard.



Power / End key

- Short press: End a call
While incoming call, refuse the call
Lock the screen
- Long press: Show the pop-up menu to select
Silent mode/ Airplane mode/Power off
Power on



Volume Keys

- When in call mode, adjust the earpiece or headset volume
- In Music/Video/Streaming mode, adjust the media volume
- In general mode, adjust the ring tone volume




Navigation Keys

- Press the relevant direction (up, down, right, left) to navigate in various functions


1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover

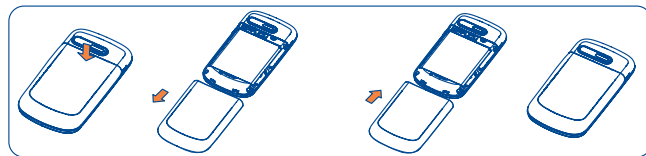

Installing or removing the MicroSD card

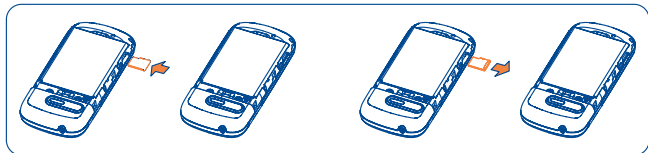

Insert the MicroSD card with golden contact facing downwards into the slot until it is locked. Gently push the memory card until it is unlocked.



To remove the MicroSD card while the cellphone is on, you must unmount the storage card from the cellphone first (refer to “To safely remove the MicroSD card from your cellphone”), to prevent corrupting or damaging the storage card.


Installing or removing the battery

Please power off your cellphone before removing the battery.




- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

Charging the battery

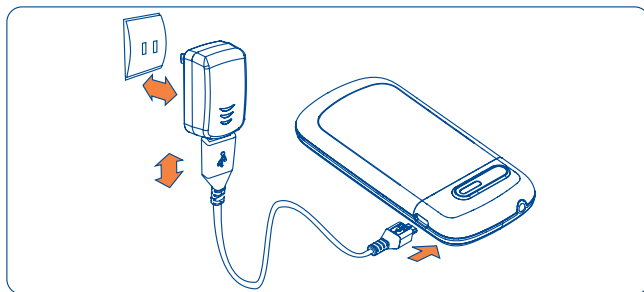

Connect the battery charger to your cellphone and AC power outlet respectively.


- The cellphone will be switched on when charging the battery.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the cellphone and easily accessible (avoid electric extension cables).
- When using your cellphone for the first time, charge the battery fully (approximately 4 hours).

You are advised to fully charge the battery (). Charging status is indicated by the depth of water on the lock screen. The depth increases as the cellphone is charged.



To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.


1.2.2 Power on your cellphone

Press and hold the  key until the cellphone powers on. The Home screen is displayed.

Set up your cellphone for the first time

The first time power on the cellphone, you should set your preferences:

- **Select your Language:** to select the language, then touch **Next**.
- **Select your Keyboard:** to select Android keyboard or TouchPal Input, then touch **Next**.
- **Mobile Data Connection:** Mark/Unmark the check box to choose the Data Enabled or the Data Roaming, then touch **Next**.
- **Application Sync:** Mark/Unmark the check box to choose the Background Data or Auto-sync, then touch **Next**.
- **Setup your Google Account:** Touch **Setup now** to begin and then sign into your Google account or create a new one. If you forget your password, you can go to <http://www.google.com/> to retrieve it. Touch **Skip** to enter next option.
- **System update:** to set the Auto-check interval as Annual, Once a week, Once per month or Three months, then touch **Next**.
- **Date & Time:** to set up the date and time, then touch **Next**.
- To display tips for how to extend the battery life, then touch **Next**.
- To display tips for mobile data usage, then touch **Next**.
- **Learn more:** to display the information about the Help and FAQs, then touch **Finish**.

 This initial set up can be enabled via touching the Application tab from the Home screen and then touch **Setup Wizard**.

1.2.3 Power off your cellphone

Press and hold the  key from the Home screen until the cellphone options appear, and then select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screens for quick access. Press **Home** key to switch to Home screens.



Status bar

- Status/Notification indicators
- Touch and Drag down to open the notification panel.

Search bar

- Touch ① to enter Search options: All, Web, Apps, Contacts, etc.
- Touch ② to enter text search screen.
- Touch ③ to enter voice search screen.

Touch an icon to open an application, folder, etc.

Touch to access **Messaging**

Application tab

- Touch to open main menu.
- Long press to display thumbnails.

Touch to access the Phone Dial screen.

Touch to access the Call log if you have missed call(s).

Home screen is provided in an extended multi-pane format to allow more space for adding applications, shortcuts, etc. Slide the Home screen horizontally left and right to view the other home screen panes. Small dots at the lower left and right of the screen indicate which screen pane you are viewing.

Touch & hold the Application tab to display thumbnails, and touch the thumbnail to open it. Press **Back** key or touch an empty area to return to the Home screen. You can customize the number of home screen panes by **Settings** Home screen settings.

1.3.1 Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, options list will then appear on the screen.

Drag



Place your finger on the screen to drag an object to another location.

Slide/Swipe



Slide the screen to scroll up and down the applications, images, web pages... at your convenience. You can slide the screen horizontally too.

Flick



Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



Automatically change the screen orientation from portrait to landscape by turning the cellphone sideways to have a better screen view.

1.3.2 Status bar

From status bar, you can view both cellphone status (on the right side) and notification information (on the left side). When the status bar is full, “+” icon will appear, touch to display hidden icons.

You can touch twice an empty area on the Home screen to hide/show the Status bar.

Status icons


	EvDo connected		GPS is on
	EvDo in use		Receiving location data from GPS
	CDMA 1x connected		Speakerphone is on
	CDMA 1x in use		Roaming
	Connected to a Wi-Fi network with signal level indication		No signal
	Bluetooth is on		Signal strength
	Connected to a Bluetooth device		Ringer is silenced
	Bluetooth headset with battery level indication		Cellphone microphone is mute
	Vibrate mode		Battery is very low
	Airplane mode		Battery is low
	Car mode		Battery is partially drained
	TTY mode		Battery is full
	Notify adb		Battery is charging
	Throttled notify		Headset connected
	Alarm is set		

Notification icons

	New Gmail message		More notifications are hidden
	New Email		BT transfer error
	New text or multimedia message		Call in progress (green)
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset (blue)
	New Google Talk message		Missed call
	New voicemail		Call on hold
	Upcoming calendar event		Call forwarding is on
	Prepare MicroSD card		Data is synchronizing
	No MicroSD card installed or with USB connected		Problem with sign-in or synchronization
	MicroSD card is full		Uploading data
	Safe to remove MicroSD card		Downloading data
	Both USB tethering and portable hotspot are on		Download finished
	Wifi in range		USB tethering is on
	Portable Wi-Fi hotspot is on		Cellphone is connected via USB cable
	Connected to VPN		Radio is on
	Disconnected from VPN		System update available
	Song is playing		Traffic manager

Notification panel



Touch and drag down the Status bar or press **Menu** key and touch **More Notifications** to open the notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

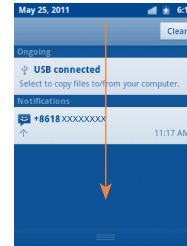

Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).


1.3.3 Search bar

The cellphone provides a Search function which can be used to locate information within applications, the cellphone or the web.

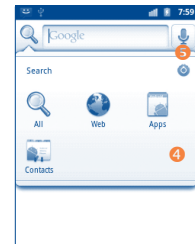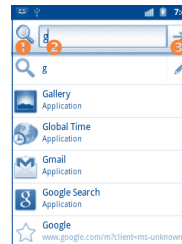


- 1 Touch to enter targets of Search: All, Web, Apps, Contacts, etc.
- 2 Touch or press keypads to search by text
- 3 Touch to search by voice
- 4 Touch to enter the suggested text for quick search
- 5 Touch to search the web

Search by text

- Touch Search bar from the Home screen or press **Search** key from other applications screen.
- Enter the text/phrase you want to search for.
- Touch  if you want to search on the web.

Search by voice


- Touch  from Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

1.3.4 Lock/Unlock your screen

To protect your cellphone and privacy, you can lock the cellphone screen by creating a variety of patterns or passwords.

To create a screen unlock pattern (refer to section “1.1.5.2 Screen unlock pattern/Set up screen lock”) for detailed settings)

- Press **Menu** key from the Home screen, touch **Settings**, then touch **Location & security/Set up screen lock/Pattern**.
- Draw your own pattern, you can also press **Menu** key for help.

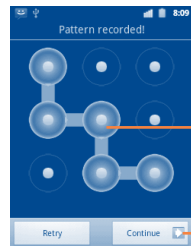

Draw your unlock pattern

Touch to confirm by drawing pattern again


To create a screen unlock Password

- Press **Menu** key from the Home screen, touch **Settings**, then touch **Location & security/Set up screen lock/Password**.
- Set your password.

To lock cellphone screen

Press the  key once to lock the screen.

To unlock cellphone screen

Draw the unlock pattern you have created or enter the password to wake up the screen. If you did not set the unlock screen, drag down the lock icon  to unlock it.



1.3.5 Personalize your home screen

Add

Touch and hold an empty area or press **Menu** key, then touch **Add** on the Home screen. The **Add to Home screen** will appear, offering a range of options.

- **Shortcuts** To add a shortcut to the Home screen, such as applications, bookmark, contact, etc.
- **Widgets** To add a widget to the Home screen, such as clock, calendar, etc.
- **Folders** To add a folder to the Home screen, such as new folder, contact folder, etc.

To improve the organization of the Home screen items (shortcuts, widgets), you can add them to a folder by touching and dragging them onto the folder of your choice. To rename a folder, open it, touch and hold the folder's title bar to open the Rename folder dialog box, then enter the new name and confirm with **OK**.

Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item to the top of the trash can, which will then turn red, and release.

Wallpaper customization

Touch and hold an empty area or press **Menu** key and touch **Wallpaper** on the Home screen, a popup window named **Select wallpaper from** will appear, offering a range of options. **Gallery** includes pictures you have taken, cropped or downloaded. **Live wallpapers** include a scrolling list of animated wallpapers. **Wallpaper gallery** includes all preset wallpapers in the cellphone. Slide left and right to locate a desired image, and touch **Set wallpaper** to confirm.

Theme customization

Touch and hold an empty area or press **Menu** key and touch **Themes** on the Home screen. You can access Themes gallery which includes all preset themes in the cellphone. Slide left and right to locate a desired theme, and touch **Set theme** to confirm.


1.3.6 Application tab

Touch  on the Home screen to enter the Applications list.

To return to the Home screen, press **Home** key.

Consult recently-used applications

To consult recently-used applications, you can press and hold the **Home** key from the Home screen. Touch an icon in the window to open the related application.

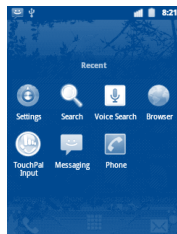

1.3.7 Volume adjustment

Using volume key

Press **Volume up/down** key to adjust the volume. While in the lowest volume level, your cellphone will now be switched to Silent mode or Vibrate mode⁽¹⁾.

Using Settings menu

Press **Menu** key from the Home screen, then touch **Settings\Sound**, you can set ringer, media and phone ringtone volume to your preference.

1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch  from home screens. To return to home screens, press the  key.

1.4.1 Normal mode and sort mode

Applications can be managed in two modes. To switch between two modes, press **Menu** key from Applications list screen, and touch **Switch view**.

- **Normal mode (default)** All applications are listed in alphabetical order.
- **Sort mode** All applications are sorted by several categories.

⁽¹⁾ The cellphone setting will vary depending on the changes made to the default settings in **Settings\Sound\Vibrate**.

1.4.2 Categories management


There are 8 categories in total: 5 categories are predefined, 3 categories can be added.

Press **Menu** key, and select **Edit** to enter edit mode. Within edit mode you can now customize categories.

- **Rename a category** Locate the category you want to rename, touch to display options menu, then touch **Rename Category**. When finished, touch **OK**.
- **Delete a category** Locate the category you want to remove, touch to display options menu, then touch **Delete Category**.
- **Add a category** Press **Menu** key, then touch **Add category** to create a new category name. When finished, touch **OK**. You can select some applications to move into the new category, and confirm by touching **OK** again.
- **Move an application among categories** Locate the application you want to move, touch to display the categories list, then touch the desired category name.

2 Text input

2.1 Using Hardware Keyboard

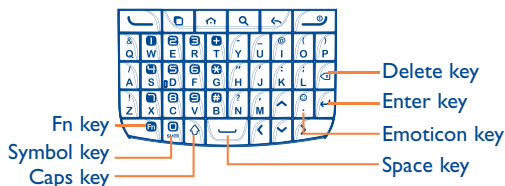

Fn key

- Press once to input upper character
- Press twice to lock upper inputting mode, then press once to unlock upper inputting mode

Caps key

- Press once to enter the “Abc” mode: The first letter will be capital, after inputting the first letter, switch back to 'abc' mode automatically.
- Press twice to enter the “ABC” mode: All letters will be locked as capital letters.
- Press **Fn + Caps key** to display Input Options menu.

Space key

- Short press: input space
- Press **Fn + Space key** to switch languages.

Delete key:

- Short press: delete one letter before the cursor.
- Long press: delete whole words one by one quickly.

Emoticon key

- Short press: enter “.”.
- Press **Fn key** and **Emoticon key** to display emoticon box.

Symbol key

- Short press: display symbol box.
- Press **Fn key** and **Symbol key** to enter 0.

Enter key

- Select the highlighted button or option.
- Confirm the edited content.
- Move the cursor to the beginning of the next line.

2.2 Using Onscreen Keyboard

Enable/Disable the onscreen keyboard

Press **Menu** key from the Home screen, select **Settings\Language & keyboard\Soft keyboard switch**, mark/unmark the **Landscape mode/Portrait mode** checkbox to enable/disable the Onscreen Keyboard. The keyboard won't display automatically in the portrait mode by default.

Onscreen keyboard settings


Press **Menu** key from the Home screen, select **Settings\Language & keyboard\Android keyboard** or **TouchPal Input**, a series of settings are available for your selection.

Adjust the onscreen keyboard orientation


Turn the cellphone sideways or upright to adjust the onscreen keyboard orientation. You can also adjust it by **Settings** (Press **Menu** key on the Home screen, touch **Settings\Display\Orientation**).

2.2.1 TouchPal Input

Select TouchPal Input and touch **Settings\Language & keyboard\TouchPal Input\Tutorial** to learn how to use this keyboard.

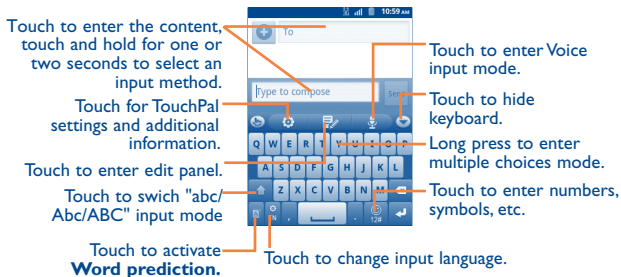

2.2.2 Android keyboard

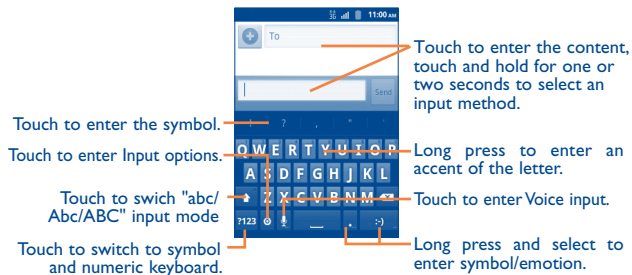

2.3 Text editing

You can edit the text you have entered.

- Touch and hold the text you have entered
- Options list pops up
- Select the operation you need (**Select text, Select all, Cut, Copy**, etc.)



3 Phone call, Call log and Contacts


3.1 Phone



3.1.1 Placing a call

The user can easily start a call using **Phone**.

Enter this menu using one of the following two ways:

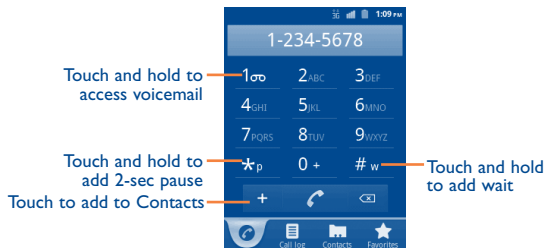- Touch  or the  key from the Home screen.
- Touch Application tab from the Home screen and select **Phone**.





Enter the desired number from the keyboard directly or select a contact from **Contacts, Call log** or **Favorites** by touching tabs, then touch  or the  key to place the call.

The number you entered can be saved to **Contacts** by touching  or pressing **Menu** key and touching **Add to Contacts**.


If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch **End** or press the  key.

International call

To dial an international call, touch and hold **0+** or the **0** key to enter “+”, then enter the international country prefix followed by the full cellphone number and finally touch  or the  key.

Emergency call

If your cellphone has network coverage, dial the emergency number and touch  to make an emergency call.

Speed call

You can define the 2-9 screen keys as a speed dialer.

-On the Phone Dial screen, touch and hold one of 2-9 keys then touch OK to enter the contacts list screen, or


-Enter at least one character from the Phone Dial screen, press the Menu key and touch Speed dialer settings, then touch one of the numbers to enter the contacts list screen.


Select the needed contact as well as its number to confirm.


After setting, on the Phone Dial screen, touch and hold the numeric keypad to call the number.

At Speed call list, touch and hold a number to edit or remove the speed call.

3.1.2 Answering or rejecting a call

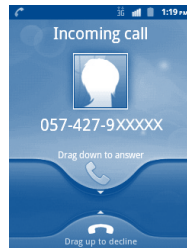

When you receive an incoming call, drag down the green cellphone icon or press the  key to answer.

When you receive an incoming call, but don't want to answer, you may decline it by dragging up the red cellphone icon or pressing the  key. The caller is sent directly to your voicemail box to leave a message.

To mute the ringtone volume of an incoming call, turn the cellphone upside down or press the **Volume up/down** key.

3.1.3 Calling your voicemail

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.


To access your voicemail, touch and hold **100** on **Phone** tab.

To set your voicemail number, enter **Settings\Call settings\Voicemail settings**.


If you receive a voicemail, a voicemail icon  appears on the Status bar. Open the Notification panel, and touch **New voicemail**.

3.1.4 During a call

When a call is in progress, press **Menu** key to open the call options. To adjust the volume during a call, press **Volume up/down** key.

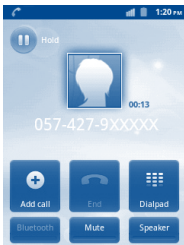


 Touch to hold the current call. Touch this icon again to retrieve the call.


 Touch to display Dialpad.

 Touch to end the current call.

 Touch to switch between bluetooth headset and cellphone.

 Touch to mute the current call. Touch this icon again to unmute the call.


 Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.

 To avoid misoperation on touchscreen during a call, screen will be locked automatically when the user put the cellphone close to his/her ear, and it will be unlocked when put the cellphone away.

3.1.5 Managing multiple calls









With this cellphone you can handle multiple calls at the same time.

Swap calls

When you accept two calls, touch icon  to switch between two lines. The current call is put on hold and you have joined in the other call. Press the **Menu** key to display options list.

Conference calls ⁽¹⁾




You can set up a conference call.

- Place a call to the first participant of the conference call.
- Touch icon  .
- Enter the cellphone number of the person you want to add to the conference and touch icon  . You can also add participants from **Contacts**, **Call log** or **Favourites**.
- Touch  key to start a conference call.
- During a conference call, touch  to drop a participant or to talk privately to one of the participants. Touch  to drop the participant from the conference, and touch  to talk privately to the participant and hold on other participants.
- Touch  or press the  key to end the conference call and disconnect all callers.

⁽¹⁾ Depending on your network operator.

3.2 Call log

You can access your call memory by touching  from the Home screen and touching **Phone\Call log**. Touch  on the right side of contact/number to place a call directly. There are three kinds of calls in Call log:

-  Missed calls
-  Outgoing calls
-  Incoming calls

Touch or touch & hold a contact or number to view information or further operations.

You can view detailed information of a call, launch a new call or send messages to a contact or number, or add numbers to **Contacts** (only available for cellphone numbers), etc.

To clear the entire call memory, press **Menu** key then touch **Clear call log**.

3.3 Contacts.....

Contacts enables quick and easy access to the people you want to reach.

You can view and create contacts on your cellphone and synchronize these with your Gmail contacts or other applications on the web or on your cellphone.



When using Contacts for the first time you are required to add new contacts, and synchronize contacts from other application accounts to your cellphone.

3.3.1 Consult your Contacts

To access the **Contacts**, touch Application tab on the Home screen, then select **Contacts**.



- Touch to view the contact's detailed information.
- Touch icon to open Quick Contact panel.
- Touch to view your favourite contacts.

Touch and hold a contact to display its option menu.
You can also press **Menu** key to display contacts list option menu.


Following actions are enabled:

- **New contact** Add new contacts to the cellphone.
- **Display options** Choose contacts to display, for example only contacts with phones, other application contacts if any, etc.
- **Accounts** Manage the synchronization settings for different accounts.
- **Import/Export** Import or export contacts between cellphone and MicroSD card. Share visible contacts via Bluetooth, Gmail, MMS, etc.
- **Delete contacts** Select and delete unwanted contacts.
- **Sync** Launch synchronization with the account you set.

3.3.2 Adding a contact


Press **Menu** key from contacts list screen and touch **New contact**.


You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.

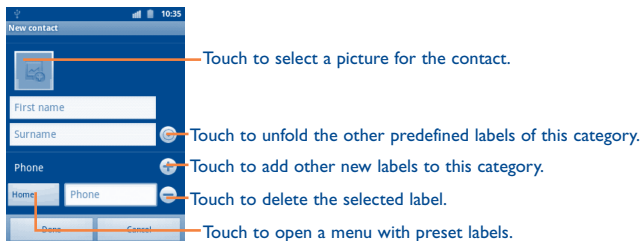

When finished, touch **Done** to save.

Add to/Remove from Favourites


To add a contact to favourites, touch and hold a contact to display the contact's option menu, then touch **Add to favourites**. Or you can also touch a contact to view details then touch  to add the contact to favourites (the star will turn gold in color).

To remove a contact from favourites, select **Remove from Favourites** on the contact's option menu or touch gold star  on contact details screen.

3.3.3 Editing your contacts

To edit contact information, touch and hold the contact whose information is to be edited, then touch **Edit contact**. When finished, touch **Done**.

Change a contact's default cellphone number

The default cellphone number (the number which has priority when making a call or sending a message) will always be displayed under the contact name. To change the default cellphone number, touch and hold the number you want to set as the default number from the contact's details screen, then select **Make default number**. A  appears after the number.

Divert calls to voicemail/Set ringtone for a contact

On the contact's detail screen, press **Menu** key to display contacts list options menu, touch **Options**, then select **Incoming calls** or **Ringtone**.

When one contact has been set to send calls directly to voicemail, if he/she calls, your cellphone will not ring and the caller will be sent directly to your voicemail.

Delete a contact


To delete a contact, press **Menu** key and touch **Delete contact** from contact details screen or directly touch & hold a contact from Contacts screen to display contacts list option menu then touch **Delete contact**. Touch **OK** to confirm.




The contact you have deleted will also be removed from other applications on the cellphone or web the next time you synchronize your cellphone.

3.3.4 Communicating with your contacts


From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, locate the contact or number you want to call, then touch . You can also touch & hold the contact or number, then touch **Call contact**.

To send a message to a contact, touch & hold the contact or number you want to send a message to, then touch **Text contact**. You can also touch  on the right side of the contact from contact details screen.

Use Quick contact for Android

Touch a contact's picture to open Quick Contact for Android, then you can touch the icon to choose the way you want to connect.

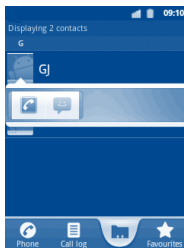

The icons available on the Quick Contact bar depend on the information you have for the contact and the applications and accounts on your cellphone.

3.3.5 Contacts importing, exporting and sharing

This cellphone enables you to import contacts from a MicroSD card and export contacts to a MicroSD card which can then be used to back up your information.

From Contacts screen, press **Menu** key to open options menu, touch **Import/Export**, then select **Import from SD card**, **Export to SD card** or **Share visible contacts**.

To import/export a single contact from/to an MicroSD card, touch the contact you want to import/export, then touch **OK** to confirm.

To import/export all contacts from/to an MicroSD card, mark **Select all** check box, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, MMS, Gmail, etc.

Touch a contact you want to share, press **Menu** key and touch **Share** from contact details screen, then select the application to perform this action.

3.3.6 Displaying contacts

You can configure which group of contacts, for each account, you want to display in the Contacts list. To hide/display contacts that don't have cellphone numbers, press **Menu** key from contacts list screen, touch **Display options**, then activate or deactivate **Only contacts with phones** by touching it. Finally, touch **Done** to save. The same operation for other two options: **Sort list by**, **View contact names as**.

3.3.7 Joining/Separating contacts

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, press **Menu** key and touch **Edit contact**, then press **Menu** key again and touch **Join**.

At this time, you are required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will no longer be displayed in the Contacts list.

To separate contact information, touch the contact whose information you want to separate, press **Menu** key and touch **Edit contact**, then press **Menu** key again and touch **Separate**, finally touch **OK** to confirm.

3.3.8 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your cellphone.

To add an account, press **Menu** key from Contacts list, touch **Accounts**, then touch **Add account** tab; or access it by pressing **Menu** key from the Home screen, then touch **Settings\Accounts & sync\Add account**.

You are required to select the kind of accounts to add, like Google, Corporate, etc.

As with other account set-ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the cellphone.

Open the **Accounts & sync settings** screen, touch the account you want to delete, then touch **Remove account** and confirm.

Useful icons:



Indicates that the account is configured to synchronize automatically with your cellphone.



Indicates that the account is not configured to synchronize automatically with your cellphone.

Background data

Activate or deactivate **Background data** to control whether applications or services data can be transmitted when they are running in the background. Applications can synchronize, send, and receive data at any time if activated.

For example, if deactivated, Gmail will stop receiving new emails until you touch the **Refresh** or send an email.

Auto-sync

When activated, all changes to information on the cellphone or online will be automatically synchronized to each other.

Sync manually

You can synchronize an account manually on **Accounts & sync settings** screen, and you must touch an account in the list on this screen, press **Menu** key and touch **Sync now**.

4 Google Messaging, Gmail/Email, Google Talk

4.1 Google Messaging




You can create, edit and receive SMS and MMS with this cellphone.

To access this feature, touch Application tab from the Home screen, then select **Messaging**.

4.1.1 Write message


On message list screen, touch **New message** to write text/multimedia messages.

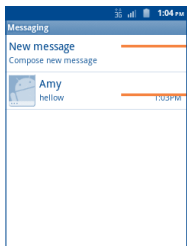

Touch to create a new message

Touch to view the whole message thread

Sending a text message

Enter the cellphone number of the recipient on **To** bar or touch  to add recipients, touch **Type to compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.

An SMS message of more than 160 characters will be charged as several messages. When the total number of characters you have entered is approaching the 160-character limit, a counter will appear on the lower right corner below Send option of the text box to remind you how many characters are allowed to be entered in one message.



Specific letters (accent) will increase the size of the SMS, which may cause multiple SMS messages to be sent to your recipient.

Sending a multimedia message

An MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.


An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

To send a multimedia message, enter the recipient's cellphone number in the **To** bar, touch **Type to compose** bar to enter the text of the message. Press **Menu** key to open the option menu, touch **Add subject** to insert a subject, and touch **Attach** to attach the picture, video, audio or slide.

When finished, touch **Send MMS** to send the multimedia message.

Attach options:

- **Pictures** Access Gallery application or File manager to select a picture as attachment.
- **Capture picture** Access Camera to capture a new picture for attaching.
- **Videos** Access Gallery application or File manager to select a video as attachment.
- **Capture video** Access Camcorder to record a new video for attaching.
- **Audio** Access to select an audio file as attachment.
- **Record audio** Enter voice message recorder to record a voice message for attaching.
- **Contact** Access Contacts to attach a vCard of a contact.
- **Appointments** Access Calendar to attach an appointment.
- **Slideshow** Enter Edit slide show screen, touch **Add slide** to create a new slide, and touch currently existing slide to edit it (see the following picture). Press **Menu** key to get more actions, like setting the slide duration, adding music, etc.

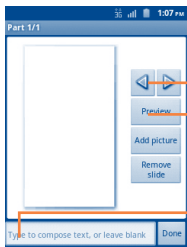


Touch to go to the previous or next slide.

Touch to preview the current slide.

Touch to edit the title of this slide.

4.1.2 Manage messages

When receiving a message, an icon  will appear on the status bar as notification. Drag down the status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter message-composing screen, enter the text, then touch **Send**.

To return to the message list from a text message thread, press **Menu** key and then touch **More/All threads**.

Touch and hold a message in message details screen. The following message options are available for selection:

- **Lock/Unlock message** Touch to lock/unlock the message so it can/can't be deleted if you reach maximum number of stored messages.
- **Call XXX** Touch to call the message sender.
- **Add XXX to Contacts⁽¹⁾** Touch to save the number to Contacts.
- **Forward** Touch to forward the message to another recipient.
- **Copy message text*** This option displays when the message is an SMS. Copy the current message content. You can paste it to the enter bar of the new message you are going to compose.
- **View message details** Touch to view details of the message.
- **Delete message** Delete the current message.

⁽¹⁾ Option will not appear unless the number is not saved in the Contacts.

4.1.3 Adjust message settings

You can adjust a set of message settings. From Messaging application screen, press **Menu** key and touch **Settings**.

Storage settings

- **Delete old messages** Select to delete old messages when the maximum number of stored messages is reached.
- **Text message limit** Touch to set the number of text messages to be saved per conversation.
- **Multimedia message limit** Touch to set the number of multimedia messages to be saved per conversation.

Text message (SMS) settings

- **Delivery reports** Select to request a delivery report for each text message you send.
- **Validity Period** Touch to set message validity period.

Multimedia message (MMS) settings

- **Delivery reports** Select to request a delivery report for each multimedia message you send.
- **Read reports** Select to request a report on whether each recipient has read a multimedia message sent by you.
- **Auto-retrieve** Select to download the full MMS message (including the body and the attachment) automatically to your cellphone. Otherwise, download only the MMS message header.
- **Roaming auto-retrieve** Select to download the full MMS message (including the body and the attachment) automatically when roaming. Otherwise, download only the MMS message header to avoid extra charges.
- **Maximum message size** Touch to set maximum message size.
- **Creation mode** Touch to set MMS creation mode when composing messages.
- **MMS Priority** Touch to set MMS priority.

Notification settings

- **Notifications** Select to display message notifications in the status bar.
- **Select ringtone** Touch to select a ringtone as a new message notification tone.
- **Vibrate** Select to have cellphone vibrate as a notification when receiving a new message.

4.2 Gmail/Email

The first time you set up your cellphone, you can select to use an existing Gmail or to create a new Email account.

4.2.1 Gmail





As Google's web-based email service, Gmail is configured when you first set up your cellphone. Gmail on your cellphone can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email accounts, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels instead of folders.

To access Gmail

From the Home screen, touch the Application tab to enter the applications list, then touch **Gmail**.

Gmail displays messages and conversations from one single Gmail account at a time, if you own more than one account, you can switch to another by pressing **Menu** key from Inbox screen, touching **Accounts**, then touching the account you want to view.


To create and send emails

- Press **Menu** key from Inbox screen, and touch **Compose**.
- Enter recipient(s)'s email address in **To** field, and if necessary, press **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Press **Menu** key, touch **Attach** to send an attachment to the receiver.
- Finally, touch the icon  or **Send**.
- If you do not want to send the mail out right away, you can touch the icon  or **Save draft** to save copy. To view the draft, press **Menu** key and touch **Go to labels**, then select **Drafts**.

If you do not want to send or save the mail, you can touch **Discard**.


To add a signature to emails, press **Menu** key from inbox screen, and touch **Settings**, then select **Signature**.

To receive and read your emails

When a new email arrives, you will be notified by a ringtone or vibration, and an icon  will appear on the Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

If you want to go back to the Inbox label while reading a new message, you can press **Back** key or press **Menu** key and touch **Go to inbox**.

The Google Talk online status  is shown next to the name of the sender of each email. Touch this indicator to open Quick Contact.

You can search for an email by sender, subject, label, etc.

- from inbox screen, press **Menu** key and then touch **Search**
- enter the keyword you want to search for in the searching box and touch search icon.

To reply or forward emails

When viewing an email, you will see three icons offering further options at the bottom of the conversation.

- **Reply/Reply all** Touch to enter text-inputting mode, enter the message you want to reply, then touch **Send** to send this message to one single recipient or all people in a mail loop.
- **Forward** Touch to forward the message to another person. You are required to enter the new recipient's email address and then touch **Send**.

Managing Gmails by Labels

To conveniently manage conversations and messages, you can organize them by using labels.

To label a conversation when reading a conversation's messages, press **Menu** key, touch **Change Labels** and select the label to assign to the conversation.

To view conversations by labels when viewing your inbox or another conversation list, press **Menu** key and touch **Go to labels**. Touch a label to view a list of conversations with that label.

Touch and hold an email to produce the following options:

- **Archive** To archive the email message. To display the archived messages, you can press **Menu** key in inbox screen and touch **View labels**, then select **All mail**.
- **Mute** To mute the entire conversation. When muted, new mails related to this conversation will not be displayed in **Inbox**, but archived.
- **Mark read/Mark unread** To mark an email message as read or unread.
- **Delete** To delete the email message.
- **Add star/Remove star** To assign a star or remove the star from the conversation.
- **Change labels** To add or change the label of the email message or conversation.
- **Report spam** To report the email message/conversation as spam.

Gmail settings

To manage Gmail settings, press **Menu** key in the Inbox screen and touch **Settings**.

- **Signature** To add a signature text to the end of each mail you send.
- **Confirm actions** Select to activate a query when deleting a message or conversation for double confirmation.
- **Reply all** Touch to mark the check box to make the default responding to messages.
- **Auto-advance** Touch to select which screen to show after you delete or archive a conversation.
- **Message text size** Touch to select the gmail text size.
- **Batch operations** Select to add a conversation to a batch for further operation, like archive, delete, change label, etc.
- **Clear search history** Touch to remove the search history.
- **Labels** Touch to open the Label screen, where you can manage conversation synchronization.
- **Email notifications** Select to activate notification when a new email arrives.
- **Select ringtone** Touch to select a ringtone as the notification tone when a new email arrives.
- **Vibrate** Select to activate vibration as the notification method when a new email arrives.
- **Notify once** Touch to mark the check box to notify once for new gmails, not for every new message.

4.2.2 Email



Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts in your cellphone.

To access this function, touch Application tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch **Next**. If the account you entered is not provided by your service provider in the cellphone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- Touch **Done**.
- To add another email account, you can press **Menu** key and touch **Add account** to create.

To create and send emails

- Press **Menu** key from Inbox screen, and touch **Compose**.
- Enter recipient(s) email address in **To** field, and if necessary, press **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Press **Menu** key, touch **Add attachment** to send an attachment to the receiver.
- Finally, touch **Send**.
- If you do not want to send the mail right away, you can touch **Save as draft** or press **Back** key to save a copy.

- If you do not want to send or save the mail, you can touch Discard.

To add a signature to emails

Press **Menu** key from the Inbox screen, touch **Account settings**, then select **Signature**, input the signature text, and touch **OK** to confirm.

After selecting **Use signature**, a signature text will appear at the end of each mail you send from this account.

4.3 Google Talk



Google's instant messaging service, Google Talk, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch Application tab from the Home screen, then touch **Talk**. All friends added by using Google Talk from the web or cellphone will be displayed in your friends list.

Touch  to set your online status.

Touch the text box on the left of your online status icon and then enter your status message.

To sign out, press **Menu** key from Friends list to display options, then touch **Sign out**.

4.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then enter your message and finally touch **Send**.

You can invite other friends to join in a group chat by pressing **Menu** key, touching **Add to chat** and then selecting the friend you want to add.

When chatting with more than one friend, you can switch screens by pressing **Menu** key, then touching **Switch chats**.

To return to Friends list screen, press **Menu** key, then touch **Friends list**.

4.3.2 To add a new friend

From Friends list, press **Menu** key to open options list and touch **Add Friend** to add a new friend. Enter the Google Talk ID or Gmail address of the friend you want to add, and then touch **Send invitation**.

A notification with this invitation will be received by the friend. By touching the invitation, the friend can select **Accept** or **Cancel** in response.

You can also check all invitations you have sent or received by pressing **Menu** key from Friends list and touching **More/Invites**.

4.3.3 To close a chat

When you want to end a chat, the following two ways are available:

- From Friends list screen, touch and hold the friend you want to stop chatting with to open Option menu, and then touch **End chat**.
- Press **Menu** key from chatting screen directly, and then touch **End chat**.

4.3.4 To manage your friends

Besides adding new friends to your friends list, the following actions are available for your choice:

- **To view all friends/
most popular
friends** By default, only friends that you frequently communicate with are displayed in Friends list. To view all friends, press **Menu** key, then touch **All friends**. To return to displaying most popular friends screen, press **Menu** key again, then touch **Most popular**.
- **To make a friend
popular** To ensure a friend is always displayed in your Most popular list, touch and hold the friend's name until the options menu pops up, then touch **Always show friend**. To remove a friend from Always show friend, touch and hold the friend, and touch **Auto show friend**.

- **To block a friend** To block a friend from exchanging messages and remove them from your friends list, touch and hold the friend, then touch **Block friend**. All blocked friends can be viewed by pressing **Menu** key and touching **More/Blocked**. To unblock a friend, touch the name of this friend and touch **OK** when prompted.

4.3.5 Settings

A series of settings are available for your selection by pressing **Menu** key from Friends list screen, and touching **Settings**.

- **Automatically sign-in** Select to sign in to your Google Talk account automatically every time you turn on your cellphone.
- **Mobile indicator** Select to display an indicator icon along with your name in other people's Friends list.
- **Automatic away-status** Select to set status as Away when the screen is turned off.
- **Clear search history** Touch to clear previous chat searches history from showing up in the Search box.
- **IM notifications** Select to activate the notification function on status bar when a new message arrives. You can also set a notification ringtone by touching **Select ringtone** or selecting **Vibrate** to activate vibration alert for this service.

5 Google Calendar & Alarm clock & Calculator....

5.1 Google Calendar.....




Use Google Calendar to keep track of important meetings, appointments, etc.

To access this function, touch Application tab from the Home screen, then touch **Calendar**.

5.1.1 Multimode view

You can display the Calendar in daily, weekly, monthly, or agenda view.

To change your Calendar view, press **Menu** key, then touch **Day**, **Week**, **Month** or **Agenda**.

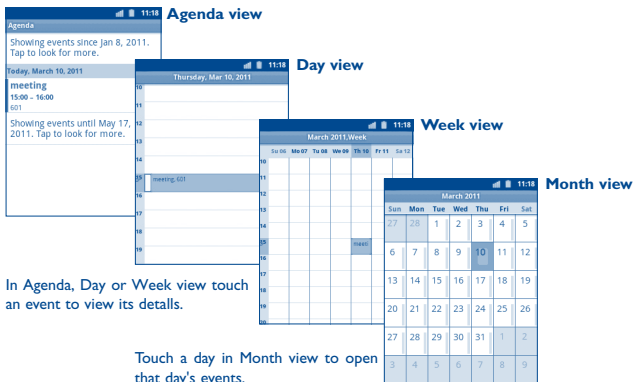

In Agenda, Day or Week view touch an event to view its details.

Touch a day in Month view to open that day's events.

5.1.2 To create new events

You can add new events from any Calendar view.

- Press **Menu** key from Calendar screen, and touch **More**/**New event** to access new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select **All day**.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. If the guests use Google Calendar, they will receive an invitation from Calendar and Email.
- When finished, touch **Done** from the end of the screen.

To quickly create an event from Day, Week or Month view screen, touch and hold an empty spot or an event to open Option menu, then touch **New event** to enter the event details screen of the time you have previously selected.

5.1.3 To delete or edit an event

To delete or edit an event, touch the event to enter details screen, press **Menu** key, touch **Edit event**, or **Delete event**.

5.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon **1** will appear on Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open the notification panel, touch event name to view Calendar notification list.

Touch **Snooze all** to turn off all event reminders for 5 minutes.

Touch **Dismiss all** to delete all reminders from the list.

Press **Back** key to keep the reminders pending in the status bar and the notification panel.


Important options by pressing **Menu** key from Calendar main screen:

More	New event	To add a new event
	Calendars	To show or hide, remove or add calendars
	Settings	To set a series of Calendar settings


5.2 Clock.....

Your cellphone has a built-in clock.

To access this function, touch the Application tab from the Home screen, then touch **Clock**.

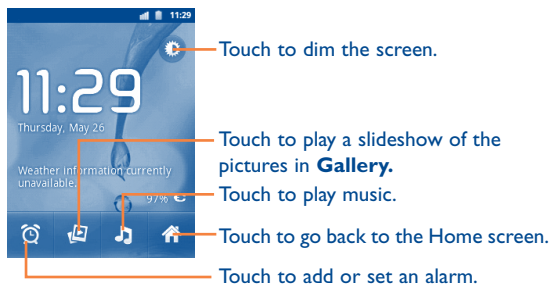

5.2.1 To set an alarm

From **Clock** screen, touch  icon at the bottom of the screen to enter **Alarms** screen, touch **Add alarm** to add a new alarm, set the alarm time then touch **Set** to display the under options:

- **Enable alarm** Touch to enable the alarm.
- **Time** Touch to set time.
- **Repeat** Touch to select days you want alarm to work
- **Ringtone** Touch to select a ringtone for the alarm
- **Vibrate** Select to activate vibration
- **Label** Touch to set a name for the alarm

Touch **Revert** to reset the alarm. When finished, touch **Done** to confirm.

Touch a currently existing alarm to enter alarm editing screen, touch **Delete** to delete the selected alarm.

5.2.2 To adjust alarm settings

Press **Menu** key from **Alarms** screen, then touch **Settings**. The following options can now be adjusted:

- **Alarm in silent mode** Select to play alarm with sound or vibration even when the cellphone is in Silent mode
- **Alarm volume** Touch to set the volume of alarms
- **Snooze duration** Touch to set temporary turn off time of an alarm
- **Side button behavior** Touch to set side **Volume up/down** key behaviors when alarm sounds: **None**, **Snooze** or **Dismiss**

5.3 Calculator.....


With Calculator, you can solve many mathematical problems.

To access this function, touch Application tab from the Home screen, then touch **Calculator**.

There are two panels available: Basic panel and Advanced panel.

To switch between panels, select one of the following two ways:

- Touch and drag the basic screen to the left to open the Advanced panel.
- Or press **Menu** key from basic panel to open option menu and touch **Advanced panel**.

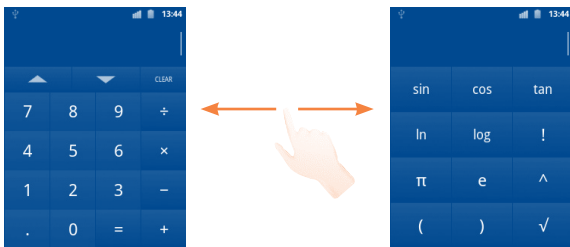

Enter a number and the arithmetic operation to be performed, enter the second number, then touch “=” to display the result. Touch **CLEAR** to delete digits one by one, touch and hold **CLEAR** to delete all at one time. You can clear the calculator's history by pressing **Menu** key and touching **Clear history**.

Touch  or  to view calculator history.

When some numbers or operations have been entered, touch and hold the entering bar to open a menu offering these further operations:

- **Select text** To select what you want to select from entered text
- **Select all** To select all entered text
- **Input method** To select your preferred input method
- **Cut** ⁽¹⁾ To delete selected text
- **Copy** ⁽¹⁾ To copy selected text
- **Paste** ⁽²⁾ To paste what you have previously copied to the entering bar

⁽¹⁾ Options will not appear unless Select operation has been made.
⁽²⁾ Option will not appear unless copy or cut operation has been made.

6 Getting connected.....

To connect to the internet with this cellphone, you can use CDMA 1x/EVDO networks or WI-FI, whichever is most convenient.

6.1 Connecting to the Internet

6.1.1 CDMA 1x/EVDO

The first time you turn on your cellphone, it will automatically configure network service: CDMA 1x /EVDO auto.

To check and change the network connection you are using, press **Menu** key on the Home screen, then touch **Settings\Wireless & networks\Mobile networks\Network Mode**.

To activate/deactivate Data roaming

When roaming, you can decide to connect/disconnect to a data service.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Mobile networks**.
- Mark/Unmark the **Data roaming** checkbox to activate or deactivate data roaming.
- When Data roaming is deactivated, you can still perform data exchange with a Wi-Fi connection (refer to section “6.1.2 Wi-Fi”).

To limit your data connection to 2G networks only

To save battery and extend battery life, you can set to activate 2G networks (CDMA 1x) only.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Mobile networks**.
- Mark/Unmark the **Use only 2G networks** checkbox to activate/deactivate this function.

6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your cellphone is within range of a wireless network.

To turn Wi-Fi on and connect to a wireless network

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks**.
- Mark/Unmark the **Wi-Fi** checkbox to turn on/off Wi-Fi.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact your network operator for details). When finished, touch **Connect**.

To activate notification when a new network is detected

When Wi-Fi is on and the network notification is activated, the Wi-Fi icon will appear on the status bar whenever the cellphone detects an available wireless network within range. The following steps activate the notification function:

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Wi-Fi settings**.
- Mark/Unmark the **Network notification** checkbox to activate/deactivate this function.

To add a Wi-Fi network

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Wi-Fi settings\Add Wi-Fi network**.

- Enter the name of the network and any required network information.
- Touch **Save**.

When successfully connected, your cellphone will be connected automatically the next time you are within range of this network.

To forget a Wi-Fi network

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi settings screen, touch & hold the name of the network.
- Touch **Forget network** in the dialog that opens.

6.2 Browser.....

Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from the Home screen, then touch **Browser**.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch .


To set homepage

- Press **Menu** key from Browser screen to display option menu, touch **More\Settings\Set home page**.
- Enter the URL of the website you want to set as your homepage.
- Finally touch **OK** to confirm.

6.2.1 Viewing web pages


When opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

To zoom in/out of a web page

Zoom controls  will be activated when scrolling the screen using your finger. Touch the plus or minus on the side of the Zoom control to zoom in or out.

To quickly zoom into a section of a web page, double-tap on the section you want to view. To return to normal zoom level, double-tap again.

To find text on a web page

- Press **Menu** key from web page screen, then touch **More\Find on page**.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches will be boxed.
- Touch the left or right arrow to switch to the previous or next matching item.
- When finished, you can touch  to close the search bar.

To copy text on a web page


You can copy text from a web page and paste it into emails or SMS/MMS messages.

- Press **Menu** key from web page screen, then touch **More>Select text**.
- Place your finger at the start of the text you want to copy and then drag it to the end of the text.
- Selected text is copied and highlighted in color.
- Release your finger.

To paste the copied text into an email or SMS/MMS message, touch and hold the enter box and then touch **Paste** on the options menu.

To open new window/switch between windows

Multiple windows can be opened at the same time for your convenience.

- Press **Menu** key from web page screen, and touch **New window**. Or pinch current web pages(this works even when there is only one window), and touch the icon of **New window**  which will always exist on the top of each window.
- To view all currently open windows, press **Menu** key then touch **Windows**, or pinch current web pages.
- Touch a window you want to view.

To close a window, touch  on the window you want to close.

Other options:

- **Refresh** To refresh the current page (press **Menu** key on web page screen, then touch **Refresh**).
- **Exit** To close all tabs (press **Menu** key on web page screen, then touch **Exit**).
- **Page info** To view more information about the current page (press **Menu** key on web page screen, then touch **More**\Page info).
- **Forward** To forward the pages you have opened (press **Menu** key on web page screen, then touch **More**\Forward).
- **Share page** To share the current page with your friends via various ways, like Message, Email, Bluetooth, etc. (press **Menu** key on web page screen, then touch **More**\Share page).

6.2.2 Manage links, history, downloads

To manage a link, cellphone number or address displayed on a web page

- **Link** Touch the link to open the web page.
Touch and hold the link to open options for further operation, like open in new window, save link, share link, copy link, etc.
- **Cellphone number** Touch to call the cellphone number.
- **Address** Touch to open Google Maps and locate the address

To view Browser history

- Press **Menu** key from Browser screen
- Touch **Bookmarks**
- Touch **History** tab to view browser history.

To view your most frequently visited pages

- Press **Menu** key from Browser screen
- Touch **Bookmarks**
- Touch **Most visited** tab to view your most frequently visited pages.

To download a web application/view your downloads

Before downloading a web application, you need to enable your cellphone to download web applications (press **Menu** key from the Home screen, touch **Settings**\Applications, mark check box of **Unknown sources**, finally touch **OK** to confirm).


To download a file, touch and hold the item you want to download, then touch **Save** on the menu that opens.

To cancel a download, press **Menu** key and touch **More**\Downloads, then touch **Menu** key again and finally touch **Cancel all downloads**.


To view items you have downloaded, press **Menu** key and touch **More**\Downloads. You can clear the downloaded item list by pressing **Menu** key and touching **Clear list**.

6.2.3 Manage bookmarks


To bookmark a web page

- Open the web page you want to bookmark.
- Touch the bookmark icon  at the top of the screen, or press **Menu** key and touch **Bookmarks**.
- Touch **Add**.
- Enter the name and the location if needed and touch **OK** to confirm.

To open a bookmark

- Touch the bookmark icon  at the top of the screen, or press **Menu** key and touch **Bookmarks**.
- On the **Bookmarks** tab, touch the bookmark you want to open.
- You can also touch and hold to display the options screen, then touch **Open** or **Open in new window**.

To edit a bookmark

- Touch the bookmark icon  at the top of the screen, or press **Menu** key and touch **Bookmarks**.
- On the **Bookmarks** tab, touch and hold the bookmark you want to edit.
- Touch **Edit bookmark**.
- Enter your changes.
- When finished, touch **OK** to confirm.

Touch and hold a bookmark in the bookmark list to view these additional options:

- **Add shortcut to Home** To add a bookmark shortcut to the Home screen.
- **Share link** To share the bookmark.
- **Copy link URL** To copy the bookmark link.
- **Delete bookmark** To delete a bookmark.

6.2.4 Settings

A series of settings are available for your adjustment. To access Browser settings, press **Menu** key from Browser screen, and touch **More**\Settings.

Page content settings

- **Text size** Touch to select the size of the text display: Tiny, Small, Normal, Large, or Huge.
- **Default zoom** Touch to select the magnification level by default.
- **Open pages in overview** Mark the checkbox to open web pages zoomed out, in an overview.
- **Text encoding** Touch to select the character-encoding standard.
- **Block pop-up windows** Mark the checkbox to prevent pop-up windows.
- **Load images** Mark to display images on web pages.
- **Auto-fit pages** Mark to format web pages to fit the screen.
- **Landscape-only display** Mark to display pages only in landscape screen orientation.
- **Enable JavaScript** Mark to enable JavaScript.
- **Enable plug-ins** Mark to enable plug-ins.
- **Open in background** Mark to open new windows behind the current one.
- **Set homepage** Touch to set homepage.
- **Invert color** Mark to display pages in invert color.

Privacy settings

- **Clear cache** Touch to clear locally cached content and databases.
- **Clear history** Touch to clear the browser history.
- **Accept cookies** Mark to allow sites to save and read cookie data.
- **Clear all cookie data** Touch to clear all browser cookies.
- **Remember form data** Mark to remember data in forms for later use.
- **Clear form data** Touch to clear all the saved form data.
- **Enable location** Mark to allow sites to access your location.
- **Clear location access** Touch to clear location access for all websites.

Security settings

- **Remember passwords** Mark to save usernames and passwords for websites.
- **Clear passwords** Touch to clear all saved passwords.
- **Show security warnings** Mark to show warning if there is a problem with a site's security.

Advanced settings

- **Set search engine** Touch to select a search engine.
- **Website settings** Touch to view advanced settings for individual websites.
- **Reset to default** Touch to clear all browser data and to reset all settings to default.

6.3 Connecting to Bluetooth devices ⁽¹⁾

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this feature, press **Menu** key from the Home screen, touch **Settings\Wireless & Networks\Bluetooth** or **Bluetooth settings**.

To turn on Bluetooth

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\Bluetooth** or **Bluetooth settings**.
- Mark/Unmark the checkbox to activate/deactivate this function.

To change device name

To make your cellphone more recognizable, you can change your cellphone name which is visible to others.

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\Bluetooth settings\Device name**.
- Enter a name, and touch **OK**.

To make device visible

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\Bluetooth settings\Discoverable**.
- Mark/Unmark the checkbox to activate/deactivate this function.

⁽¹⁾ You are recommended to use Alcatel Bluetooth headsets, which have been tested and proved compatible with cellphone. You can go to www.alcatelonetouch.com for more information about Alcatel Bluetooth headset.

To pair/connect your cellphone with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your cellphone with the Bluetooth device with which you want to exchange data.

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\Bluetooth settings**
- Touch **Scan for devices**
- Select a Bluetooth device you want to be paired with in the list.
- Enter a passcode (0000 or 1234)
- If the pairing is successful, your cellphone connects to the device.

To disconnect/unpair from a Bluetooth device

- Touch & hold the device in the Bluetooth settings screen.
- Touch **Unpair** or **Disconnect & Unpair** in the menu that opens.

6.4 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your cellphone's MicroSD card and the computer.

To connect/disconnect your cellphone to/from the computer

To connect your cellphone to the computer:

- Use the USB cable that came with your cellphone to connect the cellphone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notification panel and touch **USB connected**.
- Touch **Mount** in the dialog that opens to confirm that you want to transfer files.

To disconnect:

- Unmount the MicroSD card on your computer.
- Open the Notification panel and touch **Turn off USB storage**.
- Touch **Turn off** in the dialog that opens.

 
To safely remove the MicroSD card from your cellphone

The MicroSD card can be removed from your cellphone at any time the cellphone is powered off. To remove the MicroSD card while the cellphone is on, you must unmount the storage card from the cellphone first, to prevent corrupting or damaging the storage card.

- Press **Menu** key from the Home screen,
- Touch **Settings\SD card & phone storage**.
- Touch **Unmount SD card**.

You can now safely remove the MicroSD card from the cellphone.

To format a MicroSD card

- Press **Menu** key from the Home screen,
- Touch **Settings\SD card & phone storage**.
- Touch **Erase SD card**. On the screen a popup warns you that formatting the MicroSD card will erase its contents, touch 

6.5 Sharing your cellphone's mobile data connection

You can share your cellphone's mobile data connection with a single computer via a USB cable(USB tethering) or with up to eight devices at once by turning your cellphone into a portable Wi-Fi hotspot.



The functions below may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

To share your cellphone's data connection via USB

Use the USB cable that along with your cellphone to connect the cellphone to a USB port on your computer.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Tethering & portable hotspot**.
- Mark\unmark the check box of **USB tethering** to activate/deactivate this function.

To share your cellphone's data connection as a portable Wi-Fi hotspot

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Tethering & portable hotspot**.
- Mark\unmark the check box of **Portable Wi-Fi hotspot** to activate/deactivate this function.



Notice that the data connection sharing will be automatically deactivate each time you power off your cellphone.

To rename or secure your portable hotspot

When Portable Wi-Fi hotspot is activated, you could change the name of your cellphone's Wi-Fi network (SSID) and secure its Wi-Fi network.

- Press **Menu** key from the Home screen.
- Touch **Settings\Wireless & networks\Tethering & portable hotspot\Portable hotspot settings**.
- Touch **Configure Wi-Fi hotspot** to change the network SSID or set your network security.
- Touch **Save**.

6.6 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

To add a VPN

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\VPN settings\Add VPN**.
- Touch the type of VPN to add.
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Press **Menu** key and touch **Save**.

The VPN is added to the list on the VPN settings screen.

To connect/disconnect to a VPN

To connect to a VPN:

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\VPN settings**.
- VPNs you have added are listed; touch the VPN you want to connect with.

- In the dialog that opens, enter any requested credentials and touch **Connect**.

To disconnect:

- Open the Notification panel and touch the resulting notification for the VPN connection.

To edit/delete a VPN

To edit a VPN:

- Press **Menu** key from the Home screen,
- Touch **Settings\Wireless & networks\VPN settings**.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch **Edit network**.
- After finished, press **Menu** key and touch **Save**.

To delete:

- Touch and hold the VPN you want to delete, in the dialog that opens, touch **Delete network**.
- Touch **OK** to confirm.

7 Android Market ⁽¹⁾



Android Market is an online software store, where you can download and install applications and games to your Android Powered Cellphone.

To open Android Market:

- Touch Application tab from the Home screen, and then touch **Market**.
- For the first time you access Android Market, a screen with terms of service pops up for your attention, touch **Accept** to continue.

Press **Menu** key, then touch **Help** to enter Android Market help page for more information on this function.


7.1 Locate the item you want to download and install

Android Market home page provides several ways to find applications. It showcases applications and games in categorized listings, and has a link to all your downloads.



⁽¹⁾ Depending on your country and operator.

Touch **Apps** or **Games** on Android Market screen to browse its contents, and then select subcategory. Within each subcategory you can select to view items sorted by **Top paid**, **Top free**, or **Just in**.

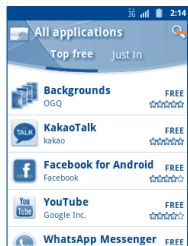

Touch to search in Android market.

To return to Android Market Home screen, do one of the followings:

- Touch the Market icon  on the top left of the screen.
- Press **Menu** key to display options list, then touch **Home**.


7.2 Download and install

To download & install:

- Navigate to the item you want to download, and select to enter the details screen from which you can read its overall rating or comments, view developer's information, etc.
- Press **Menu** key and touch **Security** to preview the functions and data the application can access on your cellphone if you install it.
- Touch **Install**.



Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you touch **OK** to continue, you are responsible for the results of using this item on your cellphone.

- To check the progress of the download, open the Notification panel. To stop the downloading of the item, touch the progress bar and **Cancel download** on the screen that opens.
- After downloading and installation have finished, you will see a notification icon  on the status bar.

To open the application you have downloaded:

- On Android Market screen, touch **My apps**.
- Touch the installed application in the list, then touch **Open**.

To buy an application

On Android Market, some applications are labeled as free, while some of them are to be paid for before downloading and installing.

- Touch the application you want to buy.
- Touch **Buy** at the bottom of the screen.
- When making your first purchase, you are prompted to log in to Google Checkout payment and billing service.
- If your Google Checkout account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, press **Back** key.
- Mark the check box if you agree with the terms of service.
- Touch **Buy now** at the bottom of the screen.

When finished, Android downloads the application.

To request a refund

If you are not satisfied with the application, you can ask for a refund within 24 hours of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Touch **My apps** in Android Market Home.
- Touch the application that you want to uninstall.
- Touch **OK** in the **Uninstall & refund** dialog box. If the dialog box does not appear, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch **OK**.

7.3 Manage your downloads

After you downloaded and installed an application, the following further operations are available for your selection.

View

On Android Market screen, press **Menu** key and touch **My apps**.

Uninstall

On Android Market screen, press **Menu** key and touch **My apps**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

Refund

On Android Market screen, press **Menu** key and touch **My apps**. Touch the application you want to uninstall for a refund, touch **Uninstall & refund**, and finally touch **OK** to confirm.

Update notification

On Android Market screen, press **Menu** key and touch **My apps**. Press **Menu** key and touch **Notification**, select whether or not to be notified of updates, and finally touch **OK** to confirm.

Rate

Open the details screen for an application, touch the stars  under **My review** to award, and touch **OK** to confirm.

Flag

You can report an inappropriate application to Android Market by flagging it. Open the details screen for the application, scroll to the bottom and touch **Flag as inappropriate**, enter the reason and finally touch **Submit**.

8 Multimedia applications


8.1 Camera/Camcorder



Your cellphone is fitted with a Camera and a Camcorder for taking photos and shooting videos.

Before using the Camera or Camcorder, please ensure that a MicroSD card where all pictures and videos are stored is correctly installed. Also, be sure to open the protective lens cover before use to avoid it affecting your picture quality.

To access this function, touch Application tab from the Home screen and then touch **Camera** or **Camcorder**.

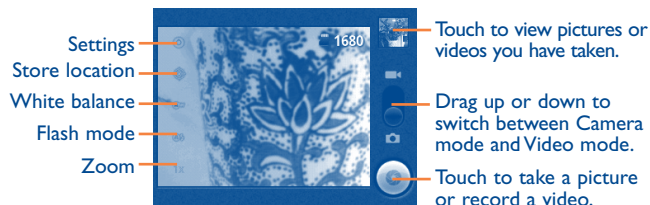

To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, and touch icon to take the picture, which will be automatically saved.

Zoom in/zoom out

Touch icon to open the Zoom control and slide the scroll bar to zoom in or out gradually. Touch the screen twice to zoom all the way in or out.

To shoot a video

Switch Camera mode to Video mode or access Camcorder directly from the applications list. First position the object or landscape in the viewfinder, and touch icon to start recording. Touch icon to stop shooting. The video will be automatically saved.

Further operations when viewing a picture or a video you have taken:

- Touch to set the picture as a contact icon, wallpaper, etc.
- Touch to share the picture or video you have just taken or shot by Bluetooth, MMS, gmail, etc.
- Touch to delete the picture or video you have just taken or shot.
- Touch to enter **Slideshow**.
- Touch to return to frame mode after viewing a picture or shooting a video.
- Touch to play the video you have just shot.

Press **Menu** key or touch and hold the picture to display more operations such as **Rotate left**, **Rotate right**, **Crop** and **Details** etc. (refer to “Working with pictures”)

8.1.1 Settings in framing mode

Before taking a photo/shooting a video you can adjust a number of settings in framing mode.

Camera settings

- **Settings** Touch to enter a scrolling list of settings: Focus mode, Exposure, Picture size, Picture quality, and etc.
- **Store location** Touch to turn on/off stored location information of pictures by using the cellphone's GPS.
- **White balance** Touch to adjust color in different lights: Auto, Incandescent, Daylight, Fluorescent or Cloudy.
- **Flash mode** Touch to turn on/off flash mode or set as auto.
- **Zoom** Touch to open the Zoom control and slide the scroll bar to zoom in or out gradually.

Video/Camcorder settings:

- **Settings** Touch to enter a scrolling list of settings: Video format, Video Encoder, Audio Encoder, Video duration, Remaining time, etc.
- **White balance** Touch to adjust color in different lights: Auto, Incandescent, Daylight, Fluorescent or Cloudy.
- **Flash mode** Touch to turn on/off flash mode.
- **Video quality** Touch to set video quality.

Advanced settings (Press the Menu key):

- **Preview photo/video** Touch to preview your photo or video.
- **Switch to camera/video** Touch to switch between camera and video.

8.2 Gallery



Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice (refer to “Further operations when viewing a picture or a video you have taken:”).

To access this function, touch Application tab from the Home screen, then touch **Gallery**.

From this menu, you can access Camera or Camcorder for taking a picture or video.



Touch to open camera.

Pinch the album and spread it apart.

Slide left or right to view more albums.

To view a picture/play a video

Pictures and videos are displayed by albums in **Gallery**.



Touch and scroll the bar to switch. This will change the album view from grid to stack.


Drag left or right to scroll through the album quickly.

- Touch an album, pinch it with two fingers and then all pictures or videos will spread the screen.
- Touch the picture/video directly to view or play it.
- Slide left/right to view previous or next pictures/videos.

Working with pictures

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as contact ID or wallpaper, etc.(refer to “Further operations when viewing a picture or a video you have taken.”)

Locate the picture you want to work on, press **Menu** key or long press the screen from full-screen picture view.

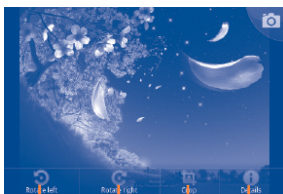

Touch **Menu** key or long press the screen, four options will appear below.

To crop a picture, touch a picture to view controls and touch **Menu/Crop**.The cropping square appears in the middle of the picture. Select the portion to crop, touch and Save.

Batch operation

Gallery provides a multi-select function, so that you can work with pictures/videos in batches.

Open the main Gallery window or an album, press **Menu** twice or touch and hold one album/picture, and mark the checkbox before the file you want to work on, then perform further actions, like delete, share, etc.

8.3 YouTube




YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.

To access this function, touch Application tab from the Home screen, then touch **YouTube**.



As an online video service, your cellphone must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most popular, Most viewed, Top rated, etc.

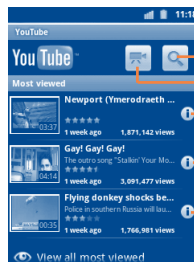

Touch to search for a video.

Touch to shoot a video.

Touch to learn more about a video.

By pressing **Menu** key from YouTube screen, you can rate, share, label as favourite, etc. For details about these features, please visit the YouTube website: www.YouTube.com

8.3.1 Watch videos

Touch a video to play it.

Touch video playing screen to display playback controls with which you can pause, skip forward or backward, or drag the progress bar to the point you want to watch.

To exit video playing screen, press **Back** key to return to the video list.

8.4 Music

Using this menu, you can play music files stored on the MicroSD card in your cellphone. Music files can be downloaded from the computer to your MicroSD card using an USB cable.

To access this function, touch Application tab from the Home screen, then touch **Music**.

You will find four libraries in which all songs are classified: **Artists**, **Albums**, **Songs**, and **Playlists**. Touch a category and view the list.


With the help of **Search** key, you can easily search for songs you want to play in libraries.

To delete a song, press **Menu** key from playback screen and then touch **Delete** to remove it from the MicroSD card.

You can also set a song as a ringtone, press **Menu** key from playback screen to display option menu, then touch **Use as ringtone**.

8.4.1 Playing music

From any of the four library screens, touch a song to play it back.

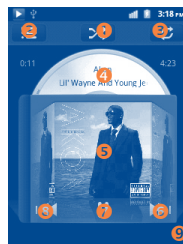

- 1 Touch to play the current playlist in shuffle mode (tracks are played in random order).
- 2 Touch to open the current playlist.
- 3 Touch to toggle repeat mode: Don't repeat, Repeat the playlist, or Repeat the current track.
- 4 Touch and hold to search for more information.
- 5 Slide left or right to view album list.
- 6 Touch to skip to the next track in the album, playlist, or shuffle.
- 7 Touch to pause/resume playback.
- 8 Touch to skip to the previous track in the album, playlist, or shuffle.
- 9 View lyrics*

Adjust volume

To adjust the volume, you can press **Volume up** and **Volume down** key.

8.4.2 Using Party shuffle

All songs will be displayed in order by default. When Party shuffle is activated, some songs will be selected and played at random. Press **Menu** key, then touch **Party shuffle** to turn on this function. To turn it off, press **Menu** key again, then touch **Party shuffle off**.

8.4.3 Working with playlists

Playlists allow you to conveniently organize all the songs stored in the card.

You can create a new playlist, add a song to the list, rearrange the order of the list, and delete or rename a playlist.

To create a playlist

Press **Menu** key from playback screen to display the option menu, touch **Add to playlist**, then touch **New**, enter the name and finally touch **Save**.

To change the order of songs in a playlist

Enter a playlist, drag a song up or down to change the order within the playlist.

To delete a song or a playlist

Locate the song or playlist you want to delete, touch and hold or press **Menu** key from playback screen to display option menu, then touch **Delete**.

To rename a playlist

Locate the playlist you want to rename, touch and hold to display option menu, then touch **Rename**. When finished, touch **Save**.

8.5 Sound Recorder

To access this function, touch Application tab from the Home screen, then touch **Sound Recorder**.

Sound Recorder allows you to record voice/sound for seconds/hours.

8.6 Videos

To access this function, touch Application tab from the Home screen, then touch **Videos**.

Videos is a small built-in video player that lists all your videos.

Touch an item from the list to play. While playing, use Pause, Forward and Back functional icons as required, touch a point on the timeline to jump to and play from.

9 Google Maps.....



9.1 Get My Location

9.1.1 Choose a data source to decide My Location

Press **Menu** key from the Home screen, touch **Settings\Location & security**.

- Mark the check box of **Use wireless networks** to set Wi-Fi and/or mobile networks as My Location data source.
- Or mark the check box of **Use GPS satellites** to set GPS as My Location data source.

9.1.2 Open Google Maps and view My Location


Touch Application tab from the Home screen, then touch **Maps**.

Press **Menu** again and touch **My Location**.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.



To move the map, drag the map with your finger.

To zoom in and out of a map, touch the plus or minus side of the zoom control , or you can also zoom in/out by double-tapping a location on screen.

To clear the map history, press **Menu** key and touch **More\Clear Map**.

9.2 Search for a location

- While viewing a map, press **Menu** key and touch **Search**, or you can directly press **Search** key on keyboard to activate search function.
- In the search box, enter an address, a city or a local business.
- Touch the search icon and in a while your search results will appear on the map highlighted by markers with letter labels.




You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more handy information about the location.

9.3 Star a location

Just like bookmarking a web address on the Internet, you can star any position on the map for later use.

9.3.1 How to star (or unstar) a location

- Touch & hold a location on a map
- Touch the address rectangle that opens
- Touch the gray star at the top of the screen to star the location. (Or touch a gold star to unstar that location.)

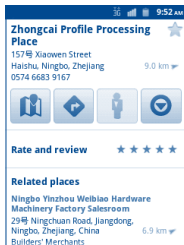

9.3.2 View a list of starred items

 
- Press **Menu** key from maps screen and touch **More Starred Places**.
- The list of your starred items and their addresses opens.
- Touch a location in the list to view it .


Press **Menu** key and touch **Refresh** to update the list.

9.4 Get driving, public transport or walking directions

9.4.1 Get suggested routes for your trip

- Press **Menu** key from maps screen and touch **Directions**.




- Touch enter bar or  to edit your start point by one of the following methods: entering an address, using My Location, selecting a start point on a map, selecting a starred item, selecting an address from your contacts or using search history.
- Do likewise for your end point.
- To reverse directions, press **Menu** key and touch **Reverse Start & End**.
- Then select a transport mode: driving by car, using public transport, or walking directions.
- Finally touch **Go**.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.

To get reverse directions for a route you've already made, simply open that route's directions window and select **Reverse**. No need to enter your start point and end point again.

9.4.2 Preview suggested routes and decide on a route more preferable or feasible to you

You can preview each turn in your route in Navigation, Satellite, and other views.

- Touch a left or right arrow to preview the next or previous leg of your route.
- You can view turn-by-turn directions in a list by touching , press **Back** key to return to previous view.

When selecting a more preferable or feasible route, distance and time will be the two most important factors for your evaluation. Distance and estimated time will be displayed at the top of the directions screen.

9.4.3 Search for locations along your route

Please refer to “9.2 Search for a location” for detailed information.

9.4.4 View route progress and calculate estimated arrival time

To view your route progress, pinpoint My Location, zoom out until the whole route goes into one screen, with both finished and unfinished miles in sight.

Start another Directions screen based on your current and intended destination locations. Estimated arrival time will be shown in the results. Please note that the estimated arrival time is not available for the public transport mode.

9.4.5 View traffic conditions on your route

At the lower-left corner of navigation view, a traffic light indicates the overall traffic conditions on your route, next to the estimated time of arrival at your destination. You can also view the traffic conditions on each segment of your route.

Touch the traffic light at the lower left of the Navigation View. Your route opens in Traffic View, with color coding to indicate the traffic along the way. Touch the navigation icon to return to your current location in Navigation View

9.4.6 Get an alternative route to your destination

If traffic is slow on your current route, or if you just want to try a different route, you can request an alternative route from Google Maps with turn-by-turn Navigation service.

Press **Menu** key and touch **Route information**. Touch the alternative route icon. An alternative route is drawn on the map.

9.5 Arrangement of Layers

Layers allow you to view locations and additional information overlaid on the map. You can add multiple layers or remove only certain layers so you control exactly what information you want visible on the map at one time.

9.5.1 To view multiple layers

- Press **Menu** key from maps screen.
- Touch **Layers**.
- All available layers are listed (like Traffic, Satellite, Latitude, etc), select one to view.

9.5.2 To open Street View for a location

- Touch and hold a location to display a balloon with the address and a Street View thumbnail.
- Touch the balloon and touch **Street view**.

9.5.3 To clear the map

After you get directions or search on a map, you can clear the markers/layers that have been drawn: press **Menu** key on maps screen and touch **More/Clear Map**, or you can also touch **Clear Map** on Layers screen.

9.5.4 To view more layers

You can browse more layers to add to the map such as My Maps, Transit Lines or Wikipedia, etc.

- Press **Menu** key from maps screen.
- Touch **Layers**.
- Touch **More layers** at the bottom of the screen.
- All available layers are listed for your selection.

9.6 Join Latitude to see your friends' locations and share yours with them

With Google Latitude, you can:

- see your friends' locations on a map or in a list.
- quickly contact your friends with a text message, instant message, or cellphone call.
- you can share, set, hide your location, or sign out of Google Latitude.
- control who sees your location, and at what level of detail.
- add Latitude widget to home screen to see nearby friends at a glance.

9.6.1 To join Latitude

- Press **Menu** key from maps screen.
- Touch **Join Latitude**.

When you joined Latitude, the menu item changes to **Latitude**.

To open Latitude, press **Menu** key from maps screen, then touch **Latitude**.

9.6.2 How to invite friends to share their locations

- Press **Menu** key from Latitude screen, touch **Add friends**.
- Touch **Select from Contacts** or **Add via email address**.
- After selecting your chosen contacts touch **Add friends** at the bottom of the screen.

When finished, an invitation will be sent to the friends you have invited.

To respond to an invitation, you can select one of the followings:

- **Accept and share back** You and your friend can share locations with each other.
- **Accept, but hide my location** You can view your friend's location, but they can not view yours.
- **Don't accept** No locations can be shared between you and your friend.

9.6.3 To view your friends' location

You can view your friends' locations on a map or in a list.

- **Map view** When Google Maps is opened, your friends' locations will display with their photo icons for identification.
- **List view** Press **Menu** key from maps screen, then touch Latitude. Your friends are displayed in a list.

9.6.4 To connect with your friends

Select a contact, you can communicate with your friend and set privacy options.

- **Show on map** Locate the friend's position on the map.
- **Chat using Google Talk** Send instant messages to the friend.
- **Send email** Send emails to the friend.
- **Directions** Get directions to this friend's location.
- **Hide from this friend** Set to hide your location from this friend.
- **Share only city level location** Set to share locations only at city level, instead of street level, etc.
- **Remove** Remove this friend from your list and stop sharing information with him or her.

9.6.5 To control what you share

You can control the information you want to share with your friends.

Press **Menu** key from maps screen, touch **Latitude**, touch your own name and then touch **Privacy**.

The following options are available to choose from:

- **Detect your location** Enable Latitude to detect your location automatically when you move around.
- **Set your location** Select a location on the map manually.
- **Hide your location** Hide your location from all friends.
- **Turn off Latitude** Deactivate Latitude and stop sharing.

10 Others.....

10.1 FileManager.....

To access this function, touch Application tab from the Home screen, then touch **FileManager**.

FileManager works with your MicroSD card instead of your cellphone memory. To use it, you have to install your MicroSD card first. See “Installing or removing the MicroSD card”.

FileManager displays all data stored on the MicroSD card, including applications, media files downloaded from Android Market, YouTube or other locations; videos, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from PC to MicroSD card, you can locate the application on FileManager, then touch it to install it in your cellphone.

FileManager allows you to perform and be really efficient with the following common operations: create (sub) folder, open folder/file, view, rename, move, copy, delete, play, share, etc.

10.2 Notes.....

To access this function, touch Application tab from the Home screen, then touch **Notes**.

Use **Notes** to note down inspirations, ideas, excerpts, things to do and all those things you may want to keep for future reference.

Existing notes can be sent via Bluetooth, Message or Email.

10.3 SyncMLClient.....



To access this function, touch Application tab from the Home screen, then touch **SyncMLClient**.

You have to configure your own sync-hosting server account to locate the synchronization source at the other side. Also you might be asked to decide on the following options:

- **Who to sync:** account name, username and password are needed to authenticate your identity.
- **How to sync:** available synchronization types are two-way synchronization, backup to server, restore from server, export to server, and import from server.
- **What to sync:** supported synchronization applications are Contacts and Calendar, each with an independent secure database that doesn't allow anonymous access.
- **When to sync:** synchronize when roaming, synchronize when data is modified, synchronize when cellphone is turned on or synchronize at a regular basis (daily, weekly or monthly).

10.4 FmRadio.....



Your cellphone is equipped with a radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service.


To access this function, touch Application tab from the Home screen, then touch **FmRadio**.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.



To use it, you must plug in your headset, which works as an antenna connected with your cellphone.

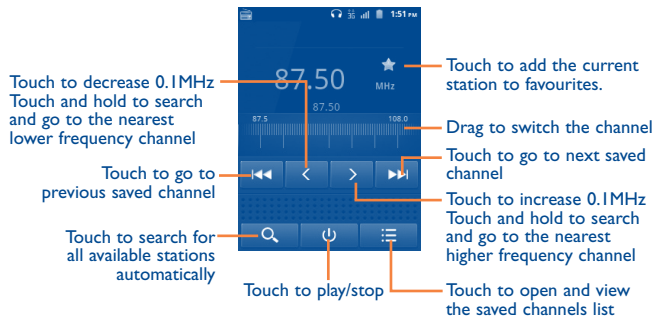

Operations for saved channels

In the saved channels list, touch and hold one channel, then you can choose operations including **Add to/Remove from favorite**, **Edit name**, or **Delete**.

The favorite channels will move to the top of the list with a star icon.

Available options:

- **Edit name** Edit the channel name.
- **Audio mode** Listen to the radio using loudspeaker or headset.
- **Exit** Turn off the radio.
- **Enter frequency** Enter the frequency manually.
- **Settings** Customize radio settings according to preference.
- **Delete** Delete the channel

10.5 Traffic Manager

To access this function, touch Application tab from the Home screen, then touch **Traffic Manager**.

Traffic Manager is an application which manages the volume of data over a pre-defined time period which can then be reset. It blocks all data when the limit value is reached.

10.6 LEDTorch

To access this function, touch Application tab from the Home screen, then touch **LEDTorch**.

LEDTorch is an application which can provide power light for your convenience and you can select to turn on/off or adjust the brightness as needed.

10.7 Other applications ⁽¹⁾

The previous applications in this section are preinstalled on your cellphone. To read a brief introduction of the preinstalled 3rd party applications, please refer to the leaflet provided with the cellphone. You can also download thousands of 3rd party applications by going to Android Market on your cellphone.

⁽¹⁾ Application availability depends on country and operator.

11 Settings

To access this function, touch Application tab from the Home screen, and touch **Settings** on main menu, or you can also press **Menu** key from the Home screen and touch **Settings**.

11.1 Wireless & networks

11.1.1 Airplane mode

Mark the check box of **Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

11.1.2 Wi-Fi/Wi-Fi Settings

Using Wi-Fi you can surf the Internet whenever you are in range of a wireless network. The only thing you have to do is to enter the **Wi-Fi settings** screen and configure an access point to connect your cellphone to the wireless network.

For detailed instructions on using Wi-Fi, please refer to section “**6.1.2 Wi-Fi**”.

11.1.3 Bluetooth/Bluetooth Settings

Bluetooth allows your cellphone to exchange data (videos, images, music, etc.) in a small range with another Bluetooth supported device (cellphone, computer, printer, headset, car kit, etc.).

For more information on Bluetooth, please refer to section “**6.3 Connecting to Bluetooth devices**”.

11.1.4 Tethering & portable hotspot

This function allows you to share your cellphone's mobile data connection via USB or as a portable Wi-Fi access point (Please refer to section “6.5 Sharing your cellphone's mobile data connection”).

11.1.5 VPN settings

A mobile virtual private network (mobileVPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. MobileVPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspend-and-resumes their devices to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information of VPN, please refer to section “6.6 Connecting to virtual private networks” .

11.1.6 Mobile networks

Data enabled

If you do not need to transmit data on all mobile networks, unmark the check box of **Data enabled** to avoid incurring significant charges for data use on local carrier mobile networks, particularly if you do not have a mobile data agreement.

Data roaming

If you don't need to transmit data on other carriers' mobile networks, unmark the check box of **Data roaming** to avoid incurring significant roaming charges.

network mode

Touch to change your preferred network mode.

System select

You can change CDMA roaming mode with this menu, switching between Home only and Automatic.

Cell Broadcast SMS

Enable receipt of CB messages by marking the check box of **Cell Broadcast SMS**.

You can access a series of adjustable CB settings by touching **Cell Broadcast SMS settings**.

Use only 2G networks

You can select to use only 2G networks.

11.2 Call settings

Use Call settings to configure normal cellphone call settings and other special features offered by your carrier. You can also use Call settings to configure the cellphone so that it can place outgoing calls only to a fixed set of cellphone numbers.

11.2.1 Voicemail

Voicemail service

Opens a dialog where you can select your carrier's voicemail service or another service.

Vicemail settings

If you are using your carrier's voicemail service, this opens a dialog where you can enter the cellphone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number—for example, to add a password after the cellphone number.

11.2.2 Other call settings

TTY mode

TTY mode can be used by people who are deaf, have bad hearing or speech impairments.

After connecting the cellphone and TTY machine, it connects to a relay service, which converts incoming speech to text for the person using the TTY and converts outgoing text from the TTY machine to a spoken voice for the person on the other end of the conversation.

Hearing aids

Touch to turn on hearing aid compatibility.

DTMF Tones

Set the length of DTMF tones.

Voice Privacy

Mark/Unmark the check to enable/disable the enhanced privacy mode.

11.2.3 Internet call settings

Accounts

Touch the icon **Add account** at the bottom of the screen to add SIP accounts. You are required to set Username, Password and Server, and also choose to set it as a primary account or not. Touch **Optional settings** to show all hidden choices, including Authentication username, Display name, Outbound proxy address, Port number, Transport type and Send keep-alive. Finally, press **Menu** key and touch **Save**.

Mark/Unmark **Receive incoming calls** to enable/disable this function.



Enable this function will reduce battery life.

Use Internet calling

You can choose how to use the Internet call, including **For all calls when data network is available**, **Only for Internet calls** and **Ask for each call**.

11.3 Sound

Use the Sound settings to configure many aspects of call and notification ringtones, music, and other audio settings.

- **Silent mode** Mark the check box to silence all sounds except media & alarms.
- **Phone Vibrate** Touch to access phone vibrate options.
- **Volume** Touch to set volume for Incoming call, Media and Alarm.
- **Phone ringtone** Touch to set your default incoming call ringtone.
- **Notification ringtone** Touch to set your default notification ringtone.
- **Audible touch tones** Mark the check box to enable playing tones when using dial pad.
- **Audible selection** Mark the check box to enable playing sounds when making screen selection.
- **Screen lock sounds** Mark the check box to enable playing sounds when locking and unlocking the screen.
- **Vibrate feedback** Mark the check box to activate vibration when pressing soft keys and on certain UI interactions.
- **Emergency tone** Touch to select the emergency tone(Off/Alert/Vibrate).

11.4 Display

- **Brightness** Touch to adjust the brightness of the screen or select Automatic brightness.
- **Orientation** Touch to select whether rotate screen automatically or not.
- **Animation** Touch to select whether to show some, all or no animations.
- **Screen timeout** Touch to set screen timeout.

11.5 Location & security

Use the Location & Security settings to set your preferences for using and sharing your location when you search for information and use location-aware applications, such as Google Maps. You can also configure settings that help secure your cellphone and its data.

11.5.1 My Location

Use wireless networks

Mark the check box to use information from Wi-Fi and mobile networks to determine your approximate location, for use in Google Maps, when you search, and so on. When you select this option, you're asked whether you consent to share your location anonymously with Google's location service.

Use GPS satellites

Check to use your cellphone's global positioning system (GPS) satellite receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your cellphone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

AGPS Setting

Touch to set the AGPS server address and the port.

11.5.2 Screen unlock pattern\Set up screen lock

- **None** Touch to disable screen unlock security.
- **Pattern** Touch to draw pattern to unlock screen.
- **Password** Touch to enter a password to unlock screen.

11.5.3 Passwords\Visible passwords

Mark the check box to show passwords as you type.

11.5.4 Select device administrators

Touch to add or remove device administrators.

11.5.5 Credential storage

Use secure credentials

Mark the check box to allow applications to access your cellphone's encrypted store of secure certificates, related passwords and other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

Install from SD card

Touch to install encrypted certificates from the MicroSD card.

Set password

Touch to set or change a password for the credential storage (at least 8 characters).

Clear storage

Touch to clear credential storage of all contents and reset its password.

11.6 Applications


You use the Applications settings to view details about the applications installed on your cellphone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and emails.

Unknown sources

Mark the check box to permit installation of applications that you obtain from web sites, emails, or other locations other than Android Market.

To protect your cellphone and personal data, download applications only from trusted sources, such as Android Market.

Quick launch

Touch to set keyboard shortcuts to launch applications. After setting, press the  key + the letter key to launch the selected application.

Manage applications

Touch to manage and remove installed applications.

Running services

Touch to open a list of services—applications or parts of applications that provide services to other applications, or that run even when their main applications aren't running. Examples include the Android onscreen keyboard and the small portion of Google Talk that always listens for incoming messages. Above each service, one or more gray bars show what processes the running service needs and how much memory they're using (how much memory you would recover if you stopped the service). Depending on the service, when you touch it in the list it either opens a dialog in which you can stop it or opens its Settings screen.

Storage use

Touch to view storage use.

Battery use

Touch to show the status of battery using.

Development

The Development screen contains settings that are useful for developing Android applications. For full information, including documentation of the Android applications and development tools, see the Android developer web site (<http://developer.android.com>).

- **USB debugging:** mark the check box to permit debugging tools on a computer to communicate with your cellphone via a USB connection.
- **Stay awake:** mark the check box to prevent the screen from dimming and locking when the cellphone is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the cellphone for long periods of time, or the screen may be marked with that image.
- **Allow mock locations:** mark the check box to permit a development tool on a computer to control where the cellphone believes it is located, rather than using the cellphone's own internal tools for this purpose.

11.7 Accounts & sync

Use the Accounts & Sync settings to add, remove, and manage your Google and other supported accounts. You can also use these settings to control how and whether all applications send, receive, and synchronize data on their own schedules, and whether all applications can synchronize user data automatically.

Gmail, Google Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

11.7.1 General sync settings

Background data

Mark the check box to permit applications to synchronize data in the background, whether or not you are actively working in them. Unmarking this setting can save battery power and lowers (but does not eliminate) data use.

Auto-sync

Mark the check box to permit applications to synchronize data on their own schedule. If you unmark this setting, you must touch an account in the list on this screen, press **Menu** key, and touch **Sync now** to synchronize data for that account.

Synchronizing data automatically is disabled if **Background data** is unchecked. In that case, the **Auto-sync** checkbox is dimmed.

11.7.2 Manage accounts

The rest of this screen lists the Google Accounts and other accounts you've added to the cellphone. If you touch an account in this screen, its account screen opens.

This screen contains different options, depending on the kind of account. For Google Accounts, it lists the kinds of data you can synchronize to the cellphone with checkboxes so you can turn synchronizing on and off for each kind. You can also press **Menu** key and touch **Sync now** to synchronize data. Touch **Remove Account** to remove the account along with all its data (contacts, mails, settings, and so on).

11.8 Privacy

You use the Privacy settings to manage your personal information.

Back up my data

Mark the check box to back up your cellphone's settings and other application data to Google Servers, with your Google Account. If you replace your cellphone, the settings and data you've backed up are restored onto the new cellphone for the first time you sign in with your Google Account. If you mark this option, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

Automatic restore

Mark the check box to restore your backed up settings or other data when you reinstall an application.

Factory data reset

Erase all of your personal data from internal cellphone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the cellphone does not erase any system software updates you've downloaded or any files on your MicroSD card, such as music or photos. If you reset the cellphone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your cellphone, there is another way to perform a factory data reset by using hardware keys. Press **#(B)** key and **power/End** key at the same time until the screen lights up.

11.9 SD card & phone storage

Use the **SD card & phone storage** settings to monitor the total and available space on your cellphone and on your MicroSD card; to manage your MicroSD card; and if necessary, to reset the cellphone, erasing all of your personal information.

11.9.1 SD card

Total space/Available space

Lists the amount of space on any MicroSD card installed in your cellphone and the amount you can use to store photos, videos, music, and other files.

Unmount/Mount SD card

Mount/Unmount the MicroSD card from your cellphone so that you can format the card or safely remove it when the cellphone is on. The Unmount option is dimmed if there is no MicroSD card installed, or have already unmounted it, or have mounted it on your computer.

Erase SD card

Permanently erases everything on a MicroSD card and prepares it for use with your cellphone.

11.9.2 Internal storage

Available space

Touch to display the amount of internal cellphone storage used by the operating system, its components, applications (including those you downloaded), permanent and temporary data.



If a warning message comes up saying that cellphone memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files, etc.

11.10 Language & keyboard

Use the Language & keyboard settings to select the language for the text on your cellphone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

11.10.1 Select locale

Touch to select the language and the region you want.

11.10.2 User dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Press **Menu** key and touch **Add** to add a word.

11.10.3 Android keyboard

Mark/Unmark the check box to turn on/off the Android keyboard.

11.10.4 Android keyboard

For cellphones with physical keyboards, unmark to disable the onscreen keyboard.

The Android keyboard settings apply to the onscreen keyboard that is included with your cellphone. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

Vibrate on keypress

Mark the check box to have the cellphone vibrate briefly each time you touch a key on the onscreen keyboard.

Sound on keypress

Mark the check box to play a brief sound each time you touch a key on the onscreen keyboard.

Popup on keypress

Mark the check box to popup messages when you input keyboard.

Touch to correct words

Mark the check box to enable you to correct entered words by touching them.

Auto-capitalization

Mark the check box to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

Show settings key

Touch to set how to show the settings key.

Voice input

Touch to display or not the Mic button on keyboard.

Input languages

Touch to set input language.

Quick fixes

Correct commonly typed mistakes.

Show suggestions

Display suggested words while typing.

Auto-complete

Spacebar and punctuation automatically insert highlighted word.

11.10.5 TouchPal Input

Mark/Unmark the check box to turn on/off the Touchpal Input.

11.10.6 TouchPal Input

The TouchPal Input will allow you input text easily. You can make changes to the settings for easy input.

Available options are as follows:

Key press sound

Touch to adjust volume of key press sound.

Key press vibration

Touch to change the level of vibration.

Show Popup

Mark or unmark the check box to activate/deactivate the function.

Slide-down symbols

Mark or unmark the check box to activate/deactivate ths function.

Keyboard layout

Touch to enter Keyboard layout settings. Mark/unmark the check box to activate or deactivate functions such as **Swipe to switch layout**, **Show function Bar**, etc.

TouchPal Input

Touch to enter TouchPal Input settings. Mark/unmark the check box to activate or deactivate functions such as **Word prediction**, **Correct mistyping**, etc.

Language

Touch to select the language you may use.

Help

Touch to get useful tips while using TouchPal.

Tutorial

Touch to play the TouchPal tutorial wizard.

Software Update

Touch to update the TouchPal input through the Internet.

About

Touch to get more information about the TouchPal version you are using.

11.10.7 Device keyboard

Touch to set the built-in physical keyboard.

11.10.8 Soft keyboard switch

Mark/Unmark the check to enable/disable soft keyboard in the landscape/portrait mode.

11.11 Voice input & output

11.11.1 Voice recognizer settings

Touch to set Google voice recognition items:

- **Language** Choose an input language
- **SafeSearch** Set Google Search safety range
- **Block offensive words** Mark the check box to hide recognized offensive voice results

11.11.2 Text-to-speech settings ⁽¹⁾

You use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications like TalkBack that can take advantage of it.

If you don't have speech synthesizer data installed, only the Install voice data setting is available.

⁽¹⁾ Availability depending on your country and network operator.

Listen to an example

Touch to play a brief sample of the speech synthesizer, using your current settings.

Always use my settings

Mark the check box to use the settings on this screen in place of speech synthesizer settings available in other applications.

Default Engine

Touch to set the speech synthesis engine to be used for spoken text.

Install voice data

If your cellphone does not have speech synthesizer data installed, connect to Android Market and find yourself guided through the process of downloading and installing the data. This setting is not available if the data is already installed.

Speech rate

Touch to open a dialog where you can select how quickly you want the synthesizer to speak.

Language

Touch to open a dialog where you can select the language of the text you want the synthesizer to read. This is particularly useful in combination with Always Use My Settings, to ensure that text is spoken correctly in a variety of applications.

Pico TTS

Touch to show Pico TTS settings. Please firstly install voice data.

11.12 Accessibility ⁽¹⁾

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your cellphone.

Accessibility

Mark the check box to enable all installed accessibility plug-ins.

KickBack

Mark the check box to have the cellphone vibrate briefly as feedback as you navigate the user interface, press buttons, and so on.

TalkBack

Mark the check box to have an installed speech synthesizer speak the labels or names of items as you navigate the cellphone's user interface.

SoundBack

Mark the check box to play a sound as you navigate to the cellphone's user interface.

End key ends call

Mark the check box to end a call by pressing **Power/End key** during the call.

11.13 Date & time

Use Date & Time settings to customize your preferences for how date and time are displayed.

Use 24-hour format

Mark the check box to display the time using 24-hour clock format.

⁽¹⁾ Availability depending on your country and network operator.

Select date format

Touch to open a dialog where you can select the format for displaying dates.

11.14 About phone

Actually this contains information about a lot of things ranging from Legal information, Model number, Firmware version, Baseband version, Kernel version, Build number to those listed below:

System updates

Touch to check for system updates.

Status

This contains Battery status, Battery level, Bluetooth headset battery level, My phone number, MIN, PRL Version, ESN, MEID, Network, Signal strength, Mobile network type, Service status, Roaming, Mobile network state, Wi-Fi MAC address, Bluetooth address and Up time.

Battery use

Touch to open a list of the applications and operating system components you have used since you last connected the cellphone to a power source, sorted by the amount of power they have used. Touch an application in the list to view details about its power use and, if available, touch a button to open a settings or information screen for that component or application.

Legal information

Touch to view legal information.

11.15 Home screen settings

Touch to set the number of home screens.

12 Making the most of your cellphone

12.1 PC suite

You can download Android Manager for free from the website (www.alcatelonetouch.com). The PC suite includes:

- **Contacts**

It allows you to back up contact entries so that you don't have to worry about losing, breaking, switching cellphone or changing service providers.

- **Messages**

It frees you from painstakingly inputting text on the keypads. All of your messages are easily accessible and well-organized.

- **Photos**

It allows you to easily import photos from PC or the handset and organize them in different albums for better management.

- **Videos**

It allows you to insert video files from PC for playback and then upload to handset folder.

- **Music**

It allows you to quickly search your favourites in PC, manage the ultimate Library, and enjoy the easiest digital jukebox in your own mobile way.

- **Application**

It allows you to import downloaded mobile applications and have them installed into your handset upon synchronization.

- **File**

It allows you to organize Handset files with just a few clicks and files on the Handset can be at where you want them to be.

- **Sync**

It allows you to synchronize the Contacts and Calendar in Outlook/ Outlook Express and handset.

Supported Operating Systems

Windows XP/Vista/Windows 7.

12.2 One Touch Upgrade

Using One Touch Upgrade tool you can update your cellphone's software from your PC.

Download One Touch Upgrade from ALCATEL website (www.alcatelonetouch.com) and install it on your PC. Launch the tool and update your cellphone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your cellphone's software will now have the latest software.



All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

13 Alcatel Mobile Phones Limited Warranty.....

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your cellphone is used;
- Connection to any equipment not supplied or not recommended by TCT Mobile;
- Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates;
- Acts of god such as Inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;
- Removal or altering of the wireless devices event labels or serial numbers (MEID);

- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
- Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

How to obtain Support: Contact the customer care center by calling (877-702-3444) or going to www.alcatelontouch.com. We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of warranty repair options.

To obtain hardware repairs or replacement within the terms of this warranty, contact TCT Mobile to get an RMA number, include a copy of the original proof of warranty coverage (e.g. original copy of the dated bill of sale, invoice), the consumer's return address, your wireless carrier's name, alternate daytime cellphone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center. TCT Mobile is not responsible for wireless devices that do not arrive at the service center. Upon receipt, the service center will verify the warranty conditions, repair, and return your wireless device to the address provided.

14 Accessories ⁽¹⁾.....

The latest generation of Alcatel cellphone offers a built-in handsfree feature that allows you to use the cellphone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



US charger




MicroSD card



Battery



USB cable

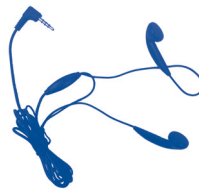

Stereo headset





Only use your cellphone with the Alcatel batteries, chargers and accessories in your box.

⁽¹⁾ Pictures for reference only.

15 Troubleshooting.....

Before contacting the service centre, you are advised to follow the instructions below:

- You are advised to fully charge () the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect its performance.
- Use User Data Format and the One Touch Upgrade tool to perform cellphone formatting or software upgrading, (to reset User Data format, hold down **#(B)** key while simultaneously pressing the  key). ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently. It is strongly advised to fully backup the cellphone data and profile via PC suite before doing formatting and upgrading.

and carry out the following checks:


My cellphone is frozen or cannot switch on

- Check the battery contacts, remove and reinstall your battery, then turn your cellphone on.
- Check the battery power level, charge for at least 20 minutes.
- If it still does not work, please use User Data Format to reset the cellphone.

My cellphone has not responded for several minutes

- Restart your cellphone by pressing and holding the  key.
- Remove the battery and re-insert it, then restart the cellphone.

My cellphone turns off by itself

- Check that your keypad is locked when you are not using your cellphone, and make sure the  key is not mis-contacted due to unlocking keypad.
- Check the battery charge level.

My cellphone cannot charge properly

- Make sure you are using an Alcatel battery and the charger from the box.
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger.
- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.

- Make sure charging is carried out under normal conditions (0°C to +40°C).
- When abroad, check that the voltage input is compatible.


My cellphone cannot connect to a network or “No service” is displayed

- Try connecting in another location.
- Verify the network coverage with your operator.
- Try selecting the available network(s) manually (see “11.1.6 Mobile networks”).
- Try connecting at a later time if the network is overloaded.

My cellphone cannot connect to the Internet

- Check that the MEID number (press *#06#) is the same as the one printed on your warranty card or box.
- Check your cellphone's Internet connecting settings.
- Make sure you are in a place with network coverage.
- Try connecting at a later time or another location.

Unable to make outgoing calls

- Make sure you have dialed a valid number and have pressed the  key.
- For international calls, check the country and area codes.
- Make sure your cellphone is connected to a network, and the network is not overloaded or unavailable.
- Check your subscription status with your operator (credit for example).
- Make sure you have not barred outgoing calls.
- Make sure that your cellphone is not in flight mode.


Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription status with your operator (credit for example).
- Make sure you have not forwarded incoming calls (see “Accounts”).
- Make sure that you have not barred certain calls.
- Make sure that your cellphone is not in flight mode.

The caller's name/number does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her name or number.

The sound quality of the calls is poor

- You can adjust the volume during a call by pressing the **Volume Up/Down** key.
- Check the network strength .

- Make sure that the receiver, connector or speaker on your cellphone is clean.

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service.
- Make sure this feature does not require an Alcatel accessory.

When I select a number from my contacts, the number cannot be dialed

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

I am unable to add a contact in my contacts

- Delete some files in the cellphone contacts (i.e. your professional or personal directories).

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability.

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My numbers".
- Try later if the network is busy.

I am unable to send and receive MMS

- Check your cellphone memory availability as it might be full.
- Contact your network operator to check service availability and check MMS parameters (see "4.1.3 Adjust message settings").
- Verify the server centre number or your MMS profile with your operator.
- The server centre may be swamped, try again later.

I am unable to connect my cellphone to my computer

- Install Alcatel Android Manager first of all.
- Check that your USB driver is installed properly.
- Open the Notification panel to check if the PC Suite Agent has activated.
- Check that you have ticked the checkbox of USB debugging in **Settings\Applications\Development\USB debugging**
- Check that your computer meets the requirements for Alcatel Android Manager Installation.
- Make sure that you're using the right cable from the box.

I am unable to download new files

- Make sure there is sufficient cellphone memory for your download.
- Select the Micro-SD card as the location to store downloaded files.
- Check your subscription status with your operator.

The cellphone cannot be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your cellphone is visible to other users (see "6.3 Connecting to Bluetooth devices").
- Make sure that the two cellphones are within Bluetooth's detection range.

How to make your battery last longer

- Make sure you follow the complete charge time (minimum 3 hours).
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication.
- Switch on the backlight upon request.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running applications if they are not being used for a long time.
- Deactivate Bluetooth, Wi-Fi, or GPS when not in use.

My cellphone becomes warm after prolonged calls, game playing, internet surfing or running other complex applications

- This heating is a normal consequence of the CPU handling excessive data. Ending above actions will make your phone return to normal temperature.

16 Specifications

Processor	Qualcomm® MSM7227-1™
Platform	Android™ 2.3
Memory	ROM: 512 MB RAM: 512 MB
Dimensions (LxWxT)	119×58×12.43 mm
Weight	Around 120 grams with battery
Display	2.8-inch TFT-LCD touchscreen with 240×320 MVA Capacity resolution
Network	CDMA: Dual-band 850/1900 MHz (BC0\BC1) (Band frequency and data speed are operator dependent.)
GPS	Assisted GPS/Internal GPS antenna
Connectivity	<ul style="list-style-type: none"> • Bluetooth® BT3.0/A2DP • Wi-Fi®: IEEE 802.11 b/g/n • 3.5 mm audio jack • Micro-USB
Camera	2.0 megapixel color camera
Audio supported formats	MP3, AAC (AAC, AAC+, AAC Enhanced), WB AMR, MIDI

Video supported formats	MPEG-4 (playback only), H.263, H.264 (playback only)
Battery	<ul style="list-style-type: none"> • Rechargeable Lithium-ion battery • Capacity: 1300 mAh
Expansion Slot	MicroSD™ memory card (Availability of MicroSD card depends on market)
Special Features	<ul style="list-style-type: none"> • G-sensor • Digital Compass • Light and proximity sensor

Note Specifications are subject to change without prior notice.

ALCATEL is a trademark of Alcatel-Lucent
and is used under license by
TCT Mobile Limited.

© Copyright 2011 TCT Mobile Limited
All rights reserved

TCT Mobile Limited reserves
the right to alter material
or technical specification
without prior notice.