



## Tablet computer instructions

## Contents


Safety Alerts and Cautions .....	01
Appearance Illustration and Connection Description .....	01
Storage Card .....	02
Basic Operation .....	03
Main Menu Interface Functions .....	04
Basic Menu Functions .....	06
1. Quick Setting	
—Set time and zone .....	06
Text Edit .....	06
Set Brightness and Screen Standby .....	06
Switch between pages or functions .....	06
Rotary direction .....	07
2. Main Interface Shortcut	
—Folder Rename .....	07
Wallpaper Setting .....	08
Menu Function .....	08
1. Notifications .....	08
2. Settings —Wireless & networks .....	08
Sound & display .....	09
Location & Security .....	09
Applications .....	09
Privacy .....	09
SD card & device storage .....	10
Language & keyboard .....	10
Date & time .....	10
Touch panel calibration, USB mode select, Update Media Library .....	10
About device .....	10
Troubleshooting .....	10
Product Technical Specifications .....	11

## Safety Alerts and Cautions

1. This is an electronic product, please avoid using under the environment of over high temperature, over low temperature, moisture or dusty.
2. This product features touch screen, please do not touch the screen with hard or rough objects.
3. When carrying or moving, do not apply extra pressure to prevent the possibility of damage the components.
4. Avoid dropping of the product when using.
5. Please access the internet in the network covering area to avoid a poor networking.
6. Try to avoid formatting, in case of a formatting operation, do not interrupt it otherwise there will be harddisk malfunction.
7. Keep away from static when using and storing the product.
8. Please do not use the product for a long time to avoid eyestrain.
9. Please try to avoid using the product under direct sunshine to prevent the display effect from being influenced and the eyes from injury.
10. In case of a cleaning needed, please use a soft fabric to wipe gently the shell surface and the LCD screen, do not use a solution or other chemicals to wipe it.
11. The battery is fixed inside the machine, user is not allowed to load or unload it freely.


## Appearance Illustration and Connection Description

(The appearance illustration of the product is for reference only, the actual appearance of the product shall be subject to the specific product type)

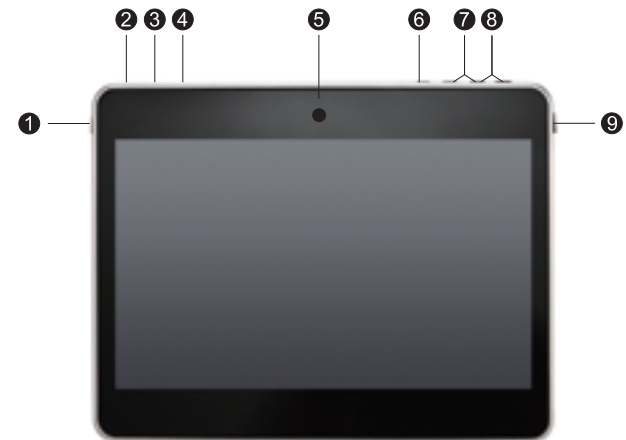 

- |  |   |
|--|---|
| ① Menu: display menu setting interface   | ⑥ Storage card: expanded                      |
| ② Earphone interface   | ⑦ Back (Left)/ Main Interface (Right)         |
| ③ Composite functions interface: USB data connection and built-in battery charging | ⑧ Volume: volume adjustment                   |
| ④ Reset: use the tipped and hard object to touch the key                           | ⑨ Power: (Temporarily) turn on/off the screen |
| ⑤ Camera   |   |

## Appearance Illustration and Connection Description

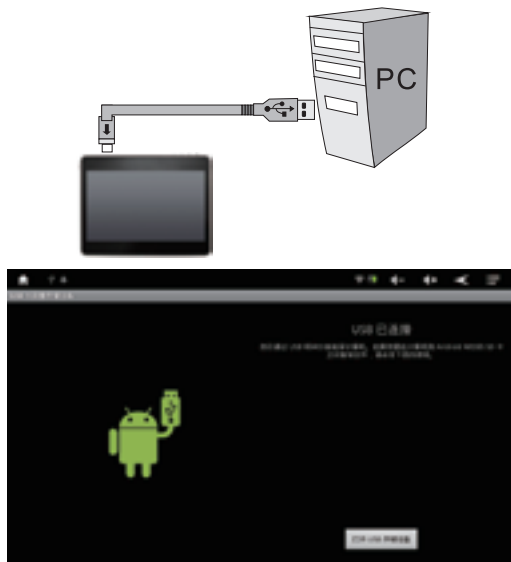 

### • USB Connection

1. USB cable connects the PC with OpenPad, copies the files in the PC to the default mobile HDD of OpenPad.
2. If the user is setting according to the following sequence: **Setting** — **USB Mode** — **Host**, the user can connect external storage devices as U disk and mobile HDD etc. through OTG data cable, but independent power supplying should be applied to the external devices with large power consumption.

### • USB Close

1. After completing transmission, drag the status bar on top of the screen up to down until “Close USB storage device” is shown and click on it.
2. Click on Close on the popping out box to close the USB storage device.

Note: Files copied to OpenPad can only be available for use until USB data cable is closed completely.

## Storage Card

### • Copy files to TF card (refer to USB connection description)

### • Close Storage Card

1. After completing transmission, click “**Setting**” and choose “SD Card and Device Memory” in Setting.
2. Click on “Unload SD Card”.
3. It is now safety to remove the storage card.

Note: the storage card can only be removed upon its complete closing, or there will be damage to the storage card.

## Basic Operation

### • Turn on/off the machine

1. Press long the Power key to turn on the main menu.
2. Press long the Power key to show the turn off menu, click on it directly to turn off.

Note: Press the Power key for approximate 10 second can force the machine to turn off.

### • Temporarily turn on/off the screen

1. Temporarily turn off the screen: press short the Power key to temporarily turn off the screen and save power.
2. Temporarily turn on the screen: press short the Power key to turn on the screen.

Note: when in no use, the product will be in Sleep automatically, turn on the Power key to restart.

### • Charging

When the Power is lower than 20%, there will a prompt on the screen, please connect the charging device to ensure the normal operation.

Note: User can carry out normal operation while in charging in case the product is in start status.

1. Apply AC Power Adapter to connect the machine and the power, the input AC voltage is 220V.

### • Touch Screen


1. Light touch: touch the menu items or the icons on the screen slightly.
2. Drag: drag in the blank place on the screen or press on the scroll bar for up/down moving.
3. Click: click on the icon on the current interface, and drag the icon to any place on the screen and release for viewing.

Note:

① When click on the icon, “**Menu**” on the right side of the screen will become “**Trash**”; you can now remain the icon or drag it to the Trash to delete.



② Press “**Menu**” to show the menu interface, click on the required icon and drag to the main interface, the user can add applications to the main interface and create shortcuts if required.
 
## Introduction of Main Menu Interface Functions

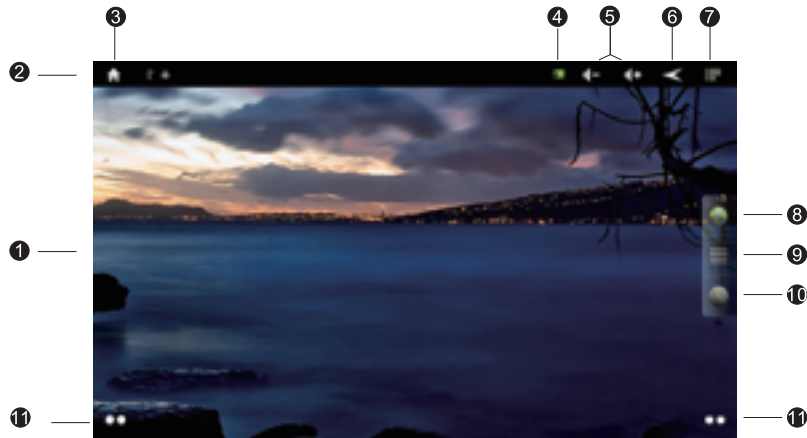

- ① Main interface: display the main interface of the menu
- ② Taskbar: display the currently running programs
- ③ Home: press to return to main interface  
Note: the running program does not exit when pressing Home to return directly to the main interface.
- ④ Battery: display battery status
- ⑤ Volume: volume adjustment
- ⑥ Back: back to the previous interface
- ⑦ Menu: display menu on the lower part of the screen
- ⑧ The browser
- ⑨ Program icon: display all programs of the machine  
Note: press long the icon to show the main interfaces of the machine
- ⑩ Clock type
- ⑪ •• : display number of windows on left/right  
Note: drag to left or right to switch between windows

## Introduction of Unlock Interface Function

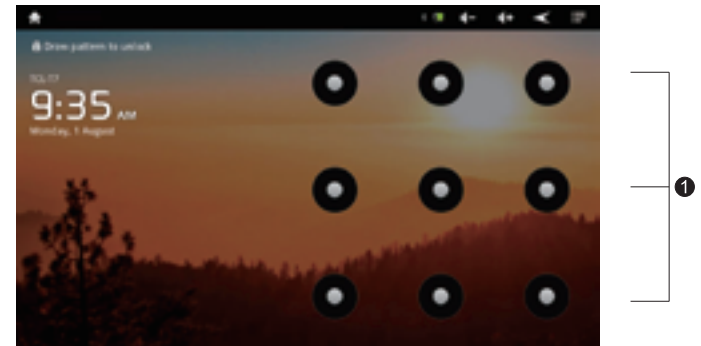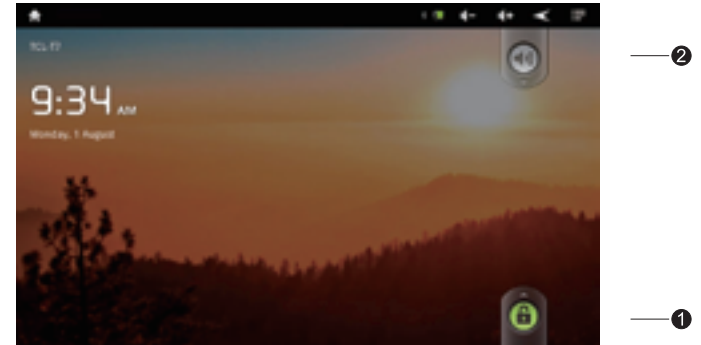  


- ① Unlock: there are two ways for unlocking.  
The first one, factory default.  
The second, unlock by the following sequence: “ — Setting — Position and Safety — Screen Unlock Icon” .
- ② Turn on/off sound.

## Basic Menu Functions

- Quick Setting

- Set time and zone

Click on "  — Setting — Time and Zone (Refer to P10).

- Text Edit



 
Input method: Click on the text or the browser search box, "Virtual Keyboard" will popup. Switch between "English or number and symbol" according to requirements. Directly click on Back to cancel.



Note: press long the input box to switch between input methods.

- Set Brightness and Screen Standby

Click on "  — Setting — Sound and Display — Display Setting" .

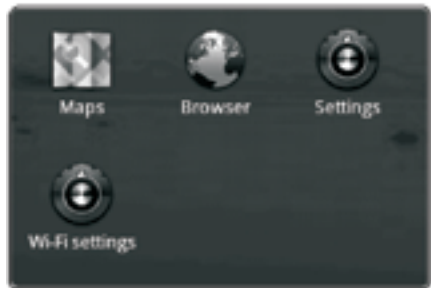
- Switch between pages or functions




Click "  " on the left top of the screen for about 3 seconds to switch between recently used programs. Directly click on "  " to cancel.

## Basic Menu Functions

 
- Rotary direction

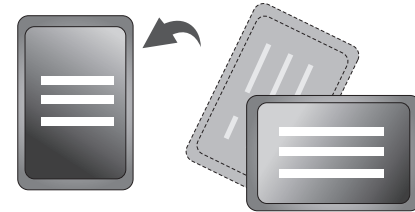

Click on the right top of the screen  — Setting — Sound and Display — Direction to automatically change direction when rotating the screen.

Note: Rotation does not apply to the main interface, but you can rotate the machine 900 counterclockwise to change the screen direction automatically when running applications.

 - Main Interface Shortcut

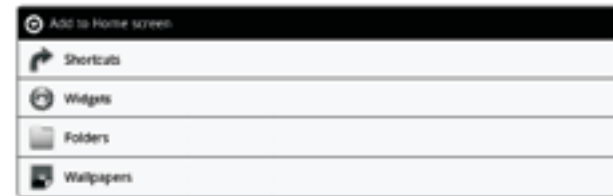

1、 Press on the blank place on the main interface, Shortcut menu will popup.

 
2、 Select and click on menu items for setting.

3、 Upon selecting an item, system will automatically go to the main interface.

Note:

Shortcut adding: user can add application in the main interface by Window Control.

Folder Rename

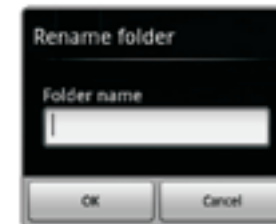

1、 Enter Folder, select New Folder and click on OK.

Note: open the folder and press on the top for approximate 3 second, "Rename" will popup. User can now rename the folder if required.

## Basic Menu Functions

### Wallpaper Setting



1. Select “Picture, Wallpaper or Current Wallpaper” under Wallpaper item, Click on Setting after selecting the picture.

Note: If “Picture (Library)” is selected, the picture can be zoomed in and out if required. When Current Wallpaper is selected, further setting is available as per user’s personality.

## Menu Function

### • Menu

1. Click on “☰” on right top of the screen to popup Menu Interface at the bottom of the screen, apply same application as per “Main Menu Shortcut” for “Add, Wallpaper and Search” functions. Function



• Notifications: Describe the running status of the program on left top of the screen.

 


The operations are similar, set some of them for example below:

### • Settings

Note: “✓” indicates the mode is on.

1. Wireless & networks (Manage Network Connection)

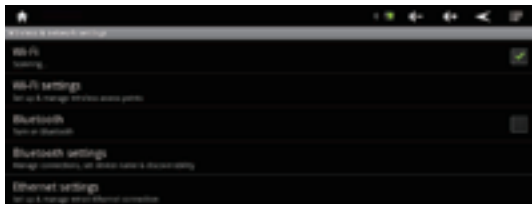

## Menu Function

 
- ①. First ensure the WiFi function is on (wireless network is on).
- ②. Click on WiFi setting, the system will list automatically the networks within the searching scope if WiFi is on.
- ③. Select the available WiFi network in the list and click on OK.
- ④. Now the WiFi icon is shown in the status bar.
- ⑤. Click on Back or Home to return to Main Interface.

Note: if a password is required for the WiFi setting, enter the password first before the connection setting.

2. Sound & display (ring, notice and screen brightness setting)



3. Location & Security (Set My Location, Screen Unlock Icon, Password)

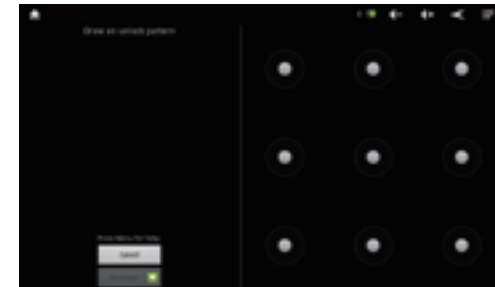

Screen Unlock Icon: Draw personal unlocking icon, at least 4 points need to be connected.

4. Applications (Applications Settings)

Manage application: uninstalling or data deleting of applications.

5. Privacy (Privacy settings)

Restore to factory default: remove the data in the device, including: Google account; data and setting of the system and applications; applications downloaded.

Note: data which will not be removed includes: current system software and binding applications; files in the storage card as music or photo.

## Menu Function

6. SD card & device storage (uninstall SD card and check available storage space)
7. Language & keyboard (select language region and IME)
8. Date & time (set date, time and format)



Time setting: setting can be completed by “+/- “ or click on “Number Box” and touch the numbers.

9. Touch panel calibration, USB mode select, Update Media Library
10. About device (check legal information, machine status and software version)

## Troubleshooting

1. If the machine can not be turned on, please check if the battery is OK.
2. If there is no sound, please try to press on volume for increasing or decreasing volume.
3. If the system is dull for a long time, please press the Power to turn off the machine and then restart. (Not recommended for normal shutdown).
4. If the system can not run properly, please press Reset (beside Power). (not recommended).

## Product Technical Specifications

	CPU	Cortex A8 Main Frequency 1.2 GHZ RK2918
STORAGE	FLASH	NandFlash 8G
	MEMORY	DDR III 512MB
	STORAGE CARD	Max. 32GB Micro SD (TF) card expansion supported
LCD Display	7 inch LCD display 16:9 Resolution 1024*600 Capacitive touch screen, multi-point touch supported	
Wireless	Wi-Fi 802, 11B/G/N, embedded wireless data encrypt/decrypt engine, transmission distance: 10-30	
Audio	Built-in/out recording, Wav (subject to recording software installed) 3.5mm earphone jack High quality rigid resonance external speaker Built-in mic	
Sensor	3-axis sensor supported	
Battery	Built-in battery, 3100mAH	
Operation System	Android 2.3	
Environment Condition	Temperature	Working temperature: 0 - 40℃, storing temperature: -10 - 60℃
	Humidity	Working humidity: 0 - 90%, non-condensed storing humidity: 0 - 90%, non-condensed
Bluetooth	BLUE TOOTH 2.1 + EDR	
Video Play	RM、RMVB、AVI、MKV、WMV、MOV、MP4、DAT、3GP supported, subtitles supported	
Audio Play	MP3、WMA、EQ sound effect supported	
Audio Recording	MP3 and WAV formats recording supported	
IME	Virtual keyboard input, touch press and text enlarge supported	
E-Book Reading	PDF、TXT、FB2、EPUB、RTF、PDB supported (files larger than 2M not supported except for PDF and EPUB formats). Further software installation available for supporting other formats (Android 2.3 supported)	
Image Browsing	JPG、BMP、PNG formats supported, rotation/slide play/image enlarge supported	
Network	Video playing of various online video websites supported Net radio and net TV broadcasting supported Online stream playing of TSP supported Email receiving and sending Full function WEB browser	
Backlight Control	PWM Mode 5-stage backlight adjustment	
Game	Android system games supported	
Menu Language	English	
Other Functions	External HDD, digital camera, mobile, U disk and card reader supported	
Accessories	Charger, headphone cable, OTG data cable, USB cable	
Video Play Time	5 hours	
Audio Play Time	15 hours	
Outline Specifications	Dimension (LxWxH)	172×135×10.8(mm)
	Weight	218 (g)

## Operating Environment and Safety Instructions

1. Due to the used enclosure material, the tablet PC shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.
2. A socket outlet that is installed near equipment and that shall be easily accessible.
3. Do not use the tablet PC in the environment at too high or too low temperature, never expose the tablet PC under strong sunshine or too wet environment. The suitable temperature for the tablet PC and accessories is 0°C-40°C.
4. Excessive sound pressure from earphones and headphones can cause hearing loss.

### SAR information for CE requirement

The SAR limit of Europe is 2.0 W/kg. Device types MR2857 has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for properly worn on the body is 0.124 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0.5 cm from the body. To maintain compliance with RF exposure requirements, use accessories that maintain a 0.5cm separation distance between the user's body and the back of the device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.

### EU Regulatory Conformance

Hereby, TCL Mobile Communication Co., LTD declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.tcl.com](http://www.tcl.com)

CE 0700

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU)

### FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help