

# 1 Your Phone .....



**Spanish-CIB2460ALAGA**



#### Navigation Key

Confirm an option (Press the middle of the key)

Select the shortcut functions list on the screen (Press the left or right key)

Adjust volume during a call (Press Navigation Key)



Make a call from the SIM1, SIM2, or SIM3 card in standby mode

Answer a call

View dialed calls of SIM1, SIM2, and SIM3 cards in standby mode



The figure above shows the appearance of your phone and is provided only for your reference.

## 1.1 Keys



Power on or power off the phone (Long keypress)

End or reject a call

Return to the standby mode



Left softkey



Right softkey



Access **Tools** function in standby mode



Access **Write message** in standby mode



Access your voice mail(Long keypress)



**In Idle Screen:**  
Long/short keypress: Lock/Unlock the keypad

**In edit mode:**  
Short keypress: input space  
Long keypress: switch language  
Fn key + Space: switch input mode

## 1.2 Main Screen Icons



Level of network reception



Battery charge level



Bluetooth status



Headset connected to the phone



Keypad locked



Call forwarding activated



New text messages



New MMS



Missed calls



Reject calls



Alarm clock



**Silent** profile activated



**Indoor** profile activated

 


**Meeting** profile activated

## 2 Getting Started.....

 
### 2.1 Installing SIM Cards and the Battery

You can install three Subscriber Identification Module (SIM) cards in the phone at the same time. When inserting a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.



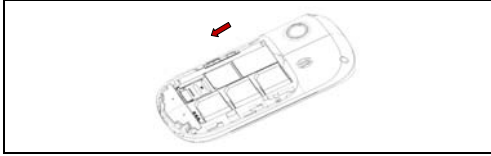 
### 2.2 Removing the Battery and the SIM Card

Before removing the battery and the SIM cards, ensure that your phone is powered off.



### 2.3 Installing a microSD Card

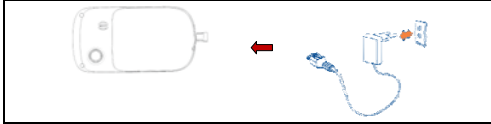 
You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the golden contact area on the microSD card is facing downward.



### 2.4 Charging the Battery

To charge the battery, do the following:

Connect the smaller end of the USB cable (should be shielded cable) to the charger jack of the phone and the larger end to the charger.



 


 


 

 
Connect the charger to a power socket.

Wait until the battery is fully charged.



During the charging, the charging icon is displayed in animation. When the charging icon becomes static, it indicates that the battery is fully charged.

Disconnect the charger from the power socket and then from the phone.

## 2.5 Working with the Main Menu

1. In standby mode, press  (**Menu**) to access the main menu.
2. Press  to scroll to the desired submenu, and then press  or  (**OK**) to access the submenu.
3. Press  to scroll to an option, and then press  or  (**OK**) to access the option.
4. Press  (**Back**) to return to the previous menu.  
To return to the standby mode, press .


 
## 2.6 Accessing a Shortcut Menu

1. In standby mode, press  to scroll to the desired shortcut menu.
2. Press  to access the menu.

## 2.7 Phone Lock

The phone lock protects your phone from unauthorized use. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the phone code each time you power on the phone.


 
To enable the phone lock, do the following:


 
1. Select **Menu > Settings > Security settings > Power-on password**
2. Enter the phone code, and then press  or  (**OK**).

You can change the default phone code (1234) to any numeric string of four to eight digits.

To change the phone code, do the following:

1. Select **Menu > Settings > Security settings > Power-on password > Modify**.

Enter the old phone code, and then press  or  (**OK**).

Enter the new phone code, and then press  or  (**OK**).

Enter the new phone code again to confirm it.

If you forget the phone code, contact the service provider.

## 2.8 Udisk

When the phone is connected to a personal computer (PC) through a USB cable, options such as **Udisk** are displayed on the phone screen.

When you select **Udisk**, you can manage the files stored in the phone memory and on the microSD card.

The microSD card and the phone memory are displayed as removable disks on the PC. You can perform the following operations:

Double-click a disk to open it.

Copy, paste, or delete files on a disk.

Disconnect the phone from the PC.



- Ensure that you connect and disconnect the USB cable properly.
- Do not run the formatting command on the PC to format the phone memory. Otherwise, the phone memory may get permanently damaged.
- You can transfer data and charge the battery by connecting the phone to the PC through the USB cable.


 
## 2.9 PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks the blocked PIN. Both the PIN and the PUK are provided with the SIM card. For details, contact your service provider.

SIM1 and SIM2 PINs are configured separately.

To enable the PIN lock, do the following:



 
1. Select **Menu > Settings > Security settings > PIN > SIM1, SIM2 or SIM3 > Activated**.

2. Enter the PIN, and then press  or  (**OK**).



If you enter wrong PINs a specified number of times consecutively, the phone prompts you to enter the PUK.

If you enter wrong PUKs a specified number of times consecutively, the SIM card becomes permanently invalid. In that case, contact your service provider for a new SIM card.

## 2.10 Locking the Keypad

To lock the keypad, press and hold  in standby mode for 3s. To unlock the keypad, press  (**Unlock**) and then  (**Left soft key**).

If the **Auto keypad lock** function is enabled and if the phone is in standby mode for a preset period, the phone locks the keypad automatically.

To enable the **Auto keypad lock** function, select **Menu > Settings > Security settings > Auto keypad lock**, scroll to a preset duration, and then press  or  (**OK**) to select the duration.



When the keypad is locked, you can press  or  (Left soft key) to answer a call or make an emergency call.







## 2.11 Entertainment

- **Audio player:** to play the audio clips stored on the microSD card.
- **Video player:** to play the video clips stored on the microSD card.
- **FM radio:** to listen to the radio.
- **Recorder:** to record audio clips.
- **Video recorder:** to record video clips.
- **Camera:** to take pictures.
- **Image browser:** to view the pictures stored on the microSD card.





 
 
 

 
 
## 3 Voice Services.....

### 3.1 Making a Call

1. In standby mode, enter the phone number.
  - a) To make an international call, press  to enter the plus sign (+), and then enter the country or region code, area code, and phone number in sequence.
  - b) To call an extension, enter the phone number, press  to enter P, and then enter the extension number.
2. Press  to select SIM1/2/3 and dial the number.
3. Press  to end the call.
  -  You can also make calls through call logs, contacts, and message.
  - During a call, you can press  to adjust the volume.

### 3.2 Answering a Call

When there is an incoming call, do the following:


1. Press  or  (Left soft key) to answer the call.
2. Press  (Right soft key) to reject the call.
3. Press  (Silent) to mute the speaker, and then press  (Reject) to reject the call.
4. Press  (Silent) to mute the speaker, press  or  (Answer) to answer the call.


## 4 Latin input mode.....

 
To write messages, there are two writing methods:

 
- **Normal:** this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.

- **Predictive with the Zi mode:** This mode speeds up the writing of your text.

**Fn key**  : Press once: input top-half character.  
Press twice: lock top-half character inputting mode, then press once to unlock top-half character inputting mode.

**Sym key**  : Short keypress: access the Symbols table  
Long keypress & Fn + Sym: popup smileys page

**Space key**  : Short press: input space  
Long press: press to switch language  
Fn+Space: switch input mode



 
**Shift key**  : In abc (Multitapabc) input mode (no Abc mode):  
Short press once: to ABC  
Short press twice: to Abc

In eZiabc (Smartabc) input mode:  
Short press once: to eZi ABC  
Short press twice: to eZi Abc


 

 
**Del key**  : Short keypress: delete one by one  
Long keypress: delete one by one quickly

## 5 Call Logs.....

### 5.1 To Check Call Logs

1. Select **Menu** > **Call logs**.
2. Select **Dialed Calls**.
3. Press  to scroll desired record, press  to check detailed information.
4. Press  (**Options**) to select **Details**, **Call**, etc.
5. The operations in **Received calls**, **Missed calls** and **Rejected calls** are the same as **Dialed call**.
6. Select **Delete all** to delete all call logs.

 
### 5.2 To Check Call Timers, Call Cost, and GPRS Counter

1. Select **Menu** > **Call logs**.
2. Select **Call timers** and select SIM1/2/3 to enter to check Last call, Received calls, Dialed calls, and Call history. Press  or  (**Reset**) to reset all records.
3. Select **GPRS counter** and select SIM1/2/3 to enter to check Last sent, Last received, Total sent, and Total received. Press  or  (**Reset**) to reset all records.


## 6 Contacts.....

### 6.1 Creating a Contact




1. Select **Menu** > **Contacts** > **Options** > **New**.
2. Select **Phone**, **SIM1**, **SIM2** or **SIM3** for saving the contact.
3. Enter the contact information.

4. Press  (Save) to store the contact.

## 6.2 Searching for a Contact

1. Select Menu > Contacts > Options > Search.
2. Enter the first letter of the contact name.
3. Press  to scroll to the desired contact.

## 6.3 Send Message to a Contact

1. Select Menu > Contacts > Options > Write message.
2. To select write SMS or MMS.
3. After completing a SMS, press  and select SIM1/2/3 to send, or press  (Options) to select Send to send the message.
4. After completing a MMS, press  (Options) to select Send, and choose SIM1/2/3 to send message.


 
## 6.4 Call the Contact

1. Select Menu > Contacts > Options > Call.
2. Select SIM1/2/3 to call the contact.

## 6.5 Send vCard

1. Select Menu > Contacts > Options > Send vCard.
2. Select SMS or Bluetooth.
3. Input Recipients and select SIM1/2/3 to send vcard.
4. Activate Bluetooth to search other wireless device to transmit vcard.

## 6.6 Delete and Mark Contacts



1. Select Menu > Contacts > Options > Delete.
2. Press  or  confirm to delete the desired contact.
3. Select Menu > Contacts > Mark.
4. Mark one or more contacts to do further operations such as delete, copy, etc.

## 6.7 Copying Contacts





You can copy contacts to SIM1, to SIM2, to SIM3, to phone, or copy to card.

### Copying One Contact

1. Select Menu > Contacts.

2. Press  to scroll to the desired contact.
3. Press  (Options), and then select Copy.
4. Select To SIM1, To SIM2, To SIM3, To Phone, or Copy to card to copy the contact to the desired location.

#### Copying Multiple Contacts

1. Select Menu > Contacts.
2. Press  (Options), and then select Copy all.
3. Press  to scroll to the desired option, such as SIM1 to Memory Card, SIM2 to Memory Card, SIM3 to Memory Card, etc.
4. Press  or  (OK) to copy contacts to the desired location.


### 6.8 More Operations of Contacts

1. Select Menu > Contacts > Others.
2. Select Speed dial settings to set number 2-9 as speed dial keys.
3. Select Caller ID to save the own number, each SIM card can be saved 2 numbers.
4. Select Memory status to check memory status of SIM1, SIM2, SIM3 and Phone.
5. Select Single/Double line display to set display contacts list as single line or double line.

## 7 Internet.....

This function allows you to acquire or visit diversified services on the Internet through message or network. Please contact your network operator for more information. Select SIM1/2/3 to enter:

**Homepage:** start a connection to the default URL

**Bookmark management:** to check bookmark list or press  (Options) to add new bookmark.

**History:** to check browsed pages

**Offline pages:** to check the pages stored

**Go to URL:** input URL address and link to it

**Tool:** select to Clear cache, Clear cookies, and do operations for Settings.




## 8 Multimedia.....




 
This menu includes more multimedia applications. It includes Audio player, Video player, FM radio, Recorder, and Video recorder.





 


 
 


### 8.1 Audio Player

The audio player plays audio clips that are stored in **My music** on the microSD card. It is recommended that you listen to audio clips by using the headset so that you can enjoy enhanced quality sound.

1. Select Menu > Multimedia > Audio player.

2. Press  to  and press  to start playing audio clips. When audio clips are being played, you can do the following:






 
 
 


 








 



3. Press  to select , press  to confirm and then press   to adjust the volume.

4. Press  to  or  and press  to rewind or fast-forward the audio clip.
5. Press  (Left soft key) to configure the relevant settings.
6. Press  to  and press  to pause or continue.
7. Press  (Right soft key) or select  and press  to stop playing audio clips and exit.

## 8.2 Video Player

The video player plays downloaded or recorded video clips that are stored in the **Videos** folder in **File list of Memory card**.

To play a video clip, do the following:

1. Select Menu > Multimedia > Video player.
2. Press  to  or  and press  to choose a video clip.
3. Press  to  and press  to play the video clip.
4. Press  to enter options and select play list, Order play, Video application, and File attribute.
5. When the video clip is being played, you can do the following:
  6. Press  to select  press  to confirm and then press   to adjust the volume.
  7. Press  to  or  and press  to rewind or fast-forward the video clip.
  8. Press  to  and press  to pause or continue.
  9. Press  (Right soft key) or select  and press  to stop playing the video clip and exit.







Only files in .mp4 and .3gp formats are supported. Files in other formats may fail to be played.

### 8.3 FM Radio

The headset cable also functions as an antenna. To ensure reception of radio programs, do not disconnect the headset from the phone or bend the headset cable with strength.

Select **Menu > Multimedia > FM radio**.









When listening to the radio, you can do the following:


1. Press  to open/close speaker.
2. Press  to adjust the volume.
3. Press  to change frequency or channels.
4. Press  (Options) to enter options menu and set.

### 8.4 Recorder

The recorder functions as a digital recorder.

To record an audio clip, do the following:

1. Select Menu > Multimedia > Recorder.
2. Press  to  and press  to record an audio clip directly. Also, press  (Options) to select Start Recording to record. Select  to pause recording, select  to stop and save. Select  to play the audio clip just recorded. Select  to enter record file list.




3. After record one audio clip, press  (Options) to enter:

**Audition:** to review the audio clip

**Record again:** to record a new audio clip

**Delete:** to delete the audio clip

**Send:** to send the audio clip to other devices by MMS or via Bluetooth

**Record file list:** to enter record file list Use  or press  to adjust volume. Press  (Options) to select **Record file list** to check record files.



 


 
### 8.5 Video Recorder

To record a video clip, do the following:


1. Select Menu > Multimedia > Video recorder.




2. In video recording mode, do the following:

Press  to record. Press  (Pause) to Pause,  (Stop) to stop and save,  (Cancel) to stop without saving. After take a record, press  (Play) to play the video clip. Press  (Options) to select New, Delete, Send, Play, and View.


 


Press  to set parameters for video recorder. This includes: Shoot mode, Size, Brightness, Contrast, and Effect. Press   to select options, press  or  (Select) to select or set.

Press  (Options) to select View, Settings, Help.

Press  (Back) to exit video recorder.

## 9 Message.....

### 9.1 Writing and Sending a Text Message


1. Select Menu > Message > Write message > New SMS.
2. Write the message.
3. Press  (Send) to add recipients and select SIM1/2/3 to send message
4. Press  (Options), and then select Send.
5. Enter Recipients; or select Contacts, and then add a recipient from the contacts. To add multiple recipients, repeat this step.
6. Press  or  (OK) to select SIM1/2/3 and send message.

7. There are more operations in Options such as Insert template, Add contact info, Add phiz, etc.

## 9.2 Writing and Sending a Multimedia Message

Select Menu > Message > Write message > New MMS.

Write the message.

Press  (Options) for the following options:

- Input receiver, and select Send to send message via SIM1, SIM2 or SIM3.
- **Add recipient:** to add phone number or select the numbers from Contacts
- **Preview:** to view the multimedia message
- **Add:** to add Text, Next slide, Previous slide, Picture, Audio , Video or Attachment
- **Page timer (1s-600s):** to set time to show the page
- **Save as draft:** save the message to draft box
- **Text layout:** to select Text up or Text down

## 9.3 Read Messages

- Select **Menu > Message**.
- Select **Inbox**, to check received messages.
- Select **Outbox**, to check messages sent unsuccessfully.
- Select **Drafts**, to check messages saved in draft box.
- Select **Sentbox**, to check sent messages.
- Select Voice mail server:

Voice mail server is a network service. You may apply for this service beforehand. For detailed information and voice mail server number, please contact your network operator. Enter the menu to set **Voice mail number, Fax number or Data number**.

In standby mode, long pressing the numeric key "1" after set the voice mailbox number. Select Broadcast message:

Broadcast message is a service provided by the network operator to send messages such as weather forecast, traffic status, etc. to all GSM subscribers in a specific area.

The realization of the cell broadcast function needs the support of the network. For details, please contact the network operator.

 


 



- You can contact your service provider for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message of a maximum size of 300 KB.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.

## 10 Tools.....

### 10.1 Alarm

Your phone supports Alarm function. The phone will alarm (ring) when the time reaches the set time and it will display on screen.

1. Select **Menu > Tools > Alarm** to select alarm and set.
  2. Select a certain alarm, press  (**On/Off**) to turn on/off alarm, press  (**Edit**) to set:
    - Message:** to set alarm name
    - Time:** to set alarm time
    - Ringtone:** to select Fixed ringtones or More ringtones as alarm ringtoneTo select Once, Daily, or Weekly as alarm frequency
- After set all parameters, press  (**OK**) to activate the alarm.
- When the alarm alerts, press  (**Off**) to deactivate, press  (**Delay**) to delay the alarm and it will alert 5 minutes later.

### 10.2 Bluetooth

By using the Bluetooth function, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.


 


You can turn on the Bluetooth function by configuring Bluetooth settings.

In the menu, you can select Open/Close Bluetooth, Bluetooth visibility, Paired device, Shared folder settings, My Bluetooth name, Bluetooth Address, and Help.

- Open/Close Bluetooth:** to turn on/off this function
- Bluetooth visibility:** to set the phone Show or Hide
- Paired device:** to check paired device list or add new device
- Shared folder settings:** to set Shared folder permission and Shared folder
- My Bluetooth name:** to rename the Bluetooth name
- Bluetooth Address:** to check Bluetooth address of your phone
- Help:** to view help information

### Connecting a Bluetooth Headset to Your Phone


- Select Menu > Tools > Bluetooth > Open/Close Bluetooth > to turn on the Bluetooth function.
- Select Paired Device > Add new device to search for available Bluetooth headsets.
- Scroll to the desired Bluetooth headset, and then press  or  (Pair).
- Enter the password for pairing the Bluetooth headset with your phone.

When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.


 



 
No Bluetooth headset is included in the product package. If you want to use a Bluetooth headset, you need to purchase it individually.

### Transferring Data

- Select Menu > Tools > Bluetooth > Open/Close Bluetooth to turn on the Bluetooth function.
- Select Paired Device > Add new device to search for available Bluetooth devices.
- Scroll to the desired Bluetooth device, and then press  or  (Pair).  
When the Bluetooth device is connected to your phone for the first time, you need to enter the password for pairing the device with your phone.
- Exchange data between your phone and the Bluetooth device.

 



## 10.3 Calendar

With this function, you can view the calendar and schedule, and you can schedule with the scheduler to set the schedule and alert. If a memo has been set in the schedule of some date, the date is highlighted. To view all memos of a day, press  to the date. Press  (**Options**) and the following operations can be performed:

- **Add task:** select to input Subject, Date, Time, Ringtone, Type, and Deadline. Press  (Edit) to edit, press  (Save) to save and exit.
- **View tasks:** to check today's tasks
- **All tasks:** to check all tasks
- **Clear tasks today:** select to clear today's tasks
- **Clear all:** to clear all tasks
- **Go to date:** input the date to enter the calendar
- **Weekly/Monthly:** to display the calendar in weekly or monthly

#### 10.4 Calculator

This function can use your phone as a calculator. The accuracy of this calculator is limited, and the calculator can only be used for simple calculations.

1. Eight operators are provided. They are "+", "-", "x", "÷", "M+", "M-", "MC", "MR".
2. Press  to delete items entered. Long pressing  to clear all content. Press  to calculate, press  (Equal) to show the result of calculation.

#### 10.5 Timer











 
 
This function counts down time, when it reaches 00, your phone rings or vibrates.

# 11 Camera.....

The phone is equipped with a CMOS camera<sup>(1)</sup>.

Select **Menu > Camera**.

On the picture taking screen, do the following:


 
- Press  to capture a picture. After take a photo, press  or  (Save) to save the picture. Then, press  (Send) to send the picture to other devices by MMS or via Bluetooth. Press  (Options) to Delete, Set as wallpaper, or go to Gallery.
- Press  to set parameters for camera. This includes: Shoot mode, Size, Scene mode, Brightness, Contrast, Exposure bias, Frame, Cont. shot, White balance, Delay, and Effect. Press   to select options, press  or  (Select) to select or set.
- Press  (Options) to select Gallery, Settings, Help.
- Press  (Back) to exit camera.

(1) 1.3-MEGA pixel camera effect via software.

## 12 File List.....

This menu enables you to access the File List, where folders or files in Memory Card can be managed.




Press  to choose desired folder, press  to open or press  (**Options**) to do options.

- **New folder:** to create new folder
- **Delete:** to delete the folder
- **Details:** to check detailed information of the folder
- **Edit:** Rename or Copy this folder
- **Search:** input folder name and press  and  (OK) to search
- **Sort:** to sort the folders by Name, Date, Size or Type
- **Mark:** mark or unmark one or all folder to do further operations
- **More:** to check memory card capacity or format memory card

Press  to choose desired file, press  to open or press  (**Options**) to do options.

The operations of files may different from folders.

## 13 Image Browser.....

The shot photos are stored in the image browser. Press  to choose pictures, press  (Preview) to view the picture, press  (Options) to do options.

- **Change folder:** select other folders to preview pictures
- **Send:** send the picture to other devices by MMS or via Bluetooth
- **Slide play:** to preview pictures as slide
- **Delete:** to delete the picture
- **Set image as wallpaper:** select the picture and set it as a wallpaper shown on standby screen
- **Rename:** rename the picture
- **Mark:** mark or unmark the picture(s) to do further operations
- **Details:** to check detailed information
- **Slide settings:** to select effect and delay time for slide play



## 14 Applications.....

### Facebook & Twitter

The built-in Internet communication applications **FACEBOOK** and **Twitter** on your phone allow you to use the functions to connect with other people.

To run **FACEBOOK**, do the following:

Select **Menu > FACEBOOK > SIM1, SIM2 or SIM3.**

Your phone will link to the WAP page.

The method for running **Twitter** is similar.






 
- Check your GPRS settings before using the chat applications.
- Before saving chat history, ensure that a microSD card has been inserted in the phone.

### Ebook Reader


Your phone supports ebooks in .txt format.

Select **Menu > Applications > Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in **Ebook** on the microSD card to the bookshelf.

- Scroll to the desired ebook.
- Press  to open and start reading the ebook. During the reading, press  (Options) to Add bookmark, View bookmark, Jump to start, Jump to end, Jump to percent and Cancel backlight always on(?).
- Press  (Options) to check Details, Recent books, select Send via Bluetooth, Delete, Mark, and Settings.
- Press  (Back) to exit Ebook Reader.



- When reading an ebook, you can press  to turn pages.
- It is recommended that you store ebooks in **Ebook** in the phone memory or on the microSD card. When you open an ebook stored in a folder other than **Ebook**, the phone automatically moves the ebook to **Ebook** so that you can find it easily next time you want to open it.

## 15 Profiles.....

Your phone provides different profiles for you to customize ring tone and other settings under different environments. You can customize a profile according to your needs and enable the profile. The available profiles include **Normal, Silent, Meeting, Indoor, Outdoor, Earphone ,Bluetooth.**

In each profile, you can set one of the following options:

Select **Menu > Profiles.**

Select one profile, and press  or  (**Options**) to enter:

- **Activate:** to activate the desired profile
- **Settings:** to set Ring settings, Adjust volume, Call alert, Message alert, Alarm & calendar remind, Key tone, Battery low alert, and Power on/off tone
- **Rename:** to rename the profile

## 16 Settings.....

### 16.1 Call Settings

Select **Menu > Settings > Call settings**. There lists several options for call settings include: Multi-SIM, Network selection, Call divert, Call barring, Call waiting, Hide ID, and others.

**Multi-SIM:** to select Standby mode, Reply by original SIM, Set SIM name, Dual SIM setting Wizard, check Help information, etc.

**Network selection:** press  to select SIM1, SIM2 or SIM3 and then press  or  (**OK**) to select Auto select or Manual select.

**Call divert:** It is a network function that can only be activated when you apply for this service with the network operator. The function can divert calls that satisfy the conditions to the other caller's phone number you have designated. Press  to select SIM1, SIM2 or SIM3. Then press  or  (**OK**) to set.

**Call barring:** When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring. Press  to select SIM1, SIM2 or SIM3. Then press  or  (**OK**) to set.

**Call waiting:** To set functions like activate/deactivate and enquire status. During call holding and making multi-party calls, this function should be activated first, and network support is required for the specific implementation of the function. Press  to select SIM1, SIM2 or SIM3. Then press  or  (**OK**) to set.

**Hide ID:** to set whether to send or hide the number of the phone.

**Others:** this includes 50 secs voice call alert, Connect prompt, Any-key answer, and Auto redial.

### 16.2 Phone Settings

Select **Menu > Settings > Phone settings**. There lists Time and date, Select language, Shortcut Menu, Auto power on/off, and Restore settings.

**Time and date:** to set time, date, time format, and date display type.

**Select language:** to set display language

**Shortcut Menu:** to set shortcut functions which list on standby mode.

**Auto power on/off:** to set the time to power on/off the phone




**Restore settings:** to restore all settings to default. The default password is 1234.

### 16.3 Display Settings

Select **Menu > Settings > Display settings**. There lists Wallpaper settings, Idle screen style, Contrast, Backlight, Keypad light, and Animation effect.

● **Wallpaper settings:** set the background picture in standby screen interface.

● **Idle screen style:** to select Standard style or Smart style<sup>(1)</sup>.

● **Contrast:** press  to set contrast, press  or  (OK) to confirm.

● **Backlight:** to set time of screen display.

● **Keypad light:** to set time of keypad light.

● **Animation effect:** to set animation effect for power on/off display.

### 16.4 Security Settings

Select **Menu > Settings > Security settings**. There lists PIN, PIN2, Privacy, Auto keypad lock, Power-on password, and Guardlock.

● **PIN:** to lock or unlock SIM card. Please refer to “PIN & PUK”

● **PIN2:** The personal identification number used for special functions such as charging function provided by the network.

● **Privacy:** use this function to protect Call logs, Message, Camera, Contacts, etc.

● **Auto keypad lock:** please refer to “Locking the Keypad”

● **Power-on password:** please refer to “Phone Lock”

● **Guardlock:** When user activated this function and lost the mobile, if someone pick-up the mobile and insert new SIM, the Mobile Tracker will send SMS to predetermined numbers to show detail of the lost mobile. This message can be edited by end user.

(1) **Smart style:** 7 shortcuts icons will display on the idle screen. You can access the shortcut function directly in idle mode. And you can change the shortcuts in **Shortcut Settings**.

**Standard style:** In **standard style** mode, you can set four direction keys with different shortcut functions in **Shortcut Settings**.

## 16.5 Connection Management

You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.

For details about the service and the charges, contact your service provider.

### 1 Network Account

To access WAP sites on your phone, you need to set your data account and WAP parameters first.

#### Setting the Connection Profile

- Select **Menu > Settings > Connection management > Network account**.
- Press **Options**, and then select **New connection**.
- Set the parameters based on the information provided by your service provider.
- Press **OK** to save the settings.



If the data account provided by your service provider already exists, you do not need to create a data account.

### 2 GPRS Settings

To set parameters for GPRS. This function only valid with single SIM card in.

- Connect when necessary
- Always connect

## Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

• **CONDITIONS OF USE:**

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List).

TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.



• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

**In non European Union jurisdictions:**

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.



**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

• **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• **RADIO WAVES:**

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

## General information .....

- **Internet address:** [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)
  - **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.
- On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

[www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

Your telephone is a transceiver that operates on GSM networks with 850, 900, 1800 and 1900 MHz bands.

### Protection against theft

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

### Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

## Warranty.....

Your phone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months<sup>(1)</sup> from the date of purchase as shown on your original invoice.

Batteries <sup>(2)</sup> and accessories sold with your phone are also warranted against any effect which may occur during the first six (6) months <sup>(1)</sup> from the date of purchase as shown on your original invoice of purchase.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase. If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

(1) The warranty period may vary depending on your country.

(2) The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1 Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2 Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3 Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,

4 Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...


Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.


## Troubleshooting .....

Before contacting the aftersales department, you are advised to follow the instructions below:


- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

### **My mobile phone will not switch on**

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

### **My phone has not responded for several minutes**

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

### **My screen is difficult to read**

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

### **My mobile phone turns off by itself**

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

**My mobile phone will not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible


**My mobile phone will not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually
- Try connecting at a later time if the network is overloaded

**SIM card error**

- Make sure the SIM card has been correctly inserted
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

**Unable to make outgoing calls**

- Make sure you have dialed a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls

**Unable to receive incoming calls**

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls
- Make sure that you have not barred certain calls

**The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

**The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the optical finger navigation key
- Check the radio reception icon level

**I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

**When I select a number from my directory, the number is not dialed**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

**I am unable to add a contact in my directory**

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

**My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

**I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

**I am unable to send and receive MMS**

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters
- Verify the server centre number or your MMS profile with your operator
- The server centre may be swamped; try again later

**"No service" is displayed**

- You are outside of the network coverage area

**I have already entered 3 incorrect PIN codes**

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

**I am unable to download new files**

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

**The phone can't be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users

**My mobile phone is dead, can't power on**

- Make sure your battery is not completely used up or damaged.
- Remove your battery, **remove your SIM** card then power it on again.

**How to make your battery last longer**

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request
- Update news, weather info, upon demand manually or set its auto-check interval longer
- Deactivate Bluetooth when not in use

## **FCC Regulations:**

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

● The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## **RF Exposure Information (SAR)**

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.



\*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 1.26 W/kg and when worn on the body, as described in this user guide, is 0.958 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: RAD261.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5cm from your body when the phone is switched on.

Este equipamento opera em caráter secundário, isto é, não tem direito à proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário



Este produto está homologado pela ANATEL, de acordo com os Procedimentos regulamentados pela Resolução nº 242/2000 e atende aos requisitos técnicos aplicados, incluindo os limites de exposição da Taxa de Absorção Específica referente a campos elétricos, magnéticos e eletromagnéticos de radiofrequência, de acordo com a Resolução nº 303/2002 e . 533/2009.

Para maiores informações, consulte o site da ANATEL-[www.anatel.gov.br](http://www.anatel.gov.br)

ALCATEL is a trademark of Alcatel-Lucent  
and used under license by  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.