



© Vodafone Group 2012. Vodafone and the Vodafone logos are trade marks of Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.

English - CJB32F1VDAAA

 
Quick start guide
Vodafone Chat







vodafone

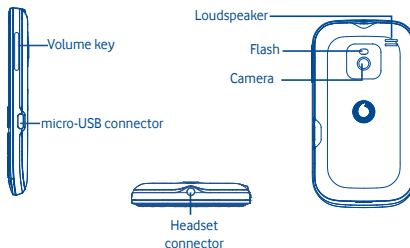For more information about how to use the phone, please go to www.vodafone.com/vodafonechat to download complete user manual. Also on our website you can find helpful FAQs, realize software upgrade, etc.

1 Your mobile

1.1 Keys and connectors



- 
 - Flick to go left/right/up/down
 - Press to confirm an option (press the middle of the key)
- 
 - Answer/Send a call
 - Enter Call log
- 
 - Press: End a call
 - Return to the Home screen
 - Press and hold: Power on/off
- 
 - Press and hold: Access your voicemail
- 
 - Press once: Input a capital letter
 - Press twice: Lock the keyboard in capital letter input mode
- 
 - Press once: Input a top-half key character
 - Press twice: Lock the keyboard in top-half key input mode
 - Alt + B: Access Bluetooth
 - Alt + J: Access Apps
 - Alt + M: Access Music
 - Alt + P: Access Device sound profiles



- Press: Enter a space (in Edit mode)
Press **OK** key, then **Space** key to unlock the keypad (on the Lock screen)
- Press and hold: Access text input language list (in Edit mode)
Lock the keypad (on the Home screen)
- Hold down **Space** key, then press **Alt** key to select input method



- Enter symbol table
- Hold down **Alt** key, then press **Sym** key to enter emoticon table



- Confirm an option
- Enter the next line



- Press and hold: Switch between General and Silent profile



- Volume up/down
- Scroll up/down



- Press to delete a word or character



- Press to access applications: Google Talk, MSN, Facebook, Facebook Chat, Twitter

1.2 Home screen

The Home screen is divided into several parts, as shown below:



3

1.2.1 Status bar⁽¹⁾

From the status bar, you can view both phone status and notifications.



Battery charge level.



Bluetooth activated and visible.



Bluetooth activated but invisible.



Bluetooth connecting.



Java application activated.



Headset connected.



Keypad locked.



Mute is on during a call.



Silent profile is activated.



Alarm or appointment programmed.



Level of network reception.



Missed calls.



Call in progress.



Stopwatch activated.



Email unread.



Radio is on.



WAP message.⁽²⁾



Roaming.



SD card inserted.



SIM card unavailable.



GPRS in use.



2G network available.



3G network available.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.

4



Wi-Fi disconnected.



Wi-Fi connected.



Line switching ⁽¹⁾: indicates the selected line.



Vibrate and ring mode: your phone vibrates and rings.



Music active.



GPRS connected.



Edge in use.



Edge connected.



Music player active.



Vibrate mode.



SMS unread.



MMS unread.



Sending MMS.



Flight mode.

1.2.2 Widget bar

Widgets are convenient shortcuts for quick access from the Home screen.

1.2.3 Lock/Unlock screen

To protect your phone and privacy, you can lock the screen by pressing and holding the **Space** key.

To unlock the screen, press , then the **Space** key.

 
1.2.4 Main menu

To access the main menu screen, select **"Menu"** from the Home screen.

2 Getting started

2.1 Set-up

Removing or installing the back cover




Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 Installing or removing the battery




- Insert and click the battery into place, then close the telephone cover.
- Unclip the cover, then remove the battery.

⁽¹⁾ Depending on your network operator.




 Installing and removing the memory card (microSD card)



Insert the microSD card with its golden contact facing downwards into the slot until it is locked in place. To remove it, gently push the card in until it unlocks.

 Charging the battery

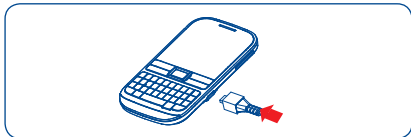

Connect the battery charger to your phone and outlet respectively.



To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

2.2 Power on your phone

Hold down the key until the phone powers on, type in your PIN code if necessary. The main screen is displayed.

Set up your phone for the first time

The first time you power on the phone, you are required to adjust initial basic settings and login to your Facebook account to synchronize Facebook information.

2.3 Power off your phone

Hold down the key from the Home screen.

3 Calls

3.1 Placing a call

Enter the desired number from the keypad directly or select a contact from **Contacts** or **Call log**, then press the key to place the call. The number you entered can be saved to **Contacts** by selecting **"Save"**.

If you make a mistake, you can delete the incorrect digits by pressing the **Delete** key.

To hang up, press the key.

3.2 Answering or rejecting a call

When you receive an incoming call, press the key or select **"Answer"** by pressing the key to answer.

Hang up the call by pressing the key. If the caller (local contact only) is not one of your Facebook friends and the remind setting is active, a reminder screen will appear to suggest sending a Facebook friend request to the caller.

3.3 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can listen to at any time. To access your voicemail, hold down the key.

4 Changing the menus

The menus can be changed to the way you want them.

Change the order

Access the main menu, focus on the main menu item you want to move, select **"Options/Move"**, and tick will be shown on the item you selected, then release it to your favorite destination.

Show/Hide


Access the main menu, select **"Options/Add and remove menu"**, and select the left check box of the selected menu once to show/hide, and then select **"Done"** to save the operation.

⁽¹⁾ Contact your network operator to check service availability.



5 Messaging

You may access this menu using the following options:



- Access from the main menu screen by selecting **"Messaging"**.
- Select  from the widget bar.

5.1 SMS/MMS

You can create, edit and receive SMS and MMS with this mobile phone.

MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.

5.1.1 Write new SMS/MMS

You can select **"Write new SMS/MMS"** from the messaging screen to write text/multimedia messages. One or more recipients can be added from the contact list and you can remove a recipient by pressing . Select **"Contacts"** using the  key and then select multiple recipients.

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

When finished entering text, press the  key to send it.



An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS messages. An MMS message containing photos and/or sounds may also be billed as more than one message. Specific letters (accents) will increase the size of the SMS, this may cause your recipient to receive your message as two or more SMS messages.

5.2 Email

Your phone has an email client with the settings pre-defined for a few popular email services like – Gmail, Sky, AOL, etc. Besides these, you can set up other POP3 or IMAP4 email accounts that you may be using.

5.2.1 Email account set-up

Pre-defined email service

If you own an email account with a predefined service, you can install it to your phone by selecting the service (Gmail, Sky, etc.), entering the username, password and account name, and then confirming by selecting **"OK"**.


New email service

To set up a new email account other than the predefined email services, select **"Other Email accounts"**.

You are required to enter your email address, display name, password, account name, then confirm with **"Save"**. Afterwards you'll need to select protocol ⁽¹⁾ (POP3 or IMAP4), then enter your incoming server address and outgoing server address, and finally select **"Save"**.

6 Contacts

6.1 Consulting your contacts

You can access this function from the main menu screen by selecting **"Contacts"** or selecting  from the widget bar.

When accessing this menu, you will see two tabs:

- | | |
|--------------|-------------------------------|
| Phone | List all contacts |
| Group | Organize contacts into groups |



When consulting your contacts for the first time, you are required to import them from the SIM card to your phone.

6.2 Adding a contact

You can add a new contact by selecting **"Add contact"**.

The following fields are accessible when you create a new entry in Contacts: Name, Image, Mobile, Home, Work, Email, Birthday, Birthday reminder, URL, Address, Ringtone.




⁽¹⁾ Consult your email service provider for more information about protocol.



7 Call log.....






You can access this function like this:

- Select  from main menu
- Press  key from Home screen
- Select  from widget bar

7.1 All calls

The call log shows three different types of call:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls

Locate one contact, select **"View"** to view call details, press the  key to place a call directly.

7.2 Available options

When you press **"Options"**, you can have access to **Send message, Dial, Missed calls, Call settings, Edit before call, Delete**, etc.

7.3 Voicemail

From this menu, you can view all voicemail memory.

8 Facebook.....



Facebook is a social utility that connects people with friends and others who work, study and live around them. You can select "Facebook" in main menu to launch Facebook application.

9 Music.....



You can access this feature from the main menu screen by selecting **"Music"**.

From here, you can access either the Music player or the Radio.

9.1 Music player

Gives you full flexibility when managing music both on your mobile and SD card.

9.2 Radio

Your phone is equipped with an FM radio ⁽¹⁾ with RDS ⁽²⁾ functionality. You can use the application as a traditional radio with saved channels or display parallel visual information related to the radio program if you tune to stations offering Visual Radio service. You can listen while running other applications.

10 Wi-Fi⁽³⁾.....



Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even when no SIM card is inserted.

To access this function, press  to enter the main menu, and select .

To connect/disconnect a wireless network

- Press **"Wi-Fi"**
- Select **"WiFi Connection"**

If the network you selected is secured, you are required to enter a password or other credentials (contact network operator for details).

When finished, select **"Options/Done"**.

To disconnect a Wi-Fi network, select **"Options/Disconnect"**.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

⁽²⁾ Depending on your network operator and market.

⁽³⁾ Depending on the model.



Available options:

Connect	Press to connect to Wi-Fi network
Add	Press to add new Wi-Fi networks of your choice when Wi-Fi is on
Define Access Point	Press to set Access Point
Wi-Fi status	Press to check the status of Wireless Local Area Networks
Disable Wi-Fi	Press to deactivate Wireless Local Area Networks
Power save mode	Press to select Constantly awake mode, Power save mode, Max power save mode
Refresh	Press to refresh all the available Wi-Fi networks

11 WEB.....

WEB lets you browse the entire Web anywhere. It recognizes and suggests URL completions based on your bookmarks and browsing history, lets you save pages for viewing offline and gives your phone a virtual mouse.

12 Camera.....

Your mobile phone is fitted with a camera for taking photos and shooting videos.

To access this function, select  from the main menu screen.



SD card (if available) is automatically set as the preferred storage location for any photos and videos which you take.

13 Pictures.....

This menu displays the following two tabs when accessed:

Camera roll	List photos you have taken
Images	List images provided with the phone
Videos	List videos you have taken

Facebook gallery is displayed in albums. The first album will be "Fan photos" which is generated automatically and contains all pictures where you have been tagged.

14 Clock.....

14.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

14.2 WorldTime

The WorldTime shows current local time and the time zone in different cities. You may view up to three cities at one time.

14.3 Time and Date

Allows you to set the date and time in either 12/24h format.

You can also set the daylight saving adjustment.



15 Calendar.....

Once you enter this menu from the main menu screen, you'll see a month-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in colour.



When you are logged onto Facebook, all your Facebook friends' birthday reminders will be synced automatically to your local calendar. An  icon will appear on the status bar to notify you of upcoming birthdays.

16 Social.....

You can enter this menu by selecting "**Social**" on the main menu.

It enables to you easily access features including **MSN**, **Gtalk**, **FBChat** and **Twitter**.

17 Apps.....

Access useful applications from this menu.




The applications you use most frequently can be added to or removed from the main menu screen by selecting "**Options**" on the main menu screen, and then select "**Add and remove menu**".

18 Tools.....

Your phone is equipped with several frequently used tools. You can access these tools by selecting "**Tools**" on the main menu.

18.1 Weather.....

Your phone is equipped with a weather app which will give you forecasts of up to three days for favorite cities.

To access the function, select "**Menu**" through the  key to access the main menu screen and select  then .

18.2 News.....

A huge time saver, providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your mobile phone at anytime, anywhere!

18.3 Tasks.....

Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.

18.4 Notes.....


You can create a note in text or voice format by accessing "**Notes**" from the applications list.






18.5 Calculator.....

Access this feature by selecting "Calculator" from the applications list.

Enter a number, select the type of operation to be performed, and enter the second number, then press the  key to display the result.

18.6 Converter.....

You can use the Weight and Length conversion by selecting the unit you wish to convert, then press the  to input the digits. Finally confirm with "OK".

18.7 Stopwatch

The stopwatch is a simple application for measuring time with the ability to register several results and pause/resume measurement.

19 File manager.....


You will have an access to all audio and visual files stored in phone or SD card in File manager. You can access a number of items with this option: **My music, My images, My videos, Camera roll, Other files, Phone, SD card**, etc.

Inserting the SD card:



Insert the microSD card with its golden contact facing downwards into the slot until it is locked in place.

20 Settings.....

From the main menu, select the menu icon  and select the function of your choice in order to customize your phone.

20.1 Device sound profiles

To modify the device sound profiles, select "Edit" to reveal the following functions using the OK key: **Mode, Ringtone, Ring type, Volume, Keypad, Message beep, Power on beep, Power off beep.**

20.2 Device settings

Enables you to easily set your phone: **Display, Set language, Time and date, Headset mode, Keypad shortcuts, Set auto-lock time.**

20.3 Connectivity

A set of profile settings for Bluetooth, Data account, Multimedia message, Internet, Email, Streaming, etc.

20.3.1 Bluetooth



To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during communication.

20.4 Factory reset

Select to restore factory settings.

All user data, files and downloaded applications will be lost permanently.

You may also realize factory reset using hard keys: hold down  and press  key at the same time.



21 Making the most of your mobile

21.1 Vodafone Chat 655/655W PC suite

Vodafone Chat 655/655W PC suite is available for downloading from the website: www.vodafone.com/vodafonechat

The Vodafone Chat 655/655W PC suite includes:

- **Backup/restore**

You can backup important data in your mobile and restore it when needed.

- **GPRS Modem**

Use your phone to connect a PC to the internet.

- **Multimedia Personalization**

Customize your phone with images, animations and melodies.

- **Music management**

Create and transfer playlists with music files and provide lyric editing.

- **Messaging**

You can compose SMS/MMS easily on your PC and transfer them to your phone.

Supported Operating Systems

- Windows XP/Vista/Windows 7

21.2 Vodafone Chat 655/655W Software Upgrade

Using the Vodafone Chat 655/655W Software Upgrade tool you can update your phone's software from your PC.

Download Vodafone Chat 655/655W Software Upgrade from website (www.vodafone.com/vodafonechat) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your phone will now have the latest software.



All personal information will be permanently lost following the update process. We recommend you backup your personal data using Vodafone Chat 655/655W PC suite before upgrading.

21.3 Webcam ⁽¹⁾

You can use your phone as a webcam for instant messaging on your PC.

- Connect your phone to your PC via the USB cable.
- Go to the **"My computer"** folder on your PC and find the USB video device.



⁽¹⁾ Webcam use may vary according to the operating system of your PC.



22 Text input mode/ character table

There are two text entry methods that can be used to write messages:

- Normal
- Predictive mode

Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

Predictive mode

This mode can perform predictive input in the hardware keypad and supports multi-language input.

Safety and use

We recommend that you read this chapter carefully before using your mobile phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile phone when the vehicle is not parked. Check the laws and regulations on the use of wireless mobile phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your mobile phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your mobile phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your mobile phone on top of the dashboard or within an airbag deployment area.
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the mobile phone from time to time to optimize its performance.

Remember to abide by local authority rules of mobile phone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the mobile phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile phones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the mobile phone off when you are near gas or flammable liquids.



Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the mobile phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the mobile phone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your mobile phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

It is recommended to have proper supervision while small children use your mobile phone.

When replacing the cover please note that your mobile phone may contain substances that could create an allergic reaction.

Always handle your mobile phone with care and keep it in a clean and dust-free place.

Do not allow your mobile phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the mobile phone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your mobile phone yourself.

Do not drop, throw or try to bend your mobile phone.

Do not use the mobile phone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not point it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your mobile phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your mobile phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your mobile phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your mobile phone or enabling a flashing-lights feature on your mobile phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the mobile phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your mobile phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your mobile phone's volume to it's lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and it's affiliates.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile phone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.



• BATTERY AND ACCESSORIES:

Before removing the battery from your mobile phone, please make sure that the mobile phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your mobile phone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F).

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 550 mA

Battery:

Lithium 1000 mAh

• RADIO WAVES:

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile phone while operating can be well below the maximum value. This is because the mobile phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the mobile phone. Before a mobile phone model is available for sale to the public, compliance with national regulations and standards must be shown.



The highest SAR value for this model mobile phone when tested is 0.826 W/Kg (Vodafone Chat 655/655W) for use at the ear and 1.06 W/Kg (Vodafone Chat 655W, with 1.0cm distances), 0.685 W/Kg (Vodafone Chat 655, with 1.5 cm distances) for use close to the body.

While there may be differences between the SAR levels of various mobile phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the mobile phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 10 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-efm/>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Your mobile phone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the mobile phone at least 10 mm away from the body.



• LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth QD ID B018931

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.



General information

- **Website:** www.alcatelonetouch.com
- **Facebook:** <http://www.facebook.com/alcatelonetouchusa>
- **Twitter:** <http://www.twitter.com/alcatel1touch>
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com

Your mobile phone is a transceiver that operates on following networks: Vodafone 655W: Blue 3G GSM Qual Band (850/900/1800/1900) and UMTS Dual Band (900/2100) with WiFi

Vodafone 655: Blue 3G GSM Qual Band (850/900/1800/1900) and UMTS Dual Band (900/2100) without WiFi

Protection against theft ⁽¹⁾

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your mobile phone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the mobile phone's operation, depending on the software release of your mobile phone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

⁽¹⁾ Contact your network operator to check service availability.