



One Touch 632

**ALCATEL**onetouch.

## **Introduction.....**

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

### **Power media applications**

- Music player & FM Radio
- Video & Streaming
- Analog TV

### **Bluetooth**

With Bluetooth 2.1 supporting A2DP profiles, enjoy hands-free conversations.

### **Desktop**

- Convenient at-a-glance view of Widget applications
- Menu shortcuts for quick access

# Contents

<b>Safety and use</b> .....	<b>6</b>
• TRAFFIC SAFETY: .....	6
• CONDITIONS OF USE: .....	6
• PRIVACY: .....	9
• BATTERY: .....	9
• CHARGERS .....	10
• RADIO WAVES: .....	10
<b>General information</b> .....	<b>13</b>
Protection against theft .....	13
Disclaimer .....	13
<b>1 Getting Started</b> .....	<b>14</b>
1.1 Set-up.....	14
1.2 Power on your phone .....	15
1.3 Power off your phone.....	15
<b>2 Your Phone</b> .....	<b>16</b>
2.1 Keys.....	17
2.2 Main Screen Icons .....	17
<b>3 Calls</b> .....	<b>18</b>
3.1 Making a Call.....	18
3.2 Receiving a Call .....	18
3.4 During a Call <sup>(1)</sup> .....	19
3.5 Conference Call <sup>(1)</sup> .....	19
<b>4 Text Input</b> .....	<b>20</b>
<b>5 STK</b> .....	<b>20</b>
<b>6 Messages</b> .....	<b>20</b>
6.1 Writing and Sending a Text Message.....	20

6.2 Writing and Sending a Multimedia Message .....	21
6.3 Read Messages .....	21
<b>7 Ideas.....</b>	<b>22</b>
<b>8 TV.....</b>	<b>22</b>
<b>9 Portal Móvil.....</b>	<b>23</b>
<b>10 Games.....</b>	<b>23</b>
<b>11 Contacts.....</b>	<b>23</b>
11.1 Creating a Contact .....	23
11.2 Searching for a Contact .....	23
11.3 Send Message from a Contact .....	24
11.4 Call the Contact .....	24
11.5 Send Business Card .....	24
11.6 Delete and Mark Contacts .....	24
11.7 More Operations of Contacts .....	24
<b>12 Camera.....</b>	<b>25</b>
12.1 Camera .....	25
12.2 Video Recorder .....	25
<b>13 Tools.....</b>	<b>26</b>
13.1 Call Logs .....	26
13.2 Calendar .....	26
13.3 Tasks.....	26
13.4 Alarm .....	26
13.5 World Clock .....	27
13.6 Unit Converter .....	27
13.7 Calculator .....	27
13.8 Currency Converter .....	27
13.9 Stopwatch .....	27
13.10 Ebook Reader.....	27

<b>14 Multimedia</b> .....	<b>28</b>
14.1 Audio Player .....	28
14.2 Video Player .....	29
14.3 FM Radio .....	29
14.4 Sound Recorder .....	29
14.5 Image Browser .....	30
14.6 File Manager.....	30
<b>15 Buscar</b> .....	<b>31</b>
<b>16 Settings</b> .....	<b>31</b>
16.1 Profiles .....	31
16.2 Phone Settings.....	32
16.3 Call Settings.....	32
16.4 Network Settings .....	33
16.5 Security Settings.....	33
16.6 Connectivity.....	33
16.7 Internet Service .....	35
16.8 Restore Factory Settings.....	35
<b>Warranty</b> .....	<b>35</b>
<b>Troubleshooting</b> .....	<b>36</b>

## Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

### • CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids.

Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions

(moisture, humidity, rain, infiltration of liquids, dust, sea air, etc).The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List).

TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.



- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.



• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.



• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.

This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment

- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

**In non European Union jurisdictions:**

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

• **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• **RADIO WAVES:**

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/ EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

**THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.**

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure

thresholds recommended by international requirements (ICNIRP)<sup>(1)</sup> and by the Council of the European Union (Recommendation 1999/519/EC)<sup>(2)</sup>. These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health. The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue. The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands. Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone. The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 0.99W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure. The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>. Although no danger relating to the use of telephone was ever proved, the World Health Organisation advises as a precautionary measure to use your telephone with a good level of network reception as indicated

on the telephone display (4 to 5 bars). It is also advised to keep the telephone, during communications, away from the belly of pregnant women and from the lower abdomen for teenagers. Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

- (1) The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.
- (2) The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

• **LICENSE**



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

**One touch 632 Bluetooth QD ID  
B018661**



microSD Logo is a trademark.



eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.

## General information.....

- **Internet address:** [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server:

[www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

Your telephone is a transceiver that operates on GSM networks with 850, 900, 1800 and 1900 MHz bands.

### **Protection against theft**

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

### **Disclaimer**

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

 
TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

# 1 Getting Started.....

 
## 1.1 Set-up

### Installing SIM Cards and the Battery

You can install a Subscriber Identification Module (SIM) card in the phone. When inserting a SIM card, ensure that the golden contact area on the SIM card is facing downward and that the beveled edge of the SIM card is properly aligned with that of the SIM card slot.



### Removing the Battery and the SIM Card

 


### Installing a microSD Card

You can install a microSD card to expand the memory capacity of your phone. When inserting the microSD card, ensure that the golden contact area on the microSD card is facing downward.



### Charging the Battery

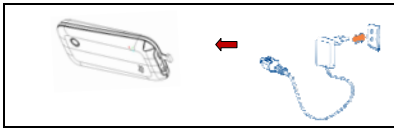


Connect the battery charger to your phone and mains socket respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (☑).
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.




The charge is complete when the animation stops.

## 1.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm. The main screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, you can browse through them or press  to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.

## 1.3 Power off your phone

Hold down the  key from the main screen.










## 2 Your Phone .....









 The figure above shows the appearance of your phone and is provided only for your reference.












## 2.1 Keys

-  Power on or power off the phone (Long keypress)  
End or reject a call  
Return to the standby mode
-  Make a call from in standby mode  
Answer a call  
View all calls in standby mode
- **Navigation Key**  
Confirm an option (Press the middle of the key)  
Select the shortcut functions list on the screen (Press the left or right key)  
Adjust volume during a call (Press the left or right key)  
Adjust call-in ringtone volume in standby mode (Press the up or down key)
-  Execute the function left-down corner indicator shows  
Access Menu in standby mode
-  Execute the function right-down corner indicator shows  
Access Contacts in standby mode
-  Access TV in standby mode
-  Access FM radio in standby mode
-  In standby mode, long keypress \* key to lock keypad.
-  Shift between Meeting mode and current mode in standby mode (Long keypress)

 
## 2.2 Main Screen Icons


-  Level of network reception
-  Battery charge level
-  Bluetooth status
-  Headset connected to the phone
-  Keypad locked
-  New text messages

-  New MMS
-  Missed calls
-  Alarm clock
-  **Silence** profile activated
-  **General** profile activated
-  **Meeting** profile activated
-  **Outdoor** profile activated
-  **Flight mode** is activated
-  MicroSD card inserted.


## 3 Calls.....


### 3.1 Making a Call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right soft key.



To hang up the call, press the  key.


#### **Making an emergency call**


If your phone is covered by the network, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.


-  • You can also make calls through call logs, phonebook, and messages.
- You can adjust the sound level during a call using the left/right key.

### 3.2 Receiving a Call



When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone.

If the  icon is displayed, the phone neither rings nor vibrates.


 The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

### 3.3 Rejecting a call

Press the  or  key once to reject the call.

### 3.4 During a Call<sup>(1)</sup>

#### Available functions


During a call, press  (**Options**) to use phonebook, call logs, messages, etc. without losing your caller.

**WARNING:** move the handset away from your ear while turn on the speaker because the amplified volume might cause hearing damage.

#### Handling two calls

- Answering a second call (ensure that "Call waiting" is activated).
- To call a second party during a call, you may press "Options" and select "New call".
- Press "Options" and select "Swap" to shift between the two calls.

### 3.5 Conference Call<sup>(1)</sup>

Your phone allows you to talk to several people at the same time. If you are on a double call, press "Options" and select "Conference". If a third call comes in, answer it by pressing the  key and speak with your new caller.

This caller becomes a member of the conference if you press "Options" and select "Conference".


(1) Contact your network operator to check service availability.

## 4 Text Input.....

There are two text entry methods that can be used to write messages

- **Normal:** This mode allows you to type text by choosing a letter or a sequence of characters.
- **Predictive with the Zi mode:** This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

You can use  to enter symbol list and select symbol in any text mode.

## 5 STK.....







The SIM Tool Kit (STK) function is a value-added service provided by your service provider, you can use it to send text messages, view news, and use other applications. For more information, contact your service provider.

## 6 Messages.....




### 6.1 Writing and Sending a Text Message

1. Select **Menu > Messages > Write message > Text message.**
2. Write the message.
3. Press  to add recipient to send message.
4. Press  (**Options**), and then select **Send to.**
5. Enter number, or select **Add from Phonebook**, and then add a recipient from the phonebook.  
To add multiple recipients, repeat this step.
6. Press  or  (**OK**) to send message.

## 6.2 Writing and Sending a Multimedia Message

Select **Menu > Messages > Write message > Multimedia message**.

Write the message.

Press  (**Options**) for the following options:


- **Input receiver**, and select **Send to** to send message.
- **Input method**: to select text input method
- **Set Zi**: to turn on or off Zi
- **Add picture**: add picture to the message
- **Add sound**: add audio clip to the message
- **Add video**: add video clip to the message
- **Add subject**: add subject to the message
- **Preview MMS**: to view the multimedia message
- **Slide options**: to select add slide behind, add slide before, and set slide timing
- **Advanced**: to insert attachment or bookmark to the message
- **Save to Drafts**: save the message to draft box

## 6.3 Read Messages

- Select **Menu > Messages**.
- Select **Inbox**, to check received messages.
- Select **Drafts**, to check messages saved in draft box.
- Select **Outbox**, to check messages sent unsuccessfully.
- Select **Sent messages**, to check sent messages.
- Select **Broadcast messages**:

Broadcast message is a service provided by the network operator to send messages such as weather forecast, traffic status, etc. to all GSM subscribers in a specific area.

The realization of the cell broadcast function needs the support of the network. For details, please contact the network operator.

-  You can contact your network operator for the availability of the Multimedia Messaging Service (MMS) and the method for subscribing to the service.
- Your phone supports a multimedia message of a maximum size of 300 KB.
- Open multimedia messages with caution. Objects in multimedia messages may contain viruses (such as malicious software) that can damage your phone.

## 7 Ideas.....



Your phone provides MSNGR, Plugger, etc. several social networking services (SNS). You can use them to communicate with other people.

To use MSNGR, select **Menu > Ideas > MSNGR**. Your phone then connects to the WAP page.

The method for using other SNS is similar.





- Check GPRS settings before using these two applications.
- Before saving the chat history, ensure that a microSD card has been inserted to the phone.


## 8 TV.....








You can use your phone as a mobile terminal to watch TV programs. Select **Menu > TV**.

### Searching Channels

First time you access Mobile TV, please select your location from the list, and then press , the phone will start auto-searching channels. Please keep the TV antenna in pulling-out status when using TV function. After searching channel, we will find the channels list on the screen. Press up or down key to choose channel in the list and press  to enter the channel.

If you want to re-scan the channels, please press  (**Options**) in channels list screen, and select "**Auto search**" to re-scan the channels.

### Operations in Channel

-  Increase volume
-  Decrease volume
-  Next/Previous channel
-  Capture the screen when watching TV
-  Full Screen

## 9 Portal Móvil.....



Enter this function menu, the phone will link to the URL of <http://www.telcel.com>.

## 10 Games.....

The phone has built-in game. You can select to play and enter **Games settings** to set.

## 11 Contacts.....



### 11.1 Creating a Contact

1. In standby mode, press numbers and press  (**Options**) and select **Save to Phonebook** to add new contact to SIM card.
2. Select **Menu > Contacts > Add new contact**.
3. Enter the contact information.
4. Press  to store the contact.



### 11.2 Searching for a Contact

You can search for a contact by inputting the initial of their name. Subsequent letters may be added to refine the search. Or you may scroll up/down to find the contact you need when reaches the initial letter among contact list part (A-Z).

### 11.3 Send Message from a Contact

1. Select **Menu > Contacts**, find your desired contact, and then press **Options**.
2. To select **Send text message** or **Send multimedia message**.
3. After completing a message, press  to send, or press  (**Options**) to select **Send** to send the message.



### 11.4 Call the Contact

1. Select **Menu > Contacts**, find your desired contact, then press **Options**, select **Call**.
2. Press  or  (**Select**) to call the contact.
3. Select **Menu > Contacts**, enter **Options** and select **IP Call** to make an IP call. Before make an IP call, you can select IP number in the list or edit new number, and then select **Activated** to activate the number.

### 11.5 Send Business Card

1. Select **Menu > Contacts > Options > Send business card**.
2. Select **As text message**, **As multimedia message** or **Via Bluetooth**.
3. Input recipients to send business card.
4. Activate Bluetooth to search other wireless device to transmit business card.

### 11.6 Delete and Mark Contacts

1. Select **Menu > Contacts > Options > Delete**.
2. Press  or  (**Select**) confirm to delete the desired contact.
3. Select **Menu > Contacts > Options > Mark several**.
4. Mark one or more contacts to do further operations such as delete, copy, etc.

### 11.7 More Operations of Contacts

Select **Menu > Contacts > Options**, there list other options such as **Edit**, **Move**, **Add to Blacklist**, etc.



## 12 Camera.....



The phone is equipped with a CMOS camera<sup>(1)</sup>.

Select **Menu > Camera**.

### 12.1 Camera

On the picture taking screen, do the following:

- Press to capture a picture, the picture will be saved to phone memory or memory card automatically. Then, press or (Options) to send or delete.
- Press (Options) to set parameters for camera. This includes Switch to video, Image Browser, Camera settings, Image settings, White balance, Scene mode, Effect settings, Storage, and Restore default. Press the up or down key to select options, press or (OK) to select or set.

Press to exit camera.

### 12.2 Video Recorder

To record a video clip, do the following:

1. Select **Menu > Camera > Video recorder**.

2. In video recording mode, do the following:

Press to record. Press to Pause, to stop. After take a record, press (Yes) to save.

Press (Options) to set parameters for video recorder. This includes: Switch to camera, Camcorder settings, Video settings, Effect settings, Storage, and Restore default. Press the up or down key to select options, press or (OK) to select or set.



Press to exit video recorder.

((1)) 1.3-MEGA pixel camera effect via software.

## 13 Tools.....



### 13.1 Call Logs

1. Select **Menu** > **Tools** > **Call logs**.
2. Select **Missed calls**.
3. Press the navigation key to scroll desired record, press  to check detailed information.
4. Press  (**Options**) to select **View**, **Call**, etc.
5. The operations in **Dialled calls** and **Received calls** are the same as **Missed calls**.
6. Select **Delete call logs** to delete all call logs.
7. Select **Call timers** to check call time records.

### 13.2 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for you to keep track of important reminders, meetings, etc. Days with events entered will be marked in color.

Available options

- **View**: to view the event
- **View all**: view all events
- **Add event**: add new event
- **Delete event**: to delete the event
- **Jump to date**: Input the required date and it will be immediately highlighted.
- **Go to today**: go back to today
- **Go to weekly/monthly view**: display the calendar in weekly or monthly

### 13.3 Tasks



To check tasks or add new tasks for reminding. In the task list, select one task, the options will be shown as **View**, **Add**, **Edit**, etc.

### 13.4 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- **Repeat:** You may select **Once** (default)/**Every day/Custom** to your desire.
- **Alarm tone:** The alarm will repeat at regular intervals. You may select the mode of Ringtone: **Tone, FM radio**.
- **Alert type:** You may select **Vib.**(Vibration) and **ring, Ring only** or **Vib. only**.

### 13.5 World Clock


 


Your phone supports world clock function. Press the left or right key to view different time zone. Press  (**Options**) or  to set daylight saving time for foreign city.

### 13.6 Unit Converter

By using the unit converter, you can select Weight, Length, Surface, Volume and Temperature to convert.

### 13.7 Calculator

This function can use your phone as a calculator. The accuracy of this calculator is limited, and the calculator can only be used for simple calculations.

1. Eight operators are provided. They are “+”, “-”, “x”, “/”, “%”, “M+”, “M-”, “MC”, “MR”.
2. Press  (**Clear**) to delete items entered. Long pressing  (**Clear**) to clear all content. Press the navigation key to calculate, press  (**OK**) or  to show the result of calculation.

### 13.8 Currency Converter

By using the unit converter, you can convert currency.

### 13.9 Stopwatch

Your phone supports stopwathc. Select **Typical stopwatch** or **Nway stopwatch** to count time.


 

 

### 13.10 Ebook Reader

Your phone supports ebooks in .txt format.

Select **Menu > Tools > Ebook reader** to display the bookshelf.

The phone automatically adds the ebooks stored in **Ebook** on the microSD card or in the phone memory to the bookshelf.

- Scroll to the desired ebook.



- Press  to open and start reading the ebook. During the reading, press  (**Options**) to Find, Jump to, Go to bookmark, Add bookmark, Delete bookmark, Delete all bookmarks, Book info, Settings, Apply global settings, Help, and Close.
  - Press  (**Options**) to Open ebook, Clean up bookshelf, ect.
  - Press  (**Back**) to exit Ebook reader.
-  • When reading an ebook, you can press the left or right key to turn pages.
- It is recommended that you store ebooks in **Ebook** in the phone memory or on the microSD card. When you open an ebook stored in a folder other than **Ebook**, the phone automatically moves the ebook to **Ebook** so that you can find it easily next time your want to open it.




## 14 Multimedia.....

This menu includes more multimedia applications. It includes Audio Player, Video Player, FM radio, Sound recorder, Image Browser, and File Manager.

### 14.1 Audio Player

The audio player plays audio clips that are stored in **My music** on the microSD card or in phone memory. It is recommended that you listen to audio clips by using the headset so that you can enjoy enhanced quality sound.





1. Select **Menu > Multimedia > Audio Player**.
2. Press the  to start playing audio clips.
3. When audio clips are being played, you can do the following:
  - Press up or down to adjust the volume.
  - Press the  to pause or continue.
  - Longpress the left or right key to rewind or fast-forward the audio clip.


- Shortpress the left or right key to turn to last file or next file.
4. Press  (**List**) to enter file list. Press  (**Options**) to configure the relevant settings.
  5. Press  (**Back**) to exit and play the audio player in background.

## 14.2 Video Player

The video player plays downloaded or recorded video clips that are stored in the **Videos** folder in **File manager** of **Memory card** and **Phone**.



To play a video clip, do the following:

1. Select **Menu > Multimedia > Video Player**.
2. Press the up or down key to select a video clip.
3. Press  (**Options**) to enter options and Play, Send, Rename, Delete, Delete all files, Sort by, Storage, and Video settings.
4. Press  to play the video clip.
5. When the video clip is being played, you can do the following:
  - Press up or down to adjust the volume.
  - Press the left or right key to rewind or fast-forward the video clip.
  - Press  to pause or continue.
6. Press  (**Back**) to exit.

 Only files in .avi., and .mp4 format are supported.

## 14.3 FM Radio


 

Select **Menu > Multimedia > FM radio**.

 



1. Press the left or right key to change frequency or channel.
2. Press  to stop the radio program.
3. Press up or down to adjust the volume.
4. Press  (**Back**) to exit.

## 14.4 Sound Recorder



The recorder functions as a digital recorder.

To record an audio clip, do the following:

1. Select **Menu > Multimedia > Sound recorder**.
2. Press the  to record an audio clip directly. Also, press  (**Options**) to select **New record** to record. Press  (**Pause**)

- to pause during recording, press  (**Stop**) to stop recording. After saving the audio clip, press the left/right key to select and press  to confirm  to play the audio clip just recorded. Press up and down key to adjust volume.
3. After record one audio clip, press  (**Options**) to enter New record, Play, Append, etc.



#### 14.5 Image Browser

The shot photos are stored in the image browser. Press the up and down key to choose pictures, press  to view the picture, press  (**Options**) to do options.



- **View:** to view the picture
- **Image information:** to check detailed information for the picture
- **Browse style:** to preview pictures in List style or Matrix style
- **Send:** send the picture to Plugger or send to other devices as multimedia message or via Bluetooth
- **Use as:** to use the picture as wallpaper, screen saver, power on display or power off display
- **Rename:** rename the picture
- **Delete:** to delete the picture
- **Sort by:** to sort the pictures by name, type, time, or size
- **Delete all files:** to delete all pictures
- **Storage:** to check pictures stored in phone or on memory card

#### 14.6 File Manager

This menu enables you to access the File Manager, where folders or files on Memory Card and in phone memory can be managed.



Press the up or down key to choose desired folder, press  to open or press  (**Options**) to do options.


- **Open:** to open the folder
- **New folder:** to create new folder.
- **Rename:** to rename the folder
- **Delete:** to delete the folder
- **Sort by:** to sort the folders by Name, Type, Time, or Size
- **Mark several:** To mark folders or files for delete, copy, move
- **Copy:** to copy the folder to phone or memory card
- **Move:** to move the folder to phone or memory card

Press the up or down key to choose desired file, press  to open or press  (**Options**) to do options.  
The operations of files may different from folders.

## 15 **Buscar**.....

Buscar is a special function for you to search information by using wap.

After enter the Buscar, input what you are searching. Press  or  (**Options**) to select Save, and it will link to: <http://z.telcel.mobi/information> typed.

Example: If you are looking for "Sports", enter Buscar and input "Sports", press  to go to <http://z.telcel.mobi/Sports>.


## 16 **Settings**.....

### 16.1 Profiles

Your phone provides different profiles for you to customize ring tone and other settings under different environments. You can customize a profile according to your needs and enable the profile. The available profiles include **General, Meeting, Outdoor, Silence, My style, Flight mode**.

In each profile, you can set one of the following options:

Select **Menu > Settings > Profiles**.

Select one profile (except **Silence**), and press  (**Options**) to enter:

- **Activate:** to activate the desired profile
- **Customize:** to set Alert type, Ring type, Incoming call, Ringtone volume, Message, Message volume, Keypad, Keytone volume, etc.
- **Reset:** to reset to original settings.

- **Rename:** to rename the profile. This option only appears in **My style**.

**Flight mode:** to turn the phone to flight mode

## 16.2 Phone Settings

Select **Menu > Settings > Phone settings**. There lists Time and date, Schedule power on/off, Languages, etc.

**Time and date:** to set home city, set time/date, auto update time, format, and update with time zone

**Schedule power on/off:** to set the time to power on/off the phone

**Languages:** to set display language

**Input mode:** to set input mode

**Display:** to set Wallpaper, Screen saver, Power on display, Power off display, Show date and time, Clock type, and LCD backlight

**Shortcuts:** to set shortcuts style and shortcuts menu

## 16.3 Call Settings

Select **Menu > Settings > Call settings**. There lists several options for call settings include: **Caller ID, Call waiting, Call divert, Call barring, and Line switching**.

**Caller ID:** To send caller ID, hide ID, or set by network

**Call waiting:** To set functions like activate/deactivate and query status. During call holding and making multi-party calls, this function should be activated first, and network support is required for the specific implementation of the function. Press the up or down key to select option, and then press  or  (OK) to set.

**Call divert:** It is a network function that can only be activated when you apply for this service with the network operator. The function can divert calls that satisfy the conditions to the other caller's phone number you have designated. Press the up or down key to select option, and then press  or  (OK) to set.

**Call barring:** When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring. Press the up or down key to select option, and then press  or  (OK) to set.

**Line switching:** To shift between line1 and line2.



You can set more parameters in **Advanced settings**. Select **Menu > Settings > Call settings > Advanced settings**. There lists several options for advanced settings include **Backlist**, **Auto redial**, **IP Call**, **Call time reminder**, etc.

#### 16.4 Network Settings

To set network parameters such as network selection, preferences, and GPRS connection.

#### 16.5 Security Settings

Select **Menu > Settings > Security settings**. There lists SIM security, Phone security, and Auto keypad lock.

- **SIM security:** to set PIN lock, change PIN or Change PIN2. PIN2 is the personal identification number used for special functions such as charging function provided by the network.
- **Phone security:** to set phone lock and change password
- **Auto keypad lock:** to set time duration for locking keypad automatically

#### 16.6 Connectivity

##### Bluetooth

By using the Bluetooth function, you can synchronize data between a PC and your phone, exchange data with other Bluetooth devices, and connect a Bluetooth headset to your phone.



You can turn on the Bluetooth function by configuring Bluetooth settings.

In the menu, you can select **Power**, **Visibility**, **My device**, **Search audio device**, **My name**, and **Advanced**.

**Power:** to turn on/off this function

**Visibility:** to set the visibility on or off

**My device:** to check paired device list or add new device



**Search audio device:** to search audio device

**My name:** to rename the Bluetooth name

**Advanced:** to confirm advanced parameters



##### Connecting a Bluetooth Headset to Your Phone

- Select **Menu > Settings > Connectivity > Bluetooth > Power** to turn on the Bluetooth function.
- Select **Search audio device** to search for available Bluetooth headsets.

- Scroll to the desired Bluetooth headset, and then press  or  (**Pair**).
- Enter the password for pairing the Bluetooth headset with your phone.

When the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.

#### Transferring Data

- Select **Menu > Settings > Connectivity > Bluetooth > Power** to turn on the Bluetooth function.
- Select **My Device > Search new device** to search for available Bluetooth devices.
- Scroll to the desired Bluetooth device, and then press  or  (**Pair**).  
When the Bluetooth device is connected to your phone for the first time, you need to enter the password for pairing the device with your phone.
- Exchange data between your phone and the Bluetooth device.

#### Data Account



You can access Wireless Application Protocol (WAP) sites and use WAP-based services on your phone. To access WAP sites on your phone, you need to subscribe to the corresponding service from your service provider and set the relevant parameters on your phone.


For details about the service and the charges, contact your service provider.

##### 1 Network Account

To access WAP sites on your phone, you need to set your data account and WAP parameters first.

#### Setting the Connection Profile


- Select **Menu > Settings > Connectivity > Data account**.
- Press  (**Options**), and then select **Add PS account**.
- Set the parameters based on the information provided by your service provider.
- Press  (**OK**) to save the settings.

 If the data account provided by your service provider already exists, you do not need to create a data account.

## 16.7 Internet Service

This function allows you to acquire or visit diversified services on the Internet through message or network. Please contact your network operator for more information. Select **Menu > Settings > Internet service** to enter:

**Homepage:** start a connection to the default URL.

**Bookmarks:** to check bookmark list or press  (**Options**) to add new bookmark.

**Input address:** input URL address and link to it

**Recent pages:** to check browsed pages

**Settings:** select to set homepage, data account, browser options, and preferences.

## 16.8 Restore Factory Settings

To restore all settings to default. The default password is 0000.

## Warranty.....

Your phone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months <sup>(1)</sup> from the date of purchase as shown on your original invoice.

Batteries <sup>(2)</sup> and accessories sold with your phone are also warranted against any effect, which may occur during the first six (6) months <sup>(1)</sup> from the date of purchase as shown on your original invoice of purchase.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase. If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

(1) The warranty period may vary depending on your country.

(2) The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use

and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1 Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2 Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3 Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4 Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...


Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.


## **Troubleshooting .....**

Before contacting the aftersales department, you are advised to follow the instructions below:


- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

**My mobile phone will not switch on**

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

**My phone has not responded for several minutes**

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

**My screen is difficult to read**

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

**My mobile phone turns off by itself**

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

**My mobile phone will not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible


**My mobile phone will not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually
- Try connecting at a later time if the network is overloaded

**SIM card error**

- Make sure the SIM card has been correctly inserted
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

**Unable to make outgoing calls**

- Make sure you have dialed a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls

**Unable to receive incoming calls**

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls
- Make sure that you have not barred certain calls

**The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

**The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the optical finger navigation key
- Check the radio reception icon level

**I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

**When I select a number from my directory, the number is not dialed**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

**I am unable to add a contact in my directory**

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

**My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

**I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in **"My numbers"**
  - Try later if the network is busy
- I am unable to send and receive MMS**
- Check your phone memory available as it might be full
  - Contact your network operator to check service availability and check MMS parameters
  - Verify the server centre number or your MMS profile with your operator
  - The server centre may be swamped; try again later
- "No service" is displayed**
- You are outside of the network coverage area
- I have already entered 3 incorrect PIN codes**
- Contact your network operator to obtain the PUK code (Personal Unlocking Key)
- I am unable to download new files**
- Check for free space
  - Delete some files
  - Select the MicroSD Card to store the files you downloaded
  - Check your subscription status with your operator
- The phone can't be detected by others via Bluetooth**
- Make sure that Bluetooth is turned on and your mobile phone is visible to other users
- My mobile phone is dead, can't power on**
- Make sure your battery is not completely used up or damaged.
  - Remove your battery, **remove your SIM** card then power it on again.
- How to make your battery last longer**
- Make sure you followed the complete charge time (minimum 3 hours)
  - After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
  - Switch on the backlight upon request
  - Update news, weather info. upon demand manually or set its auto-check interval longer
  - Deactivate Bluetooth when not in use

**FCC Regulations:**

● This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

● This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



#### ▶ RF Exposure Information (SAR)

This mobile phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.971 W/kg and when worn on the body, as described in this user guide, is 0.619 W/kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: RAD282.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory

and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

ALCATEL is a trademark of Alcatel-Lucent  
and used under license by  
TCT Mobile Limited.

All rights reserved © Copyright 2012  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.