



Some services and apps may not be available in all countries. Please ask instore for details.

Facebook is a trademark of Facebook, Inc.
Google, Android, YouTube and other marks are trademarks of Google, Inc.

© Vodafone Group 2013. Vodafone and the Vodafone logos are trade marks of Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.

English - CJB26P001AAA



 
 
 
Quick start guide
Vodafone Smart III

vodafone

For more information about how to use the phone, please go to www.vodafone.com/smart3 to download full user manual. At this website you can also view the FAQs, check for software updates, and more.

1 Your mobile

1.1 Keys and connectors

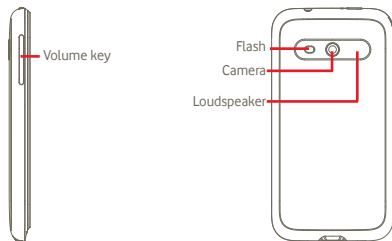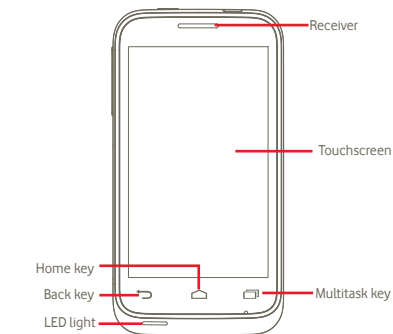

Back key

- Go back to the previous menu or screen.



Multitask key

- On the Home screen, press quickly to show all running tasks.
- Quick menu: pressing and holding the Multitask key can bring up a quick menu for settings and managing apps. To enable this, go to **Settings > Display > Menu appearance** and select



Home key

- Return to the Home screen or back to the central Home screen if it is extended.
- Press and hold the Home key to access "Google Now" and "Voice Search".



Power key

- Press: Lock the screen
Light up the screen
- Press and hold: When phone is off, power on the phone.
When phone is on, enter Phone options:
Power off, Restart, Airplane mode.

Volume key

- Press to adjust the Volume (in call/media playing mode)
- Press to adjust the ring tone volume in general mode.

 
1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



If you have Vodafone 975, you can insert one of the supplied graphic sheet under the translucent cover before closing it. You can also use the template provided to make your own graphics.




Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone and remove the battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

 Installing or removing the battery




- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the microSD card




To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, fold down the microSD holder and slide it in the opposite direction to lock it.

 Charging the battery

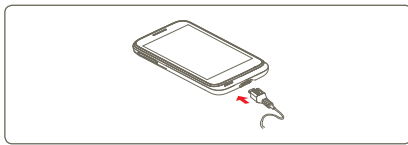

Connect the battery charger to your phone and outlet respectively.

 To reduce energy wastage, disconnect your charger from the plug when the battery is fully charged.

To reduce your phone's power consumption switch off Wi-Fi, GPS, Bluetooth or applications running in the background when not needed. You can also reduce the backlight brightness, and shorten the time before the phone goes into sleep mode.

1.2.2 Power on your phone

Hold down the Power key until the phone turns on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you are asked to touch "Location consent" to begin. And then do below settings: Language, Mobile data, Set up Google account and Data & time⁽¹⁾.

If you don't have a SIM card inserted you can still connect to a Wi-Fi network from the Power on screen, which will let you sign on to your Google account and use some features.

1.2.3 Power off your phone

Hold down the Power key until the phone options appear. Tap **Power off**, then tap **OK**.


1.2.4 Sleep mode


After a set time, your phone will go into a sleep mode to save power. You can also press the Power key once to send the phone to sleep mode.

To wake your phone from sleep mode, just press the Power key.

1.2.5 Lock/Unlock the screen

When you wake your phone from sleep mode you'll see a Lock screen, which prevents accidental key presses.

To unlock the screen, touch and slide the  to the right. You can also slide it in other directions to perform other actions, such as search or starting the camera.

You can change the type of lock screen so that it unlocks with a password or by drawing a pattern by pressing and holding the Multitask key  and touching **System settings > Security > Set up screen lock > PIN or Password or Slide**.

⁽¹⁾ Application availability depends on country and operator.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Press the Home key to switch to the Home screen.



The Home screen extends on either side of the screen to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen.

1.3.1 Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, an options list will then appear on screen.

Drag



Place your finger on the screen to drag an object to another location.

Slide/Swipe



Slide the screen to scroll up and down applications, images, web pages...

Flick



Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



Automatically change the screen orientation from portrait to landscape by turning the phone sideways.

1.3.2 Status bar

From the Status bar, you can view both phone status (on the right side) and notification information (on the left side).

Status icons

	GPRS connected		GPS is on
	GPRS in use		Receiving location data from GPS
	EDGE connected		Roaming
	EDGE in use		No signal
	3G connected		No SIM card installed
	3G in use		Vibrate mode
	HSPA (3G+) connected		Ringer is silenced
	HSPA (3G+) in use		Phone microphone is muted
	Connected to a Wi-Fi network		Battery is very low
	Bluetooth is on		Battery is low
	Connected to a Bluetooth device		Battery is partially drained
	Airplane mode		Battery is full
	Alarm is set		Battery is charging
	Signal strength		Headset connected
	NFC is on ⁽¹⁾		


⁽¹⁾ Vodafone 975N only.

Notification icons

	New Gmail™ message		Both USB tethering and portable hotspot are on
	New text or multimedia message		Call in progress (green)
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset (blue)
	New Google Talk™ message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding is on
	Data is synchronising		Uploading data
	Problem with sign-in or synchronisation		Downloading data
	microSD card is full		Download finished
	No microSD card installed		An open Wi-Fi network is available
	Connected to VPN		Phone is connected via USB cable
	Disconnected from VPN		Radio is on
	Song is playing		System update available
	USB tethering is on		Portable Wi-Fi hotspot is on

Notification panel

 Touch and drag down the Status bar to open the Notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

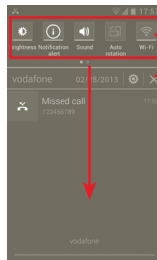


Widget bar: swipe left to see more widgets. Touch an icon to change its function.

Settings


Touch to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

 The phone provides a Search bar on the main Home screen which can be used to locate information within applications, the phone or the web.



 - a Touch or press the keypads to search by text
- b Touch to search by voice
- c Touch to enter the suggested text for quick search
- d Touch to search the web

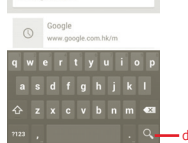



1.3.4 Personalize your home screen

Add

You can add shortcuts, widgets or folders to the Home screen by pressing the key. Touch and hold the item you want to add and then release it. You will see it in current home screen.

Reposition

Touch and hold the item to be repositioned to activate the Move mode: drag the item to desired position, then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

Remove

Touch and hold the item to be removed to activate the Move mode: drag the item to the top of which will then turn red, and release.

Wallpaper customization

Touch and hold an empty area on the Home screen or press and hold the Multitask key in the Home screen, then select **System settings/Display/Wallpaper** to customize wallpaper.

 
1.3.5 Application tab

Touch from the Home screen to enter the applications list.

To return to the Home screen, press the Home key.

View Default/Most used/Recently installed applications

To view your Default/Most used/Recently installed applications, press the option icon at the top of the applications list and choose your option.

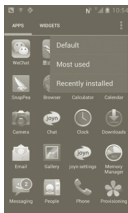

1.3.6 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference using the **Volume up/down** key, or in the **Settings** menu.

1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch the Application tab from the Home screen. To return to the Home screen, press the Home key.

2 Text input

2.1 Using the onscreen keyboard

An onscreen keyboard will display automatically when a program requires you to enter text or numbers.

Onscreen keyboard settings

Press and hold the Multitask key in the Home screen, then select **System settings > Language & input > Google voice typing** (or **Android keyboard**) to see the various keyboard settings. Scroll to select the keyboard style you want to change keyboard style.

 
Adjust the onscreen keyboard orientation

Turn the phone sideways or upright to adjust the onscreen keyboard orientation. You can also adjust it by settings (press the Application tab key in the Home screen, then **Settings > Display**).





2.1.1 Android keyboard

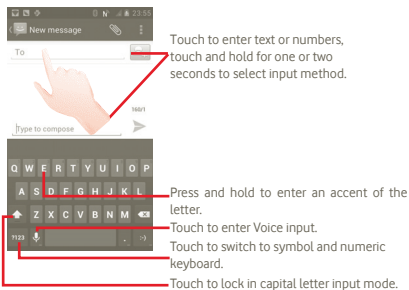

2.2 Text editing

You can edit the text you have entered.

- Touch and hold text you have entered.
For large group words, you may touch and hold the beginning word and move the end points to the place which you want.
- An options list pops up.
- Select the operation you need (**Paste**, **Replace**, **Cut**, etc.)

 
3 Phone call



3.1 Placing a call

You can easily launch a call using **Phone**. Enter this menu using one of the following two ways:

- Touch from the Home screen.
- Touch the Application tab from the Home screen and select **Phone**.

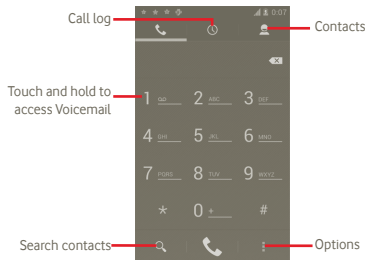

Enter the desired number from the keyboard directly or select a contact from **Contacts**, **Call log** by touching tabs, then touch to place the call. The number you entered can be saved to **Contacts** by pressing the key and touching **Add to Contacts**.

 
If you make a mistake, you can delete the incorrect digits by touching .


To hang up a call, press .





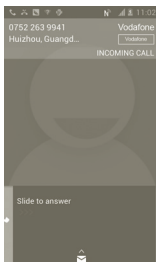


3.2 Answering or rejecting a call



When you receive an incoming call, slide the green phone icon to answer. Hang up the call by pressing the  icon.

When you receive an incoming call but don't want to answer, you can reject it by dragging  up to select messages. The caller is sent directly to your voicemail box to leave a message.

3.3 Consulting your call memory

You can access your call memory by touching the  from the Home screen and touching  to view call history in categories of **Missed calls**, **Outgoing calls**, and **Incoming calls**.

4 People




You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.



When using **People** for the first time you are asked to add new contacts, import contacts from the SIM card or synchronize contacts from other application accounts to phone.

4.1 Adding a contact

Touch the Application tab on the Home screen, select **People**. You may select Groups and Favorites to manage your contacts. Press  to add a contact.

4.2 Importing , exporting and sharing contacts

From the Contacts screen, press the  icon to open the contacts list option menu, touch **Import/Export**, then select **Import from SIM card**, **Export to SIM card**, **Import from SD card** or **Export to SD card** or **Share visible contacts**.

- To import/export a single contact from/to the SIM card, touch the contact you want to import/export, then press the Menu key and touch **OK** to confirm.
- To import/export all contacts from/to the SIM card, mark **Select all** check box, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, MMS, Email, etc.

Touch a contact you want to share, press the Menu key and touch **Share** from the contact details screen, then select the application to perform this action.



4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.


5 Messaging




You can create, edit and receive SMS and MMS messages with this mobile phone.

 
To access this feature, touch the Application tab from the Home screen, then select **Messaging**.



All messages you receive or send out can only be saved in phone memory. To view messages stored on the SIM card, press the  icon in the Messaging screen, then touch **Settings** > **Manage SIM card messages**.

5.1 Write a message

On the message list screen, touch  to write text/multimedia messages.

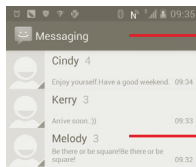

Touch to create a new message

Touch to view the whole message thread



Sending a text message

Enter the mobile number of the recipient on the **To** bar or touch  to add recipients, then touch **Type message** bar to enter the text of the message. When finished, touch  to send the text message.



An SMS of more than 160 characters will be charged as several SMS messages. Specific letters (like accents) will also increase the size of the SMS, so this may cause multiple SMS messages to be sent to your recipient.

Sending a multimedia message

SMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.


6 Email



Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts on your phone.






To access this function, touch the Application tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account.

- Enter the email address and password of the account you want to set-up.
- Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- Touch **Done**.
- To add another email account, you can touch  and press **Settings**, touch **Add account**.



To create and send emails

- Press the  icon in the Inbox screen, and touch **Compose**.
- Enter the recipient(s)'s email address in the **To** field, and if necessary, press the  key and touch **Add Cc/Bcc** to include a copy or a blind copy to the message.
- Enter the subject and content of the message.
- Press the  icon, touch **Attach file** to send an attachment to the receiver.
- Finally, touch  to send.
- If you do not want to send the mail right away, you can touch  and **Save as draft** or press the Back key to save a copy.

7 NFC Task Launcher ⁽¹⁾

Near Field Communication (NFC) is a new, short-range wireless connectivity technology which allows mobile users to read and write NFC tags, pair with other NFC devices, and even make fast and secure mobile payments. With NFC activated, you can use this application to open, act on and organize the tags you've scanned.

To access this function, touch the Application tab from Home screen, then select **NFC Task Launcher**.

8 Getting connected

To connect to the Internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

8.1 Connecting to the Internet

8.1.1 GPRS/EDGE/3G

The first time you turn on your phone with the SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G.


To check the network connection you are using, press the Menu key in the Home screen, then touch **Settings > More > Mobile networks > Network operators** or **Access Point Names**.

⁽¹⁾ Vodafone 975N

8.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Press and hold the Multitask key  in the Home screen.
- Touch **System settings**.
- Touch the On/Off toggle next to the Wi-Fi icon to turn Wi-Fi on or off.
- Touch **Wi-Fi**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

8.2 Browser

Using Browser, you can enjoy surfing the Web.

To open the web browser, tap  on the Home screen.

To go to a web page

In the Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

8.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's microSD card and the computer.

To connect/disconnect your phone to/from the computer

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.
- Touch **Mount** in the dialog that opens to confirm that you want to transfer files.





To disconnect:

- a Unmount the microSD card on your computer.
- b Open the Notifications panel and touch **Turn off USB storage**.
- c Touch **Turn off** in the dialog that opens.

To locate data you have transferred or downloaded in your microSD card:


- a Touch the Application tab in the Home screen to open the applications list.
- b Touch **File Manager**.

All data you have downloaded are stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install applications onto your phone, etc.

8.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot

- a Press and hold the Multitask key  in the Home screen.
- b Touch **System settings** > **More** > **Tethering & portable hotspot**.
- c Mark the check box **USB tethering** or **Portable Wi-Fi hotspot** to activate this function.



 
Sharing data may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

9 Find my location

To activate your phone's global positioning system (GPS) satellite Receiver:

- a Press the Menu key in the Home screen.
- b Touch **Settings** > **Location services** > **GPS satellites**.
- c Mark the checkbox.

To find your location, go to the application list and touch Maps.

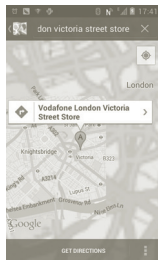

Your phone uses GPS and mobile cell-tower data to provide a quick and accurate location - sometimes as close as several metres. The process of accessing the GPS satellite and setting your phone's precise location for the first time can require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.





10 Data backup

This phone enables you to back up your phone's settings and other application data to Google Servers, with your Google Account.

If you replace your phone, the settings and data you've backed up are restored onto the new phone the first time you sign in with your Google Account.

To activate this function:


- Press the Menu key in the Home screen
- Touch **Settings > Personal > Backup & reset > Back up my data**
- Mark the checkbox

When data backup is activated, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.



11 Factory data reset

To activate factory data reset:

- Press and hold the Multitask key  in the Home screen.
- Touch **System settings > Backup & reset > Factory data reset**
- Mark the checkbox

A phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Hold down the the Volume up key and press the Power key at same time until the screen lights up.

12 Applications

Your phone comes with some built-in Google™ applications, and more third-party applications can be downloaded onto it.

With the built-in applications, you can

- Communicate with friends
- Exchange messages or emails with friends
- Track you location, view traffic situations, search for locations and get navigation information to your destination
- Download more applications from Android Market and more.

For more information about these applications, please check the user manual online: www.vodafone.com/smart3.

13 Making the most of your phone

13.1 Android Manager

You can download the Android Manager PC suite software for free from the website www.vodafone.com/smart3

The PC suite includes:

- **Contacts**
It allows you to back up contact entries so that you don't have to worry about losing, breaking, or changing your phone.
- **Messages**
It allows you to write messages from your computer instead of using the phone's onscreen keyboard. It also manages your messages.
- **Photos**
It allows you to easily import photos from either your PC or your phone, and organize them in different albums.





• Videos

It allows you to playback video files from your PC and upload them to a folder on your phone.

• Music

It allows you to quickly find your favorites on your PC, manage your library, and set up playlists for your phone's music player.

• Application

It allows you to import downloaded mobile applications and have them installed onto your phone upon synchronization.

• File

It allows you to organize your phone's files with just a few clicks, so they will appear on your phone where you want them.

• Sync


 
It allows you to synchronize the Contacts and Calendar in Outlook/Outlook Express and handset.

Supported Operating Systems

Windows XP/Vista/Windows 7.

13.2 FOTA Upgrade

Using FOTA Upgrade tool you can update your phone's software.

To access **Software updates**, please open notification panel and touch  icon, then press **About phone/Software updates**. Or you touch  icon and access **Settings/About phone/Software updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch the button **Download**, after it done please touch **Install** to complete the upgrade. Now your phone's software will have the latest version.

You should turn on data connection before searching for updates.

Settings for auto-check intervals and reminders about upgrades are also available once you restart the phone.

If you have chosen auto-check, when the system discovers the new version, the icon  will appear in the status bar. Touch the notification to access the **Software Updates** directly.



During FOTA downloading or updating, to avoid errors in locating the correct update packages, do not change your default storage location.

Safety and use

We recommend that you read this chapter carefully before using your mobile phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile phone when the vehicle is not parked. Check the laws and regulations on the use of wireless mobile phones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your mobile phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your mobile phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your mobile phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from mobile phone RF energy.

• CONDITIONS OF USE:

You are advised to switch off the mobile phone from time to time to optimize its performance.

Remember to abide by local authority rules of mobile phone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the mobile phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile phones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the mobile phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the mobile phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the mobile phone you should hold it against the ear on the opposite side to the device, if any.





Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your mobile phone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

It is recommended to have proper supervision while small children use your mobile phone.

When replacing the cover please note that your mobile phone may contain substances that could create an allergic reaction.

Always handle your mobile phone with care and keep it in a clean and dust-free place.

Do not allow your mobile phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the mobile phone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your mobile phone yourself.

Do not drop, throw or try to bend your mobile phone.

Do not use the mobile phone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not print it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your mobile phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your mobile phone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your mobile phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your mobile phone or enabling a flashing-lights feature on your mobile phone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the mobile phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your mobile phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body.

Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile phone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY AND ACCESSORIES:

Before removing the battery from your mobile phone, please make sure that the mobile phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your mobile phone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www.recyclewirelessphones.com

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F).

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 150 mA

Output: 5.0 V, 550 mA

Battery: Lithium 1500 mAh

• RADIO WAVES:

THIS MOBILE PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the mobile phone while operating can be well below the maximum value. This is because the mobile phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the mobile phone.

Before a mobile phone model is available for sale to the public, compliance with national regulations and standards must be shown. The highest SAR value for this model mobile phone when tested is 0.70 W/kg for use at the ear and 1.02 W/kg for use close to the body. While there may be differences between the SAR levels of various mobile phones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the mobile phone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 10 mm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body. (fact sheet n°193). Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>. Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.





Your mobile phone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the mobile phone at least 10 mm away from the body.

Licences



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Vodafone 975/975N Bluetooth QD ID BXXX



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Your device uses non-harmonized frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

You have purchased a product which uses the open source (<http://opensource.org/>) programs mtd, msdosfs, netfilter/iptables and inritd in object code and other open source programs licensed under the GNU General Public License and Apache License.

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product by TCT.

You may download the source codes from <http://sourceforge.net/projects/alcatel/files/>. The provision of the source code is free of charge from internet.



General information

- **Website:** www.alcatelonetouch.com
- **Facebook:** <http://www.facebook.com/alcatelonetouchusa>
- **Twitter:** <http://www.twitter.com/alcatel1touch>
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelonetouch.com
Your telephone is a transceiver that operates on GSM in quad-band (850/900/1800/1900MHz) or UMTS in dual-band (900/2100MHz).

Protection against theft⁽¹⁾

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your mobile phone by entering *#06# and keep it in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the mobile phone's operation, depending on the software release of your mobile phone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

⁽¹⁾ Contact your network operator to check service availability.

ALCATEL ONE TOUCH Limited Warranty

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your mobile phone is used;
- Connection to any equipment not supplied or not recommended by TCT Mobile;
- Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates;
- Acts of god such as inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;
- Removal or altering of the wireless devices event labels or serial numbers (IMEI);
- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
- Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.



There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

How to obtain Support: Contact the customer care center by calling (877-702-3444) or going to www.alcatelonetouch.com. We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of warranty repair options.

To obtain hardware repairs or replacement within the terms of this warranty, contact TCT Mobile to get an RMA number, include a copy of the original proof of warranty coverage (e.g. original copy of the dated bill of sale, invoice), the consumer's return address, your wireless carrier's name, alternate daytime mobile phone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center.

TCT Mobile is not responsible for wireless devices that do not arrive at the service center. Upon receipt, the service center will verify the warranty conditions, repair, and return your wireless device to the address provided.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

