
CONTENTS

Important Safety Information.....	2
1. Introduction.....	6
Icons On screen.....	6
2. Menu&Keypad Overview.....	7
3. Getting Started.....	7
4. Basic Operation.....	8
4.1 Menu Operate.....	8
4.2 Make a Call.....	8
4.3 Note In Call.....	8
4.4 Loud Speaker.....	8
4.5 Receiving Calls.....	8
4.6 Call Waiting.....	8
4.7 Speed Dial.....	8
4.8 Lock the keypad.....	9
5. Main Menu.....	9
5.1 Message.....	9
5.1.1 New Message.....	9
5.1.2 Inbox.....	9
5.1.3 Outbox.....	9
5.1.4 Voice Mail.....	9
5.1.5 Drafts.....	10
5.1.6 Templates.....	10
5.1.7 Recipient Groups.....	10
5.1.8 Delete Message.....	10
5.1.9 Message Settings.....	10
5.1.10 Memory Info.....	10
5.2 Contacts.....	10
5.2.1 Add New.....	10
5.2.2 Search.....	10
5.2.3 Groups.....	11
5.2.4 Speed Dial.....	11
5.2.5 Delete.....	11
5.2.6 My Number.....	11
5.2.7 Memory Info.....	11
5.3 Call Manager.....	11
5.3.1 Dialed.....	11
5.3.2 Received.....	11
5.3.3 Missed.....	11
5.3.4 Note In Call.....	11

5.3.5	Call Duration	11
5.3.6	Delete History	11
5.3.7	Call Settings	11
5.4	UC Browser	12
5.5	Camera	12
5.6	Music	12
5.7	Images	13
5.8	FM Radio	13
5.9	Recorder	13
5.10	U Disk	13
5.11	My Files	13
5.12	Game	14
5.13	Services	14
5.14	Alarm	14
5.15	Calculator	14
5.16	Scheduler	14
5.17	Note	14
5.18	Bluetooth	14
5.18.1	Bluetooth on/off	14
5.18.2	Paired devices	14
5.18.3	My device info	14
5.19	Converter	15
5.20	World Clock	15
5.21	Stopwatch	15
5.22	Profiles	15
5.22.1	General	15
5.22.2	Silent	15
5.22.3	Vibrator	15
5.22.4	Flight	15
5.23	Settings	15
5.23.1	Display	15
5.23.2	Phone Settings	16
5.23.2	Security	16

Important Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

◆ Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Do not expose the battery charger to direct sunlight or use it in areas of high humidity, such as the bathroom.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.

◆ Battery Information and Care

- Use only manufacturer-approved battery and chargers specific to your phone model since they are designed to maximize battery life.
- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- The battery does not need to be fully discharged before recharging.
- When charging, please do not remove the battery.
- Unplug the charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal's teeth, nails, come into contact with the battery. There is a risk of causing a fire
- Do not disassemble or short-circuit the battery.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Do not leave the battery in hot or cold places as it may deteriorate battery performance.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Mini-Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery will cut the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of causing a fire.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact a manufacturer Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, remove the battery immediately. If the phone does not work, take it to a manufacturer Authorized Service Center.
- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- The power cord on this product will expose you to lead, a chemical known to the State of California to cause (cancer) birth defects or other reproductive harm. Wash hands after handling
- Do not disassemble the phone.
- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text message, voice message, pictures, and videos could also be deleted.) The Manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it nearby your ear.
- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- Do not use a hand-held phone while driving.
- Be careful that children do not swallow any parts such as battery or rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- Never store your phone in temperatures less than -15°C or greater than 50°C.
- The Maximum SAR Value is 1.414W/kg.

Warning statement

a. Missing Body worn accessory statement. Indicate that Body SAR was tested at 1.5cm without any accessory. When using any body worn accessory, please help to make sure it as least 1.5cm clearance between phone and human body. The body worn accessory should not contain any metal.

b. 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the

following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Transmitting at its highest certified power level in all Your mobile phone is a radio transmitter and receiver. It is at the highest certified power level, the well below the maximum value. This is power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **RAD438**.

c. 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

1. Introduction



 










Congratulations on your purchase of the advanced and compact cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with many advanced features of the CDMA system such as greatly enhanced voice clarity this phone offers:

- Message, Voice mail, and Caller ID.
- MP3
- Voice record
- FM Radio
- Camera
- Bluetooth
- browser
- Optional accessories with greater convenience and enhanced functionality.
- English/Spanish language support.

Icons On screen

The LCD shows icons on the top of the LCD screen.

Different icons appear based on the phone's operating mode.

Icon	Description	Icon	Description
	Network signal strength.		Profile - outdoor.
	CDMA 1X signal		Profile - general.
	Make a call.		Profile - silent.
	New text message.		Profile - vibrate.
	Alarm clock turn on.		Profile - headset.
	Battery power level.		Keypad lock
			U disk connected.

2. Menu&Keypad Overview



3. Getting Started

Charging the Battery

Use the charger provided with your phone.

Warning! Use only the charger provided with the phone or authorized by manufacturer.

Use any chargers other than above mentioned may damage your phone or battery.

- Plug the end of the adapter into the phone's charger port. The battery power level will move after the correct connection.
- When the battery power level becomes static, the battery is fully charged. Disconnect the adapter from the phone.
- The charge time varies depending upon the battery level.

Install UIM card

- Power off the handset, then remove the cover of the phone and the battery.
- Insert the UIM card into the card slot.
- Install the battery and the cover of the phone.

Install T-Flash card

- Power off the handset, then remove the cover of the phone and the battery.
- Insert the T-Flash card into the card slot.
- Install the battery and the cover of the phone.

4. Basic Operation

4.1 Menu Operate

- 1) In standby screen, press [**Left Soft**] key to enter the Main Menu screen.
- 2) Using [**Navigation**] keys to choose the menu item, and press [**Left Soft**] key or [**OK**] key to enter the item.

You could press the corresponding number keys according to the Menus Overview to select the item directly.

- 3) Press [**Right Soft**] key to return to the previous menu item or quit the Main Menu.
- 4) Press **END/PWR** key to return to the standby screen directly.

4.2 Make a Call

- 1) Type the phone number or select one contact in the phone book, then press **Call** key.

- 2) To end the call, press **END/PWR** key.

Note: 1. In standby screen, press **Call** key to view the recent calls.

2. Type the speed dial number, press **Call** key to call the assigned contact.

3. In addition, you can make a call to message sender by pressing **Call** key during a message check.

4.3 Note In Call

This function is a convenient feature which you can note during a call.

When you need, press [**Left**] key in the call could switch to use the call memo.

When you have saved call memo, you can find it in menu **<Call Logs>- <Note In Call>**, then you can view, edit message, save, erase.

4.4 Loud Speaker

This function is a convenient feature which enables you to use loud speaker

When you need, press [**OK**] key in the call could switch to using loud speaker.

4.5 Receiving Calls

- 1)When the phone rings or vibrates (if the Vibrate Mode is enabled), press **Call** key to answer.

- Or press [**Left Soft**] key, mute ringing or vibrating.
- Or pressing [**Right Soft**] key to cancel the coming call directly.

- 2)To end an answered call, press **END/PWR** key.

4.6 Call Waiting

While a call is in progress, you may hear two beeps indicating another incoming call. When call waiting is enabled, you can put the active call on hold while you answer the other incoming call.

This service should be provided by your service provider.

- 1) Press **Call** key to receive a waiting call during the first call.

- 2) Press **Call** key again to switch between two calls.

4.7 Speed Dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

Enter Menu **< Contacts >- < Speed Dial >**.

Select an unused Speed Dial number, then press [**OK**] or select **< Options > - < Assign >**, assign the number you want.

Memory locations 1 to 99 should be used for your most frequently used phone

numbers.

Note: You can only select the speed dial contact from the phone contacts.

4.8 Lock the keypad

Press [**Left Soft**] key then press "*" to unlock the keypad.

Note: When keypad is locked, you can still answer an incoming call.

5. Main Menu

5.1 Message

Text message and voice mailbox become available in the handset.

5.1.1 New Message

Allow you to send a text message. If there is any interruption by a call while composing a message, message automatically will get saved in the Drafts.

- 1). Select < **Menu** > - < **Message** > - < **New Message** >.
- 2). Type your message then press [**OK**].
- 3). Entering the phone number where the message is to be sent.

You can add up to 10 recipients.

Select < **Options** >:

- **Symbol:** Choose the symbols, which have full-width and half-width symbols symbols, symbolic expression.
- **Entry mode:** Choose the input pattern, which has , T9En , AbC, ABC, 123 modes.
- **Send:** Use to send the message.
- **Save:** Save the message to the draft box.
- **Insert template:** Insert the mobile phone system in the message template.
- **Insert number:** Insert the contact number.
- **Priority:** Set message low or high.
- **Save Sent Msg:** Set save sent Msg on or off.

5.1.2 Inbox

Received text message and page message may be searched, and the contents may be viewed. Received message are sorted in an order of urgent unread message, unread message and read message.

- 1). Select < **Menu** > - < **Message** > - < **Inbox** >.
- 2). After selecting the desired message with [**Up**]/[**Down**], press [**OK**] to view the message.

Select < **Options** >:

- **Reply:** Reply to this message.
- **Forward:** Forward a received message to others.
- **Call:** Make a call to sender.
- **Edit Before Call:** Edit the phone number before you make a call.
- **To Inbox:** Move or copy the selected message from the UIM card to the Inbox.
- **To UIM Card:** Move or copy the selected message from the Inbox to the UIM card.
- **Save Address:** Save the number of Message's Sender to Contacts.
- **Extract URL:** It can extract the text content of the web site.
- **Delete:** Delete the selected message.

5.1.3 Outbox

Sent and unsent text message can be saved, and the contents may be viewed.

5.1.4 Voice Mail

Voice mail notification indicates the quantity of new voice mail message in your mailbox. Only the recent voice mail notification will be stored in your phone, previous

message will be overwritten.

Note: Check with service provider for availability of this feature.

5.1.5 Drafts

Message failed in transmission may be stored here.

After selecting the desired message with [**Up**]/[**Down**]; press [**OK**] to view the message and enter to the process for Send Message.

5.1.6 Templates

There are 9 predefined phrases in the Templates. You may edit the templates and add new templates.

5.1.7 Recipient Groups

Allow you to change Group Name. You may send a message by Group. Select your desired Group using [**Up**]/[**Down**].

5.1.8 Delete Message

You can delete all stored message from different folders and make them empty. The folders include **Phone, Outbox, UIM Card, Draft.**

5.1.9 Message Settings

You can customize your phone's message facility according to your requirement by configuring various options i.e. Priority, Delivery ACK, Validity Period, Save Sent Message, UIM Inbox Lock, Auto Scroll Timer, Auto Delete Inbox, Msg Reminder, Save Location.

Priority: When sending a message, you can select the default **Low** or **High**.

Delivery Ack: Allow you to select delivery acknowledgement with your message.

Validity Period: Allow you to select the validity time with your message.

Save Sent Message: With this feature on, message are automatically saved in the Outbox after transmitted.

UIM Inbox Lock: Lock the Archive for your privacy, if you want to enter the menu archive in UIM, you need to input lock code. Default lock code is **0000**

Auto Scroll Timer: When view the details of message, if message contents are more bigger than screen's, the content display will be scrolled with the scroll timer.

Auto Delete Inbox: With this feature on, the latest message is automatically erased in the inbox when the number of inbox message is up to the max quantity.

Signature: you can choose None or Custom.

Msg Reminder: when receive the new message and don't operate anything, the phone will remind you.

Save Location: You can save the message in Phone or UIM Card.

Callback Number: You can make the callback number enable or disable.

5.1.10 Memory Info

Allow you to view the available memory in Phone, Outbox, UIM Card and Draft.

5.2 Contacts

Keep records of your contacts, search, add, modify or delete.

5.2.1 Add New

You can store multiple contact details under a name: Group ID, Mobile Number, Office Number, Home Number, Other Number, E-mail address and Note.

Input the details, press **Select key** to save the new contact.

5.2.2 Search

To find phone numbers you have stored in the Phone.

1. Select **Menu > Contacts > Search**.

2. You can search the contact as following:

1) Press [**Up/ Down**] to scroll through your Contacts alphabetically.

2) Enter full or initial character of contact name.

3) Enter full or part number of contact phone number

3. Select the contact, press **Select key** and choose **View** to view.

5.2.3 Groups

Allow you to change Group Name. You may assign Ring Tones by Group.

Select your desired Group using [**Up**]/[**Down**], then press[**Left Soft**] key < **Options** >, you can **Add new members, Set Ring Tone** and **Rename**.

5.2.4 Speed Dial

Speed Dial allows you to make a call faster by just pressing a corresponding number.

Select an unused Speed Dial, then press [**OK**] or select < **Options** > - < **Assign** > , assign the number you want.

If you have already set up more than two shortcut dials, in < **Options** >, you can **Assign, Delete All**.

5.2.5 Delete

Allows you to find and delete contact saved in Phone or in UIM Card.

5.2.6 My Number

Allow you to view and edit your phone number.

5.2.7 Memory Info

Check the capacity of contacts you have stored in the UIM card or in the phone's memory

5.3 Call Manager

Call Manager maintain all types of call details and allow you to set Call Settings

(answer mode, call waiting, call forward etc), show call duration and allow you to delete call history.

5.3.1 Dialed

Allow you to view list of all Dialed Calls.

1. Press [**Left Soft**] key < **Options** >, **View / Message / Edit Before Call / Save / Delete / Delete All** appear on the screen.

5.3.2 Received

Allow you to view list of all Received Calls.

For details, refer to [4.16.1].

5.3.3 Missed

Allow you to view list of all Missed Calls.

For details, refer to [4.16.1].

5.3.4 Note In Call

Allows you to view of quick note (number only) which saved during the call.

While a call is in process, press [**Left**] key to save a Call note.

5.3.5 Call Duration

Allow you to view the duration of selected calls.

1. Press [**Up/Down**] to highlight the list of calls

2. Press [**Left Soft**] key < **Reset** > to clear call duration one by one.

5.3.6 Delete History

Allow you to erase call from different folders and make them empty.

1. Select the item (**Received/Missed/ Dialed**) to erase, then press[**Left Soft**] key < **Select** >.

2. Select < **Yes** >, then press [**OK**] .

5.3.7 Call Settings

Answer Mode: Allow you to determine how to answer an incoming call.

Call Forward: Allow you to configure the call forward service which diverts incoming calls to a user-specified number.

Call Waiting: Allow you to configure the call waiting service which holds incoming calls that you can answer or not.

Voice Privacy: Use an encrypted high security line so that others can not eavesdrop on your conversation, or use a standard line.

Clear Voice: You can cut down the noise around when you are making a call.

Audio Automatic Gain Control: you can choose on/off.

Call Connect Alert: With this feature on, you will hear the reminding sound when the mobile connect to the mobile station during the originating call.

Int'l Call Prefix: Set the international call access code to **Manual** or **Automatic**, then long press "0" shall serve as "+".

1. Set **Manual** / **Automatic** with [**Up**]/[**Down**], then press [**OK**].
2. Edit the access code you want in Manual Mode, then press < **Save** >.

Auto Answer: You can set this function on/off.

Reject number: You can set reject number.




5.4 UC Browser

The UC browser is used in this phone.

5.5 Camera

Take photo

Allow you to take a photo.

1. Select < **Take Photo** > to activate the camera.
2. Press [**Left**] key < **Option** >, select ( /  / ) with [**Left**]/[**Right**] key, press [**Up**] / [**Down**], to select the item, then press [**OK**] to confirm.
3. Press [**OK**] key to take a photo.



: Set the resolution of the photo for 640X480 or 320X240 pixels.



: Adjust the brightness of the image which the camera gets.



: Enter into the album.

NOTE: Only when the photos are saved in the folder named "Images" in your T-flash card, the handset could show these pictures in the **File Manager** -> **T-Flash**.

General album

You can see the photos list.

Restore Default Settings

In this function, you can set the camera to factory settings.

5.6 Music

1. Press < **Select** >, enter into **Music Box** , **Mp3 Settings**.
2. Enter into **Music Box**, select one Mp3 which stored in My Music of T-Flash card, then press [**Options**], select the (**Play/Rename/Set as ringtone/Delete/Delete All/send by BT**), then press [**OK**] to confirm .
3. When MP3 is playing, press [**Option**], you can select **Hide** to play MP3 in the background. And you can select Repeat Settings, and set MP3 as ringtone.
4. When MP3 is playing, press "*" key to turn up volume, press "#" to turn down volume. press [**left**] key to switch to the previous song, press [**right**] key to switch to the next song, press **OK** key to stop playing the song, then press **OK** key to continue to play the song, and press [**down**] key to return to the MP3 Box interface.

NOTE: The folder name in T-flash card for playing mp3 in the phone shall be "My Music". If you store mp3 in the folders with different names, you can't play them in the phone. The following way is how to add MP3 songs:

1. Power off the handset, insert the T-flash card in the mobile, lock properly.
2. Power on the handset, connect the handset with PC by USB data cable. Select **Menu > Extras > U Disk > Connect**.
3. Copy mp3 files from PC into the folder named "My Music".
4. Press [**Left Soft**] key to disconnect the phone with the PC.
5. Select **Menu > MP3 Player > Music Box**, then you can play MP3.

5.7 Images

You can view the photos ,set it as a wallpaper, Delete or Delete all,or send it by BT to other.

5.8 FM Radio

When you want to play FM Radio.

1. Access to Radio

You can enjoy radio broadcasting through this phone.

Select < **Menu** > - < **FM Radio** > on the idling screen, press [**Right Soft**] key to choose FM Radio icon then press OK key to enter FM Radio.

2. Selecting a Channel

When the radio is switched on, the default channel or the channel you listened to last time is selected. Press [**Up**] /[**Down**] to change to the next channel and press [**Left**]/[**Right**] to adjust the volume. You also can press the number key to switch to different channel.

3. Listen to the Radio

Select < **Hide** > to play radio in the background.

Select < **Options** > to select **Switch Off, Record, Edit Channel, Auto Scanning, Reset, Reset All.**

- **Switch Off:** Turn off the radio, and back to previous screen.
- **Record:** Make a record while FM Radio is playing.
- **Edit Channels:**
Edit the selected channel's name and channel frequency.
- **Auto Scanning:** Search for all available channels automatically and save the channels by pressing [**OK**].
- **Reset:** Reset the selected channel to default frequency.
- **Reset All:** Reset all channels to default frequency.

NOTE:

- 1.If you set the ring tone or adjust the volume in **Volume Setting** while the radio is on, the radio will stop playing until you finish setting.
- 2.When there is an incoming call, the radio will stop automatically until the call is over.
3. The voice records will be stored in the folder named **Records** in the T-Flash card.

5.9 Recorder

Record New: Record the voice.

Voice Records: Play the saved voice record. You also could rename and delete the voice records in the options.

In addition to the above features, it also includes stopwatch, calculator and world clock functions.

5.10 U Disk

Allow you to use the phone as a U Disk when the T-flash card is inserted in the phone. Connect the phone and a compatible PC correctively with the USB Data Cable, select < **Connect** >.

5.11 My Files

My Files including pictures, music, all folders, also, you can check the capacity of

phone memory and T-Flash card memory.

5.12 Game

This handset supports Five Chess game.

5.13 Services

You can view the download of the phone.

5.14 Alarm

You can set three alarm time by this mobile phone. After you set the alarm time, the icon will be displayed on the screen.

Snooze Function

When the alarm rings, press Snooze key to stop the alarm for 5/10/15mins, press Stop key to stop the alarm. Scheduler keeps your agenda convenient and easy to access. Simply store your appointments and your phone alerts you with a reminder at the time you set.

5.15 Calculator

This phone supports calculator.

5.16 Scheduler

How to use buttons:

[**Navigation**] **Key**: Move cursor to the left, right, up or down.

[**2**]: Move to the previous year.

[**8**]: Move to the next year.

[**4**]: Move to the previous month.

[**6**]: Move to the next month.

Allow you to input your schedule.

1. Select the date, then press [**OK**].
2. Select < **Option** > - < **Add** >.
3. Enter your schedule information including: Date, Memo, Set alarm and time.
4. Press [**OK**] to save the schedule after you finish setting.

5.17 Note

1. Select < **Add** > to write a new Memo.
2. Edit contents, then press [**OK**] to save.

5.18 Bluetooth

5.18.1 Bluetooth on/off

Turn on/off the bluetooth.

5.18.2 Paired devices

Search the device, then you can pair the device.

Note: Before you click "Add", select the device which you want to pair with in the paired device list. Enter the password to match. Random password is available when the pair is between the phones, and the default password is "0000" when the phone needs to pair with a Bluetooth Headset.

5.18.3 My device info

You can see your device information with this function.

5.19 Converter

Allow you to convert between the different units.

5.20 World Clock

This phone supports world clock.

5.21 Stopwatch

This phone supports stopwatch.

5.22 Profiles

Customize the phone's profiles.

5.22.1 General

Set the phone profile mode to general mode.

Select the < **General** >, then select < **Edit** > to set the details in General mode.

1) Ring Alert

Allow you to select the alert type for an incoming call.

•Ring Type

Choose the ring type to remind you when there is a new incoming call.

•Ring Tone

Select a tone between Default and Downloaded ring tones. When there is a new incoming call, the selected tone is played.

2) Message Alert

Allow you to select the alert type for a new incoming message

•Message Type

Choose the alert type of reminding when receiving a new message.

•Message Tones

Select a message tone, when receiving a new message, the selected tone is played.

3) Volume Setting

Choose a Volume sub-menu and press [**Left**]/[**Right**] to adjust the volume of different modes, then press [**OK**] to confirm.

4) Service Alert

Allow you to set the system service alert **On** or **Off**.

5.22.2 Silent

Allow you to set the phone profile mode to silent mode.

5.22.3 Vibrator

Allow you to set the phone profile mode to vibration mode.

5.22.4 Flight

Set the phone to Flight mode **On** or **Off**. On Flight mode, users can not make calls or send message, and the phone disconnects with mobile station.

5.23 Settings

5.23.1 Display

Wallpaper: Allow you to choose different kinds of background to be displayed on the screen.

Time

Allow you to choose the mode of clock to be displayed on the standby screen.

Brightness

Allow you to view the time as **12 Hours** Style or **24 Hours** Style **LCD Brightness**

You can choose different brightness of LCD display.

LCD Backlight

Screen and buttons are lighted for a designated length of time, allow you to use your mobile phone in the dark with convenience.

5.23.2 Phone Settings

Language

You can select the phone language between English and Spanish.

Key Lock

Enable this function, and the keypad will be locked automatically when the standbyscreen turns off.

Version info

You can view the name of the mobile phone, the S/W, PRL and H/W version.

5.23.2 Security

You must key in Lock Code to enter the **Security** Setting. The default Lock Code is 0000.

Phone Lock:Keep your phone from unauthorized use. Select Lock Mode, the options are **(Off/Now/On Power Up)**.

1. Select **Now**, the phone will be locked immediately. You need to key in the correct Lock Code to activate the phone.

2. Select **On Power Up**, the phone will be locked after powered on, and you need to key in the correct Lock Code to activate the phone.

Note: The continuous wrong inputs of the Lock Code wouldn't lock the UIM card. When the handset is locked, input "0000" to unlock the phone.

Change Phone Code: Allow you to change to a new four-digit lock code number. For confirmation, your phone will prompt you to enter the new lock code twice.

Reset Factory Settings

Reset all settings to the default options.

Reset all items in the phone. (Delete all contacts, all messages, internal gallery photos and other records in the phone)

Warning: Please confirm the important contacts, messages, photos and other records in the phone are backedup before you reset factory settings.