

ALCATEL
onetouch.
Pop
CS

5036F

Quick Start Guide

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual. Also on our website you can find helpful FAQs, software upgrades, etc.



www.sar-tick.com

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found in the RADIOWAVES section of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

 
 


 
English - CJB27E6ALAAA

ALCATEL
onetouch.

Your mobile

1.1 Keys and connectors

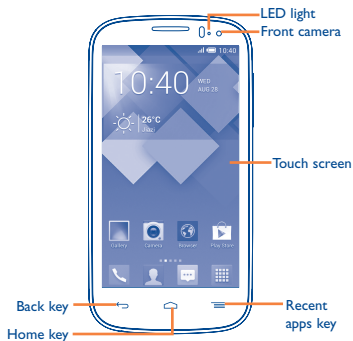

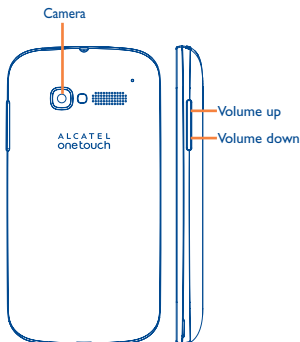

Recent apps key

- Touch: As **Menu** key, touch to access **Wallpaper**, **Manage applications** and **Settings**.
- Touch and hold: Open a list of thumbnail images of apps you've worked with recently. Touch it to open an app. Swipe it upwards or downwards to remove a thumbnail from the list.

Home key

- While on any application or screen, touch to return to the Home screen.

Back key

- Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.

Power key

- Press: Turns the screen on/ off.
- Press and hold: Displays the pop-up menu to select from Power off/Restart/Airplane mode/Quick start. Press and hold: Powers on the device when in the off state.
- Press to mute the ringtone when there's an incoming call.
- Press and hold for more than 7 seconds to restart the phone if the system halted.
- Press and hold **Power** key and **Volume down** key to capture a screenshot.
- Press and hold **Power** key and **Volume up** key under power off mode to restore factory set.

Volume keys

- Under call mode, adjust the earpiece or headset volume.
- In Music/Video/Streaming mode, adjust the media volume.
- In general mode, adjust the ringtone volume.
- Mute the ringtone of an incoming call.
- In Camera mode, using it as the capture key allows you to take a photo.

1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone before inserting or removing the SIM card.



 
Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.



Your phone only support mini-SIM card. Do not attempt to insert other SIM type like micro and nano card, otherwise it may cause phone damage.

Installing or removing the battery

Please power off your phone before removing the battery.




- Insert and click the battery into place, then close the cover.
- Unclip the cover, then remove the battery.

Installing the microSD card



To install, please insert the external microSD card into the slot with the gold contact facing down. To remove the external microSD card, gently press and slide it out.

 Charging the battery

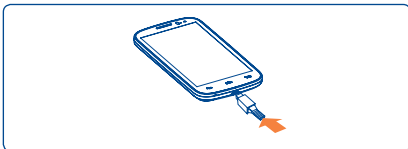

Connect the battery charger to your phone and outlet respectively.



The charging status bar will not display if your battery is completely consumed. To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.



1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you should set the following options: language, input method, date & time, Google account, etc.

If you power on your phone with no SIM card inserted, you can connect to a Wi-Fi network to sign into your Google account and to use some features.

1.2.3 Power off your phone

Hold down the **Power** key from the Home screen until the Phone options appear, select **Power off**.

1.3 Home screen

You can bring all of your favorite items (applications, shortcuts, folders and widgets) that you use most frequently to your Home screen for quick access. Touch the **Home** key to switch to Home screen.



Status bar

- Status/Notification indicators.
- Touch and drag down to open the notification panel.

Add a location to display local weather.

Favorite tray applications

- Touch to enter the application.
- Touch and hold to move or change applications.

Application tab

- Touch to open main menu.

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. The white short line at the lower part of the screen indicates which screen you are viewing.

1.3.1 Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



Touch and hold the home screen to access the available options for setting the wallpaper.

Drag



Place your finger on any item to drag it to another location.

Slide/Swipe



Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick



Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate



Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better view.

1.3.2 Status bar

From status bar, you can view both phone status (to the right side) and notification information (to the left side).

