

User Manual

A845L



ALCATEL
onetouch.

smart move.

For more information about how to use the cellphone, please go to www.alcatelonetouch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade, etc.

Table of contents

1	Your mobile	3
1.1	Keys and connectors.....	3
1.2	Getting started.....	4
1.3	Home screen.....	6
2	Text input	11
2.1	Using Onscreen Keyboard.....	11
2.2	Text editing.....	12
3	Phone call, Call log and Contacts	12
3.1	Phone.....	12
3.2	Call log.....	15
3.3	Contacts.....	15
4	Messaging, Gmail/Email, Google Hangouts	19
4.1	Messaging.....	19
4.2	Gmail/Email.....	22
4.3	Google Hangouts.....	25
5	Calendar & Alarm clock & Calculator	26
5.1	Calendar.....	26
5.2	Time.....	27
5.3	Calculator.....	28
6	Getting connected	29
6.1	Connecting to the Internet.....	29
6.2	Browser.....	30
6.3	Connecting to Bluetooth devices.....	34
6.4	Connecting to a computer.....	35

6.5	Connecting to virtual private networks.....	35
7	Google Play Store	36
7.1	Locate the item you want to download and install.....	36
7.2	Download and install.....	37
7.3	Manage your downloads.....	38
8	Multimedia applications	39
8.1	Camera/Camcorder.....	39
8.2	Gallery.....	40
8.3	YouTube.....	41
8.4	Music.....	41
9	Google Maps	43
9.1	Get My Location.....	43
9.2	Search for a location.....	43
9.3	Get driving, public transport or walking directions.....	44
9.4	Share a location.....	44
9.5	Map view.....	44
10	Others	45
10.1	File Manager.....	45
10.2	Sound Recorder.....	45
10.3	Video.....	45
10.4	Radio.....	46
10.5	Flashlight.....	46
10.6	Notes.....	46
10.7	Setup Wizard.....	47
10.8	Help Me.....	47
10.9	Other applications.....	47

11	Settings	47
11.1	Wireless & network.....	47
11.2	Device	48
11.3	Personal.....	50
11.4	Add account.....	53
11.5	System	53
12	Making the most of your phone	55
12.1	FOTA Upgrade.....	55
	Safety and use	55

BC



 
 
www.sar-tick.com

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found on page 62 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.0 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

Your mobile

1.1 Keys and connectors

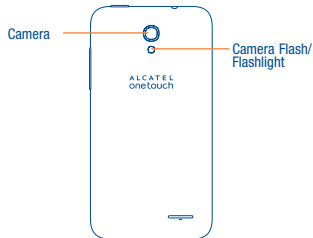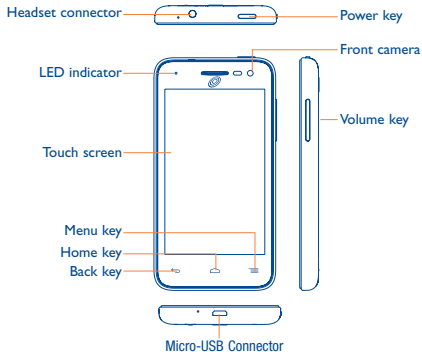

Back key

- Touch to go back to the previous screen, or to close a dialog box, options menu, the notification panel, etc.



Home key

- From any application or screen, touch to return to the Home screen.



Menu key

- Touch to access settings options.
- Touch and hold to open a list of thumbnail images of apps you've worked with recently.

These keys are visible when the screen lights up.

Power key

 
- Press: Lock the screen/Light up the screen.
- Press and hold: Show the pop-up menu to select from Power off/Restart/Airplane mode/Quick start.
- Press the Power key for more than 9 seconds to restart.
- Press the **Power** key and **Volume up** key to reset.
- Press the **Power** key and **Volume down** key to capture a screenshot.

Volume Keys

- In call mode, adjusts the earpiece or headset volume.
- In Music/Video/Streaming mode, adjusts the media volume.
- In general mode, adjusts the ringtone volume.
- Mutes the ringtone of an incoming call.



Installing and removing the microSD card

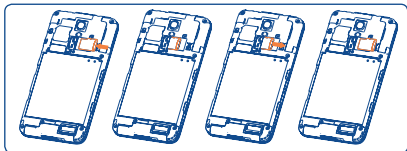

Insert the microSD card with golden contact facing downwards into the slot. Slide it out to remove the microSD card.

 


To avoid data loss and SD card damage, before removing the SD card, please ensure that the SD card is unmounted (**Settings**[Storage\Unmount SD card](#)).


1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover

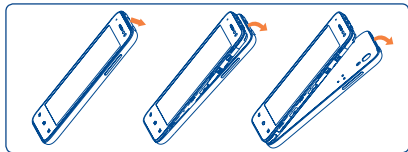


Installing or removing the battery

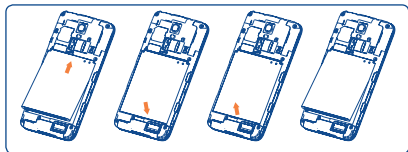 

- To install, insert and click the battery into place, then close the phone cover.
- To remove the battery, first power the phone off. Then unclip the cover and remove the battery.

 Charging the battery

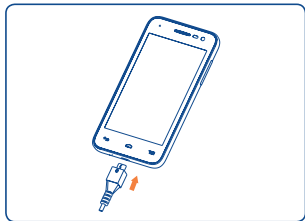

Connect the battery charger to your phone and main socket respectively, the LED indicator will light while charging.

- Make sure the battery is correctly inserted before connecting the charger.
- When using your telephone for the first time, charge the battery fully (approximately 3 hours).

You are advised to fully charge the battery (100%). Charging status is indicated by the percentage on screen while the phone is powered off. The percentage increases as the phone is charged.



To reduce power consumption and energy waste when the battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on, unlock your phone (Slide, PIN, Password, Pattern or Face unlock) if necessary and confirm. The Home screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your service provider. Do not leave your PIN code with your phone. Store this information in a safe place when not in use.

Set up your phone for the first time

The first time you power on the phone, you should set the following options:

- Select the phone's language, then touch → .
- Select the input method, then touch → .
- Set your Mobile Data Connection, then touch → .
- Set your Date & time, then touch → .
- **Setup Google Account:** If you want to set your Google Account, touch **Setup Now** to set. If you have a Google Account, touch **Existing**, then enter your Email address and password. If you forget your password, you can go to <http://www.google.com> to retrieve it. If you don't own a Google Account, you are prompted to create one by touching **New**.
- The screen of Setup complete will display, touch ✓ to confirm.

 
Even if no SIM card is installed, your phone will still power on and you will be able to connect to a Wi-Fi network, (refer to section "6.1.2 Wi-Fi"), sign into your Google account and to use some features.

1.2.3 Power off your phone

Hold down the **Power** key from the Home screen until the phone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Touch the **Home** key to switch to the Home screen.

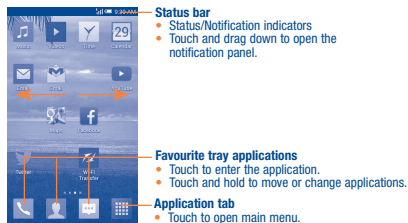

The Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view.

1.3.1 Using the touchscreen

Touch



To access an application, touch it with your finger.

Touch and Hold



To enter the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold this contact, an options list will then appear on screen.

Drag



Place your finger on the screen to drag an object to another location.

Slide/Swipe



Slide the screen to scroll up and down the applications, images, web pages... at your convenience. You could slide the screen horizontally too.

The device also supports one finger zooming in the Messaging, Browser, Email, Camera and Gallery functions. Double tap the screen then slide with one finger to zoom in/out.

Flick



Similar to swiping, but flicking makes it move quicker.

Pinch/Spread



Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate

































Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better screen view.
































1.3.2 Status bar

From the status bar, you can view both phone status and notification information.

Status icons

	GPRS connected		Airplane mode
	GPRS in use		Alarm is set
	EDGE connected		Speakerphone is on
	EDGE in use		Roaming
	3G connected		No signal
	3G in use		No SIM card installed
	4G connected		Vibrate mode
	4G in use		Ringer is silenced
	4G LTE connected		Phone microphone is mute
	4G LTE in use		Battery is very low
	Signal strength		Battery is low
	Wi-Fi is on		Battery is partially drained
	Connected to a Wi-Fi network		Battery is full
	Bluetooth is on		Battery is charging
	Connected to a Bluetooth device		Headset connected


Notification icons

	New Gmail message		Missed call
	New Email message		Call forwarding is on
	New text or multimedia message		Song is playing
	Problem with SMS or MMS delivery		Connected to VPN
	New Google Hangouts message		Disconnected from VPN
	New voicemail		Radio is on
	Upcoming event		Uploading data
	Screenshot error		Downloading data
	Screenshot captured		Download finished
	microSD card is full		Select input method
	safe to remove SD card		Phone is connected via USB cable
	preparing SD card		System update available
	Both USB tethering and portable hotspot are on		Carrier data use threshold approaching or exceeded
	USB tethering is on		GPS is on
	Portable Wi-Fi hotspot is on		Receiving location data from GPS
	An open Wi-Fi network is available		

Touch and drag down the Status bar to open the Quick setting panel or Notification panel. Touch and drag up to close it. When there are notifications, you can touch them to access notifications directly.


Quick setting panel

 Touch and drag down the Status bar to open the Quick setting panel, where you can enable or disable functions or change modes by touching the icons.

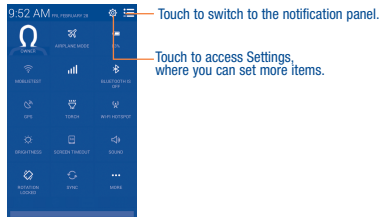

Notification panel

 When there are notifications, touch and drag down the Status bar to open the Notification panel to read the detailed information.

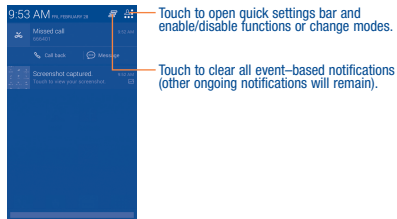


1.3.3 Search bar


The phone provides a Search function which can be used to locate information within applications, the phone or the web.



1 Search by text

- Touch Search bar from the Home screen.
- Enter the text/phrase you want to search for.
- Touch the  icon on the keyboard if you want to search on the web.

2 Search by voice

- Touch  from Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by choosing slide or creating a variety of patterns, PIN or password, etc.