

Quick Start Guide

For more information about how to use the cellphone, please go to www.alcatelontouch.com to download complete user manual (English version only). Also on our website you can find helpful FAQs (English version only).



www.sar-tick.com

This product meets applicable national SAR limits of 1.6 W/kg. The specific maximum SAR values can be found in the **RADIO WAVES** section of this user guide. When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.



 
PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.



ALCATEL onetouch®

Your mobile.....

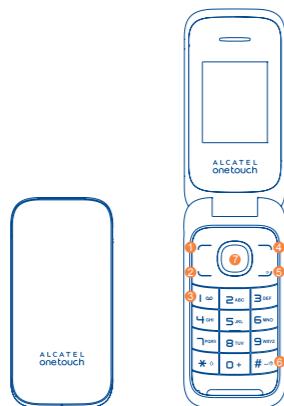

- 1 Left softkey
- 2 Answer/Send call Call log
- 3 Voicemail (press and hold)
- 4 Right softkey
- 5 Switch on/Switch off End call
- 6 Vibrate alert (press and hold)
- 7 Navigation key: Menu/Confirm an option
- 8 Profiles
- 9 Calendar
- 10 Messages
- 11 Alarm

4 Contacts.....

4.1 Consulting your contacts
To access the **Contacts** from the main screen, press the key and select the icon from the menu.

4.2 Adding a contact
You can add a new contact to phone or SIM card by selecting **"Add contact"**.

5 Messages

5.1 Create message
From the main menu select **"Messages"** to create text message. You can type a message and you can also modify a predefined message in **SMS template**. While writing a message, select **"Options"** to access all the messaging options. You can save your messages that you send often to **Drafts**.

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

6 Call log

6.1 Access
You can access the function using the following options:
• Select from main menu
• Press the send key from Home screen

6.2 Available options
When you press **"Options"**, you can have access to **View, Send SMS, Save to Contacts, Edit before call, Add to blacklist, Add to whitelist, Delete** etc.

7 Music.....

Access this feature from the main menu by selecting **"Music"**. You will have full flexibility of managing music on memory card. Make sure your memory card well inserted before activating music.

 
- 1.1 Keys**
- Navigation key
Confirm an option (press the middle of the key)
 - Answer/Send call
In idle screen:
Access call log (Redial) (press)
 - Switch on/Switch off the telephone (press and hold)
End call
Return to idle screen
 - Left softkey
 - Right softkey
 - Access your voicemail (press and hold)
 - In Edit mode:
- Press: access the symbols table
- Press and hold: enter zero
 - In Edit mode:
- Press: change input methods
- Press and hold: access the language list
 - In idle screen:
- Press: #
- Press and hold: activate/deactivate the vibrate mode
In Edit mode:
- Press: (space)

- 1.2 Main screen icons ⁽¹⁾**
- Battery charge level.**
 - Vibrate alert:** your phone vibrates, but does not ring or beep.
 - Headset connected.**
 - Call forwarding activated:** your calls are forwarded.
 - Alarm or appointments programmed.**
 - Level of network reception.**
 - Voicemail message arrived.**
 - Missed calls.**
 - Radio is on.**
 - Roaming.**
 - SIM card missing.**
 - Music activated.**
 - Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm.
 - SMS unread.**
 - Flight mode.**


⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

2 Getting started.....

2.1 Set-up

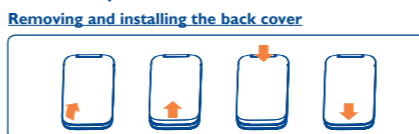

 Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

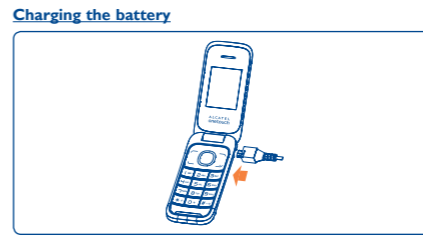

- Connect the battery charger to your phone and outlet respectively.
- The charging may take about 20 minutes to start if the battery is flat.
 - Be careful not to force the plug into the socket.
 - Make sure the battery is correctly inserted before connecting the charger.
 - The outlet must be near to the phone and easily accessible (avoid electric extension cables).
 - When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().
 - To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; reduce the backlight time, etc.

The charge is complete when the animation stops.

10 Settings

11.4 Notes
You can create a note in text format by accessing **"Tools\Notes"** from the main menu.

11.5 Converter
You can use the Weight and Length conversion by selecting the unit you want to convert, then input the digits. Finally you'll get the answer at the below unit.

11.6 Voice alarm
With this menu, you may create the voice file and set it as the alarm.

11.7 Fake call
This program enables you to call yourself by stimulating a call number/name, ringtone at a scheduled time. It helps you to politely escape from social situations at any time you wish.
Press and hold , you can activate a fake call by **"Fake call mode\Enable"**.

11.8 Call filter
Enable blacklist, all callers in the list will be automatically blocked. Enable whitelist, only callers in the list can be connected. You are allowed to add 50 contacts to each list from Contacts, Call log, Messages or to add directly by pressing key.

11.9 Torch
To light in darkness, you may activate **"Torch"** by below operations:
In idle screen, press and hold to activate the Torch light; Press or press and hold to deactivate.

11.10 Services
Contact your network operator to check service availability.

13 Latin input mode ...

To write messages, there are two writing methods:
• Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
• Predictive with the eZi mode: this mode speeds up the writing of your text.
• + key in edit mode
Press: access the symbols table
Press and hold: enter zero

12 Profiles

With this menu, you may personalize ringtones for different events and environments.

- 2.2 Power on your phone**
Hold down the key until the phone powers on.
- 2.3 Power off your phone**
Hold down the key from the main screen.

3 Calls.....

- 3.1 Making a call**
Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.
To hang up the call, press the key.

- 3.2 Calling your voicemail ⁽¹⁾**
To access your voicemail, hold down the key.
- 3.3 Receiving a call**
When you receive an incoming call, press the key to talk and then hang up using the key.

- 3.4 Available functions during the call**
During a call, you can use your directory, your calendar, text messages, etc. without hanging up or dropping the call.

Making an emergency call
If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code.

11 Contact your network operator to check service availability.

