
## RC-09 User Manual

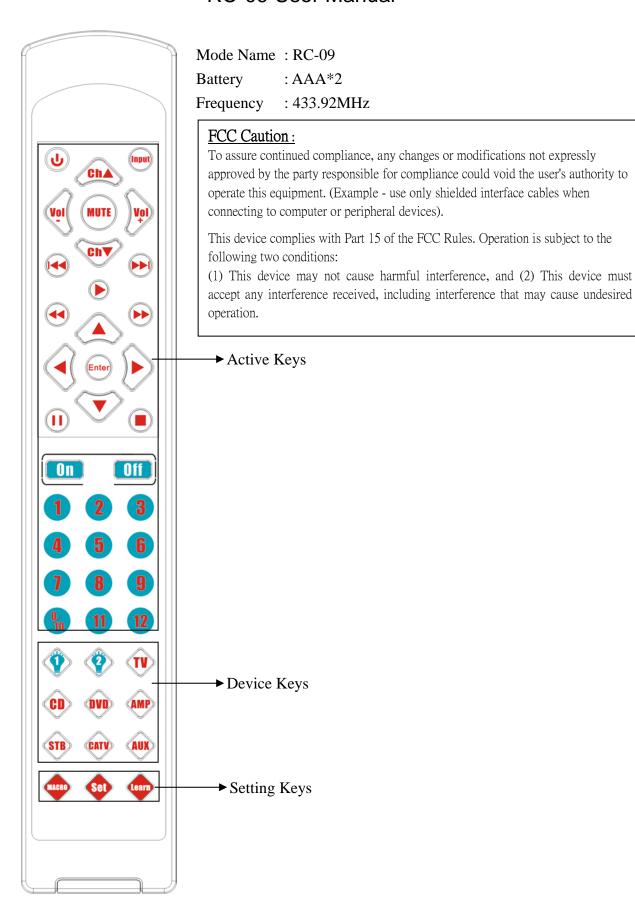

## **ID Setting**

- 1. Take one battery out from remote controller, press any key then reload battery.
- 2. The red LED indicator at front panel lights up for 5 seconds.
- 3. Within 5 seconds, enter a set of 4 numbers to finishes digital ID setup

#### Note:

There are 10000 combination of digital ID code range from 0000 to 9999. User may change it when desire. Please note that the digital ID code must correspond to the chosen light, wall and power switch's ID enable for controller to control them.

#### ID check



- 1. Press and hold
- 2. Press and count the number of times red LED indicator blinks, which represent the first digit of the code. Repeat step with and to check for other digits.

#### Note:

The factory default code of the remote controller is "0000". User need to change the code correspond to light switch's digital ID or power plug ID to enable the RC-06 Smart Remote Controller to control them.

### **Lighting Control**

#### Note:

Please make sure the chosen light, wall or power switch's digital ID code is consistent with RC-09's digital ID code.




- 1. Select the control Zone of
- 2. Press device key from to then release, red LED indicator will light up and within 5 seconds, press or to send command, red LED indicator will blink once.
- 3. If user changed mind after select a set of device but want to control another set of device, within 5 seconds of pressing the first set of device key, press second device key from to and release, backlight will blink twice to indicate the change of control, then press or of to activate the command.

# **Home Appliances Control**



2. Press active key then release to control the home appliance.

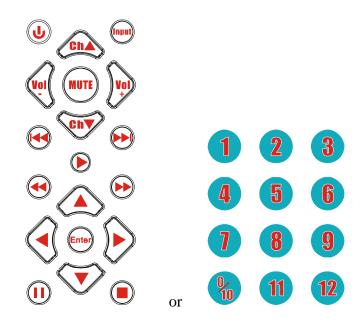

# **Setting Keys**

Learn+Devices Key : going to device Learning Mode

Set+No.1 or 2 or 3 or 4: check the RC-09's ID

Learn+MACRO : going to MACRO edit mode

Set+Off : clear the memory MACRO+No. 0~9 : MACRO Active