
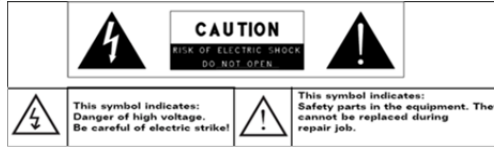 



Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Normal functioning of the product may be disturbed by ESD. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- Do not install this equipment in a confined space such as a book case or similar unit. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to environmental aspects of battery disposal.
- Use the apparatus in moderate climates.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - a) The battery level icon displays  (An empty battery)
 - b) The device powers off automatically when restarted.
 - c) There is no response when pressing keys with keys unlocked and battery full.
- Do not interrupt the connection when the device is being formatted or transferring files. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.

- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor disconnected from the device, the device will remain operable as long as the battery has sufficient charge.
- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
-  Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- CE in which countries where the product may be used freely: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland.

Listening Cautions

- This product respects the current regulations for limiting the output volume of consumer audio devices to a safe level. By listening to your device with headphones or earbuds at high volumes, you run the risk of permanent damage to your ears. Even if you get used to listening at high volumes and it seems normal to you, you still risk the possibility of damaging your hearing. Reduce the volume of your device to a reasonable level to avoid permanent hearing damage. If you hear ringing in your ears, reduce the volume or shut off your device. This device has been tested with the supplied earphones. In order to preserve your hearing, it is advised that you use only the following headphone models: the earphones supplied with your device, or any other headphones that respect the current regulations. Other types of headphones may produce higher volume levels. (At full power, the prolonged listening of the walkman can damage the ear of the use)
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.
To establish a safe volume level:
 - a. Start your volume control at a low setting.
 - b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Content

Safety Precautions	1
Listening Cautions.....	3
Packing Contents.....	5
Features & Functionality.....	5
Basic Connections	6
Basic Operation.....	8
Maintenance.....	12
Major Specifications	13
FCC Statement	14

 
Packing Contents

When you get your device, be sure to check the following items are included in the package:

- Main Unit
- Power Adaptor
- Warranty Card
- Keyboard
- User's Manual

Features & Functionality

All view ID:

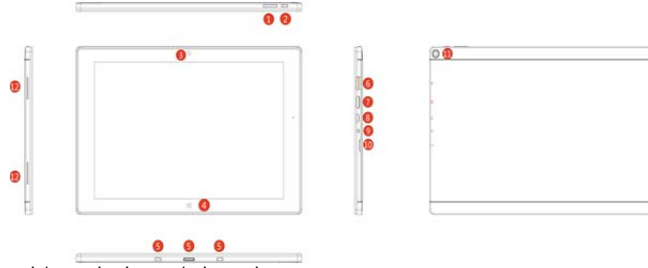

1. Sound-/sound+: Lower/raise volume
2. Power button: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.
3. Front camera: take photos, and record pictures
4. Windows key: Press this button to return to the Start screen.
5. Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.
6. USB Interface: You can read the data through USB.
7. Mini HDMI Interface: High-Definition Multimedia Interface
8. Micro USB Interface: You can read the data through USB.
9. Socket for earphone and microphone: This socket can transmit the audio signals of Tablet PC to loudspeaker or earphone.
10. Micro SD card slot: The built-in storage card reader slot supports MicroSD and MicroSDHC format.
11. Back CCD camera: take photos, and record pictures.
12. Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to linking additional device.

Note:

1. Both cameras support zoom and face tracking.
2. User can connect a keyboard and USB mouse to this tablet if necessary.

Basic Connections

Charging the tablet

Note: If using the tablet for the first time, or after a long period of idle time, charge the battery for more than half an hour before turning it on, to ensure system stability.

The tablet has a built-in rechargeable battery. Charge the device when the battery level is low.

1. Plug the power adapter into the USB socket.
2. Connect the power adapter to an electrical outlet and charge the tablet until the battery is fully charged.



Caution:

1. Charge the battery in an ambient temperature of 0 °C to 35 °C.
2. Use only the supplied power adapter to charge your tablet. Using unauthorized power adapters may severely damage your tablet.

Note:

1. The battery is not fully charged when you unpack your tablet.
2. A fully discharged battery takes about 5 hours to fully charge.
3. When the battery is being charged, the LED indicator lights red, and when the battery has been fully charged, the LED indicator lights orange.

Turning On the Tablet

Note: This device has been equipped with Windows 10 system at the factory, so user need not perform Windows setup again before using for the first time.

1. Press and hold the Power button for 3 seconds to turn on your tablet. The lock screen appears.
2. Swipe-up your finger from the bottom of the display to switch to the login screen, and then enter password to log in to Windows.



Now the tablet is ready for use when the Windows Start screen is displayed.

Note: *If the login screen is not enabled in Windows 10, you will be taken directly from the lock screen to the Start screen.*


Turning Off the Tablet

You can turn off the tablet in two ways:

Using the Power button:

1. Press and hold the Power button for at least 4 seconds.
2. Swipe-down the shutdown confirmation screen to the bottom edge of the display to turn off the tablet.


Using Start menu:

1. Touch the Windows/ Start button to bring up Start menu.
2. Touch **Power**  → **Shut down** to turn off the tablet.

Turning On/Off screen

Usually, user can press once the power button to turn on/ off the screen display.

Optionally, user can also use the Start menu:

1. Touch the Windows/ Start button to bring up Start menu.
2. Touch **Power**  → **Sleep** to turn off the screen.


Inserting a microSD card



1. Pick up a microSD card.
2. Align the microSD card so that the pins are pointed toward the card slot.
3. Push the microSD card into the card slot until it locks into place.

Removing a microSD card

Caution: Removing the microSD card while it is in use may cause data loss or result in application errors. Make sure all save operations to the microSD card are complete before removing the microSD card.

1. Touch the Tray button in the notification area in the lower-right corner of the screen.
2. Touch **Safely Remove Hardware** .
3. Touch **Eject XXXX SD Card**. A message appears confirming that the microSD card can be safely removed. If a warning message appears stating the microSD card cannot be removed, ensure all data transfers involving the microSD card are complete.
4. Press on the microSD card to release it.
5. Slide the card out after it pops out from the microSD card slot.

Using Headphones

You can connect a headset or headphones to the audio port of your tablet.

Warning: Listening to loud music for an extended period of time can lead to hearing loss.

 
1. Connect headphones to the audio port (3.5 mm) on the tablet.
2. Insert the earphones in your ears and adjust the volume level to a comfortable level.

Note: When you connect an audio device to the 3.5 mm audio jack, the integrated speakers on your tablet are muted automatically.

Caution: To prevent damage to the headphones when disconnecting it from the tablet, pull the connector instead of the cable.

Connecting the Keyboard

Attention: Keyboard is optional, and configure the product according to the specific type of the tablet PC you have bought.

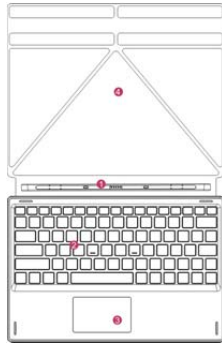

① Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.

② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfortability.

③ Touch Tablet: Used to control the cursor on the Tablet PC, with the same function as a mouse.

④ Base: Folding base of Tablet PC.




Use of tablet and keyboard

Basic Operation


Wi-Fi Setting

Turning On/Off Wi-Fi:

1. Touch WiFi icon  in the notification area in the lower-right corner of the screen to view the available WiFi hot spots.



 

2. Touch Available WiFi icon to turn on/off WiFi connection.



Connecting to a network:

1. Touch WiFi icon  in the notification area in the lower-right corner of the screen to view the available WiFi hot spots.
2. Select an available network from the list and touch **Connect**.
3. Input the password if necessary, then touch Connect to start connecting to the Internet.

Gestures

Your tablet has a multi-touch display. You can touch the screen to operate the tablet.

Finger Gesture	You can do
<p>Touch Tap gently on the display with your fingertip.</p> 	<p>Select items on the screen, including options, entries, images, and icons.</p> <p>Start apps.</p> <p>Touch buttons on the screen.</p> <p>Input text using the on-screen keyboard.</p>
<p>Touch and Hold Touch and hold your finger on the display.</p> 	<p>Display detailed information about an item.</p> <p>Open the context menu of an item to perform further actions.</p>
<p>Drag</p> <ol style="list-style-type: none"> 1. Touch and hold your finger on an item on the screen. 2. Keeping your finger in contact with the display, move your fingertip to the desired location. 3. Take your finger off the display to drop the item in the desired location. 	<p>Move items such as images and icons on the screen.</p>
<p>Swipe or Slide Move your finger in a vertical or horizontal direction on the display.</p> 	<p>Scroll through the Start screen, web pages, lists, entries, photos, contacts, and so on.</p> <p>Close an app. (Swipe the app to the bottom of the display.)</p>


<p>Zoom in Touch the display with two fingers and then move the fingers apart.</p> 	<p>Enlarge the view of an image or web page.</p>
<p>Zoom out Touch the display with two fingers and then move the fingers closer.</p> 	<p>Reduce the view of an image or web page.</p>

Screen Orientation

For optimal viewing experience, the screen orientation changes automatically to portrait or landscape format depending on how you hold the tablet. You can disable automatic screen rotation and lock the screen in portrait or landscape mode.

Note: Some apps may not support automatic screen rotation and are designed to work only in one orientation.

Locking the screen orientation

1. Change the screen to the desired orientation.
2. Touch Action Center button  in the notification area to access the Action Center;
3. Touch **Rotation lock** icon to lock or unlock screen rotation.


Windows 10 Start Screen

The Windows 10 Start screen displays a list of default and custom Live Tiles, which act as a shortcut to Mail, Mail, Microsoft Edge, Weather app, Calendar, Windows Store, and other installed apps.

Live Tiles on your Start screen change and update in real time to show news and sports updates, weather updates, social-networking feeds, and so on.

The tile-based user interface gives you direct access to your most recently used apps, emails, photos, music, videos, contacts, updates from social-networking sites, and frequently viewed websites. You can pin your favorite apps as tiles to customize the Start screen.


You also can personalize the Start screen by setting your favorite picture as the wallpaper.

Note: Live Tiles can be added or removed by using Pin to taskbar , Pin to Start  or Unpin from Start  options.

Accessing the Start screen


When your computer boots into Windows, the Start screen appears by default. To access the start screen from any other window or app, use any of the following methods:



1. Press the **Windows** button.
2. Touch the Start button  in the lower left corner of the screen.

Note: The functionality of the **Start** icon  is same as Windows button.

Getting Started

Touch the **Start** icon  to bring up the start menu, from which you can find a list of Most used apps. Among the apps, Get Started is extremely useful for new user of the newest Windows system-Windows 10, includes some video clips introducing the new features of the newest system.

Windows Search bar

Next to Start button in the lower-left corner of the screen, it is Windows search bar, with which you can type in any keywords to search the web and Windows.

Swipe left/right/down

Swipe-in from the right edge of the display to show the Action Center, which provide access to the system commands, such as Tablet mode, Airplane mode, Rotation lock, WiFi connection, Location, Settings etc..

Swipe-in from the left edge of the display to show thumbnails of open apps.


Swipe-in from the top to the bottom of an app to dock or move the app.

Narrator Mode

This is a featured function that is friendly for blind users. Narrator is a screen reader that reads all elements on screen, like text and buttons.

1. Touch Start > Settings>Easy access>Narrator, then toggle the slider to turn on Narrator.
2. To turn Narrator off with the touch screen, tap the Narrator slider, and then double-tap anywhere on the screen.

Synchronizing Your Tablet

1. If your computer has Microsoft Windows 10 installed, you can synchronize user settings of your tablet with your computer using a Microsoft account. When you sign in with your Microsoft account on your tablet, your settings, including internet browser history, app settings, and personal files etc., are synchronized with other Windows 10 PCs and tablets computers.
2. On the tablet, access Action Center by touching  button → **All Settings** → **Accounts** → **Sync your settings** to switch your computer local account to your Microsoft account.

Copy music, photos, and videos

1. Connect your tablet to a USB storage device with a Micro-USB to standard USB conversion cable, then transfer files to or from the USB storage device.
2. After transferring files, use the **Safely Remove Hardware** wizard to remove the USB storage device.

Note: The Micro-USB to standard USB conversion cable is sold separately and is not shipped with the tablet. See the picture below for reference.



Maintenance

Cleaning Your Tablet

Caution:

Before you clean your tablet, disconnect all the cables and turn off the tablet. Clean your tablet with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.

1. Turn off your tablet. For more information on turning off your tablet,
2. Disconnect any attached devices, headphones, and speakers from the tablet and from their electrical outlets.
3. Moisten a soft, lint-free cloth with either water or a display cleaner, and wipe the surface of the tablet until it is clean. Do not allow water from the cloth to seep down to the tablet ports or buttons.


Caution:

1. *To avoid damaging the tablet or display, do not spray cleaning solution directly onto the display. Only use products specifically designed for cleaning displays and follow the instructions included with the product.*
2. *Do not clean the keyboard with a moist cloth.*

Resetting your tablet

If your PC isn't running well, resetting it might help. This lets you choose to keep your files or remove them, and then reinstall Windows.

To restore your tablet:

1. Touch  button in the notification area to access the Action Center;
2. Touch **All Settings** → **Update and security** → **Recovery** → **Reset this PC**.
3. Touch **Get started** to choose an option from **Keep my files** or **Remove every thing**.
4. You can have more choices if you select **Advanced startup**.

Note:

Apps installed from the Windows Store are automatically reinstalled after the refresh is complete. Apps installed from sources other than the Windows Store are removed and have to be manually installed. A list of apps removed during this process is created on the desktop after the process is complete.

In shutdown status, user can press and hold Power & Vol- keys at the same time to boot the device and enter Recovery mode, for the purpose of repairing or resetting the system.

Caution:

Resetting your tablet erases all data from your tablet, including your account configuration, apps, music, pictures, files, and so on. Make sure that you back up all the required data before you proceed.

Major Specifications	
Item	Descriptions
CPU	Intel BayTrail-T CR, Quad core/1.8GHz (Z3735F)
Operation system	Windows 10
DDR	2GB
Internal Memory	EMMC: 32 GB
Expandable Memory	Micro SD card: up to 64 GB
Interfaces	USB 2.0 high speed /Micro SD (compatible SDHC, up to 64GB) card 3.5mm Earphone
Connection Agreement	WiFi (802.11 b/g/n); BT4.0
Front Webcam	Front camera, 2.0 Mega Pixels; rear camera, 2.0 Mega Pixels
Photo Format	JPEG/BMP/GIF/PNG
Audio File Format (Windows Media Player)	MP3/WAV/m4a/AAC/WMA(license required)
Video File Format (window media play)	AVI/WMV/ASF/3GP/MPEG-2 TS (.m2ts)/MPG/MPEG/MOV/MP4
Bluetooth	Support
Display	Resolution, 1280*800 Pixels, 10.1 inch LCD IPS

Battery charging time	About 7 hours
Battery endurance time (50% brightness, 50% volume from speaker)	Music playback time: about 9hours Video playback time: about 8hours; Web browsing time: about 9hours
Power Supply	Rechargeable lithium battery, 8000mAh; AC Adapter: DC-Out 5V/2.0 A
Storage Temp.	-20℃ ~ +65℃
Ambient Temp.	0℃ ~ +40℃
Operation RH	20% ~ 90% (40℃)
Storage RH	20% ~ 93% (40℃)

FCC Statement

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of Haier. Any unauthorized distribution of this manual is expressly forbidden.

Haier may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots

shown are simulated and may not represent the actual screen on production units sold to consumers.