

刀模线不印刷

单号: EAC151224147

型号: 31030BT

印刷及材质要求: 80g书写纸, 正反面单色印刷, 五折页


尺寸: 105x148mm

美工: 小劳

文件完成日期: 2016/01/16

ITEM:31030BT

Rugged Indoor/Outdoor Wireless Speaker with Mic



INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting started

- Remove the unit from the box.
- Remove all packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

In the Box

- Bluetooth Indoor/Outdoor Speaker
- Auxiliary Cable
- USB Charging Cable
- Instruction Manual


Features

- Enjoy wireless music through Bluetooth
- Easy to switch between calls and music, you will not miss the incoming call whilst listening to music
- Answer & end a call at click of a button.
- Every time the speaker is turned on, it connects to last connected device automatically

IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, ink etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts

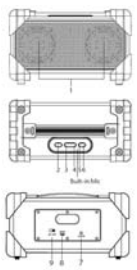

1	Play/Pause
2	Previous Track / Volume -
3	Next Track / Volume +
4	LED Indicator
5	Call Answer Button
6	AUX-IN Port
7	USB Charging Port (DC 5V)
8	Power On/Off

INSTRUCTIONS FOR USE

Charging Instructions

The speaker comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery fully.

- Connect the USB cable to a computer USB port and the USB plug to the charging port of the speaker. The Red LED illuminates while the speaker is being charged. It takes 3-4 hours for the unit to fully charge. When the battery is fully charged the red LED will turn off.

Turning on/off the speaker

There is an on/off switch at the back of the speaker. You can turn off the speaker with this switch. In order to leave power, put the switch to off position when the speaker is lit in use.

Pairing the speaker with Bluetooth devices (phone or music device)

- Switch on the speaker and you would hear the indication tone.
- Blue LED light blinks rapidly, your speaker is now ON and is entering "pairing" mode
- Place the speaker and Bluetooth device (phone or music device) so that they are no further than 3 Feet apart.
- Activate the speaker and Bluetooth on your Bluetooth device (phone or music device).
- Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Once you have activated Bluetooth on your device, select the speaker
- SL RUGGED SPEAK** from the list of available Bluetooth devices.
- If required, enter the password '0000' to confirm & finalize pairing.
- Once paired successfully, the blue LED will blink slowly.
- You can now start to use the speaker.
- If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
- Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.
- The speaker will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device please follow the steps outlined above.
- If pairing is unsuccessful, turn off the speaker first and then re-pair following the above steps.
- Once the speaker is paired with your device the music will transmit directly to the speaker. Please refer to your device's user manual for further information.

Listening to Music

Once the speaker is paired with your device you can stream music wirelessly using your mobile device. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker. Should you encounter any problems while streaming please refer your device's user manual for further information.

Function	Operation	Button
Increase Volume	Playing music:	Long press the Next Track / Volume + button will increase the volume.
Decrease Volume	Playing music:	Long press the Previous Track / Volume - button will decrease the volume.
Pause	Playing music:	A short press on the Play / Pause button will pause the music.
Play	Pausing music:	A short press on the Play / Pause button will resume the music.
Next Track	While playing music:	Short press on the Next Track / Volume + button and it would move one track forward.
Previous Track	While playing music:	Short press on the Previous Track / Volume - button and it would move one track backward.

An indication tone will alert you when the volume is adjusted to the minimum or maximum level.

Answering a call with the speaker

Basic operation

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the Call Answer Button to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the Call Answer Button for 2-4 seconds.
End Call	Incoming Call	After your phone conversation, short press the Call Answer Button.
Increase Volume	During a call	Long press the Next Track / Volume + button will increase the volume.
Decrease Volume	During a call	Long press the Previous Track / Volume - button will decrease the volume.
Redial last number	Standby mode and connected to a device	Short press the Call Answer Button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tones may be varying depending on your mobile phone.

Play music using "AUX-IN" Jack

- Turn ON the device.
- Insert the Auxiliary cable (included) in the AUX-IN port of the speaker. And, insert the other end of the cable into the audio device (such as mobile phone / computer / tablet / ... etc.).
- The Blue LED will light up without flashing.
- Select your favorite song at this source device.
- Long press Next Track / Volume + button to increase the volume or long press Previous Track / Volume - button to decrease the volume.

Note: When you insert Auxiliary cable into the AUX-IN Port of the speaker, its Bluetooth mode will turn off automatically. An indication tone will alert you when the volume is adjusted to the minimum or maximum level. Microphone Function doesn't work in Auxiliary mode. All media controls (skip forward / backward etc) can be managed from the source device only.

LED Indicator

Please refer to the below tables for a list of the LED statuses whilst using the speaker.

LED Indicator	Status of the speakers
Red LED	Charging
Red LED turns off	Charging Completed

Battery Charging Indication

LED Indicator	Status of the speakers
Blue LED flashes quickly	Pairing mode
Blue LED flashes slowly	Paired successfully

Tone Indication

Indication tone	Status of the speakers
Emits short tones	Enter pairing mode

Specifications

Bluetooth Specification	Bluetooth V2.1
Operating distance	33 Ft. (10.1 Class II)
Speaker	2 x 5W
Power output	2 x 1.7W
Working time	Music: 2-3 hours Talk: 1.5 to 1.8 hours
Ultrasonic battery	3.7V 1200mAh
Charging input voltage	DC 5V
Charging time	Up to 5 hours
Dimensions	103 x 51.2" x 5.88"
Weight	2.28 kg

Note: Battery life & charging time may vary based on usage & types of devices used.

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source Device, Mode, Phone, Laptop, etc.) volume too low Battery status	Adjust device volume. Charge battery.
Sound Distorted	Source Device, Mode, Phone, and Laptop / turned off. Speaker turned off. Volume turned down source.	Turn the speaker on. Adjust volume source. Play media from source.
No source at all	Bluetooth disconnected	Turn OFF the Speaker and then Turn ON the speaker after about 30seconds. Keep your Bluetooth Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process. After a successful pairing, the Blue LED indicator light will flash every two seconds.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheeled bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes no further use or has worn out. Contact your local authorities for details of where to take the item for recycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warranty of this manufacturer's warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: The warranty is in lieu of warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contract, commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). This repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at GPO@mtgusa.com or by calling 1 (866) 815-4144, Monday to Friday, 9am to 5pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during in-home shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.