



<p style="text-align: center;">Bluetooth Speaker</p> <p style="text-align: center;">3521062-FCBT</p>  <p style="text-align: center;">user manual</p>	<p>Features LED bluetooth speaker 1. streams music wirelessly 2. translucent body changes colors 3. built-in rechargeable battery 4. built-in mic for hands-free calls 5. USB/Micro SD slots is for streaming music 6. built-in aux jack 7. aux cable&usb charging cable included 8. built-in FM radio</p> <p>Charging Your Speaker 1. Connect one end of the included USB Charging Cable into the DC5V USB Charging Cable Port on your speaker. Then plug the other end of the cable into a suitable USB port on your computer in order to charge your speaker's internal rechargeable battery. 2. When charging, the LED light will illuminate to indicate that the unit is charging. The light will turn off when your unit is fully charged.</p> <p>Starting Up Your Device Before you can start using your Bluetooth Speaker, you must first charge the internal rechargeable battery. Once charged, press and hold the button on ON/OFF to power on your speaker. Then you will hear the warning tone to show the power on.</p> <p>Pairing Bluetooth Devices to Your Speaker A device must be paired with the speaker before using them together for the first time. When you turn on the speaker, it will automatically search for a paired device. If it does not detect a paired device, it will switch to pairing mode (the status indicator will flash quickly). In order to pair your Bluetooth audio device to your Bluetooth Speaker for the first time, follow the steps below: 1). Make sure your Bluetooth audio source is held within 10 meters of your speaker. 2). Go to the Bluetooth Manager of your Bluetooth audio source. Please refer to the User's Manual of your Bluetooth audio source for more information.</p>	<p>3). Search Bluetooth devices and select the name of your speaker(NAXA-NAS-3074) to start connecting. 4). Once paired, you will hear the warning tone to show the speaker is successfully paired.</p> <p>Playing Audio From Your Bluetooth Device 1. Once your Bluetooth audio source is successfully paired to your Bluetooth speaker any music played will automatically be heard through your speaker. 2. Short press "M/M" to play/pause the audio. 3. Long press button "L/-" to lower the volume level of the unit. 4. Long press button "R/+ " to increase the volume level of the unit. 5. Short press button "L/-" to change to previous song 6. Short press button "R/+ " to change to next song</p> <p>NOTES: - Make sure to raise the volume on your Bluetooth audio device to its highest setting possible, as the speaker cannot raise the volume higher than the maximum that is set on your Bluetooth audio device. - Your speaker can only be paired to one device at a time.</p> <p>Using the AUX input connector Connect devices without bluetooth by using the AUX input interface to make this connection. 1. Using the included AUX input interface plug to connect the device's headphone and micro SUB jack to the AUX connector of the speaker. 2. While working with AUX, it is easy to listen to sound from PC,MP3,MP4.</p> <p>Using the Hands-Free Function Powering Off Your Device When an iPhone or other smartphone is connected to your speaker follow the steps below to take calls hands-free. 1. Press "M/M" to pick up the call. 2. During a call: Press "M/M" again to hang up the call.</p>	<p>Playing MP3 Files through the Speaker using the USB/Micro SD Card 1. Press and hold the button "M/M" to change the mode to MP3 mode 2. Plug in your USB/Micro SD Card in the slots provided. Please make sure you use the correct file format in your media devices-MP3 FILES ONLY. 3. In USB/micro SD mode, you can long press "L/-" or "R/+ " to adjust the volume 4. In USB/micro SD mode, you can short press "L/-" or "R/+ " to change to previous or next song. 5. In USB/micro SD mode, you can short press button "M/M" to play/pause the music.</p> <p>Listening to the FM Radio from the Speaker 1. Long press "M/M" to change the mode to FM function 2. You can press the button "L/-" or "R/+ " on the Speaker unit to receive FM Frequency. 3. In FM mode, you can long press "L/-" or "R/+ " to adjust the volume 4. In FM mode, you can short press button "M/M" to play/pause the radio. 5. When using FM, please remove Micro SD or External device connected to AUX cable. 6. When in FM mode, you can long press the button "M/M" to other modes.</p> <p>Switch or turn off LED lights 1. To turn off the lights, press and hold the LED button 2. To turn on the lights, press and hold the LED button 3. To adjust different LED effect, short press the LED button</p>	<p>Warning FCC ID:2ADXM3521062FCBT This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
--	--	--	---	--

<p style="text-align: center;">GRIETAS DEL TAMBOR GLEAMY LED ALTAVOZ</p> <p style="text-align: center;">3521062-FCBT</p>  <p style="text-align: center;">MANUAL DE USUARIO</p>	<p>Características LED altavoz Bluetooth 1.transmite música de forma inalámbrica 2.Cuerpo translucido cambia de color 3.Batería recargable incorporada 4.Micrófono incorporado para llamadas con manos libres 5.USB/SD micro ranuras es para streaming de música 6.Toma aux incorporada 7.cable aux&incluye cable de carga USB 8.radio FM incorporada</p> <p>Cargando su altavoz 1. Conecte un extremo del cable de carga USB incluido en el DC5V Cable de carga USB puerto de su altavoz. A continuación, conecte el otro extremo del cable a un puerto USB adecuado en el ordenador para cargar su batería recargable interna del altavoz. 2. Cuando se está cargando, el indicador LED se iluminará para indicar que la unidad se está cargando. La luz se apagará cuando la unidad esté totalmente cargada.</p> <p>Empezando su dispositivo Antes de poder empezar a utilizar el altavoz Bluetooth, primero debe cargar la batería interna recargable. Una vez cargado, pulse y mantenga pulsado el botón hasta la posición ON/OFF para encender el altavoz. A continuación, oír la advertencia tomé para mostrar el poder.</p> <p>Emparejamiento de dispositivos Bluetooth a su altavoz El dispositivo debe estar emparejado con el altavoz antes de utilizarlos por primera vez juntos. Cuando encienda el altavoz, buscará automáticamente un dispositivo emparejado. Si no detecta un dispositivo emparejado, cambiará al modo de emparejamiento.El indicador de estado parpadeará rápidamente. Con el fin de emparejar el dispositivo de audio Bluetooth con su auricular Bluetooth por primera vez, siga los pasos a continuación: 1). Asegúrese de que la fuente de audio Bluetooth se celebrará dentro de los 10 metros de su altavoz.</p>	<p>2). Vaya el Administrador de Bluetooth de su fuente de audio Bluetooth. Por favor, consulte el Manual del usuario de su fuente de audio Bluetooth para obtener más información. 3). Búsqueda de dispositivos Bluetooth y seleccione el nombre de su altavoz(A17-B62FL-2) para iniciar la conexión. 4). Una vez emparejados, oír la advertencia tomé para mostrar el altavoz está sincronizado correctamente.</p> <p>Reproducir audio desde su dispositivo Bluetooth 1. Una vez que su fuente de audio Bluetooth está emparejado con su altavoz Bluetooth cualquier música automáticamente se escucha por el altavoz. 2. Short Pulse "M/M" para reproducir/pausar el audio. 3. Pulse y mantenga presionado el botón "L/-" para bajar el nivel de volumen de la unidad. 4. Pulse y mantenga presionado el botón "R/+ " para aumentar el nivel de volumen de la unidad. 5. Pulse brevemente el botón "L/-" para cambiar a la canción anterior 6. Pulse brevemente el botón "R/+ " para cambiar a la siguiente canción.</p> <p>Notas: - Asegúrese de subir el volumen en el dispositivo de audio Bluetooth a su valor más alto posible, ya que el altavoz no pueden subir el volumen superior al máximo que se establece en el dispositivo de audio Bluetooth. - el orador sólo puede ser emparejado con un dispositivo a la vez.</p> <p>Utilizando el conector de entrada AUX Conectar dispositivos sin Bluetooth utilizando el interfaz de entrada AUX para realizar esta conexión. 1. Utiliza el interfaz de entrada AUX para conectar los auriculares del dispositivo y micro SUB jack al conector AUX del altavoz. 2. Mientras trabaja con AUX, es fácil escuchar el sonido desde el PC,MP3,MP4.</p> <p>Utilizando la función manos libres Apagar el dispositivo. Cuando un iPhone u otro smartphone está conectado a los altavoces, siga los</p>	<p>pasos a continuación para realizar llamadas en modo manos libres. 1. Oprima "M/M" para contestar la llamada. 2. Durante una llamada: Pulse "M/M" nuevo para colgar la llamada.</p> <p>Reproducción de archivos MP3 a través del altavoz con el USB/Micro SD 1. Pulse y mantenga pulsado el botón "M/M" para cambiar el modo a modo MP3 2. Conecte el USB/tarjeta SD micro en las ranuras. Por favor, asegúrese de que utiliza el formato de archivo correcto en sus dispositivos de medios MP3 sólo los archivos. 3. En el modo USB/Micro SD, Pulse y mantenga pulsado el botón "L/-" o "R/+ " para ajustar el volumen 4. En el modo USB/Micro SD, brevemente Pulse "L/-" o "R/+ " para cambiar a la canción anterior o siguiente. 5. En el modo USB/Micro SD, puede pulsar brevemente el botón "M/M" para reproducir/pausar la música.</p> <p>Escuchar la radio FM desde el altavoz 1. Mantenga pulsado "M/M" para cambiar el modo a FM función 2. Puede pulsar el botón "L/-" o "R/+ " en la unidad de altavoz para recibir la frecuencia de FM. 3. En el modo FM, puede pulsar y mantener pulsado "L/-" o "R/+ " para ajustar el volumen 4. En el modo FM, puede pulsar brevemente el botón "M/M" para reproducir/pausar la radio. 5. Cuando se usa FM, elimine Micro SD o dispositivo externo conectado al cable aux. 6. Cuando en el modo FM, usted puede pulsar el botón "M/M" a otros modos.</p> <p>Cambie O apague las luces LED 1. Para apagar las luces, pulse y mantenga pulsado el botón LED 2. Para encender las luces, pulse y mantenga pulsado el botón LED 3. Ajustar diferentes efectos LED, pulse brevemente el botón LED</p>
---	--	--	---