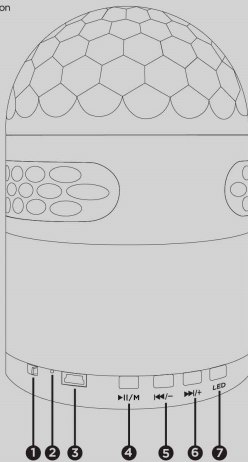


128g铜版纸, 4折页, 正反面四色印刷
尺寸: 85.5x131.5mm

 
 
<p>FEATURES</p> <ol style="list-style-type: none"> 1. Power Switch 2. Indicator 3. Auxiliary / charging Port 4. Play / Pause / Mode 5. Volume Down & Last Track 6. Volume Up & Next Track 7. LED Button 	<p>CHARGING THE BLUETOOTH DEVICE</p> <ol style="list-style-type: none"> 1. Connect the speaker's Mini USB socket (3) with the power source's USB port through USB cable. 2. The Power indicator (2) will show red while the battery is charging. When the speaker has reached a full charge the LED indicator will turn off to indicate the battery is fully charged 3. Disconnect the USB cable when it is fully charged. A full charge will take 2-3 hours. <p>SPEAKER CONTROLS AND FUNCTIONS</p> <ul style="list-style-type: none"> • Press Pause / Play button (4) to control music playback. • Press and hold the Volume Up button (6) to increase the volume. • Press and hold the Volume Down button (5) to decrease the volume. • Press the Volume Up button (6) to play next track. • Press the Volume down button (5) to play previous track. <p>PAIRING / RECONNECTING THE DEVICE</p> <ol style="list-style-type: none"> 1. Slide the power switch to "ON" position; the speaker will light up and will begin to rotate. The speaker will make a tone and is now turned ON and searching / pairing / reconnect mode will begin. 2. Now, turn ON the Bluetooth function of your device. 3. Search for "IBIZA" and select it to pair. (for the first time pairing or pairing a new mobile device) 4. The speaker will reconnect automatically if your mobile phone has been paired previously. (Note: Depending on the device's type and configuration, manual reconnection may be require.) 5. If pairing is successful, IBIZA will make a tone to confirm. 6. Slide the power switch to "OFF" position to turn off the speaker. (Note: If you can't search for the speaker, this means the last device is reconnecting automatically. Turn off the Bluetooth on the last device and start to pair. 	<p>MODES</p> <p>"Mode" button (4) navigates you through different speaker modes by press & hold. (Bluetooth -> FM Radio -> Aux-in)</p> <p>AUXILIARY-IN FUNCTION</p> <ol style="list-style-type: none"> 1. With the speaker powered on, connect the Mini USB connector of the included 2-in-1 cable into the speaker's port (3) and plug the other end 3.5 mm plug into your device's auxiliary port. 2. Press and hold Mode button (4) twice to switch to Aux-In Mode. 3. Disconnect the Auxiliary cable when finished. (Note: If there is no sound while auxiliary cable is connected to bluetooth device, ensure all other bluetooth devices are not paired and repeat step one. If the problem persists replace auxiliary cable.) <p>FM RADIO MODE</p> <ol style="list-style-type: none"> 1. With the speaker powered on, press and hold the Play / Pause button (4) for 2 seconds to enter into FM radio mode. 2. Press Play / Pause button (4) again for automatic navigate through FM channels. (Next track (6) & Last track (5): to seek the FM channels manually) 3. To exit FM radio mode press and hold the Play / Pause button (4) for 2 seconds to return to Bluetooth mode or to enter "Aux-in" Mode if the Mini USB to auxiliary cable is connected. <p>LED FUNCTION</p> <ol style="list-style-type: none"> 1. Turn on the speaker and it will light up and will begin to rotate. 2. The lighting and rotating can be turned on & off by press the LED button (7). <p>TROUBLE SHOOTING</p> <ul style="list-style-type: none"> • Recharge your speaker using the Mini USB cable. If the problem persists try using another Mini USB cable 	<p>No Response From the Unit</p> <ul style="list-style-type: none"> • Ensure your Bluetooth device has an A2DP profile • Check if both devices are paired and connected to each other. • Restart the device and try to reconnect. <p>Bluetooth device will not reconnect with the Speaker</p> <ul style="list-style-type: none"> • From your Devices Bluetooth menu select the "IBIZA" speaker and choose "Forget". Now repeat the steps to pair with the speaker with your device. <p>I can't find the devices name on the bluetooth menu of my phone</p> <ul style="list-style-type: none"> • Ensure the Bluetooth function is activated on your device. • Ensure you have paired the unit with your Bluetooth device. <p>SPECIFICATIONS:</p> <ul style="list-style-type: none"> • Model No.: SP2862 IBIZA • Driver Unit size: Ø 1.6" • Bluetooth: V 2.1 + EDR • Output power: 2.8 W • Frequency: 150Hz-20KHz • Working distance: 26.2-33ft (Distance may vary) • Rechargeable Battery: 350 mAh, 1 hour playback • Power Supply: Lithium battery/ USB charge <p>Limitation of Liability In no event, under any cause of action of theory of liability, shall Scirus Media Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation property damage, loss of value of the product or any third party products that are used in or with the Wave products, even if the Wave product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that Wave has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained inside or outside of the Wave products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained in the foreign device. Notwithstanding any damages that you might incur for any reason whatsoever (including without limitation, all damages referenced herein and all direct or general damages in contract, tort (including negligence) or otherwise), the entire aggregate liability of Wave and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wave product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under the applicable law.</p>
---	--	--	---

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Wave and Wave logo are trademarks of Wave Scirus Media, Inc. Wave logo is registered trademark of Wave Scirus Media, Inc. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Wave is under license. All other trademarks and trade names are those of their respective owners. ©2012

New York, NY 10011
Support@waveaudio.com
www.waveaudio.com
Made in China exclusively for Wave Scirus Media, Inc.
This product is not a toy.

Warning:
Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

Fire and Electric Shock Hazard

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the speaker. Such actions could result in electric shock.
- Do not expose your speaker to extremely high or low temperatures it can cause malfunction.
- Do not leave your speaker in direct sunlight for extended periods of time.
- Do not leave your speaker near open flames such as cooking burners, candles, or fireplaces.
- Do not block any ventilation openings.

Fall Hazard

- Do not place the speaker on high surfaces such as shelves. During music playback the speaker may move which could cause the speaker to shift and fall off of the edge.

Warning:
To reduce the risk of electric shock, do not remove cover (or back). Refer servicing to qualified service personnel.

CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the units internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage your speaker.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

FCC Disclaimer:
This device Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1- This device may not cause harmful interference, and
2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help or assistance.

This device complies with Part 15 of the FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:
1- This device may not cause harmful interference, and
2- This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

User Manual for SP2862



IBIZA
DISCO BALL WIRELESS SPEAKER

LIGHTWEIGHT DESIGN | DISCO BALL EFFECT | SUPERIOR SOUND

PACKAGE INCLUDES:

- 1 X BLUETOOTH SPEAKER
- 1 X 2-IN-1 CHARGING / AUXILIARY CABLE

IMPORTANT PLEASE READ BEFORE USING THIS PRODUCT