

INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Bluetooth Stereo Speaker
- USB rechargeable cable
- Instruction Manual


Key Features

- Stereo Wireless Speaker
- Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
- Stream Music/Audio wirelessly
- Use as Hands-Free speaker phone, with a built-in microphone
- IPX7 and Floating
- Rubberized Outer Sleeve
- Rechargeable built-in battery
- Wireless Streaming Range – 26 to 33 Feet

SAFETY INSTRUCTIONS

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not put objects into openings.
- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts

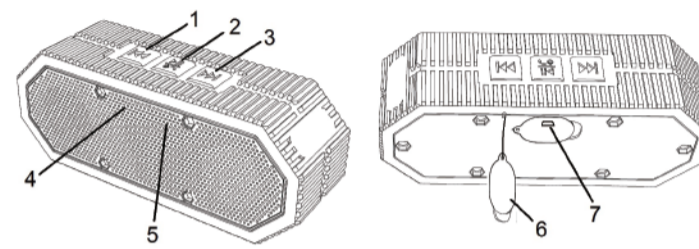

Item	Function	Operation
1	⏮ / Volume decrease	Short press will skip backward to the previous track, and long press will decrease the volume
2	MFB button	To turn ON/OFF the speaker. Short press will pause or resume the music. Call Incoming Answer / End Call / Redial last number when in Bluetooth mode.
3	Volume increase / ⏭	Short press will skip forward to the next track, and long press will increase the volume level
4	Built-In Mic	To answer incoming calls while in Bluetooth mode
5	LED indicator	LED turns RED while recharging, and turns off when fully recharged. LED turns BLUE when in Bluetooth mode.
6	Seal cover (with O-ring)	IPX7 protection of the speaker
7	DC Charging Port	DC Charging Port – To charge the speaker

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. LED turns RED, indicating that the speaker battery is being charged. Once it is fully charged, the LED will turn off. It will take around 10 hours to fully charge the speaker.

Turning ON/OFF the Speaker –

Press and hold the “MFB” button for 3-6 seconds until you hear the indication tone. Blue LED light will blink rapidly, your speaker is now ON and is entering “pairing” mode. Press and hold the “MFB” button for 3-6 seconds to turn off the speaker.

Pairing your device with Bluetooth Speaker –

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow the below steps.

1. Press and hold the “MFB” button for 3-6 seconds until you hear the indication tone.
2. Blue LED light will blink rapidly, your speaker is now ON and is entering “pairing” mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is “Aqua Tank”, pair it with this device.
6. If required, enter the password ‘0000’ to confirm to finalize pairing.
7. Once paired successfully, you would hear a beep tone and the blue LED light will blink slowly.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker.

Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the MFB button to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the MFB button.
Volume Increase	During a call	Long press on the ⏭ button will increase the volume
Volume Decrease	During a call	Long press on the ⏮ button will increase the volume
Redial last number	Standby mode and connected to a device	Short press the MFB button twice

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long press ⏭ to increase the volume or long press ⏮ to decrease the volume
Pause	Playing music	Press MFB button to pause the music
Play	Pause	Press MFB button to resume the music
Skip Forward / Skip Backward	Playing music	Short press ⏭ to skip forward the track. Short press ⏮ to skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

Specifications –

- Bluetooth version : 2.1+EDR
- Speaker : 2x5 Watts
- Unit Size : 8-15/16”x2-7/8”x3-7/16”
- Unit Weight : 1.4 lbs
- Play time : Up to 10 hours
- Charge Voltage : DC5V (USB)
- Bluetooth Range : 26 to 33 Feet
- Built-In Rechargeable Battery : 3.7V / 3600mAh
- Charging time : around 10 hours

(Note: Battery life & charging time may vary based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer’s product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer’s / Distributor’s maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer’s option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SHENZHEN TEKSUN TECHNOLOGY CO.,LTD may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user’s authority to operate the equipment.