
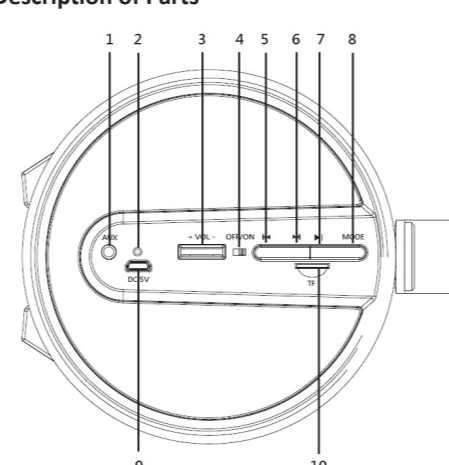

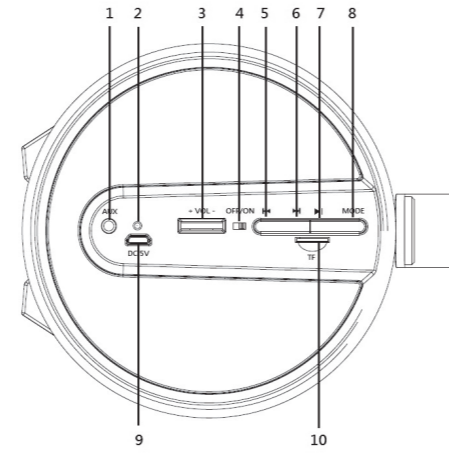


<p style="text-align: center;">BLUETOOTH SPEAKER</p> <p style="text-align: center;">5B194BT</p>  <p style="text-align: center;">INSTRUCTION MANUAL</p> <p style="text-align: center;">PLEASE READ ALL INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE USE</p> <p style="text-align: center;">1</p>	<p>Getting Started Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.</p> <p>Package Contents Bluetooth Indoor & Outdoor Portable Party Speaker USB Charging cable 3.5mm auxiliary cord Instruction manual</p> <p>Features 1. 2.1 Channel Bluetooth Indoor & Outdoor Speaker with Loud Sound & Heavy Bass 2. Built-in 2 Speakers & 4 Inch Sub-woofer 3. Built-in Micro SD (TF) card slot & Aux jack 4. Built-in rechargeable battery 5. USB Recharge Cable & Aux Cable included 6. Built-in leather handle makes it conveniently portable</p> <p>Specification Bluetooth version : 2.1 + EDR Subwoofer Size : 4" Speaker Output : 2 x 2Watts + 1 x 7Watts Sub-Woofers Unit Size : ~10.2" x 5.2" x 5.6" Unit Weight : ~3 lbs Play time : Up to 1.5 hours (max. volume), and 4 hours (moderate volume) Charge Voltage : DC5V (USB) Bluetooth Range : 27 - 33 Feet Built-In Rechargeable Battery : 3.7V / 1000mA (Note: Battery life & charging time may vary based on usage & types of devices used.)</p> <p style="text-align: center;">2</p>	<p>Description of Parts</p>  <ol style="list-style-type: none"> Auxiliary Port LED Light Indicator Volume Controller ON / OFF Switch Skip Backward Skip Forward Play / Pause Mode Button USB Charging Port Micro SD Card (TF) Slot <p>INSTRUCTIONS FOR USE Charging the speaker For best results, fully charge the unit before use. 1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source. 2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes nearly 4 to 5 hours to fully charge the Battery. Note: In order to have better battery life, please do not charge for more than 6 hours. Overcharging the speaker can adversely impact the battery life.</p> <p>Turn On/Off the Speaker 1. To Turn "ON" slide the "POWER ON/OFF" switch to the ON Position. 2. To Turn "OFF" slide the "POWER ON/OFF" switch to the OFF Position.</p> <p>Turn the speaker to Bluetooth pairing mode 1. Turn ON the speaker. 2. You would hear the beep tone and see LED Light blinking steadily. The speaker is now in pairing mode. (Note: Speaker will automatically pair with previously paired devices)</p> <p style="text-align: center;">3</p>	<p>Pairing your device with Bluetooth Speaker Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within 27-33 Feet. Simply follow the below steps. 1. Turn ON the speaker. 2. You would hear the beep tone and see LED Light blinking steadily. The speaker is now in pairing mode. 3. Turn on Bluetooth on your Mobile Phone or Tablet or Computer. 4. It will search for available Bluetooth devices in its proximity. 5. The pairing name of our Bluetooth Speaker is "17-94U", pair it with this device. 6. If required, enter the password '0000' to confirm to finalize pairing. 7. Once paired successfully, the Blue LED will blink slowly. 8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.</p> <p>Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.</p> <p>Listening to Music Wirelessly Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.</p> <table border="1"> <thead> <tr> <th>Function</th> <th>Operation</th> <th>Button</th> </tr> </thead> <tbody> <tr> <td>Increase / Decrease Volume</td> <td>Playing music</td> <td>Use the Volume Controller located on the control panel to adjust the volume to your desired level</td> </tr> <tr> <td>Pause</td> <td>Playing music</td> <td>Press ► once to pause the music</td> </tr> <tr> <td>Play</td> <td>Pause</td> <td>Press ► once resume the music</td> </tr> <tr> <td>Previous track</td> <td>Playing music</td> <td>Short press the ◀ button to the previous track</td> </tr> <tr> <td>Next track</td> <td>Playing music</td> <td>Short press the ▶ button to the next track</td> </tr> </tbody> </table> <p>Aux function of the Speaker (to play music from non-Bluetooth devices) 1. Turn on the speaker. 2. Plug the 3.5 mm auxiliary cord (included) to the auxiliary port of the speaker. And, the other end of the cable connects to the audio device (such as MP3 Players / computer / tablet etc). 3. Select your favorite song at the source device.</p> <p style="text-align: center;">4</p>	Function	Operation	Button	Increase / Decrease Volume	Playing music	Use the Volume Controller located on the control panel to adjust the volume to your desired level	Pause	Playing music	Press ► once to pause the music	Play	Pause	Press ► once resume the music	Previous track	Playing music	Short press the ◀ button to the previous track	Next track	Playing music	Short press the ▶ button to the next track	<p>Note: Once AUX cable is connected to the Bluetooth Phone & Speaker, music through the Bluetooth will be stopped. Media and volume can be controlled only through source devices, while playing music in Auxiliary mode.</p> <p>Media controls (Skip Forward, Skip Backward, Play, Pause etc) can be controlled only from the source device, while in auxiliary mode.</p> <p>Listening to Music using Micro SD Card (TF) Slot 1. Turn on the speaker. 2. Insert Micro SD Card (TF) into the Micro SD Card (TF) Slot. Music would be automatically streamed. 3. Press Skip Forward or Skip Backward to move forward or backward on your playlist. 4. Press Play/Pause to Play or Pause a track.</p> <p>Note: While using Bluetooth, if you insert Micro SD Card, speaker would disconnect the Bluetooth connection and switch to Micro SD card function. You can press MODE button again, to select the Bluetooth mode.</p> <p>Tips!! 1. Press the "MODE" button to switch different functions of the speaker. The functions are – Bluetooth / Micro SD / AUX-in. 2. When the unit is not in use, turn OFF the device to save the battery power. 3. Do not overcharge the unit; every charge should not exceed 6 hours.</p> <p>Troubleshooting</p> <table border="1"> <thead> <tr> <th>Problem</th> <th>Possible Cause</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td>Low sound level</td> <td>Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead</td> <td>Adjust source volume. Charge Battery.</td> </tr> <tr> <td>Sound distorted</td> <td>Battery nearly dead</td> <td>Charge Battery.</td> </tr> <tr> <td>No sound at all.</td> <td>Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.</td> <td>Turn the speaker on. Adjust volume source. Play media from source.</td> </tr> </tbody> </table> <p style="text-align: center;">5</p>	Problem	Possible Cause	Solution	Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.	Sound distorted	Battery nearly dead	Charge Battery.	No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the speaker on. Adjust volume source. Play media from source.	<p>Care and Maintenance Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.</p> <p>The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.</p> <p>Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.</p> <p>Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.</p> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction</p> <p style="text-align: center;">6</p>
Function	Operation	Button																																	
Increase / Decrease Volume	Playing music	Use the Volume Controller located on the control panel to adjust the volume to your desired level																																	
Pause	Playing music	Press ► once to pause the music																																	
Play	Pause	Press ► once resume the music																																	
Previous track	Playing music	Short press the ◀ button to the previous track																																	
Next track	Playing music	Short press the ▶ button to the next track																																	
Problem	Possible Cause	Solution																																	
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.																																	
Sound distorted	Battery nearly dead	Charge Battery.																																	
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the speaker on. Adjust volume source. Play media from source.																																	

<p style="text-align: center;">ALTAVOZ PORTÁTIL BLUETOOTH PARA INTERIOR Y EXTERIOR</p> <p style="text-align: center;">5B194BT</p>  <p style="text-align: center;">MANUAL DE INSTRUCCIONES</p> <p style="text-align: center;">POR FAVOR LEA TODAS LAS INSTRUCCIONES Y GUÁRDELO PARA USO POSTERIOR</p> <p style="text-align: center;">1</p>	<p>Empezando Retire la unidad de la caja. Retire cualquier envase del producto. Por favor, conserve todo el embalaje hasta que haya comprobado y se contaron todas las partes y contenidos en la lista.</p> <p>Contenidos del Paquete Bocina Bluetooth Cable de carga USB 3.5mm cable Auxiliar Manual de Instrucciones</p> <p>Características 1. Canal 2.1 Bluetooth interior y exterior del altavoz con sonido fuerte y bajo pesado 2. Dos altavoces incorporados con 4" sub-woofer 3. Micro SD (TF) ranura de la tarjeta y conector auxiliar incorporada 4. La batería incorporada recargable 5. Cable USB recargable y cable auxiliar incluido 6. Mango de cuero para uso portátil</p> <p>Especificación Versión de Bluetooth: 2.1 + EDR Tamaño del sub-woofer: 4" Salida del altavoz: 2 x 2Watts + 1 x 7Watts sub-woofer Tamaño de la unidad: ~ 10.2" x 5.2" x 5.6" Unidad de peso: ~ 3 libras Tiempo de reproducción: Hasta 1.5 horas (al máximo volumen.) Y 4 horas (al volumen moderado) Voltaje de carga: DC 5V (USB) El alcance de Bluetooth: 27 - 33 pies Batería recargable incorporada: 3,7 V / 1000 mA</p> <p>(Nota: Duración de la batería y el tiempo de carga puede variar en función del uso y tipos de dispositivos utilizados.)</p> <p style="text-align: center;">2</p>	<p>Descripción de piezas</p>  <ol style="list-style-type: none"> Puerto auxiliary Indicador de luz LED Control de Volumen Interruptor encendido / apagado Saltar atrás Saltar hacia Adelante Reproducir / Pausa Botón de modo Puerto de carga USB Tarjeta Micro SD (TF) Ranura <p>INSTRUCCIONES DE USO Para obtener los mejores resultados, cargue completamente la unidad antes de usarla. 1. Conecte el cable USB al puerto de carga del altavoz e inserte el otro extremo en su computadora o fuente de energía similar. 2. La luz LED roja se encenderá indicando que la batería se está cargando. Una vez que esté completamente cargada, la luz LED rojo se apagará. Se tarda cerca de 4 a 5 horas para cargar completamente la batería. Note: Para obtener una mejor duración de la batería, no cargue durante más de 6 horas. La sobrecarga del altavoz puede afectar negativamente a la vida de la batería.</p> <p>Encender / apagar el altavoz 1. Para activar "ON", deslice el interruptor "POWER ON / OFF" en la posición ON. 2. Para apagar "OFF", deslice el "POWER ON / OFF" a la posición de apagado.</p> <p>Activar el altavoz en modo de emparejamiento Bluetooth 1. Activar el altavoz. 2. Se oirá un pitido y verá la luz LED que parpadea. El altavoz está en modo de emparejamiento. (Nota: Altavoz se emparejará automáticamente con los dispositivos previamente asociados)</p> <p style="text-align: center;">3</p>	<p>Sincronizar su dispositivo con Bluetooth Speaker Su altavoz puede transmitir audio desde cualquier dispositivo habilitado para Bluetooth dentro de 27-33 pies. Sólo tiene que seguir los siguientes pasos. 1. Activar el altavoz. 2. Se oirá un pitido y verá la luz LED que parpadea. El altavoz está en modo de emparejamiento. 3. Active Bluetooth en su teléfono móvil o tableta. 4. Se buscará los dispositivos Bluetooth disponibles en su proximidad. 5. El nombre de emparejamiento de nuestra Altavoz Bluetooth es "17-94U", sincronizarlo con este dispositivo. 6. Si es necesario, introduzca la contraseña '0000' para confirmar para finalizar el emparejamiento. 7. Una vez que se haya conectado correctamente, la luz LED azul parpadea lentamente. 8. Si usted no puede emparejar el dispositivo dentro del marco de tiempo o si desea sincronizarlo con un nuevo dispositivo siga los pasos descritos anteriormente.</p> <p>Selección su canción favorita en el dispositivo Bluetooth y la música va a transmitir a través del altavoz del bluetooth.</p> <p>Escuchar música de forma inalámbrica Por favor asegúrese de que el dispositivo (iPhone, tablet u otro Móvil) está emparejado con el altavoz Bluetooth para transmitir música de forma inalámbrica. Una vez que se empareja, reproducir música desde su dispositivo.</p> <table border="1"> <thead> <tr> <th>Función</th> <th>Operación</th> <th>Botón</th> </tr> </thead> <tbody> <tr> <td>Aumentar / Disminuir el Volumen</td> <td>Tocando musica</td> <td>Utilice el controlador de volumen situado en el panel de control pa</td> </tr> <tr> <td>Pausa</td> <td>Tocando musica</td> <td>Pulse ► una vez para hacer una pausa en la música</td> </tr> <tr> <td>Reproducir</td> <td>Pausa</td> <td>Pulse ► una vez reanudar la música</td> </tr> <tr> <td>Pista anterior</td> <td>Tocando musica</td> <td>Pulsación corta en el ◀ botón a la pista anterior</td> </tr> <tr> <td>Siguiente pista</td> <td>Tocando musica</td> <td>Pulsación corta en el ▶ botón a la siguiente pista</td> </tr> </tbody> </table> <p style="text-align: center;">4</p>	Función	Operación	Botón	Aumentar / Disminuir el Volumen	Tocando musica	Utilice el controlador de volumen situado en el panel de control pa	Pausa	Tocando musica	Pulse ► una vez para hacer una pausa en la música	Reproducir	Pausa	Pulse ► una vez reanudar la música	Pista anterior	Tocando musica	Pulsación corta en el ◀ botón a la pista anterior	Siguiente pista	Tocando musica	Pulsación corta en el ▶ botón a la siguiente pista	<p>Función auxiliar del altavoz (para reproducir música desde dispositivos sin Bluetooth) 1. Encienda el altavoz. 2. Conectar el cable auxiliar de 3.5 mm al puerto auxiliar del altavoz y conecte el otro extremo del cable al dispositivo de audio (como reproductores de MP3 / ordenador / tableta, etc.). 3. Seleccione su canción favorita en su dispositivo.</p> <p>Note: Una vez que el cable auxiliar está conectado al altavoz, la transmisión de música a través de bluetooth se detendrá. Medios de comunicación y el volumen se pueden controlar sólo a través de sus dispositivos mientras se reproduce música a través del modo auxiliar.</p> <p>Los controles de medios (salto hacia adelante, salto hacia atrás, reproducción, pausa, etc.) puede ser controlado sólo desde el dispositivo de origen a través del modo auxiliar.</p> <p>El escuchar la música usando la tarjeta Micro SD (TF) Ranura 1. Encienda el altavoz. 2. Inserte la tarjeta Micro SD (TF) en la ranura para tarjeta Micro SD (TF). La música será transmitido automáticamente. 3. Pulse salto hacia adelante o salto hacia atrás para mover hacia adelante o hacia atrás en su lista de reproducción. 4. Pulse el botón Reproducir / Pausa para reproducir o pausar una pista.</p> <p>Note: Si inserta una tarjeta Micro SD cuando se utiliza el modo Bluetooth, el altavoz se desconectará de la conexión Bluetooth y cambiara a la función de la tarjeta Micro SD. Presione el botón MODE para seleccionar el modo Bluetooth.</p> <p>Tips!! 1. Pulsar el botón "MODE" para cambiar a diferentes funciones en el altavoz. Las funciones son - Bluetooth / SD / AUX-IN. 2. Cuando la unidad no está en uso, apague el dispositivo para ahorrar energía de la batería. 3. No sobrecargue la unidad; cada carga no debe exceder de 6 horas.</p> <p style="text-align: center;">5</p>	<p>Solución de problemas</p> <table border="1"> <thead> <tr> <th>Problema</th> <th>Causa posible</th> <th>Solución</th> </tr> </thead> <tbody> <tr> <td>Bajo nivel de ruido</td> <td>Dispositivo (tableta, teléfono móvil, ordenador portátil, etc.) Volumen demasiado bajo. Batería muerta.</td> <td>Ajustar el volumen del dispositivo.</td> </tr> <tr> <td>Sonido distorsionado</td> <td>la batería casi muerta</td> <td>Carga de la batería.</td> </tr> <tr> <td>Ningún sonido</td> <td>Dispositivo (tableta, teléfono móvil, ordenador portátil.) Desactivado. Altavoz desactivado. Volumen bajado en el dispositivo. Medios pausa en el dispositivo.</td> <td>Encender la fuente. Activar el altavoz. Ajuste el volumen en el dispositivo. Reproducir archivos multimedia desde el dispositivo.</td> </tr> </tbody> </table> <p>Cuidado y mantenimiento Limpie la unidad con un paño suave y húmedo. No utilice nunca productos químicos o abrasivos duros. Mantenga esta unidad alejada de ambientes húmedos o mojados.</p> <p>El símbolo del contenedor con ruedas tachado en este artículo indica que este producto necesita ser eliminado de una manera ambientalmente amistosa. Póngase en contacto con las autoridades locales para obtener información sobre dónde llevar el artículo para su reciclaje.</p> <p>Note: iPod y iPhone son marcas comerciales de Apple Inc., registradas en los EE.UU. y otros países.</p> <p style="text-align: center;">6</p>	Problema	Causa posible	Solución	Bajo nivel de ruido	Dispositivo (tableta, teléfono móvil, ordenador portátil, etc.) Volumen demasiado bajo. Batería muerta.	Ajustar el volumen del dispositivo.	Sonido distorsionado	la batería casi muerta	Carga de la batería.	Ningún sonido	Dispositivo (tableta, teléfono móvil, ordenador portátil.) Desactivado. Altavoz desactivado. Volumen bajado en el dispositivo. Medios pausa en el dispositivo.	Encender la fuente. Activar el altavoz. Ajuste el volumen en el dispositivo. Reproducir archivos multimedia desde el dispositivo.
Función	Operación	Botón																																	
Aumentar / Disminuir el Volumen	Tocando musica	Utilice el controlador de volumen situado en el panel de control pa																																	
Pausa	Tocando musica	Pulse ► una vez para hacer una pausa en la música																																	
Reproducir	Pausa	Pulse ► una vez reanudar la música																																	
Pista anterior	Tocando musica	Pulsación corta en el ◀ botón a la pista anterior																																	
Siguiente pista	Tocando musica	Pulsación corta en el ▶ botón a la siguiente pista																																	
Problema	Causa posible	Solución																																	
Bajo nivel de ruido	Dispositivo (tableta, teléfono móvil, ordenador portátil, etc.) Volumen demasiado bajo. Batería muerta.	Ajustar el volumen del dispositivo.																																	
Sonido distorsionado	la batería casi muerta	Carga de la batería.																																	
Ningún sonido	Dispositivo (tableta, teléfono móvil, ordenador portátil.) Desactivado. Altavoz desactivado. Volumen bajado en el dispositivo. Medios pausa en el dispositivo.	Encender la fuente. Activar el altavoz. Ajuste el volumen en el dispositivo. Reproducir archivos multimedia desde el dispositivo.																																	