

刀模线不印刷

单号: EAC151127138

型号: 5B202BT

印刷及材质要求: 80g书写纸, 正反面单色印刷, 四折页


尺寸: 105x148mm

美工: 小劳

文件完成日期: 2016/01/14

ITEM:5B202BT

**Bluetooth
Sound Pounder Water-Resistant
Speaker**



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
& RETAIN FOR FUTURE USE**

1

Getting Started
Remove the unit from the box. Remove any packaging from the product. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents
Water-Resistant Bluetooth Sound Pounder Speaker
USB charging cable
3.5mm Aux cable
Instruction manual

Features


1. Waterproof Speaker
2. Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, BlackBerry, smartphones, tablets, computers and more.
3. Stream Music/Audio wirelessly
4. Built-in Mic for hands-free calling
5. Rechargeable built-in battery

IMPORTANT SAFETY INFORMATION

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Do not use if unit has been dropped or damaged in any way.
4. Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
5. Place unit on sound, even surface, free of vibrations and away from sources of heat.
6. Do not put objects into openings.
7. Keep free of dust, lint, hair etc.
8. Do not use this unit for anything other than its intended use.
9. Keep this product out of reach of children.
10. This product is not a toy.
11. Do not play music at excessive levels especially near children, as damage to hearing may occur.

2

Description of Parts:

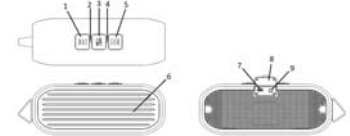

S. No.	Description	S. No.	Description
1	Skip Backward / Lower Volume	6	Speaker
2	Built-In Microphone	7	Charging Port
3	MFB Button (Power / Play / Pause / Phone)	8	Water-Resistant Rubber Flap
4	LED Light Indicator	9	Aux-in Port
5	Skip Forward / Higher Volume		

INSTRUCTIONS FOR USE

Charging the speaker
For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 3-5 hours to fully charge the speaker.
3. Once the speaker is fully recharged, disconnect the USB Cable and firmly close the Rubber Flap, to cover the USB Charging Port secure. If the USB charging port is not securely covered, water may seep into the electronics circuit and may damage the unit. This damage will NOT be covered under product warranty.

Turn On/Off the Speaker
Press and hold the MFB button (Power) for 2-4 seconds until you hear the indication tone. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode. Press and hold the MFB button (Power) for 2-4 seconds to turn off the speaker.

3

Turn the speaker to Bluetooth pairing mode -

1. Press and hold the MFB button (Power) for 2-4 seconds until you hear the indication tone.
2. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode. (Note: Speaker automatically pairs with the previously paired device)

Pairing your device with Bluetooth Speaker -
Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 26.33 Feet. Simply follow the below steps.

1. Press and hold the MFB button (Power) for 2-4 seconds until you hear the indication tone.
2. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "SL SOUNDPOUNDER", pair it with this device.
6. If required, enter the password "0000" to confirm to finalize pairing.
7. Once paired successfully, you would hear a beep tone and the blue LED light will flash slowly.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follow the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

Talking using the Bluetooth Speaker
Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions:

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the MFB button to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the MFB button for 2-3 seconds
End Call	Incoming Call	After your phone conversation, short press the MFB button
Volume Increase	During a call	Long press on the button will increase the volume.
Volume Decrease	During a call	Long press on the button will decrease the volume.
Redial last number	Standby mode and connected to a device	Short press the MFB button twice

4

Listening to Music Wirelessly
Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long press to increase the volume or long press to decrease the volume
Pause	Playing music	Short press the MFB button to pause the music
Play	Pause	Short press the MFB button to resume the music
Skip Forward / Skip Backward	Playing music	Short press to skip forward the track. Short press to skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

Play music using "Aux-in"

1. Press and hold the MFB button (Power) for 2-4 seconds until you hear the indication tone.
2. Insert the 3.5 mm Aux in cable (included) in the Aux-in jack of the speaker. And, the other end of the cable, to the audio device (such as computer / tablet etc.).
3. The Blue LED will stay on.
4. Select your favorite song at the source device.

(Note: When you insert 3.5 mm Aux in cable into the Aux-in jack of the speaker, the Bluetooth of the speaker will Turn Off, automatically. Functions except Volume Increase or Volume Decrease can be only controlled through source devices, while playing music in Auxiliary mode. An indication tone will alert you when the volume is adjusted to the maximum level.)

Do's and Don'ts
Do not play music at excessive levels. Damage to hearing and/or equipment may result.

Specification

Bluetooth version : 2.1+EDR
Speaker : 2x3 Watts
Unit Size : 8-1/8"x2-1/2"x2-3/4"
Unit Weight : 15.3 oz
Play time : 2-3 hours
Charge Voltage : DCSV (USB)
Charging time : 3-5 hours

5

Bluetooth Range : 26-33 Feet
Built-In Rechargeable Battery : 3.7V / 800mAh
(Note: Battery life & charging time may vary, based on tags & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out wheeled bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for recycling.

Note: iPad and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

6

FCC Instructions
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty
This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

7

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtgtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

8