

## Bluetooth Speaker 5B246BT



INSTRUCTION MANUAL  
PLEASE READ ALL INSTRUCTIONS CAREFULLY  
& RETAIN FOR FUTURE USE

### Getting Started

Remove the unit from the box.  
Remove any packaging from the product.  
Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

Bluetooth Water-Resistant Speaker  
USB charging cable  
3.5mm Aux cable  
Instruction manual

### Features


- Bluetooth Water Resistant Speaker
- Built-in 3-watt speaker
- Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
- Stream Music/Audio wirelessly
- Built-in FM radio
- Built-in Mic for hands-free calling
- Rechargeable built-in battery
- Built-in Micro SD (TF) card slot to stream music

### IMPORTANT SAFETY INFORMATION

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not put objects into openings.

- Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

### Description of Parts:

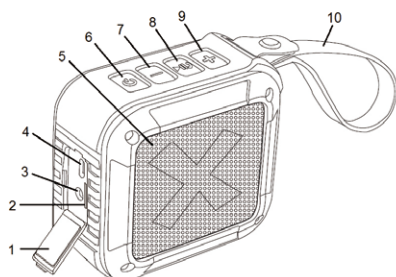

S. No.	Description	S. No.	Description
1	Rubber Flap	6	Power ON / OFF Button
2	Micro SD (TF) Card Slot	7	Skip Backward/Lower Volume(-)
3	Aux-in Port	8	MFB button (Play/Pause/Phone/Mode)
4	Charging Port	9	Skip Forward / Higher Volume (+)
5	LED Light Indicator	10	Rubber Handle

### INSTRUCTIONS FOR USE

#### Charging the speaker

**For best results, fully charge the speaker before its first use.**

- Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
- Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take 3 - 4 hours to fully charge the battery.
- Once the speaker is fully recharged, disconnect the USB Cable and firmly close the Rubber Flap, to cover the USB Charging Port secure. If the USB charging port is not securely covered, water may seep into the electronics circuit and may damage the unit. This damage will NOT be covered under product warranty.

#### Turn On/Off the Speaker

Press and hold the Power ON / OFF button for 5-7 seconds until you hear the indication tone. Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.  
Press and hold the Power ON / OFF button for 2-3 seconds to turn off the speaker.

#### Turn the speaker to Bluetooth pairing mode -

- Press and hold the Power ON / OFF button for 5-7 seconds until you hear the indication tone.
- Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.  
(Note: Speaker automatically pairs with the previously paired devices)

#### Pairing your device with Bluetooth Speaker –

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 27-33 Feet. Simply follow the below steps.

- Press and hold the Power ON / OFF button for 5-7 seconds until you hear the indication tone.
- Blue LED light will blink, your speaker is now ON and is entering "pairing" mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of our Bluetooth Speaker is "SL HYDRACUBE", pair it with this device.
- If required, enter the password '0000' to confirm to finalize pairing.
- Once paired successfully, you would hear a beep tone and the blue LED light will stay on.
- If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

#### Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Function	Button
Answer Incoming Call	Incoming Call	Short press the MFB button to answer an incoming call.
Reject Incoming Call	Incoming Call	Long press the MFB button for 2-3 seconds.
End Call	Incoming Call	After your phone conversation, short press the MFB button
Volume Increase	During a call	Long press on the + button will increase the volume
Volume Decrease	During a call	Long press on the - button will decrease the volume
Redial last number	Standby mode and connected to archive	Short press the MFB button twice

### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Function	Button
Increase/Decrease Volume	Playing music	Long press + to increase the volume or long press - to decrease the volume
Pause	Playing music	Short press the MFB button to pause the music.
Play	Pause	Short press the MFB button to resume the music.
Skip Forward / Skip Backward	Playing music	Short press + to skip forward the track. Short press - to skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum level)

#### Aux function of the Speaker (to play music from non-Bluetooth devices)

- Turn on the speaker.
- Plug the 3.5 mm Aux cable (included) in to the Aux-in port of the speaker. And, connect the other end of the cable to the audio device (such as MP3 Players / computer / tablet etc.).
- Select your favorite song at the source device.  
Note: Once AUX cable is connected to the Speaker, music through the Bluetooth will be stopped. Functions (except increase/decrease volume) like Skip Backward, Skip Forward etc can be only controlled through source devices, while playing music in Auxiliary mode.

#### Listening to Music using Micro SD (TF) Card Slot

- Turn on the speaker.
- Insert Micro SD (TF) card into the Micro SD (TF) Card Slot. Music would be automatically streamed.
- Short press + or - to move forward or backward on your playlist.
- Long press + to increase the volume or long press - to decrease the volume.
- Short press MFB button to Play or Pause a track.  
Note: While using Bluetooth, if you insert Micro SD (TF) Card, speaker would disconnect

the Bluetooth connection and switch to Micro SD (TF) card function. You can long press MODE button each time until it goes back Bluetooth mode.  
Micro SD (TF) Card not included.

#### FM Radio

- Turn ON the Speaker.
- Insert the Aux cable (included) into the Aux-in port. Leave the other end of the cord open. Aux cable serves as FM Antenna while in FM Radio mode.
- Long press MFB button each time until FM mode is selected.
- Short press MFB button again and the device would automatically search and store all the FM Radio stations.
- Short press + or - button to change the FM Radio stations.
- Long press + to increase the volume or long press - to decrease the volume.

#### Tips!!

- Long press the MFB button each time to switch different functions of the speaker. The modes appear in the following sequence – Bluetooth / Micro SD (TF) / FM Radio / AUX-In.
- When the unit is not in use, turn OFF the device to save the battery power.

#### Do's and Don'ts

Do not play music at excessive levels. Damage to hearing and/or equipment may result.  
Do not use outdoors in wet or in damp surroundings.

#### Specification

Bluetooth version	: 3.0+EDR
Speaker	: 3 Watts
Unit Size	: ~3.9" x3.5" x2"
Unit Weight	: 8 oz
Play time	: about 2 hours
Charge Voltage	: DCSV (USB)
Bluetooth Range	: 27-33 Feet

Built-In Rechargeable Battery : 3.7V / 500mAh  
(Note: Battery life & charging time may vary, based on usage & types of devices used.)

#### Troubleshooting

Problem	Possible Cause	Solution
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.
<b>No sound at all</b>	Source (Tablet, Mobile Phone, Laptop, etc.) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

#### Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives.  
Keep this unit away from wet or damp surroundings.

The crossed out wheelee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc., registered in the US, and other countries.

#### FCC Instructions

Changes or modifications not expressly approved by the party

responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

**WARRANTY DURATION:** All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

### FCC Warning

#### Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.