

Vibe
OUTDO

Wireless Key Finder
Operation Manual VAU-BTKEY-ASST

ON/OFF Battery Cover

POWERING ON THE KEY FINDER
Power On: Press and hold the power button for 4 seconds until you hear 2 "beeps"
Power Off: Press and hold the power button for 4 seconds until you hear a long beep.
NOTE: You must disconnect your key finder from your smart phone before you turn it off.

CONNECTING TO THE KEY FINDER

1. Enable Bluetooth on your smart phone.
2. Download and install the "GoFinder" app on your smart phone and open the app.
3. Click the "+" button to search for connectable tags.
4. Search for "VAU-BTKEY" in the device list to connect it to

your smart phone. The tag will automatically connect to your phone the next time it's powered on and Bluetooth is enabled.

5. To edit the tag's display name, or delete the tag, slide left on the tag.

USING THE KEY FINDER

1. To locate a tag, open the "GoFinder" App and press "Alarm" on the tag you want to locate. Once you find it, press the "Alarm" button to turn off the alarm.
2. When the phone is in range, and you want to locate your phone, double click the key finder to make your phone sound an alarm so you can locate it.

LOCATION SERVICES / MAP
When you park your car, press the button on your Key Finder to mark your current location on the map in the App.

Select "Location List" to find your vehicle.

If your Key Finder is lost, a pin-drop will automatically mark on the map in the App to tell you where it was last located. Select "Historical Location" to view this location.

SHUTTER BUTTON
Press the "Photograph" button on the app to turn your Key Finder into a remote shutter button.

Adjust your flash settings, switch between front and rear

cameras on your smart device. Press the button on the Key Finder once to take a photo.

SETTINGS
The settings menu on the upper right corner allows you to adjust below.

1. Set an Alarm when disconnecting
2. WiFi Security
3. Ring Options (3)
4. Software Version View
5. Battery Power Display

REPLACING THE BATTERY

1. Using a coin as a key on the battery cover, twist to the left to unscrew the battery cover.
2. Place a new CR2032 battery inside the unit according to the indicated polarity.
3. Replace the battery cover and twist to the right to screw it closed.

CARE AND MAINTENANCE
Read the following recommendations before using the unit.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.

- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.