	mbsUp! Wireless Headphones	MANUAL
ARTWORK TYPE: [PACKAGING STICKER
MATERIAL: 90gsm		
FINISH: uncoate	ed	
CUTTER GUIDE SIZE	80 X 95mm (whe	n folded)
PRODUCT CODE:	CARWCDLBKPF	RM
BARCODE:	TYP	PE: EAN 13, 80%
CMYK SPECIFIC PA	ANTONE COLOURS	FOLDING GUIDE T - 1 Spot Colour 'Folding' 'Cutter quid'

FON	IT LISTING:		
	WHERE	WHAT	
1.	Product Title		
2.	General Text		
3.	TU Details		
4.	Warnings		

NOTES: Black and white print. Double sided print Folded manual.

VERSION DATE:	
DATE	DESIGNER
19/10/2018	ALYCE KOHLER

Answer/end calls
Press the ON/OFF button once to answer and again to end a call.

Charging the Earphones

1. Switch the headphones OFF before charging.

2. Plug the Micro USB cable (supplied) into the headphones and connect to a USB charging port.

3. A red LED light within the earphone with illuminate to indicate charging.

4. Once charging is complete, the red LED light within the earphone will turn blue.

Note:

- Charge the earphones fully before using for the first time.

- The headphones will turn off automatically if the device is not paired within 15 minutes of switching them on.

- If the headphones fail to connect, restart the headphones or try charging them to ensure decent battery level.

Charging Time
Playback/Talk Time

Safety Recommendations

Do not use the earphones whilst they are charging. Adjust volume to an appropriate level.

Loud sounds may damage your hearing. Volume restricted in line with EU guidelines. For traffic safety, never use your earphones while riding a bloycle, motorbike or driving. Any signs of wear and tear please discard immediately. Do not use if connections are loose.

WHEN SENDING FINAL ARTWORK TO FACTORY PLEASE MAKE SURE ALL FONTS HAVE BEEN OUTLINED, AND ALL IMAGED EMBEDDED.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help.				Wireless HEADPHONES		
Primark Limited PO Box 644 Arthur Ryan House 22-24 Parnell Street Dublin 1 Ireland Primark Tiendas S.L.U Gran Via, 32, 5 28013 Madrid Spain CIF – B93875427 Primark US Corp. 101 Arch Street, Boston, MA 02110 RN Code:145478 Season Code: AW19 Prodott in Clin / Producted in China Fabriqué en Chine / Geproducerd in China Prodott in Clin / Wyprodukowano w Chinach Season Code: AW19				INSTRUCTIONS		
EN Wireless Headphones Product Specifications Bluetooth range: 10m Talking/music-playing time: approx. 4 hours Charging time: approx. 2 hours Power button/Play/Pause/Answer and hang up calls Previous track (press once) / Volume + (hold down) Next track (press once) / Volume - (hold down) Somm headphone jack for wired use (Included) 1.5m long headphone cable USB Charging Cable (Included) Microphone	Troubleshooting: If the device fails to pair more than twice; 1. Double check that the product is compatible with your device 2. Charge It in case of low battery 3. Check if the headphones are in pairing mode 4. Restart the headphones 5. If surrounded by too many Blueboth devices this might be causing interference. If the volume is too low; 1. Check and adjust the volume on the connected device 2. Charge the headphones in case of low battery If the sound won't work; 1. Ensure that the distance between the headphones and the paired device is with valid distance. If the LED Light is not working;					
Turning ON: Hold the power button down for 3 seconds to turn the headphones ON. You will hear the prompt: 'Bluetooth Mode' and the LED light will flash Blue & Red consistently (waiting for Bluetooth connection). Turning OFF: Hold the power button down again for 3 seconds to turn the headphones OFF. You will hear the prompt 'Power OFF' and the LED light will switch off. Connecting to Bluetooth 1. Turn the earphones ON. 2. Turn on your device and make sure the Bluetooth function is activated. 3. Search for "WIRLSHPXPRM" and select it to pair. The headphones will make a sound and the LED light will flash blue, slowly. 4. You can now play music from your device and listen using the headphones. 5. Once you turn your devices Bluetooth off, the earphones will make a noise and the LED light will flash Blue & Red fast again to show it's waiting to be connected.	2. Restart the headphones Technical Specifications Bluetooth Range V5.0 Transmitting Frequency 20Hz-20KHz Sensibility ≥94dB (AT 1KHz) Output 320Ms					