

All information contained in this documents is subject to change without prior notification. POINTMAN ©2016. All rights reserved.

POINTMAN® Card Printer

Javelin DNA™ PRO

User guide manual

Install Printer and Ready



POINTMAN

www.pointman.co.kr

Contents

Safety Precautions	06
Getting Started	09
Product Overview	09
In the Box	09
Names of Parts	10
N10 (Manual Feeding, Single-sided Printing)	10
N20 (Auto Feeding, Single-sided Printing)	12
N20 (Auto Feeding, Double-sided Printing)	14
N30 (Auto Feeding, Double-sided Printing)	16
Load cleaning Roller & Ribbon	18
Load Cleaning Roller	18
Load Ribbon	19
Load Cards	20
Place Cards in the Input Hopper	20
Place Cards after Removing the Input Hopper	21
Magnetic Cards	23
Input Hopper & Ribbon Lock	24
Input Hopper Lock	24
Ribbon Lock	24
Print Single Card	25
Install/Remove Output Stacker	26
Open the Output Stacker Cover and Remove the Cards	26
Use the Spring Load to Remove a Small Quantity of Cards	27
Remove the Output Stacker and the Cards	27
Connect Power & Communication Cables	28

Install Program	29
System Requirements	29
① Supported Operating System	29
② Recommended Specifications	29
Install Software	29
① Install Software Using Local Port (USB)	29
② Install Software for Network Printer	31
③ Configure Networking Settings	36
1) Network Configuration Window	36
2) DHCP (Dynamic Host Configuration Protocol)?	37
3) Network Settings - Automatic (DHCP supported)	37
4) Network Settings - Manual	40
④ Install Software from the List of Connected Devices	43
Uninstall Program	45
Print Cards	45
Set as Default Printer	45
Change Printer Port (Using the Printer Driver)	46
Select Input Hopper in the Printer Settings	48
Select Input Hopper 1/2 from External Program (Windows Preview)	50
Print Using Application Programs & Configure Driver Settings	51
Print Using Application Programs	51
Configure Printer Default Settings in Application Programs	51
① Layout	52
② Output	53
③ Output-Option	54
④ Image	55
⑤ Magnetic	56
⑥ Control	57
⑦ About	58
Check IP Address & Print Test Card	58

Check IP Address	58
Print Self-Test Card	60
① If Connected to a PC	60
② If Not Connected to a PC: User Mode	61
Maintenance Instructions	63
Supported Cards	63
① Size	63
② Thickness	63
③ Acceptable Cards	63
④ Unacceptable Cards: Clean the Printer	63
Clean the Printer	63
Clean the Exterior	63
Clean Inside the Printer Using Cleaning Kit	64
① Cleaning Kit & Use	64
② Clean the Printer Using CR80 Cleaning Card / T Cleaning Card	64
1) Check the Proper Use of CR80 Cleaning Card/T Cleaning Card	64
2) Not Connected to a PC: User Mode	65
3) Connected to a PC	68
③ Clean the Printer Using Alcohol Swab and Cleaning Pen	69
1) Clean the Inside of the Printer Using Alcohol Swab	69
2) Clean the Printer's TPH Using Cleaning Pen and Alcohol Swab	70
Clean the Cleaning Roller	71
Troubleshooting	71
Errors	71
① TPH	71
1) Replace the TPH	72
② Card Feeding	73
1) Remove Jammed Card	73
③ Ribbon	74
④ Card	74
⑤ Miscellaneous	74
Warning	75
① Card	75
② Ribbon	75
③ SAM	75

④ Miscellaneous	76
Additional Errors	76
Ribbon Specifications	76
Color Ribbons	76
Monochrome Ribbons	76
Printer Specifications	77
Product Features	77
Standard Specifications	77
① Printing Type	77
② Printing Function	77
③ Resolution	77
④ Printing Speed	77
1) Color Printing	77
2) Monochrome Printing	77
⑤ Card Capacity	78
Optional Accessories	78
Printer Specifications	78
① Dimensions (Width x Length x Height) & Weight	78
1) N10 (Manual Feed)	78
2) N20/N30 (Auto Feed)	78
② Power Adapter	78
③ Font	78
④ Memory	79
⑤ Interface	79
⑥ PC Specifications	79
⑦ Software	79

Safety Precautions

Before using this product, please make sure that you have read the safety precautions described below. The safety precautions noted on this page are categorized as Warning, Caution, Attention, and Note. We are not responsible for any injuries or damage when the product is not used in compliance with these precautions.



Warning

These warnings must always be followed; otherwise, this may result in serious injury or damage.



Caution

Not following this caution can cause service interruption or product damage.



Important

Use this information to check and inspect for the proper operation of the product.



Note

This is a note that provides more details or information that is useful for users.



-Warning

These warnings must always be followed; otherwise, serious injury may result.

Power

- Do not use a damaged plug or loose outlet.
- Do not pull the cable to unplug or touch the plug with wet hands.
- Do not bend the cable by force or place any heavy objects on it.
- Keep it unplugged if not in use for an extended period of time or in case of lightning or thunder.

Installation / Storage

- Do not install the printer in a place where it may be subjected to moisture, dust, or splashes of water (rain).
- Keep the printer away from heat sources, as well as lit candles and cigarettes.
- Unplug the printer when moving it.
(If the printer is moved while plugged, the cable may be damaged and cause electric shock.)

Cleaning

- Keep the power plug clean, away from dust and water.
- Unplug when cleaning, and do not spray water or use benzene or thinner.

Misc.

- Do not place metal objects, drugs, or anything with water on it.
- If you observe strange smoke, odor, or noise from the printer, unplug it immediately and contact your dealer.
- Use only the specified adapter.

※ Do not use adapters from other devices, e.g. laptop, monitor, game console.



-Caution

Not following this caution can cause service interruption or product damage.

Installation/ Storage

- Do not install the printer on an unstable surface.
- Do not place the printer under direct sunlight as it may cause a malfunction.

Misc.

- Do not remove any cover or protective device that is attached with screws.
- Do not operate the printer while your hand is placed inside.
- Clean and maintain the printer according to the user instructions.
- Do not disassemble, repair, or modify the printer arbitrarily.

Getting Started

-Product Overview

Thank you for purchasing the NUVIA series-N10, N20, N30.

This printer is designed to print cards quickly and easily according to your specifications. It supports IC and RF cards (optional feature) as well as magnetic cards and can print high quality color images on the surface of the card using the dye-sublimation method. In addition, the user can edit and print various types of barcodes, magnetic cards, and photos using Excel.

This printer is suitable for printing membership cards, rewards cards, employee ID cards, and access cards as it prints directly to PVC cards for faster and more efficient printing.

 
-In the Box



N10
(Single Card Printing)




N20 /N30
(Multiple Card Printing)

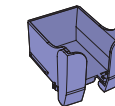

Output Stacker
(for N20 and N30)



OPTION
Input Hopper Lock
(for N20 and N30 only)

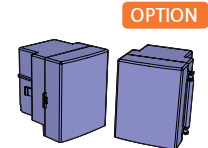

OPTION
Input Hopper
(for N20 and N30 only)



USB Cable



Power Cable



 
Power Adaptor



Cleaning Roller



Installation CD

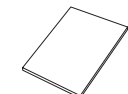

User Manual




Important


Please make sure that all the components and accessories are included in the box. If there are missing or damaged items, then please contact your dealer for assistance.

Names of Parts

-N10 (Manual Feeding, Single-sided Printing)

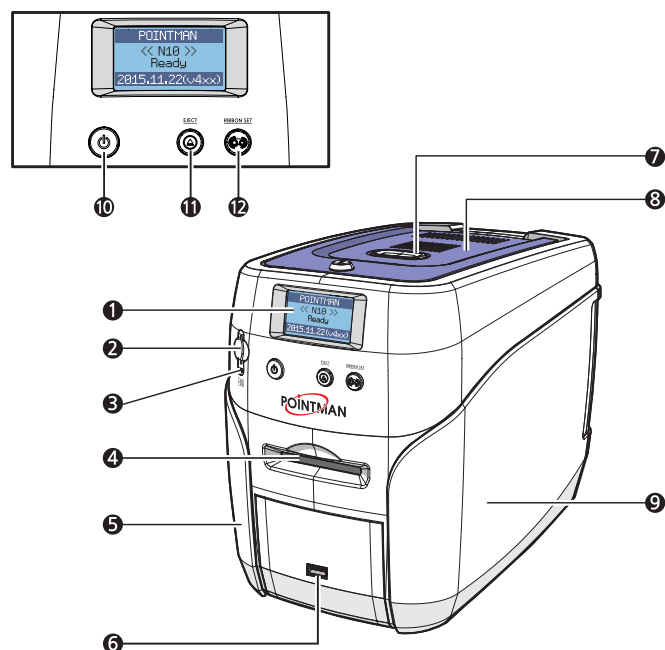


Name	Description
① LCD Display	Displays the printer's operation status on the LCD screen.
②	
③	
④ Single Card Slot	Used to insert or release a single card.
⑤ Left Side Cover	Open to place optional accessories or fix errors.
OPTION ⑥ USB Socket	Used to insert USB memory media or to connect to a PC.
⑦ Top Cover Button	Opens the Top Cover.
⑧ Top Cover	Open to replace the cleaning roller.
⑨ Right Side Cover	Open to replace the main board or fix errors.
⑩ Power Switch	Turns on/off the printer.
⑪ Eject Button	Releases the card inside the printer.
⑫ Ribbon Set Button	Replace or reposition the ribbon.

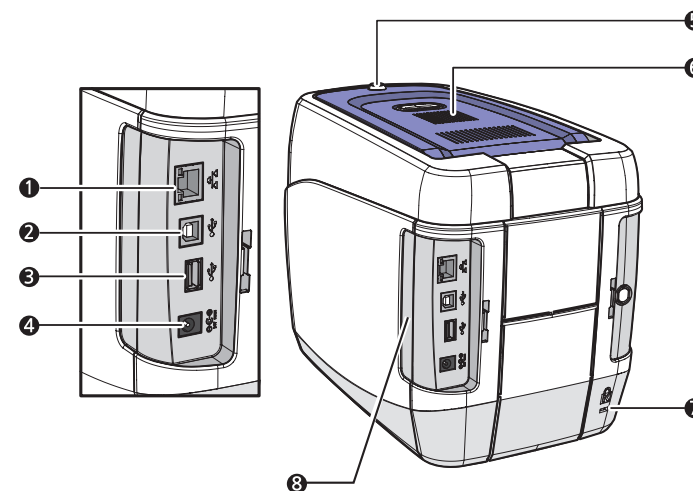


Name	Description
① Ethernet Port	Used to connect to a network using a LAN cable.
② USB Port	Used to connect to a PC using a USB cable.
③ USB Socket	Used to insert USB memory media or to connect to a PC.
④ Power Supply Port	Connects to the power supply.
OPTION ⑤ Top Cover Lock Key	Locks/unlocks the Top Cover.
OPTION ⑥ External RF	Recognizes an RF card.
OPTION ⑦ Printer Lock	Use this to mount a security lock.
⑧ Side Cover Open Button	Press to open the Side Cover.

-N20 (Auto Feeding, Single-sided Printing)

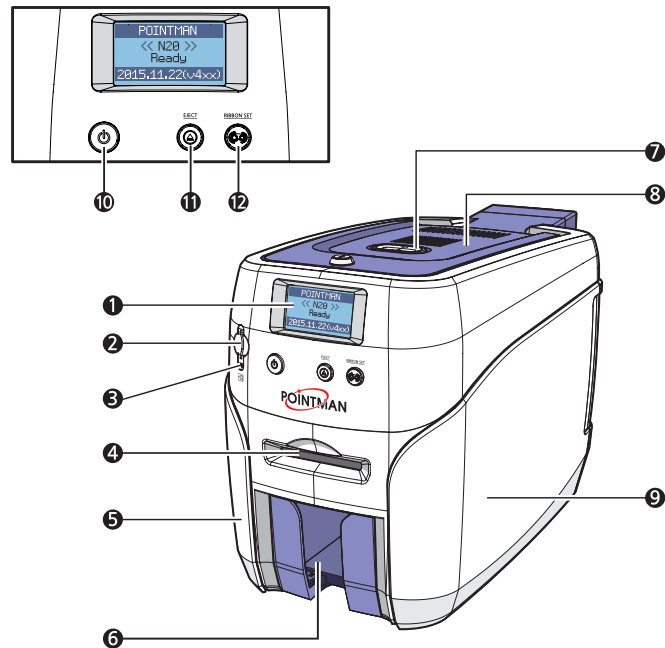


Name	Description
① LCD Display	Displays the printer's operation status on the LCD screen.
②	
③	
④ Single Card Slot	Used to insert or release a single card.
⑤ Left Side Cover	Open to place optional accessories or fix errors.
⑥ Output Stacker	Stores printed cards (max. 60 cards).
⑦ Top Cover Button	Opens the Top Cover.
⑧ Top Cover	Open to replace the cleaning roller.
⑨ Right Side Cover	Open to replace the main board or fix errors.
⑩ Power Switch	Turns on/off the printer.
⑪ Eject Button	Releases the card inside the printer.
⑫ Ribbon Set Button	Replace or reposition the ribbon.

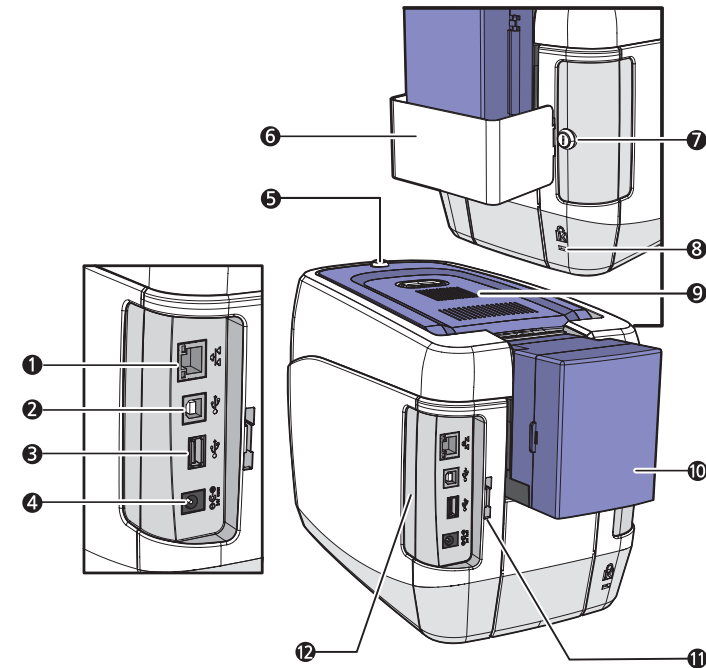


Name	Description
① Ethernet Port	Used to connect to a network using a LAN cable.
② USB Port	Used to connect to a PC using a USB cable.
③ USB Socket	Used to insert USB memory media or to connect to a PC.
④ Power Supply Port	Connects to the power supply.
OPTION ⑤ Top Cover Lock Key	Locks/unlocks the Top Cover.
OPTION ⑥ Input Hopper Lock	Locks the Input Hopper for security.
OPTION ⑦ Input Hopper Lock Key	Used to lock/unlock the Input Hopper.
OPTION ⑧ Printer Lock	Use this to mount a security lock.
OPTION ⑨ External RF	Recognizes an RF card.
⑩ Input Hopper (Standard)	Stores cards to print (max. 100 cards).
⑪ Lock Connector Link	Used to connect the Back Cover to the Input Hopper Lock.
⑫ Side Cover Open Button	Press to open the Side Cover.

-N20 (Auto Feeding, Double-sided Printing)

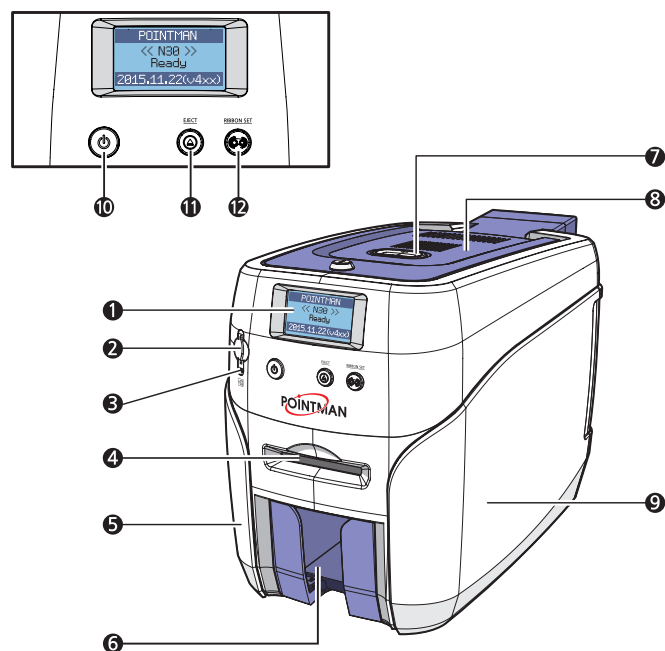


Name	Description
① LCD Display	Displays the printer's operation status on the LCD screen.
②	
③	
④ Single Card Slot	Used to insert or release a single card.
⑤ Left Side Cover	Open to place optional accessories or fix errors.
⑥ Output Stacker	Stores printed cards (max. 60 cards).
⑦ Top Cover Button	Opens the Top Cover.
⑧ Top Cover	Open to replace the cleaning roller.
⑨ Right Side Cover	Open to replace the main board or fix errors.
⑩ Power Switch	Turns on/off the printer.
⑪ Eject Button	Releases the card inside the printer.
⑫ Ribbon Set Button	Replace or reposition the ribbon.

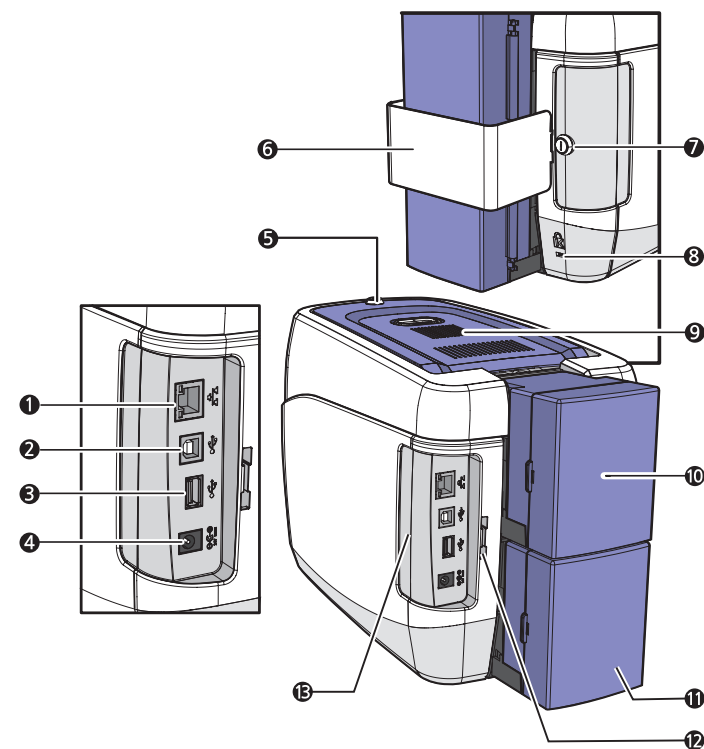


Name	Description
① Ethernet Port	Used to connect to a network using a LAN cable.
② USB Port	Used to connect to a PC using a USB cable.
③ USB Socket	Used to insert USB memory media or to connect to a PC.
④ Power Supply Port	Connects to the power supply.
OPTION ⑤ Top Cover Lock Key	Locks/unlocks the Top Cover.
OPTION ⑥ Input Hopper Lock	Locks the Input Hopper for security.
OPTION ⑦ Input Hopper Lock Key	Used to lock/unlock the Input Hopper.
OPTION ⑧ Printer Lock	Use this to mount a security lock.
OPTION ⑨ External RF	Recognizes an RF card.
⑩ Input Hopper (Standard)	Stores cards to print (max. 100 cards).
OPTION ⑪ Input Hopper (Optional)	Stores additional cards (Standard+Optional: max. 200 cards)
⑫ Lock Connector Link	Used to connect the back cover to the Input Hopper Lock.
⑬ Side Cover Open Button	Press to open the Side Cover.

-N30 (Auto Feeding, Double-sided Printing)

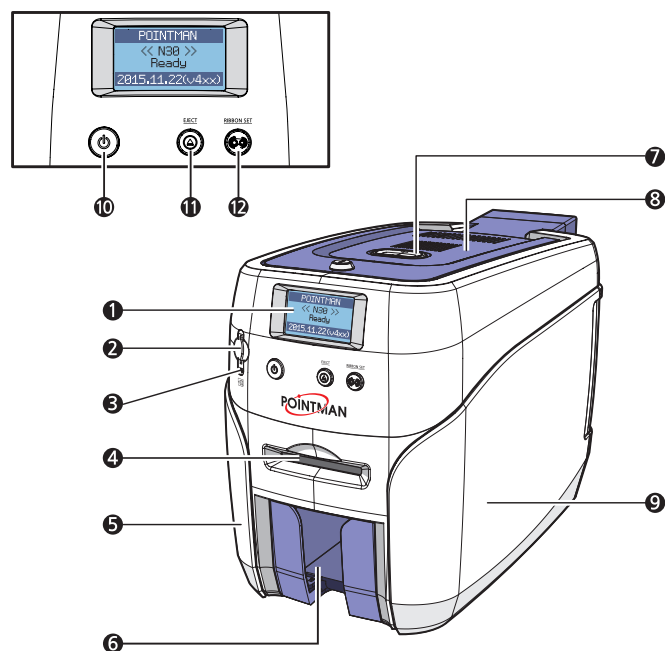

Name	Description
① LCD Display	Displays the printer's operation status on the LCD screen.
②	
③	
④ Single Card Slot	Used to insert or release a single card.
⑤ Left Side Cover	Open to place optional accessories or fix errors.
⑥ Output Stacker	Stores printed cards (max. 60 cards).
⑦ Top Cover Button	Opens the Top Cover.
⑧ Top Cover	Open to replace the cleaning roller.
⑨ Right Side Cover	Open to replace the main board or fix errors.
⑩ Power Switch	Turns on/off the printer.
⑪ Eject Button	Releases the card inside the printer.
⑫ Ribbon Set Button	Replace or reposition the ribbon.

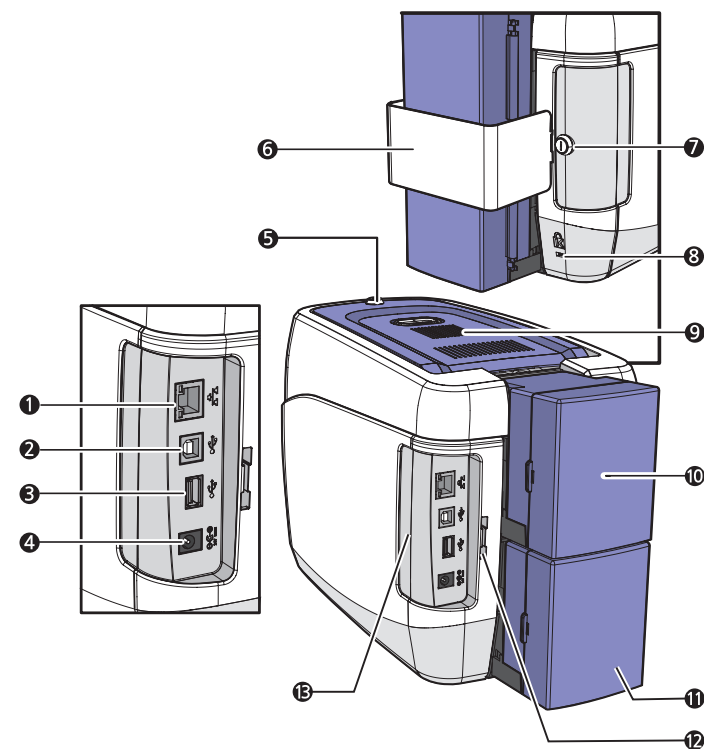


Name	Description
① Ethernet Port	Used to connect to a network using a LAN cable.
② USB Port	Used to connect to a PC using a USB cable.
③ USB Socket	Used to insert USB memory media or to connect to a PC.
④ Power Supply Port	Connects to the power supply.
OPTION ⑤ Top Cover Lock Key	Locks/unlocks the Top Cover.
OPTION ⑥ Input Hopper Lock	Locks the Input Hopper for security.
OPTION ⑦ Input Hopper Lock Key	Used to lock/unlock the Input Hopper.
OPTION ⑧ Printer Lock	Use this to mount a security lock.
OPTION ⑨ External RF	Recognizes an RF card.
⑩ Input Hopper(Standard)	Stores cards to print (max. 100 cards).
OPTION ⑪ Input Hopper(Optional)	Stores additional cards (Standard+Optional: max. 200 cards)
⑫ Lock Connector Link	Used to connect the back cover to the Input Hopper Lock.
⑬ Side Cover Open Button	Press to open the Side Cover.


Load cleaning Roller & Ribbon

-Load Cleaning Roller

1. Press the “Open” button and lift the Top Cover all the way as shown in the picture.

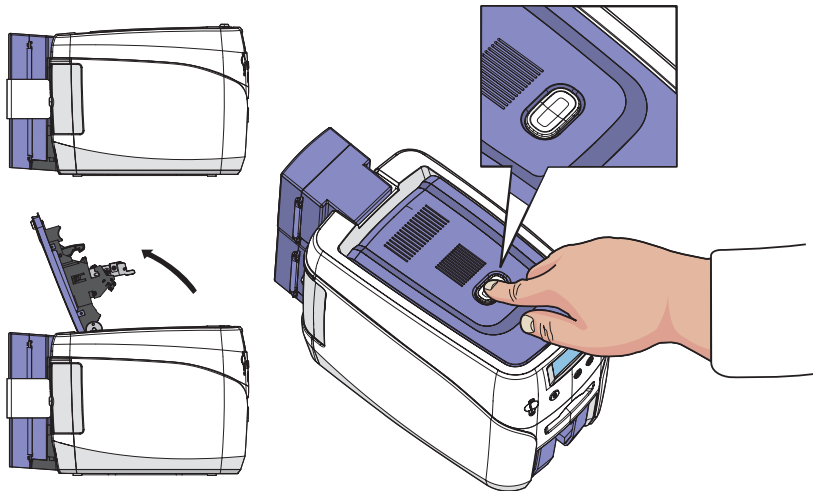


2. Place the cleaning roller into the “U-shaped holder” and push it down.

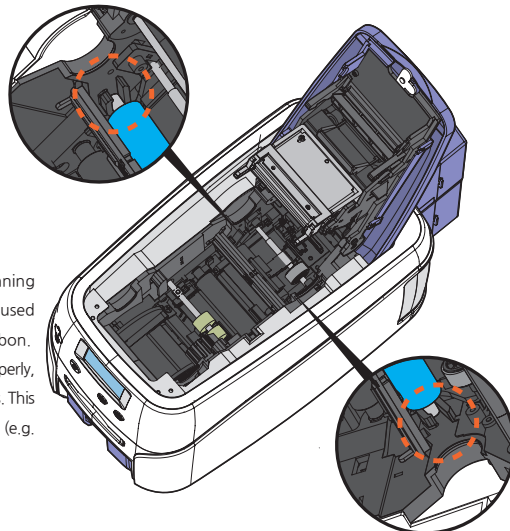

! Caution

- Wash the cleaning roller using running water every 7 days if the printer is used frequently or when replacing the ribbon.
- If the cleaning roller is not cleaned properly, then the card may be printed with stains. This may also cause serious damage to parts (e.g. print head).


-Load Ribbon

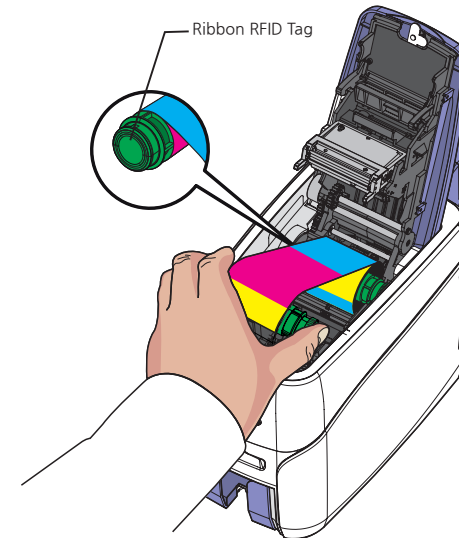

! Caution

- Do not close the cover by force when the ribbon is not placed properly as this may cause damage.
- If the Top Cover is not closed, the printer may not print properly (make sure it is closed completely).
- Make sure that the Ribbon RFID Tag is positioned correctly.

1. Make sure that the ribbon is positioned correctly for loading and rolling.

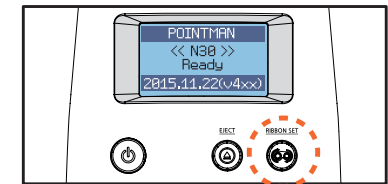

2. Close the cover and press the “Ribbon Set” button to complete the process.

