


5040

## Quick Start Guide

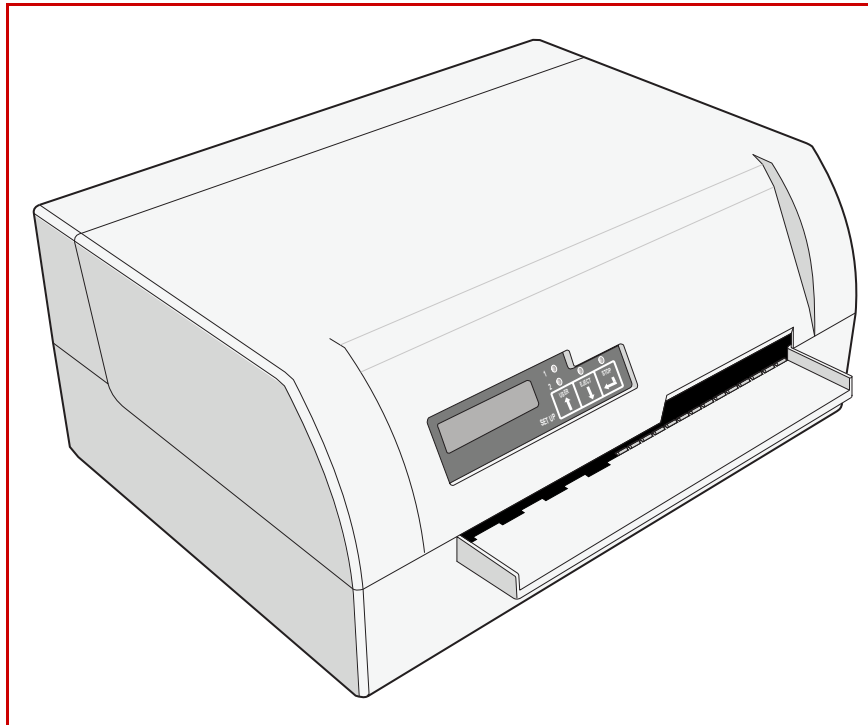

**Flatbed Printer**

**CD-ROM  
inside**

### Important Information

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in accordance with the manufacturer's instructions, may cause interference in radio and television reception. It has been type tested and found to comply with the limits for class B computing devices in accordance with the specification in subpart J of part 15 of FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a partial installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna,
- Relocate the peripheral away from the receiver,
- Move the peripheral away from the receiver
- Plug the peripheral into a different outlet, so that the peripheral and receiver are on different branch circuits

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet, prepared by the Federal Communications Commission, helpful: "How to Identify and Resolve Radio-TV Interference Problems".

This booklet is available from the U.S. Government Printing Office, Washington DC 20402 Stock No. 004.000.00345.4.

**WARNING:** To comply with FCC regulations on electromagnetic interference for a class B computing device, the printer cable must be shielded. To assure compliance with FCC regulations for a computing device, use a shielded interface cable with a metal shell connector. The use of cables not properly shielded may result in violating FCC regulations.

This digital apparatus does not exceed the class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian department of communications.

This unit complies with DOC standard C108.8-M 1983

**ATTENTION:** Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe B prescrites dans le règlement sur le brouillage radio-électrique édicté par le ministère des communications du Canada.

The paper used is made of raw materials treated with a chlorine-free bleaching process.  
Le papier utilisé est fabriqué à partir de matières premières blanchis sans chlore.



This device fulfils the European standards requirements by complying with the Directive of the Commission dated May 3, 1989 (89/336/EEC) relating to electromagnetic compatibility and the Directive dated February 19, 1973 (73/23/EEC) relating to low-voltage electrical equipment. Conformity with the above mentioned Directives is indicated by the CE symbol attached to the device.

Note: Conformity may be affected by:

- using interface cables not complying with the specifications
- non-observance of important instructions in the operator's manual
- installing components not approved for this device by the manufacturer
- unauthorized manipulation



Cet appareil remplit aux exigences des normes européennes en respectant la directive du Conseil du 3 mai 1989 (89/336/CE) relative à la compatibilité électromagnétique et la directive du 19 février 1973 (73/23/CE) en matière du matériel à basse tension. La conformité aux directives mentionnées ci-dessus est repérée par la marque de conformité de la Communauté Européenne (CE).

Remarque: La conformité peut être influencée par:

- l'utilisation de câbles d'interface non spécifiés
- le non-respect de consignes importantes du manuel d'utilisation
- le remplacement de composants qui n'ont pas été homologués pour cet appareil par le constructeur
- l'intervention de personnes non autorisées

**WARNING** For continued protection against risk of fire, replace only with same type and rating of fuse.  
Only trained and qualified personnel may open covers or remove parts that are not explicitly shown and described in the User Guide as being accessible to the operator.

**ATTENTION** Pour ne pas compromettre la protection contre les risques d'incendie, remplacer par un fusible de même type et de mêmes caractéristiques nominales.  
Seul un personnel qualifié et formé est habilité à démonter les sous-ensembles de la machine qui ne sont pas formellement indiqués dans le Manuel d'utilisation même s'ils sont accessibles par l'opérateur.

**QUICK START GUIDE****Table of contents**

<b>Introduction</b> .....	1
Symbols used .....	1
Important safety instructions .....	1
Using the Online CD-ROM .....	2
Contents of the Online CD-ROM .....	2
Hardware requirements .....	2
Troubleshooting .....	2
<b>Printer at a glance</b> .....	3
<b>Installation</b> .....	5
Unpacking the printer .....	5
Placing the printer .....	6
Checking the printer voltage .....	7
Connecting the printer .....	7
Switching on the printer .....	8
<b>Control panel</b> .....	9
<b>Operating the printer</b> .....	10
Inserting a document .....	10
Inserting a passbook .....	11
<b>Service and Maintenance</b> .....	14
Replacing the ribbon cassette .....	14
Printing the Status Page .....	19
<b>Technical data</b> .....	21
Printer specifications .....	21
Paper specifications .....	22
Accessories .....	23

**ENGLISH**



## Introduction

This Quick start guide is intended as a quick introduction into working with the printer and also to enable inexperienced users to operate the device properly. It describes the most important functions of the printer and contains the essential information for your everyday work with the printer. A more detailed description of the printer, its characteristic features, and further information is contained in the User guide on the Online CD-ROM, which is inserted at the back of this manual.

### ► Symbols used

Important information is highlighted in this manual by two symbols.



CAUTION highlights information which must be observed in order to prevent injuries to the user and damage to the printer.



NOTE highlights general or additional information about a specific topic.

### ► Important safety instructions

Read the following instructions thoroughly before starting up your printer in order to prevent injuries and avoid damage to the device.

- Keep this Quick start guide in a place which is easily accessible at all times.
- Place the printer on a solid and even base so that it cannot fall down to the ground.
- Do not expose the printer to high temperatures or direct sunlight.
- Keep all liquids away from the printer.
- Protect the printer from shock, impact and vibration.
- Be sure to connect the printer to a socket with the correct mains voltage.
- Always disconnect the system from the mains before opening the device to perform maintenance work or remedy errors.
- The power supply cable may be damaged if the paper edges constantly chafe the insulating sheath. The user must always ensure that there is sufficient distance between the power supply cable and the paper.



*Never carry out maintenance or repair work yourself. Always contact a qualified service technician.*



*Whenever you want to disconnect the printer from the power supply, pull the plug out from the mains socket after having switched off the printer correctly.*



*Additional safety instructions are provided at the relevant places in the text.*

**▶ Using the Online CD-ROM**

First install the Adobe Acrobat Reader on your hard disk, unless the program has already been installed. To install it, follow the steps described in the README file in the READER directory.

To start the online documentation, call the Windows Explorer and double click on the START.PDF file. Then follow the instructions and menus on the screen.

**▶ Contents of the Online CD-ROM**

The Online CD-ROM contains:

- User guide: A detailed description of the printer and its impressive features;
- Drivers: Windows 95/98, Windows 2000, Windows XP;
- Additional documentation: Programmer's application manuals, lists of the supported printer control codes and sequences.

If your CD-ROM is defective or missing, please consult your dealer. The Online Documentation is also available as a hardcopy (at a cost) or can be downloaded via the Internet.

**▶ Hardware requirements**

Minimum hardware requirements: PC 486 MHZ, quad-speed CD-ROM, 15" display screen, mouse.

**▶ Troubleshooting**

*The User's Manual on the Online CD-ROM contains detailed information on how to rectify errors. It deals with general printing problems as well as problems with the print quality, paper feed and ink cartridge.*

## Printer at a glance

ENGLISH



View from the front


Cover

Control panel

Paper tray

Power switch (On/Off)

View with cover opened

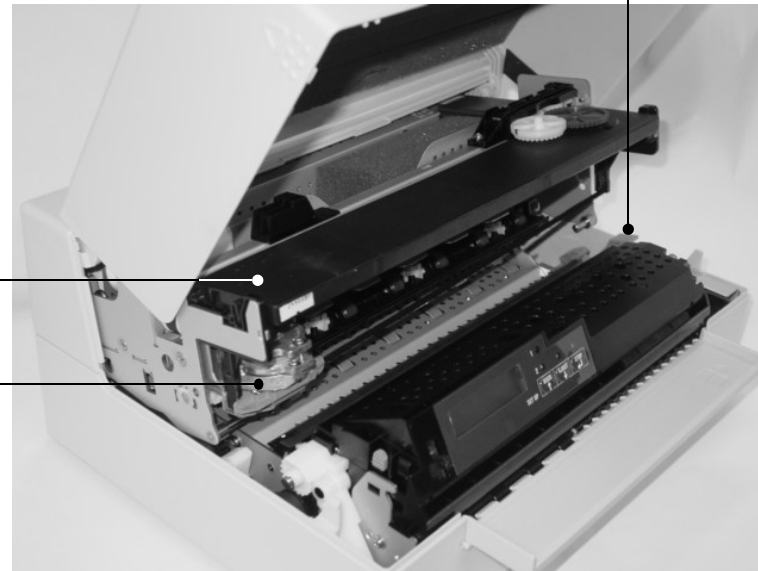

Ribbon cassette

Print head

Release lever



**View from the rear**

*Power inlet*

*Parallel interface*

*1st Serial interface*

*2nd Serial interface*

*USB interface*



## Installation

### ► Unpacking the printer

Place your packaged printer on a solid base.

Make sure that the “Up” symbols point in the correct direction.

Open the packaging, lift the printer out of the cardboard box and remove the remaining packaging material.

Check the printer for any visible transport damage and missing items. The following items should be included:

- This Quick start guide
- The CD-ROM (at the back of this manual)
- The power cable
- The ribbon cartridge

If you find any transport damage or if any accessories are missing, please contact your dealer.

## ► Placing the printer

Place the printer on a solid, flat, surface, ensuring that the printer is positioned in such a way that it can not topple, and that there is easy access to the control panel and paper input devices. Also ensure that there is enough space for sufficient ventilation and for the printed output:

Location		Minimum space
Left and right side of the printer		1 cm
Top of the printer		2 cm
Rear of the printer	to ensure sufficient ventilation	10 cm
	to print on a DIN A4 sheet	12 cm
	to print with a built-in MICR	15 cm

When selecting the printer location, observe the following additional instructions:



*Never place the printer in the vicinity of inflammable gas or explosive substances.*

- Do not expose the printer to direct sunlight. If you cannot avoid placing the printer near a window, protect it from the sunlight with a curtain.
- When connecting a computer to the printer, make sure not to exceed the maximum cable length (see User guide on the Online CD-ROM, *Technical Specifications*).
- Ensure sufficient distance between the printer and any heating devices/radiators.
- Avoid exposing the printer to extreme temperature or air humidity fluctuations. Above all take care to avoid the influence of dust.
- It is recommended to install the printer in a place which is acoustically isolated from the workplace because of the noise it may produce.

### ▶ Checking the printer voltage

Make sure that the device has been set to the correct voltage (e.g. 230 V in Europe, 120 V in the USA). To do this, check the type at the back of the printer. Contact your dealer if the setting is incorrect.



*Never switch on the printer if the voltage setting is incorrect, since this may result in severe damage.*

### ▶ Connecting the printer



Connect the power cable to the power inlet of the printer.  
Connect the power cable plug to a mains socket.



Make sure that the printer and the computer are switched off and connect the data cable between the printer and the computer, in this example a 36-pin centronics parallel cable.

### ► Switching on the printer



Press the power which is located at the front bottom right of the printer switch for switching on the printer.


The printer initializes.



When the initialization is completed, the Ready indicator lights up. The message **ONLINE NO PAPER** appears on the LCD. The printer is in the online status and ready to accept data from the system. You can now insert a document or a passbook.

## Control panel

The control panel consists of three keys for controlling the printer functions, four LEDs displaying the status of the printer and a LCD display with 2 x 16 digits.

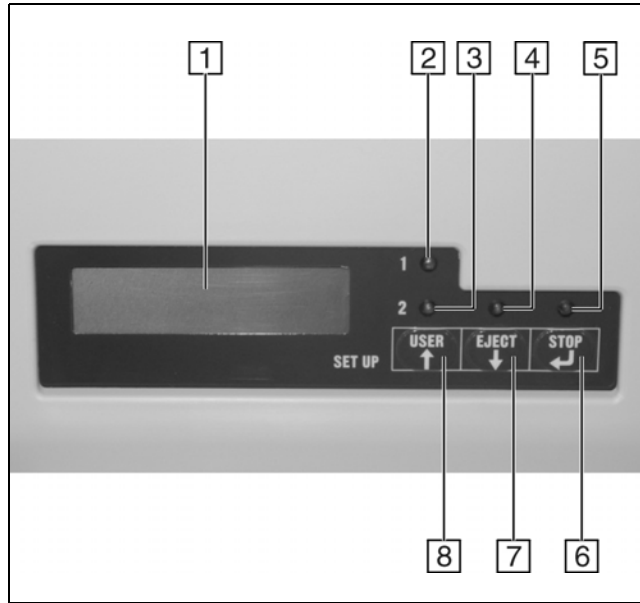

- 1** LCD display: Displays the internal printer status, operating instructions and error messages.
- 2** User 1 LED: Lights up if the printer is receiving data via the first interface or is set by the USER key (see below).
- 3** User 2 LED: Lights up if the printer is receiving data via the second interface or is set by the USER key (see below).
- 4** Paper LED: Displays if paper is inserted or not; on = paper is inserted, off = no paper inserted.
- 5** Ready LED: Displays if printer is offline or online; on = online, off = offline.
- 6** STOP key: Sets the printer to Online/Offline mode (see also Ready LED)
- 7** EJECT key: Ejects inserted paper (see also Paper LED).
- 8** USER key: Toggles between User 1 and User 2 (see also User 1 LED and User 2 LED).

ENGLISH



For a detailed overview of the individual functions of the control panel refer to the User Guide on the Online CD-ROM.


## Operating the printer

### ▶ Inserting a document

Before inserting a document make sure that the printer is switched on and the the message **ONLINE NO PAPER** is displayed in the LCD.



Insert the document in such a way that the right paper edge is positioned inside the area between the left side of the symbol and the right edge of the document support, so that the document alignment can grasp it securely. This is especially important for documents that are narrower than a DIN A4 sheet.

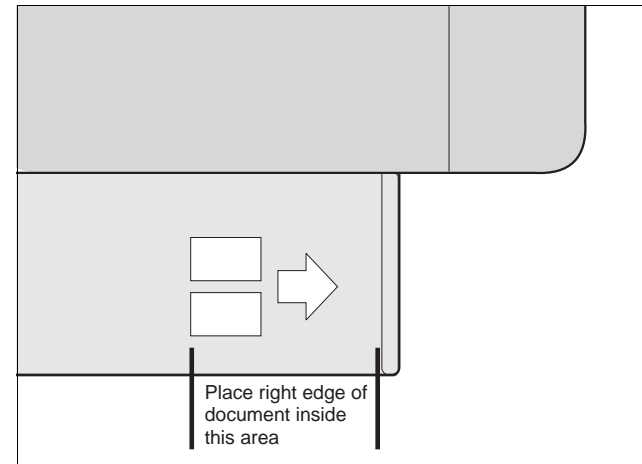

Then push the document towards the stop into the document chute.

When the document is drawn in, the message **ONLINE PAPER** appears in the LCD.

When printing is completed, the document is transported out of the printer and released for removal.

The message **ONLINE NO PAPER** appears on the LCD again.

**► Inserting a passbook**

Before processing a new vertical-fold or horizontal-fold passbook, you should eliminate the stiffness of the fold by proceeding as follows.



Open the passbook on the page that you want to print. Bend the fold backwards extremely hard.

Stroke along the fold of the passbook with both thumbs and index fingers and slightly bent the passbook outwards.

If you want to print a new passbook, repeat this procedure several times.



*If the passbook has a magnetic stripe, take care not to crease it.*