

Left Side View

1. Power Switch
2. Cover Latch (to secure top cover)
3. Forms Tractors (to hold and feed continuous forms)
4. Paper Guides (to guide single sheets)
5. Paper Exit Slot and Tear Edge
6. Top Cover – Rear
7. Single Sheet Tray (Shown in down Position)

Bottom View

8. Interface Connectors (or Wireless Adapters if installed)




Vertical Position



Bottom View

Operations of the Control Panel

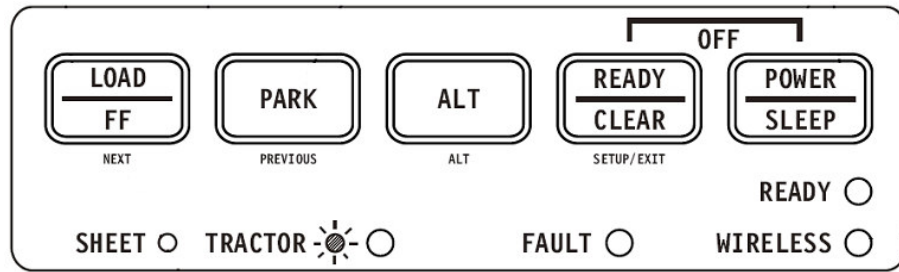

This section summarizes status indications and operations of the control panel in Normal mode. For details on Set-Up mode, see Chapter 4, “Using Set-Up Mode.” Normal mode operation includes everyday operations, such as paper handling, font selection, macro selection, and protocol selection. The first table lists basic states represented by the Ready and Fault indicators. The second table lists Normal mode operations and required user response. Operations are listed by functions.

Basic States of the Printer

Indicator	Status	Printer Status
Ready	On	The printer is ready for printing or The printer is receiving or printing data.
	Blinking	The printer is not ready and holds printing data.
	Off	The printer is not ready and it does not hold printing data.
Fault	On	The printer is out of paper.
	Blinking slowly	The printer has detected an operational error: paper jam, interface error, carriage error, paper unloading error, etc.
	Blinking fast	The printer detected diagnostic errors at power-up.

Operation	Required Conditions ^{*1}			Required Action
	Ready	Printing ^{*2}	Fault	
Load continuous forms paper	—	Not printing	On	Press FF/LOAD.
Load single sheet paper	—	Not printing	On	Paper is automatically detected and advanced (auto-loading) when it is first inserted. In this mode, if the FF button is pushed, the inserted sheet will be ejected from the printer and the Fault LED will light, indicating paper out condition.
Feed paper a page	—	Not printing	Off	Press FF/LOAD.
Advance perforation to tear bar	—	Not printing	Off	Press READY.
Eject single-sheet paper	—	Not printing	Off	Press FF/LOAD. The Fault LED will light, indicating a paper out condition.
Unload continuous-forms paper ^{*3}	—	Not printing	Off	Press Park.
Pause printing	On	Printing	Off	Press READY
Resume printing	Blinking	Not printing	Off	Press READY
Resume printing after a fault	Off	Not printing	On	Clear error and press READY.
Resume printing after paper out	Off	Not printing	On	Load paper.
Place printer in Ready state	Off	Not printing	Off	Press READY
Place printer in pause state	On	—	Off	Press READY
Enter Normal mode	N/A	N/A	N/A	Turn power on without pressing any buttons
Printing test	N/A	N/A	N/A	Turn power on while pressing FF/LOAD button.

Operation	Required Conditions ^{*1}	Required Action
-----------	-----------------------------------	-----------------

	Ready Printing ^{*2}			Fault
Enter Top-of-Form Adjustment mode—Not printing			Off	Press SETUP/EXIT and ALT.
Use the adjustment temporarily	Off	—	Off	Press ALT-NEXT.
Use the adjustment permanently	Off	—	Off	Press SETUP/EXIT.
Clear the adjustment	Off	—	Off	Press ALT-PREVIOUS.
Enter Set-Up mode	N/A	N/A	N/A	Turn power on while pressing SETUP/EXIT.
Move cursor to select a Set-Up Function or Value	Off	Not printing	Off	Press NEXT or PREVIOUS button.
Move cursor to select a Set-Up Option	Off	Not printing	Off	Press NEXT or PREVIOUS button.
Select a Set-Up Function or Value	Off	Not printing	Off	Press ALT-NEXT or ALT- PREVIOUS button.
Select a Set-Up Value and move cursor to SAVE&EXIT	Off	Not printing	Off	Press SETUP/EXIT.
Clear software-detected errors	—	—	Blinking	Press SETUP/EXIT
Initialize the printer	—	—	—	Turn power off and on again.

*1 In Normal mode operation, all buttons except READY are inactive in the Busy state in which the printer is receiving or printing data.

*2 Not printing includes the following situations: the printer is ready and awaiting data, or the READY button is pressed and the printer is awaiting data, or the READY button is pressed during printing.

*3 This operation is available in the rear-feeding push-tractor mode.

