 




**USER MANUAL**  
**SKU NO.: 1001378629**  
**MODEL # TY-S-002**  
**Music Box**

**Package Contents**

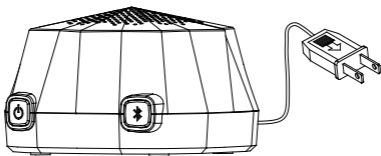

Indoor Bluetooth Speaker (with power cord)	1
Instruction Manual	1

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- b) Do not use this seasonal product outdoors. This product is intended for Indoor Use or Covered Outdoor Use (i.e. Patio, Covered Entry, Covered Porch, etc.)
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) It is best to unplug the product when leaving the house, when retiring for the night or if the product will be left unattended for an extended period of time.
- h) This is an electric product-not a toy! To avoid the risk of fire, burns, personal injury, and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from the cord,

- wire or light strings or lighting outfits attached.
- k) Do not close doors or windows on the products power cord as this may damage the wire insulation.
  - l) Do not cover the product with cloth, paper or any material not part of the product when in use.
  - m) This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit DO NOT force it. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
  - n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also, unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should not be used.
  - o) Read and follow all instructions that are on the product or provided with the product.

## p) **SAVE THESE INSTRUCTIONS**

### **Use and Care Instructions**


- a) Be sure to place the product on a stable setting when in use. Always think safety first when plugging in lights and lighting outfits in the product.
- b) b) Before using or re-using inspect the product carefully.

Do not use any products that have cut, damaged or frayed wire insulation on cords, cracks in the lampholders or enclosures, loose connections or exposed copper wire.

- c) When storing the product, carefully remove the product from wherever it is placed. Try to avoid any undue strain or stress on the product power cord, connections and wires.
- d) When not in use, store neatly in a cool, dry location protected from sunlight.

## User Servicing Instructions

### Replace the fuse

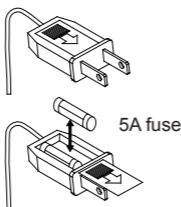

**CAUTION:** Ensure the product is disconnected from the power source before attempting to service. Use only approved fuses. Do not replace the attachment plug as it contains a safety device (fuse) that should not be removed.

- a) Grasp the plug and remove it from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse (provided with product).

- e) Close fuse cover. Slide close the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

## **CAUTION:**

1. To reduce the risk of fire and electric shock: a) Do not mount or support the product or attached lighting strings or lighting outfits in a manner that can cut or damage wire insulation.

Model No. TY-S-002

### **FCC / Canada IC Statement:**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant To Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** “Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

**CAUTION:** Do not overload. Do not connect more lighting strings, decorative products, or other products than recommended. **Ensure the maximum total wattage plugged into the Music Box does not exceed 420 watts.** This product is rated 420 Watts (3.5Amps), do not overload. Connect other Lighting Strings or decorative outfits end-to-end up to a maximum of 420 Watts (3.5Amps) total. If connecting to a lighting string or outfit that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), calculate the wattage (W) as follows: Multiply the current (A) which is on the flag type label located within 6 inches of the plug, by 120. For example, string is rated 120V, 60Hz, 0.2Amps  
 $0.2 \times 120 = 24$  Watts  
Divide 420 by the wattage of the light string or decorative outfit, 24, total number of sets to be connected to the controller is 17.

## Features

This product works with both incandescent and LED technology and can be used with a wide variety of lighting products such as light strings, lighted trees and many other electric decorations. Additional product features include:


- Works with your existing lights/ordinary lighting decorations – no special lights or technology required
- After you download the app for this product, you can adjust the light show mode, light brightness and speed settings in

your smart phones. (Please refer to “Downloading the Application” for instructions.)

- 9 pre-programmed light show functions
- 9th function (Sensor Mode) is a “music and light synchronization feature” lets you select and play your own music and have the lights synchronize with the music
- Can also be used independently with your Bluetooth wireless technology enabled products as an ordinary Bluetooth speaker.

## Specifications

Maximum Speaker Load	420 watts
Fuse Type	5A, 125 volts
Bluetooth Speaker Range	Up to 33 Ft. (from the Bluetooth wireless technology enabled device streaming music)

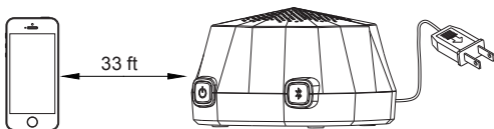

## Devices Required

This product requires use of smart phone. APP can be downloaded to your smart phone.

## Downloading the Application “Holiday Brilliant”

APP name: Holiday Brilliant




APP icon:



Apple users can download the APP “Holiday Brilliant” from Apple store.

Android users can download the APP “Holiday Brilliant” from Google Play.

### **Operating Instructions – Bluetooth Speaker**

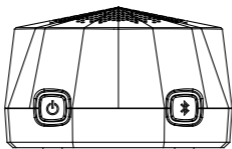**Note:** Plug the Bluetooth Speaker into a power source. The speaker can be used several ways. It can be used independently with your Bluetooth wireless technology enabled products as an ordinary Bluetooth speaker or it can be connected to lighting strings or trees to create the light and music synchronization.



- ① **Power Button** : Press and hold this button to turn the speaker on or off, a prompt tone will be heard.
- ② **Bluetooth Button** : If the speaker is connected and you would like to connect to a different device, press and hold this button to break the current connection, it's now ready to connect it to another device.

### **Playing music using a Bluetooth wireless technology enabled device**

**NOTE:** Only one device can be paired with the Bluetooth speaker signal (Music Box) at one time.

- Turn on the speaker to activate the Bluetooth function. Then select MUSIX BOX from the list of Bluetooth signals of your device. Upon successful pairing, a prompt tone will be heard. Now you can stream music from your device to the speaker.  
Note: You can adjust the volume of the Bluetooth speaker by using the volume settings on your device.



## Operating Instructions – Application

### 1. Using the 9 pre-programmed lighting functions

Note: The application must be downloaded and installed into your smart phone before proceeding. See Downloading the Application for instructions.

- Pair your smart phone with the speaker.
- After successful pairing, click on the Application logo “Holiday Brilliant” in your smart phone to enter the program.



- ① **Bluetooth Symbol:** The symbol color indicates the Bluetooth connection status. Grey symbol indicates your device is not connected to the Music Box. Blue symbol indicates your device is already connected to the Music Box.
- ② **Lights On/Off Button:** Press this button to turn on/off your lighting strings.
- ③ **Function Selector:** The function selector allows you to scroll through and select the desired function.
  1. Steady
  2. Slow Flashing
  3. Fade in & out
  4. Flashing
  5. Slow Fade in & out
  6. Dim in & out
  7. Progressive

## 8. Combination

9. Sensor Mode (This is the music and light synchronization mode. If you are not playing music while in sensor mode, the light will stay steady.)

**\*\*Note\*\*:**


- Music playing will not be affected by selecting any of the pre-programmed modes.
- The lights will flash in sync with the music rhythm only in "Sensor Mode".
- Under "Sensor Mode", the louder you play the music, then more sensitive the lights will become to the music; and the lights will flash according to the rhythm of different music.
- Under "Sensor Mode", when the sound volume is adjusted to "0", the light will stop flashing and the brightness will be lower than normal.
- The Apps will stop working when the sound volume is adjusted to "0" or the phone is set to mute.
- The default mode of lighting is "Steady".

④ **Speed Selector Buttons:** These two buttons allow you to adjust the speed of the currently selected function. Push either the top button (increase) or bottom button (decrease). Note: The speed selection will not have any effect on the "steady" function (which is one of the 9 preprogrammed functions) or the "sensor" function (music & lights synchronization mode). The speed rate can be adjusted from "0" (slowest setting) to "100" (fastest setting). The current speed setting (0—100) will be displayed between the top and bottom speed selector buttons.

⑤ **Brightness Selector Buttons:** These two buttons allow you to adjust the brightness of the lights that are plugged into the speaker. Push either the top button (increase) or bottom button (decrease). The brightness can be adjusted from "0" (off) to 100 (brightest). The current brightness setting will be displayed (0—100)

between the top and bottom brightness selector buttons.  
Note: The Brightness Selector does not work when in “Sensor Mode”, “Fade in & out” & “Slow Fade in & out”.


- ⑥ **Music Button:** Press this button to enter Music Playlist.  
**For IOS users:** (Refer to IOS Picture 1, 2, 3)

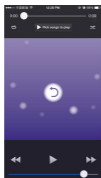

(IOS) Picture 1



(IOS) Picture 2

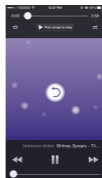


(IOS) Picture 3

Press “Pick songs to play” to add the songs you want to play. Then Press “Done” to go back to the previous screen and begin music playing.

For Android users: (Refer to Android Picture 1, 2)



(Android) Picture 1

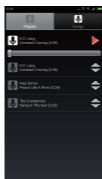

(Android) Picture 2

Press “Songs” to add the songs you want to play. Then Press “Playlist”, the songs you just picked will be displayed. Press the “Play” button or click on any song to begin music playing.

- ⑦ **Play/Pause Button:** Press this button to play/pause the music.  
⑧ **Previous/Next Button:** Press the “Previous” button to play the previous song; press the “Next” button to play the next song.

- ⑨ **Repeat Button:** Press the Repeat button to repeat the current song or repeat all the songs added in the playlist. The default setting for this button is OFF.
- ⑩ **Shuffle Button:** Press the Shuffle button to randomly play all the songs added in the playlist. The default setting for this button is OFF.

## Care and Cleaning

**CAUTION:** Ensure the product is disconnected from the power source before attempting to clean or service.

- Before using or reusing, inspect the product carefully. Discard the product if it has cuts, damaged or frayed wire insulation on the cords, cracks, loose connections, or exposed wire.
- Wipe the Bluetooth speaker with a damp cloth and allow to dry before storing.
- After using, carefully remove the product and store neatly in a dry location, protected from sunlight.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
The lights and decorations are not receiving power or performing correctly.	The speaker is not turned on.	Ensure the speaker is plugged into the power source and is turned on.
	The items are not working properly.	Check if the items are working properly by plugging them directly into another working power source.
	The fuse has blown.	Replace the fuse.
The Bluetooth speaker is not working properly.	The Bluetooth speaker is not plugged in.	Plug the speaker into a working power source.
	The Bluetooth speaker is not paired with the Bluetooth wireless technology enabled product.	Ensure Bluetooth capability is working correctly on the Bluetooth wireless technology enabled product and is paired with the speaker.
	There is interference with the Bluetooth signal.	Turn off the Bluetooth speaker and restart it.
	More than one device is attempting to connect to the speaker at the same time.	Ensure no other devices are connected to the speaker. Only one device can be connected to the speaker at one time.

## **Helpful Hints**

1. When using the Music Box application to play music through the Bluetooth speaker, the music must be already downloaded to your device. You cannot play music on this system through a cloud player, such as Google Play. Or third party apps.
2. Lights that have special programs built in them already (color changing, multi function, twinkling, etc.) will not work properly with this system. This system is built to work with ordinary lights and decorations.

## **Warranty**

TOYO ELECTRIC MFG. Co., LTD warrants to the original purchaser/consumer of the MUSIC BOX that it will be free from defects in material workmanship for a period of 90 Days from date of purchase. Subject to the exclusions contained below. TOYO ELECTRIC MFG. Co., LTD, at its option, will at no charge, repair or replace (with same or equivalent product) defective parts if the item is returned with shipping charges prepaid together with proof of date of purchase, name, address (of original consumer/purchaser) and a brief description of the defective issue and the original legible receipt. Any liability of TOYO ELECTRIC MFG. Co., LTD under this Warranty shall be limited to the repair or replacement of defective parts.

This product is intended for residential seasonal use only (approx. 90 days per year) and was pre-tested and date coded prior to shipment. This limited Warranty extends only to the first consumer/purchaser and is not transferable.

This Warranty does not include: (1) Commercial Use (2) Excessive Wear and Tear beyond reasonable use (3) Products not used in Accordance with Directions/Instructions provided on or with the Product (4) Burnout of Bulbs or LED (5) Products that have been subjected to Unauthorized Repair and/or Unauthorized Modification (6) Damage caused by Shipping, Improper

Handling, Alterations, Misuse or Accidents. We are committed to making high quality products. Returning the product to us helps us to monitor and improve product quality.

Any Questions or comments regarding this product should be addressed to:

Home Accents Holiday

P.O.Box 8146

Clearwater, FL 33758-8146

Toll Free Number 1-855-785-7559

C20151225

TOYO ELECTRIC MFG. Co., LTD. shall not be liable for any other damage or loss. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the limitation or exclusion may not be applicable to certain consumers/purchasers. The warranty gives the consumer/purchaser specific legal rights. The consumer/purchaser may also have other rights which vary from state to state.

### **Replacement Parts List**



Description: Fuse 125V 5A

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.