

User Guide

AC1350 High Power Wireless Dual Band Router Archer C58HP

Contents

Abou	It This Guide	1
Chap	oter 1. Get to Know About Your Router	2
1. 1.	Product Overview	3
1.2.	Panel Layout	
	Top View	
	The Back Panel	4
Chap	oter 2. Connect to the Internet	6
2. 1.	Position Your Router	7
2. 2.	Connect to the Internet	7
	Install the antennas	7
	Router mode	8
	Range Extender Mode	10
	Access Point Mode	11
Chap	oter 3. Log In	13
Chap	oter 4. Configure the Router in Router Mode	15
4. 1.	Guest Network	16
	Create a Network for Guests	
	Customize Guest Network Options	
4. 2.	Parental Controls	
4.3.	QoS	19
4.4.	Network Security	
	Protect the Network from Cyber Attacks	21
	Access Control	23
	IP & MAC Binding	
4. 5.	NAT Forwarding	
	Share Local Resources on the Internet by Virtual Servers	
	Open Ports Dynamically by Port Triggering	
	Make Applications Free from Port Restriction by DMZ	
	Make Xbox Online Games Run Smoothly by UPnP	
4. 6.	VPN Server	
	Use OpenVPN to Access Your Home Network	
	Use PPTP VPN to Access Your Home Network	
4.7.	Customize Your Network Settings	37

	Change the LAN Settings	
	Set Up Link Aggregation	
	Configure to Support IPTV Service	
	Specify DHCP Server Settings	
	Set Up a Dynamic DNS Service Account	41
	Create Static Routes	
	Specify Wireless Settings	44
	Use WPS for Wireless Connection	45
	Schedule Your Wireless Function	46
4.8.	Manage the Router	
	Adjust Wi-Fi Coverage	
	Set Up System Time	
	Test the Network Connectivity	
	Upgrade the Firmware	51
	Backup and Restore Configuration Settings	53
	Change the Administrator Account	54
	Password Recovery	54
	Local Management	
	Remote Management	56
	System Log.	57
	Monitor the Internet Traffic Statistics	59
	Control LEDs	60
Char	ter E. Configure the Deuter in Access Deint Mede	60
Cnap	oter 5. Configure the Router in Access Point Mode	
5.1.	Change the Working Mode	
5.2.	Guest Network	
	Create a Network for Guests	
	Customize Guest Network Options	
5.3.	Parental Controls	
5.4.	Customize Your Wireless Settings	
	Specify Wireless Settings	
	Use WPS for Wireless Connection	
5. 5.	Customize Your Network	
	Change LAN Settings	
	Adjust Wi-Fi Coverage	
	Set Access Control	
5.6.	Manage the Router	
	Set Up System Time	
	Control LEDs	73

	Power Schedule	
	Upgrade the Firmware	
	Backup and Restore Configuration Settings	
	Change Login Password	
	System Log.	77
Chap	ter 6. Configure the Router in Range Extender Mode	
6.1.	Change the Working Mode	79
6. 2.	Guest Network	
	Create a Network for Guests	79
	Customize Guest Network Options	80
6.3.	Parental Controls	80
6.4.	Customize Your Wireless Settings	83
	Specify Wireless Settings	83
	Use WPS for Wireless Connection	83
6.5.	Customize Your Network	
	Change LAN Settings	85
	Specify DHCP Server Settings	
	Adjust Wi-Fi Coverage	
	Set Access Control	
6.6.	Manage the Router	
	Set Up System Time	
	Control LEDs	90
	Upgrade the Firmware	
	Backup and Restore Configuration Settings	
	Change Login Password	93
	System Log.	
FAQ.		

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick internet setup, while this guide contains details of each function and demonstrates how to configure them.

When using this guide, please notice that features of the router may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide the following conventions are used:

Convention	Description			
Underlined	Underlined words or phrases are hyperlinks. You can click to redirect to a website or a specific section.			
Teal	Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons, etc.			
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.			
Note:	Ignoring this type of note might result in a malfunction or damage to the device			
Tips: Indicates important information that helps you make better use of				
symbols on the web page	 C click to edit the corresponding entry. click to delete the corresponding entry. click to enable or disable the corresponding entry. click to view more information about items on the page. 			

More Info

The latest software, management app and utility can be found at Download Center at http://www.tp-link.com/support.

The Quick Installation Guide can be found where you find this guide or inside the package of the router.

Specifications can be found on the product page at http://www.tp-link.com.

A Technical Support Forum is provided for you to discuss our products at <u>http://forum.tp-link.com</u>.

Our Technical Support contact information can be found at the Contact Technical Support page at <u>http://www.tp-link.com/support</u>.

Chapter 1

Get to Know About Your Router


This chapter introduces what the router can do and shows its appearance. It contains the following sections:

- Product Overview
- Panel Layout

1.1. Product Overview

The TP-LINK router is designed to fully meet the need of Small Office/Home Office (SOHO) networks and users demanding higher networking performance. The powerful antennas ensure continuous Wi-Fi signal to all your devices while boosting widespread coverage throughout your home, the built-in Ethernet ports supply high-speed connection to your wired devices, and the flexible working modes are capable to meet all your network needs.

Moreover, it is simple and convenient to set up and use the TP-LINK router due to its intuitive web interface and the powerful Tether app.

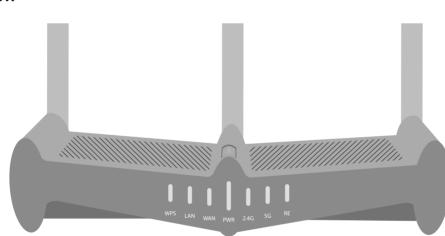

1.2. Panel Layout

Top View

RE button: The button for the Range Extender mode. Press and hold it for about 3 seconds to change to the Range Extender mode.

The router's LEDs (view from left to right) are located on the front panel. You can check the router's working status by following the LED Explanation table.

1.2.1. LED Explanation

Name	Status	Indication	
WDC	On/Off	Turns on when WPS connection is established, and goes off about 5 minutes later.	
WPS	Blinking	A wireless device is trying to connect to the network via WPS. This process may take up to 2 minutes.	
	On	There is at least one device connects to the LAN ports.	
LAN	Off	No connection.	

Name	Status	Indication
	Blue On	The internet is available.
WAN	Orange On	The router's WAN port is connected, but the internet is not available.
	Off	The router's WAN port is not connected.
	On	System initialization completes.
PWR	Blinking	System initialization or firmware upgrade is in progress. Do not disconnect or power off the router.
	Off	Power is off.
0.40/50	On	The corresponding wireless function (2.4G/5G) is working properly.
2.4G/5G	Off	The corresponding wireless function (2.4G/5G) is disabled.
DE	Blinking	The router is connecting to the host network. This process will last in the first 2 minutes.
RE	On	The router has been successfully connected to the host network, and it is working in Range Extender mode.

1.2.1. LED Explanation

The Back Panel



The following parts (view from left to right) are located on the rear panel.

ltem	Description
PWR Port	For connecting the router to a power socket via the provided power adapter.
Power On/Off For powering on or off the router.	
Wi-Fi On/Off Press and hold this button about 2 seconds to enable or disable Wireless funct	
Reset Button	Use a pin to press and hold this button until all the LED turn on momentarily to reset the router to its factory default settings.
WAN Port	For connecting to a DSL/Cable modem, or an Ethernet port.

ltem	Description
WPS	If your clients, such as wireless adapters, that support Wi-Fi Protected Setup, then you can press this button to quickly establish a connection between the router and clients and automatically configure wireless security for your wireless network. The wireless security will be automatically configured for your wireless network.
Ethernet Ports (1/2/3/4)	For connecting your PCs or other wired network devices to the router.
Antennas	Used for wireless operation and data transmitting. Upright them for the best Wi-Fi performance.

Chapter 2

Connect to the Internet

This chapter contains the following sections:

- Position Your Router
- Connect to the Internet


2.1. Position Your Router

- The product should not be located in a place where it will be exposed to moisture or excessive heat.
- Place the router in a location where it can be connected to multiple devices as well as to a power source.
- Make sure the cables and power cord are safely placed out of the way so they do not create a tripping hazard.
- The router can be placed on a shelf or desktop.
- Keep the router away from strong devices with strong electromagnetic interference, such as Bluetooth devices, cordless phones and microwaves.

2.2. Connect to the Internet

Install the antennas

Please install the Antennas first by following the steps shown below before your start to use the router.

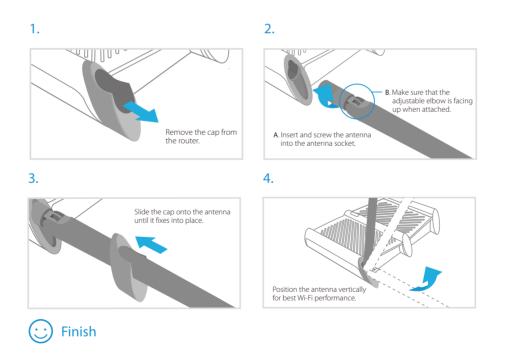


The Router provides three working modes: Router, Range Extender and Access Point. You can choose the mode to better suit your network needs and follow the guide to complete the configuration.

Router mode

This mode enables multiple users to share Internet connection via ADSL/Cable Modem.

1. Follow the steps below to connect your router.


If your Internet connection is through an Ethernet cable from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable directly to the router's WAN port, and then follow Step 4 and 5 to complete the hardware connection.

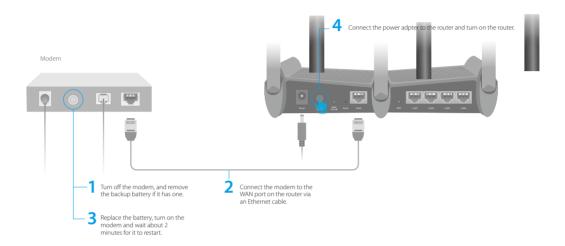

- 1) Turn off the modem, and remove the backup battery if it has one.
- 2) Connect the modem to the WAN port on your router with an Ethernet cable.
- 3) Turn on the modem, and then wait about 2 minutes for it to restart.
- 4) Connect the power adapter to the router and turn on the router.
- 5) Verify that the hardware connection is correct by checking these LEDs.




- Tips: If 2.4G or 5G LED is off, press and hold the Wi-Fi On/Off button until it is on.
- 2. Connect your computer to the router.
- Method 1: Wired

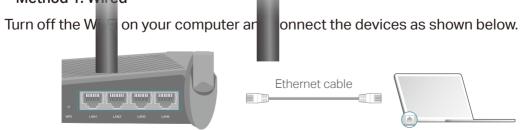

• Method 2: Wirelessly

- 1) Find the SSID (Network Name) and Wireless Password printed on the label at the bottom of the router.
- 2) Click the network icon of your computer or go to Wi-Fi Settings of your smart device, and then select the SSID to join the network.

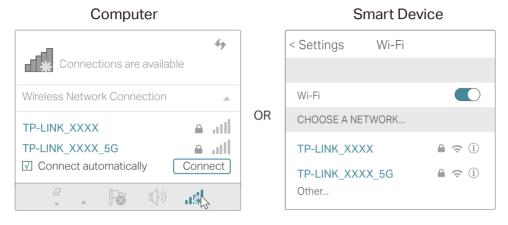


• Method 3: Use the WPS button

Wireless devices that support WPS, including Android phones, tablets, most USB network cards, can be connected to your router through this method (Not supported by iOS devices).


Note:

The WPS function cannot be configured if the wireless function of the router is disabled. Also, the WPS function will be disabled if your wireless encryption is WEP. Please make sure the wireless function is enabled and is configured with the appropriate encryption before configuring the WPS.

- 1) Tab the WPS icon on the device's screen.
- 2) Immediately press the WPS button on your router.

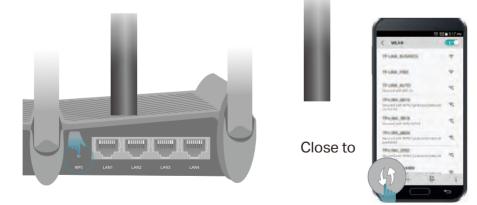

3. Enter http://tplinkwifi.net in the address bar of a web browser. Use admin for password, and then click Login.

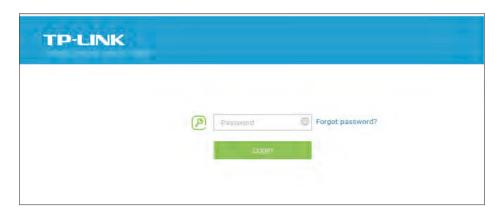

Note:

If the above screen does not pop-up, it means that your IE Web-browser has been set to a proxy. Go to Tools menu > Internet Options > Connections > LAN Settings, in the screen that appears, cancel the Using Proxy checkbox, and click OK to finish it.

- 4. After successfully login, follow Quick Setup to complete the configuration.
- 5. Enjoy! For wireless devices, you may have to reconnect to the wireless network if you have customized the SSID (wireless name) and password during the configuration.


Range Extender Mode

This mode boosts your home wireless coverage.

- Option One: Using RE Button
 - 1) Press the WPS button on the host router.
 - 2) Press and hold the RE button on the top panel of router for about 3 seconds within 1 minute. The router will start to reboot.
 - 3) After rebooted, the RE LED should change from blinking to a solid state, indicating a successful connection.

Note: If not, please refer to the Option Two.

- Option Two: Using Web Browser
 - Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (wireless name) and password printed on the bottom label of the router.
 - 2) Enter <u>http://tplinkwifi.net</u> in the address bar of a web browser. Use admin for both username and password, and then click Login.

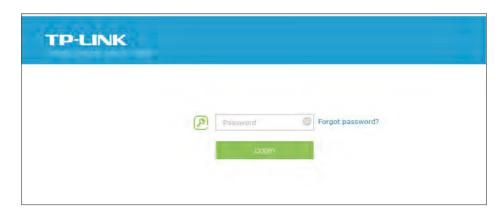

- 3) After successfully login, select Range Extender mode and follow Quick Setup to complete the configuration.
- @ Tips: Click Survey to choose your host network and fill in its wireless password.
- 2. Relocate: Place the router between your host router and the Wi-Fi dead zone. The location you choose must be within the range of your existing host network.



3. Enjoy! The extended network shares the same SSID (wireless name) and password as your host network.

Access Point Mode

This mode transforms your existing wired network to a wireless network.



- 1. Turn on the router.
- 2. Connect the router to your wired host router's Ethernet port via an Ethernet cable as shown above.
- 3. Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name) and password printed on the bottom label of the router.

4. Enter http://tplinkwifi.net in the address bar of a web browser. Use admin for password, and then click Login.

TP-LINK		-
	Password Crogot password?	

Note:

If the above screen does not pop-up, it means that your IE Web-browser has been set to a proxy. Go to Tools menu > Internet Options > Connections > LAN Settings, in the screen that appears, cancel the Using

Proxy checkbox, and click OK to finish it.

5. After successfully login, Click Mode button in the top-right corner of the web management page and choose Access Point and then click Save. The router will reboot automatically.

Note:

If you want to change the default SSID (network name) and the password, please follow Quick Setup to complete the configuration.

6. Enjoy! Connect to the wireless network by using the SSID (wireless name) and password of the router.

Chapter 3

Log In

This chapter shows how to log in to the web management page of router.

With the web-based utility, it is easy to configure and manage the router. The webbased utility can be used on any Windows, Macintosh or UNIX OS with a Web browser, such as Microsoft the Internet Explorer, Mozilla Firefox or Apple Safari.

Follow the steps below to log in to your router.

- 1. Set up the TCP/IP Protocol in Obtain an IP address automatically mode on your computer.
- 2. Visit http://tplinkwifi.net, and log in with the password you set for the router.

TP-LINK					
	P	Password	0	Forgot password?	
		Login			

Note:

If the login window does not appear, please refer to the FAQ section.

Chapter 4

Configure the Router in Router Mode

This chapter presents how to configure the various features of the router working as a standard wireless router.

It contains the following sections:

- Guest Network
- Parental Controls
- QoS
- Network Security
- NAT Forwarding
- VPN Server
- Customize Your Network Settings
- Manage the Router

4.1. Guest Network

This function allows you to provide Wi-Fi access for guests without disclosing your main network. When you have guests in your house, apartment, or workplace, you can create a guest network for them. In addition, you can customize guest network options to ensure network security and privacy.

Create a Network for Guests

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Guest Network. Locate the Wireless section.
- 3. Create a guest network as needed.
 - 1) Enable Guest network.
 - 2) Customize the SSID. Do not select Hide SSID unless you want your guests to manually input the SSID for guest network access.
 - 3) Select the Security type.
 - If No security is selected, no password is needed to access your guest network.
 - If WAP/WPA2-Personal is selected, keep the default Version and Encryption values, and customize your own password.

Wireless			
2.4GHz Wireless:	Enable Guest Network		
Network Name (SSID):	TP-LINK_Guest	Hide SSID	
5GHz-1 Wireless:	🔄 Enable Guest Network		

4. Click Save. Now your guests can access your guest network using the SSID and password you set!

Ø Tips:

To view guest network information, go to Advanced > Status and locate the Guest Network section.

Customize Guest Network Options

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Guest Network. Locate the Settings section.
- 3. Customize guest network options according to your needs.

Settings	
□ Allow guests to see each other	
□ Allow guests to access my local network	
	Save

• Allow guests to see each other

Check this box if you want to allow the wireless clients on your guest network to communicate with each other via methods such as network neighbors and Ping.

• Allow guests to access my local network

Check this box if you want to allow the wireless clients on your guest network to communicate with the devices connected to your router's LAN ports or main network via methods such as network neighbors and Ping.

4. Click Save. Now you can ensure network security and privacy!

Ø Tips:

To view guest network information, go to Advanced > Status and locate the Guest Network section.

4.2. Parental Controls

This function allows you to block inappropriate, explicit and malicious websites, and control access to specified websites at specified time.

l want to:	Control the times of day my children or other home network users are allowed to access the Internet and even types of websites they can visit.
	For example, I want to allow my children's devices (e.g. a computer or a tablet) to access only <u>www.tp-link.com</u> and <u>Wikipedia.org</u> from 18:00 (6PM) to 22:00 (10PM) at the weekend and not other times.
How can I do that?	 Visit<u>http://tplinkwifi.net</u>, and log in with password you set for the router.
	2. Go to Advanced > Parental Controls and_enable Parental Controls.
	Parental Controls
	Parental Controls:
	3 Click Add And then Click View Existing Devices and select

 Click Add. And then Click View Existing Devices, and select the access device. Or, input the Device Name and MAC Address manually.

ID Device Name MAC Address Internet Access Time Description Status Modify Device Name:							🔂 Add	O Delete
MAC Address: Internet Access Time: Description: Coptional) Enable This Entry		ID	Device Name	MAC Address		Description	Status	Modify
MAC Address: Internet Access Time: Description: Coptional) Enable This Entry	-	-		-	-	-		-
		MAC	Address:					

4. Click the 🕙 icon to set the Internet Access Time. Drag the cursor over the appropriate cell(s) and click OK.

	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
24:00							
24.00	Time						

- 5. Enter a Description for the entry, check the box for Enable This Entry, and then click OK.
- 6. Select Whitelist as the restriction policy.

Content Restriction		
Restriction Policy:	🔿 Blacklist	Whitelist

Ø Tips:

- With Blacklist selected, the controlled devices cannot access any websites containing the specified keywords during the Internet Access Time period.
- With Whitelist selected, the controlled devices can only access websites containing the specified keywords during the Internet Access Time period.
- 7. Click 😌 Add a New Domain Name . Enter a website and click Save.

You can add up to 32 keywords for either Blacklist or Whitelist. Below are some sample entries to allow access.

- For Whitelist: Enter a web address (e.g. wikipedia.org) to allow access only to its related websites. If you wish to block all Internet browsing access, do not add any keyword to the Whitelist.
- For Blacklist: Specify a web address (e.g. wikipedia.org), a web address keyword (e.g. wikipedia) or a domain suffix (eg. .edu or .org) to block access only to the websites containing that keyword or suffix.

Content Restriction		
Restriction Policy:	🔿 Blacklist 💿 Whitelist	
🚱 Add a New Domain Nam	e	
wikipedia.org	•	
		Save

Done!

Now you can control your children's Internet access as needed.

4.3. QoS

QoS (Quality of Service) is designed to ensure the efficient operation of the network when come across network overload or congestion.

l want to:	Specify priority levels for some devices or applications.
	For example, I have several devices that are connected to my wireless network. I would like to set an intermediate speed on the Internet for my phone.
How can I do that?	 Enable QoS and set bandwidth allocation. Visit<u>http://tplinkwifi.net</u>, and log in with password you set for the router. Go to Advanced > QoS. Select Enable QoS.

- 4) Input the maximum upload and download bandwidth provided by your Internet service provider. 1Mbps equal s to 1000Kbps.
- 5) Click Advanced and drag the scroll bar to set the bandwidth priority percentage.
- 6) Click Save.

QoS					
QoS:	🕑 Enable QoS				
Upload Bandwidth:	1000	Mbps	*		
Download Bandwidth:	1000	Mbps			
Advanced					
High Priority:	-	0	-	60%	
Middle Priority:	-		-	30%	
Low Priority:			-	10%	
					Save

- 2. Add a middle priority QoS rule for the phone.
 - 1) Click Add in Qos Rule List section.

High Priority:60%	Middle Priority:30%	Low Priority: 10%

2) Click View Existing Devices.

QoS Rule			
Type:	By Device		
Device Name:		View Existing Devices	
MAC Address:			
		Cancel	OK

3) Choose the respective device from the list.

ccess	Devices List			
ID	Device Name	IP Address	MAC Address	Operation
1	Anna Parry	192.168.0.175	1C-1A-C0-3B-28-4B	Choose
2	-	192.168.0.157	C0-4A-00-1A-C3-45	Choose

4) Click OK.

Type:	By Device		
Device Name:	100.00	View Existing Devices	
MAC Address:	74-D4-35-98-42-A8		

3. Refer to the steps above to apply other QoS rules if any. *Note:*

If you want to delete a QoS rule, click $\overline{\bullet}$ to remove the responding rule from the list.

Done! Now QoS is implemented to prioritize Internet traffic.

4.4. Network Security

This chapter guides you on how to protect your home network from cyber attacks and unauthorized users by implementing these three network security functions. You can protect your home network against DoS (Denial of Service) attacks from flooding your network with server requests using DoS Protection, block or allow specific client devices to access your network using Access Control, or you can prevent ARP spoofing and ARP attacks using IP & MAC Binding.

Protect the Network from Cyber Attacks

The SPI (Stateful Packet Inspection) Firewall and DoS (Denial of Service) Protection protect the router from cyber attacks.

The SPI Firewall can prevent cyber attacks and validate the traffic that is passing through the router based on the protocol. This function is enabled by default, and it's recommended to keep the default settings.

DoS Protection can protect your home network against DoS attacks from flooding your network with server requests. Follow the steps below to configure DoS Protection.

1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

2. Go to Advanced > Security > Settings.

DoS Protection			
DoS Protection:			
ICMP-FLOOD Attack Filtering:	Off	+	
UDP-FLOOD Attack Filtering:	Off	*	
TCP-SYN-FLOOD Attack Filtering:	Off	*	
	🗌 Ignore Ping P	acket From WAN Port	
	Forbid Ping Pa	acket From LAN Port	

- 3. Enable DoS Protection.
- 4. Set the level (Off, Low, Middle or High) of protection for ICMP-FLOOD Attack Filtering, UDP-FIOOD Attack Filtering and TCP-SYN-FLOOD Attack Filtering.
 - ICMP-FLOOD Attack Filtering Enable to prevent the ICMP (Internet Control Message Protocol) flood attack.
 - UDP-FIOOD Attack Filtering Enable to prevent the UDP (User Datagram Protocol) flood attack.
 - TCP-SYN-FLOOD Attack Filtering Enable to prevent the TCP-SYN (Transmission Control Protocol-Synchronize) flood attack.

Ø Tips:

The level of protection is based on the number of traffic packets. The protection will be triggered immediately when the number of packets exceeds the preset threshold value (the value can be set on Advanced > System Tools > System Parameters > DoS Protection Level Settings), and the vicious host will be displayed in the Blocked DoS Host List.

Block	ed DoS Ho	ost List	
Host N	umber: 0		💍 Refresh 🗧 Delete
	ÎD	IP Address	MAC Address
	÷	-	-

- 5. If you want to ignore the ping packets from the WAN port, select Ignore Ping Packet From WAN Port; if you want to ignore the ping packets form the LAN port, select Ignore Ping Packet From LAN Port.
- 6. Click Save.

How can I

do that?

Access Control

Access Control is used to block or allow specific client devices to access your network (via wired or wireless) based on a list of blocked devices (Blacklist) or a list of allowed devices (Whitelist).

l want to:	Block or allow specific client devices to access my network (via
	wired or wireless).

- Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
 - 2. Go to Advanced_>_Advanced-Settings >_Access Control_
 - 3. Enable Access Control.

Access Control	
Access Control:	

4. Select the access mode to either block (recommended) or allow the device(s) in the list.

To block specific device(s)

5) Select Blacklist and click Save.

Access Mode		
Default Access Mode:	Blacklist Whitelist	
		Save

- 6) Select the device(s) to be blocked in the Online Devices table by ticking the box.
- 7) Click Block above the Online Devices table. The selected devices will be added to Devices in Blacklist automatically.

Dnlir	ne Dev	ices				
					🖰 Refresh	S Block
	ID	Device Name	IP Address	MAC Address	Connection Type	Modify
	1	Roses-iPhone	192,168.0.175	1C-1A-C0-3B-28-4B	Wireless	0
	2	ADMIN-PC	192.168.0.157	C0-4A-00-1A-C3-45	Wireless	0

To allow specific device(s)

1) Select Whitelist and click Save.

Access Mode		
Default Access Mode:	🔿 Blacklist 💿 Whitelist	
		Save

2) Click Add in the Devices in Whitelist section. Enter the Device Name and MAC Address (You can copy and paste the information from the Online Devices list if the device is connected to your network).

				Add 😑 Delet
	ID	Device Name	MAC Address	Modify
-				_
	Device Nan		Cancel	ÖK

3) Click OK.

Done!

Now you can block or allow specific client devices to access your network (via wired or wireless) using the Blacklist or Whitelist.

IP & MAC Binding

IP & MAC Binding, namely, ARP (Address Resolution Protocol) Binding, is used to bind network device's IP address to its MAC address. This will prevent ARP Spoofing and other ARP attacks by denying network access to an device with matching IP address in the Binding list, but unrecognized MAC address.

l want to:	Prevent ARP spoofing and ARP attacks.
How can l do that?	1. Visit <u>http://tplinkwifi.net</u> , and log in with password you set for the router.
	2. Go to Advanced_>_Security_>_IP & MAC Binding.
	3. Enable ARP Binding.
	Settings
	ARP Binding:
	A Bind your dovice(c) according to your pood

4. Bind your device(s) according to your need.

To bind the connected device(s):

Click 🧬 to add the corresponding device to the Binding List.

To bind the unconnected device

1) Click Add in the Binding List section.

Bind	ing List	ť				
					0	Add 😑 Delete
	ID	MAC Address	IP Address	Description	Status	Modify
-						
MAC Address: IP Address: Description:		ress:	Enable This Entry	(Optional)		
				Canp	el	ж

- 2) Enter the MAC address and IP address that you want to bind. Enter a Description for this binding entry.
- 3) Check the box for Enable This Entry and click OK.

Done! Now you don't need to worry about ARP spoofing and ARP attacks!

4.5. NAT Forwarding

The router's NAT (Network Address Translation) feature makes devices on the LAN use the same public IP address to communicate with devices on the Internet, which protects the local network by hiding IP addresses of the devices. However, it also brings about the problem that an external host cannot initiatively communicate with a specified device on the local network.

With the forwarding feature the router can penetrate the isolation of NAT and allows devices on the Internet to initiatively communicate with devices on the local network, thus realizing some special functions.

The TP-LINK router supports four forwarding rules. If two or more rules are set, the priority of implementation from high to low is Virtual Servers, Port Triggering, UPNP and DMZ.

 
Share Local Resources on the Internet by Virtual Servers

When you build up a server on the local network and want to share it on the Internet, Virtual Servers can realize the service and provide it to Internet users. At the same time Virtual Servers can keep the local network safe as other services are still invisible from the Internet.

Virtual Servers can be used for setting up public services on your local network, such as HTTP, FTP, DNS, POP3/SMTP and Telnet. Different services use different service ports. Port 80 is used in HTTP service, port 21 in FTP service, port 25 in SMTP service and port 110 in POP3 service. Please verify the service port number before the configuration.

I want to: Share my personal website I've built in local network with my friends through the Internet.

For example, the personal website has been built on my home PC (192.168.0.100). I hope that my friends on the Internet can visit my website in some way. The PC is connected to the router with the WAN IP address 218.18.232.154.



How can I do that?

- **1.** Assign a static IP address to your PC, for example 192.168.0.100.
 - 2. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
 - **3.** Go to Advanced >_NAT Forwarding > Virtual Servers.
 - 4. Click Add. Click View Existing Services and select HTTP. The External Port, Internal Port and Protocol will be automatically filled in. Enter the PC's IP address 192.168.0.100 in the Internal IP field.
 - 5. Click OK.

								😋 Add	Delete	
	ID	Service Type	External Port	Internal IP	Internal	Port	Protocol	Status	Modify	
			-	_	-		-	-	-	
	Ser	vice Type:	нт	ГР		Viev	• Existing Se	rvices		
External Port:			80	80			(XX-XX or XX)			
	Internal IP:			192.168.0.100						
Internal Port:			80	80			(XX or Blank ,1-65535)			
	Pro	tocol:	TCF	>						
			🕑 Er	able This Entr	¥)					
							Cancel	OK		

Tips:

- It is recommended to keep the default settings of Internal Port and Protocol_if you are not clear about which port and protocol to use.
- If the service you want to use is not in the Service_Type, you can enter the corresponding parameters manually. You should verify the port number that the service needs.
- You can add multiple virtual server rules if you want to provide several services in a router. Please note that the External_Port should not be overlapped.

Done! Users on the Internet can enter http:// WAN IP (in this example: http:// 218.18.232.154) to visit your personal website.

Ø Tips:

- The WAN IP should be a public IP address. For the WAN IP is assigned dynamically by the ISP, it is recommended to apply and register a domain name for the WAN referring to Set Up a Dynamic DNS Service Account. Then users on the Internet can use http:// domain name to visit the website.
- If you have changed the default External Port, you should use http:// WAN IP: External Port or http:// domain name: External Port to visit the website.

Open Ports Dynamically by Port Triggering

Port Triggering can specify a triggering port and its corresponding external ports. When a host on the local network initiates a connection to the triggering port, all the external ports will be opened for subsequent connections. The router can record the IP address of the host. When the data from the Internet return to the external ports, the router can forward them to the corresponding host. Port Triggering is mainly applied to online games, VoIPs, video players and common applications including MSN Gaming Zone, Dialpad and Quick Time 4 players and more.

Follow the steps below to configure the Port Triggering rules:

1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

- 2. Go to Advanced > NAT Forwarding > Port Triggering and click Add.
- 3. Click View Existing Applications, and select the desired application. The External Port, Internal Port and Protocol will be automatically filled in. The following picture takes application MSN Gaming Zone as an example.
- 4. Click OK.

								🔂 Add	Delete
D	ID	Application	Triggering Port	Triggering Protocol	Externa	l Port	External Protocol	Status	Modify
-	9		-	-	-		-	-	
	Appli	cation :	MSN	Gaming Zone		View	Existing Appl	ications	
	Triggering Port:		476	24		(XX,1	-65535)		
	Triggering Protocol:		ALL	ALL -					
	External Port:		230	0-2400,28800	-29000		r XX-XX,1-65 5 pairs)	i535,at	
	Exter	mal Protocol:	ALL		Ŧ				
			🕑 En:	able This Entry					

- Ø Tips:
- You can add multiple port triggering rules according to your network need.
- The triggering ports can not be overlapped.
- If the application you need is not listed in the Existing Applications list, please enter the parameters manually. You should verify the external ports the application uses first and enter them into External Port field according to the format the page displays.

Make Applications Free from Port Restriction by DMZ

When a PC is set to be a DMZ (Demilitarized Zone) host on the local network, it is totally exposed to the Internet, which can realize the unlimited bidirectional communication between internal hosts and external hosts. The DMZ host becomes a virtual server with all ports opened. When you are not clear about which ports to open in some special applications, such as IP camera and database software, you can set the PC to be a DMZ host.

Note:

When DMZ is enabled, the DMZ host is totally exposed to the Internet, which may bring some potential safety hazards. If DMZ is not in use, please disable it in time.

l want to:	Make the home PC join the Internet online game without port restriction.
	For example, due to some port restriction, when playing the online games, you can login normally but cannot join a team with other players. To solve this problem, set your PC as a DMZ host with all ports open.
How can l do that?	1. Assign a static IP address to your PC, for example 192.168.0.100.
	2. Visit <u>http://tplinkwifi.net</u> , and log in with password you set for the router.
	 Go to Advanced > NAT Forwarding > DMZ and select Enable DMZ.
	4. Enter the IP address 192.168.0.100 in the DMZ Host IP Address filed.
	DMZ
	DMZ: 🕑 Enable DMZ
	DMZ Host IP Address: 192.168.0.100

5. Click Save.

Done!

The configuration is completed. You've set your PC to a DMZ host and now you can make a team to game with other players.

Make Xbox Online Games Run Smoothly by UPnP

The UPnP (Universal Plug and Play) protocol allows applications or host devices to automatically find the front-end NAT device and send request to it to open the corresponding ports. With UPnP enabled, the applications or host devices on the local network and the Internet can freely communicate with each other thus realizing the seamless connection of the network. You may need to enable the UPnP if you want to use applications for multiplayer gaming, peer-to-peer connections, real-time communication (such as VoIP or telephone conference) or remote assistance, etc.

- Ø Tips:
- UPnP is enabled by default in this router.
- Only the application supporting UPnP protocol can use this feature.
- UPnP feature needs the support of operating system (e.g. Windows Vista/ Windows 7/ Windows 8, etc. Some of operating system need to install the UPnP components).

For example, when you connect your Xbox to the router which has connected to the Internet to play online games, UPnP will send request to the router to open the corresponding ports allowing the following data penetrating the NAT to transmit. Therefore, you can play Xbox online games without a hitch.



If necessary, you can follow the steps to change the status of UPnP.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > NAT Forwarding > UPnP and toggle on or off according to your needs.

UPnP									
UPnP:		D							
UPnP Service List									
rocar ent	ancor o				U Heiresi				
ID	Service Description	External Port	Protocol	Internal IP Address	Internal Port				

4.6. VPN Server

 
The VPN (Virtual Private Networking) Server allows you to access your home network in a secured way through Internet when you are out of home. The router offers two ways to setup VPN connection: OpenVPN and PPTP (Point to Point Tunneling Protocol) VPN.

OpenVPN is somewhat complex but with greater security and more stable. It is suitable for restricted environment, such as campus network and company intranet.

PPTP VPN is more easily used and its speed is faster, it's compatible with most operating systems and also supports mobile devices. Its security is poor and your packets may be cracked easily, and PPTP VPN connection may be prevented by some ISP.

Use OpenVPN to Access Your Home Network

In the OpenVPN connection, the home network can act as a server, and the remote device can access the server through the router which acts as an OpenVPN Server gateway. To use the VPN feature, you should enable OpenVPN Server on your router, and install and run VPN client software on the remote device. Please follow the steps below to set up an OpenVPN connection.



4. 6. 1. Step 1. Set up OpenVPN Server on Your Router

1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

2. Go to Advanced > VPN Server > OpenVPN, and select Enable VPN Server.

OpenVPN			
Note: No certificate curre	ntly, please Generate one bef	ore enabling VPN Server.	
	Enable VPN Server		
Service Type:	O TCP		
Service Port:	1194		
VPN Subnet/Netmask:	10.8.0.0	255.255.255.0	
Client Access:	Home Network Only	O Internet and Home Network	
			Save

Note:

- Before you enable VPN Server, we recommend you configure Dynamic DNS Service (recommended) or assign a static IP address for router's WAN port and synchronize your System Time with Internet.
- The first time you configure the OpenVPN Server, you may need to Generate a certificate before you enable the VPN Server.
- 3. Select the Servive Type (communication protocol) for OpenVPN Server: UDP, TCP.
- 4. Enter a VPN Service Port to which a VPN device connects, and the port number should be between 1024 and 65535.
- 5. In the VPN Subnet/Netmask fields, enter the range of IP addresses that can be leased to the device by the OpenVPN server.
- 6. Select your Client Access type. Select Home Network Only if you only want the remote device to access your home network; select Internet and Home Network if you also want the remote device to access Internet through the VPN Server.
- 7. Click Save.

8. Click Generate to get a new certificate.

Certificate	
Generate the certificate.	Generate

Note:

If you have already generated one, please skip this step, or click Generate to update the certificate.

9. Click Export to save the OpenVPN configuration file which will be used by the remote device to access your router.

Configuration File	
Export the configuration.	Export

4.6.2. Step 2. Configure OpenVPN Connection on Your Remote Device

1. Visit <u>http://openvpn.net/index.php/download/community-downloads.html</u> to download the OpenVPN software, and install it on your device where you want to run the OpenVPN client utility.

Note:

You need to install the OpenVPN client utility on each device that you plan to apply the VPN function to access your router. Mobile devices should download a third-party app from Google Play or Apple App Store.

- 2. After the installation, copy the file exported from your router to the OpenVPN client utility's "config" folder (for example, C:\Program Files\OpenVPN\config on Windows). The path depends on where the OpenVPN client utility is installed.
- 3. Run the OpenVPN client utility and connect it to OpenVPN Server.

Use PPTP VPN to Access Your Home Network

PPTP VPN Server is used to create a VPN connection for remote device. To use the VPN feature, you should enable PPTP VPN Server on your router, and configure the PPTP connection on the remote device. Please follow the steps below to set up a PPTP VPN connection.

4. 6. 3. Step 1. Set Up PPTP VPN Server on Your Router

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > VPN Server > PPTP VPN, and select Enable VPN Server.

	Enable VPN Sen	ven			
Client IP Address:	10.0.0.11	-10.0.0.	20	(up to 10 clients)	
Username:	admin				
Password:	admin				

Note:

Before you enable VPN Server, we recommend you configure Dynamic DNS Service (recommended) or assign a static IP address for router's WAN port and synchronize your System Time with Internet.

- 3. In the Client IP Address filed, enter the range of IP addresses (up to 10) that can be leased to the devices by the PPTP VPN server.
- 4. Click Advanced to set the PPTP connection permission according to your needs.
 - Select Allow Samba (Network Place) access to allow your VPN device to access your local Samba server.
 - Select Allow NetBIOS passthrough to allow your VPN device to access your Samba server using NetBIOS name.
 - Select Allow Unencrypted connections to allow unencrypted connections to your VPN server.
- 5. Click Save.
- 6. Configure the PPTP VPN connection account for the remote device, you can create up to 16 accounts.

				🚯 Add 🛛 😑 Delete
	ID	Username	Password	Modify
-	-	-	-	-
	Username Password:			
			Can	Icel OK


- 1) Click Add.
- 2) Enter the Username and Password to authenticate devices to the PPTP VPN Server.

3) Click OK.


4. 6. 4. Step 2. Configure PPTP VPN Connection on Your Remote Device

The remote device can use the Windows built-in PPTP software or a third-party PPTP software to connect to PPTP Server. Here we use the Windows built-in PPTP software as an example.

- 1. Go to Start > Control Panel > Network and Internet > Network and Sharing Center.
- 2. Select Set up a new connection or network.

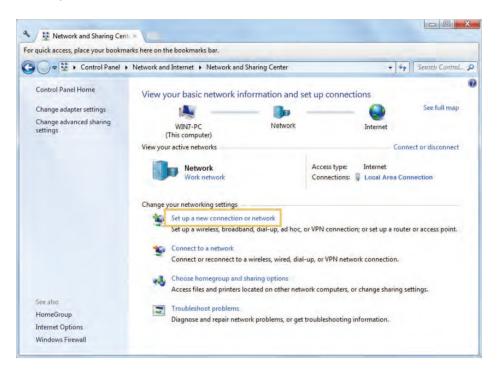

3. Select Connect to a workplace and click Next.

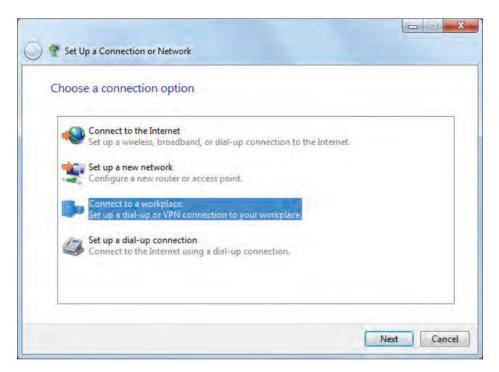

4. Select Use my Internet connection (VPN).

How do you want to connect?	
 Use my Internet connection (VPN) Connect using a virtual private network (VPN) connection through the Ir 	nternet.
🧶 — 🍥 — 🕪	
 Dial directly Connect directly to a phone number without going through the Internet 	
💌 — 🌗	
What is a VPN connection?	


5. Enter the Internet IP address of the router (for example: 218.18.1.73) in the Internet address field. Click Next.

Type the Internet a	address to connect to
Your network administr	ator can give you this address.
Internet address:	218.18.1.73
Destination name:	VPN Connection
Use a smart card	
	ple to use this connection ws anyone with access to this computer to use this connection.
Don't connect n	ow; just set it up so I can connect later

6. Enter the User name and Password you have set for the PPTP VPN server on your router, and click Connect.

Type your user na	ame and password	
User name:	admin	
Password:		
	Show characters	
	Remember this password	
Domain (optional):		

7. The PPTP VPN connection is created and ready to use.

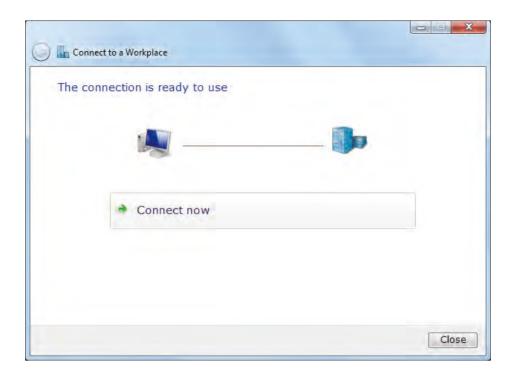

4.7. Customize Your Network Settings

Change the LAN Settings

The router is preset with a default LAN IP 192.168.0.1, which you can use to log in to its web management page. The LAN IP address together with the Subnet Mask also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Network > LAN.
- 3. Type in a new IP Address appropriate to your needs. And leave the Subnet Mask as the default settings.

MAC Address:	50-C7-BF-02-EA-DC	
IP Address:	192.168.0.1	
Subnet Mask:	255.255.255.0	

4. Click Save.

Note:

If you have set the Virtual Server, DMZ or DHCP address reservation, and the new LAN IP address is not in the same subnet with the old one, then you should reconfigure these features.

Set Up Link Aggregation

The Link Aggregation feature combines two ports together to make a single highbandwidth data path, thus sustaining a higher-speed and more stable wired network.

- 1. Visit http://tplinkwifi.net, and log in with password you set for the router.
- 2. Go to Advanced > Network > LAN.
- 3. Enable Link Aggregation.

Link Aggregation		
Link Aggregation:		

- 4. Select LACP active or LACP passive for Mode.
 - LACP active: enables LACP (Link Aggregation Control Protocol) unconditionally.
 - LACP passive: enables LACP only when an LACP device is detected.

Mode:	LACP active	v	
	LACP passive		
Link Aggregation Ports:	LACP active	AN	3 🗌 LAN4

5. Specify two ports for link aggregation.


|--|

6. Click Save.

Configure to Support IPTV Service

l want to:	Configure IPTV setup to enable Internet/IPTV/Phone service provided by my Internet Service Provider (ISP).
How can I do that?	 Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
	2. Go to Advanced > Network > IPTV.
	3. If your ISP provides the networking service based on IGMP technology, e.g., British Telecom(BT) and Talk Talk in UK:

 1) Check the box for IGMP Proxy and select the IGMP Version, either V2 or V3, as required by your ISP.



- 2) Click Save.
- After configuring IGMP proxy, IPTV can work behind your router now. You can connect your set-top box to any of the router's Ethernet port.

If IGMP is not the technology your ISP applies to provide IPTV service:

- 1) Tick Enable IPTV.
- 2) Select the appropriate Mode according to your ISP.
 - Select Bridge if your ISP is not listed and no other parameters are required.
 - Select Custom if your ISP is not listed but provides necessary parameters.

PTV:	C Enable IPTV	
1ode:	Bridge	
	Bridge	
AN1:	Russia	
AN2:	Singapore-ExStream	
AN3:	Malaysia-Unifi	
AN4:	Malaysia-Maxis	
	Custom	

- 3) After you have selected a mode, the necessary parameters, including the LAN port for IPTV connection, are predetermined. If not, select the LAN type to determine which port is used to support IPTV service.
- 4) Click Save.
- 5) Connect the set-top box to the corresponding LAN port which is predetermined or you have specified in Step 3.

Done!

Qos and IPTV cannot be enabled at the same time.

Specify DHCP Server Settings

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the router acts as a DHCP server; it dynamically assigns TCP/IP parameters to client devices from the IP Address Pool. You can change the settings of the DHCP Server if necessary, and you can reserve LAN IP addresses for specified client devices.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Network > DHCP Server.
- To specify the IP address that the router assigns:

DHCP Server:	Enable DHCP Server		
IP Address Pool:	192.168.0.100	- 192.168.0.199	
Address Lease Time:	120 minutes	. (1-2880. The default value is 120.)	
Default Gateway:	192.168.0.1	(Optional)	
Primary DNS:		(Optional)	
Secondary DNS:		(Optional)	

- 1. Check the box for Enable DHCP Server.
- 2. Enter the starting and ending IP addresses in the IP Address Pool.
- 3. Enter other parameters if the ISP offers. The Default Gateway is automatically filled in and is the same as the LAN IP address of the router.
- 4. Click Save.
- To reserve an IP address for a specified client device:
- 1. Click Add in the Address Reservation section.

					🔂 Ad	d 😑 Delete
D	ID	MAC Address	Reserved IP Address	Description	Status	Modify
-	-	-	-	_	-	-
	IP Address Descriptio		Enable This Entry			
			Enable mis Entry			

- 2. Click View Exsiting Devices or enter the MAC address of the client device.
- 3. Enter the IP address to reserve for the client device.
- 4. Enter the Description for this entry.
- 5. Check the box for Enable This Entry and click OK.

Set Up a Dynamic DNS Service Account

Most ISPs assign a dynamic IP address to the router and you can use this IP address to access your router remotely. However, the IP address can change any time and you don't know when it changes. In this case, you might apply the DDNS (Dynamic Domain Name Server) feature on the router to allow you and your friends to access your router and local servers (FTP, HTTP, etc.) using domain name without checking and remembering the IP address.

Note:

DDNS does not work if the ISP assigns a private WAN IP address (such as 192.168.1.x) to the router.

To set up DDNS, please follow the instructions below:

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Network > Dynamic DNS.
- 3. Select the DDNS Service Provider (NO-IP or DynDNS). If you don't have a DDNS account, select a service provider and click Go to register.

Dynamic DNS	
Service Provider:	NO-IP O DynDNS Go to register,
Username:	testDDNS
Password:	
Domain Name:	test.ddns.net
Update Interval:	1 hour 🐨
WAN IP binding:	💿 Disable 🔘 Enable
Login and Save	ogout 🛛 😣 Not launching

- 4. Enter the username, password and domain name of the account.
- 5. Click Login and Save.

Ø Tips:

If you want to use a new DDNS account, please logout first, and then login with the new account.


Create Static Routes

Static routing is a form of routing that is configured manually by a network administrator or a user by adding entries into a routing table. The manually-configured routing information guides the router in forwarding data packets to the specific destination.

I want to:

Visit multiple networks and servers at the same time.

For example, in a small office, my PC can surf the Internet through Router A, but I also want to visit my company's network. Now I have a switch and Router B. I connect the devices as shown in the following figure so that the physical connection between my PC and my company's server is established. To surf the Internet and visit my company's network at the same time, I need to configure the static routing.

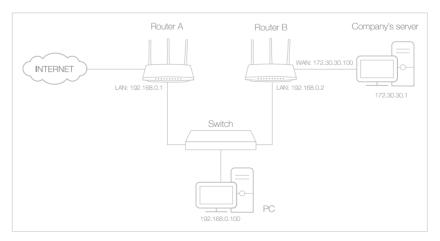

How can I do that?

- 1. Change the routers' LAN IP addresses to two different IP addresses on the same subnet. Disable Router B's DHCP function.
- 2. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for Router A.
- 3. Go to Network_> Advanced Routing.
- **4.** Click Add and finish the settings according to the following explanations:

						🔁 Add	Delete
ID	Network Destination	Subnet Mask	Default Gateway	Interface	Description	Status	Modify
		-					
Ne	twork Destinatio	n: 172.30.3	1.1				
Su	bnet Mask:	255.255	255.255				
De	fault Gateway:	192,168.	.0.2				
	fault Gateway: :erface:	192.168. LAN	•				
Int		LAN	o.2 • s network				
Int	erface:	LAN	's network				

Network Destination: The destination IP address that you want to assign to a static route. This IP address cannot be on the same subnet with the WAN IP or LAN IP of Router A. In the example, the IP address of the company network is the destination IP address, so here enter 172.30.30.1.

Subnet Mask: Determines the destination network with the destination IP address. If the destination is a single IP address, enter 255.255.255.255; otherwise, enter the subnet mask of the corresponding network IP. In the example, the destination network is a single IP, so here enter 255.255.255.255.

Default Gateway: The IP address of the gateway device to which the data packets will be sent. This IP address must be on the same subnet with the router's IP which sends out data. In the example, the data packets will be sent to the LAN port of Router B and then to the Server, so the default gateway should be 192.168.0.2.

Interface: Determined by the port (WAN/LAN) that sends out

data packets. In the example, the data are sent to the gateway through the LAN port of Router A, so LAN should be selected.

Description: Enter a description for this static routing entry.

- 5. Click OK.
- 6. Check the System Routing Table below. If you can find the entry you've set, the static routing is set successfully.

yste	em Routing Table						
ctive Routes Number: 1							
ID	Network Destination	Subnet Mask	Gateway	Interface			
1	192.168.0.0	255.255.255.0	0.0.00	lan			

Done! Open a web browser on your PC. Enter the company server's IP address to visit the company network.

Specify Wireless Settings

The router's wireless network name (SSID) and password, and security option are preset in the factory. The preset SSID and password can be found on the label of the router. You can customize the wireless settings according to your needs.

Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

- To enable or disable the wireless function:
- 1. Go to Basic > Wireless.
- 2. The wireless radio is enabled by default. If you want to disable the wireless function of the router, just uncheck the box for Enable Wireless Radio. In this case, all the wireless settings will be invalid.
- To change the wireless network name (SSID) and wireless password:
- 1. Go to Basic > Wireless.
- 2. Create a new SSID in Network Name (SSID) and customize the password for the network in Password. The value is case-sensitive.

Note:

If you change the wireless settings with a wireless device, you will be disconnected when the settings are effective. Please write down the new SSID and password for future use.

- To hide SSID:
- 1. Go to Basic > Wireless.
- 2. Select Hide SSID, and your SSID won't display when you scan for local wireless networks on your wireless device and you need to manually join the network.
- To change the security option:
- 1. Go to Advanced > Wireless > Wireless Settings.

Wireless Settings			
2.4GHz Wireless:	🗹 Enable Wireless Radio		
Network Name (SSID):	TP-LINK_HOME_2G	Hide SSID	
Password:	12345		
5GHz Wireless:	Enable Wireless Radio		
Network Name (SSID):	TP-LINK_HOME_5G	Hide SSID	
Password:			
			Save

- 2. Select the wireless network 2.4GHz, or 5GHz.
- 3. Select an option from the Security drop-down list. We recommend you don't change the default settings unless necessary. If you select other options, configure the related parameters according to the help page.

In addition

- Mode Select a transmission mode according to your wireless client devices. It is recommended to just leave it as default.
- Channel Width Select a channel width (bandwidth) for the wireless network.
- Channel Select an operating channel for the wireless network. It is recommended to leave the channel to Auto, if you are not experiencing the intermittent wireless connection issue.
- Transmit Power Select either High, Middle or Low to specify the data transmit power. The default and recommended setting is High.

Use WPS for Wireless Connection

Wi-Fi Protected Setup (WPS) provides an easier approach to set up a security-protected Wi-Fi connection.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > Wireless > WPS .

4.7.1. Set the Router's PIN

Router's PIN is enabled by default to allow wireless devices to connect to the router using the PIN. You can use the default one or generate a new one.

Router's PIN				
Router's PIN:				
PIN:	35498841	Generate	Default	

Note:

- If you want to enable/disable the WPS feature, go to System Tools > System Parameters > WPS, check or uncheck the box for Enable WPS.
- PIN (Personal Identification Number) is an eight-character identification number preset to each router. WPS supported devices can connect to your router with the PIN. The default PIN is printed on the label of the router.

4.7.2. Use the WPS Wizard for Wi-Fi Connections

- 1. Select a setup method:
 - **Push Button(Recommended)**: Click Connect on the screen. Within two minutes, press the WPS button on the client device.
 - PIN: Enter the client's PIN, and click Connect.


WPS Wizard	
Select a WPS connection method:	 Push Button (Recommended) PIN
Enter the client's PIN:	
Connect	

2. Success will appear on the above screen and the WPS LED on the router will keep on for five minutes if the client has been successfully added to the network.

Schedule Your Wireless Function

The wireless network can be automatically off at a specific time when you do not need the wireless connection.

- 1. Visit http://tplinkwifi.net, and log in with password you set for the router.
- 2. Go to Advanced > Wireless > Wireless Schedule.
- 3. Select 2.4GHz, 5GHz-1 or 5GHz-2 to change the corresponding settings.
- 4. Enable the Wireless Schedule feature.

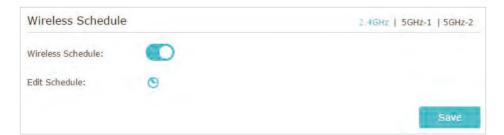

5. Click the icon 🕙 to set the Effective Time. Drag the cursor over the cells to choose the period during which you need the wireless off automatically, and click OK.

00.00	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
00:00							
02:00							
02:00							
03:00							
04:00							
05:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
24:00							
24.00	Effective T	ime					

6. Click Save.

7. If you also want to set wireless off time for other band(s), please repeat the steps above.

Note:

- The Effective Time Schedule is based on the time of the router. You can go to Advanced > System Tools
 > Time Settings to modify the time.
- The wireless LED will be off if the corresponding wireless network is disabled.
- The wireless network will be automatically turned on after the time period you set.

4.8. Manage the Router

Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

- 1. Visit <u>http://tplinkwifi.net</u> and log in with the password you set for the extender.
- 2. Go to Advanced > Advanced-Settings > Wi-Fi Coverage.
- 3. Select Min, Mid or Max to adjust your Wi-Fi coverage of the extender.



4. Click Save.

Set Up System Time

System time is the time displayed while the router is running. The system time you configure here will be used for other time-based functions like Parental Controls. You can choose the way to obtain the system time as needed.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced >_System Tools_> Time Settings.
- To get time from the Internet:
- 1. In the Set Time field, select Get automatically from the Internet.

06/24/2016 00:56:26		
Get automatically from the second	e Internet O Manually	
-Please Select-		· •
time.nist.gov		
time-nw.nist.gov	(Optional)	
		-
	Get automatically from th -Please Select- time.nist.gov	Get automatically from the Internet O Manually -Please Select- time.nist.gov

- 2. Select your local Time Zone from the drop-down list.
- 3. In the NTP Server I fileId, enter the IP address or domain name of your desired NTP Server.

- 4. (Optional) In the NTP Server II fileId, enter the IP address or domain name of the second NTP Server.
- 5. Click Obtain to get the current Internet time and click Save.
- To manually set the date and time:
- 1. In the Set Time field, select Manually.

Time Settings								
Current Time:	06/24/20	016 0	0:56:2	6				
Set Time:	🔘 Get a	utom	atically	from	the In	terne	t 💿 Manually	
Date:	06/24	/2016					MM/DD/YYYY	
Time:	00	e (ii	56	¥ 1	26	÷	(HH/MM/SS)	

- 2. Set the current Date (In MM/DD/YYYY format).
- 3. Set the current Time (In HH/MM/SS format).
- 4. Click Save.
- To set up Daylight Saving Time:
- 1. Select Enable Daylight Saving Time.

	🕑 Enable Daylight Saving Time									
Start:	2016	Mar	٠	2nd	٠	Sun	Ŧ	2 AM	+	
End:	2016	Nov	¥	First	٣	Sun	*	2 AM	*	
Running Status:	Dayligh	t Saving	Time	is on.						

- 2. Select the correct Start date and time when daylight saving time starts at your local time zone.
- 3. Select the correct End date and time when daylight saving time ends at your local time zone.
- 4. Click Save.

Test the Network Connectivity

Diagnostics is used to test the connectivity between the router and the host or other network devices.

1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.


2. Go to Advanced > System Tools > Diagnostics.

- 3. Enter the information with the help of page tips:
 - 1) Choose Ping or Traceroute as the diagnostic tool to test the connectivity;
 - Ping is used to test the connectivity between the router and the tested host, and measure the round-trip time.
 - Traceroute is used to display the route (path) your router has passed to reach the tested host, and measure transit delays of packets across an Internet Protocol network.
 - 2) Enter the IP Address or Domain Name of the tested host.
- 4. Click Start to begin the diagnostics.

Tips:

Click_Advanced, you can modify the ping count, ping packet size or the Traceroute Max TTL. It's recommended to keep the default value.

The figure below indicates the proper connection between the router and the Yahoo server (www.Yahoo.com) tested through Ping.

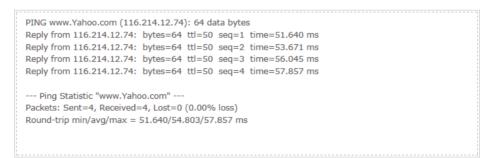

The figure below indicates the proper connection between the router and the Yahoo server (www.Yahoo.com) tested through Traceroute.

traceroute to www.Yahoo.com (116.214.12.74), 20 hops max, 38 byte packets	<u>^</u>
1 219.133.12.1 (219.133.12.1) 19.556 ms 22.274 ms 22.024 ms	
2 113.106.38.77 (113.106.38.77) 30.115 ms 22.649 ms 20.931 ms	
3 * * *	=
4 183.56.65.14 (183.56.65.14) 26.210 ms 29.428 ms 28.272 ms	
5 * 202.97.60.25 (202.97.60.25) 29.272 ms 25.461 ms	
6 202.97.60.46 (202.97.60.46) 27.335 ms 27.616 ms 28.272 ms	
7 202.97.60.149 (202.97.60.149) 22.805 ms 24.024 ms 24.711 ms	
8 202.97.6.30 (202.97.6.30) 47.610 ms 54.452 ms 61.137 ms	
9 r4105-s2.tp.hinet.net (220.128.6.110) 51.171 ms 50.515 ms 56.107 ms	
10 220.128.11.190 (220.128.11.190) 60.950 ms 60.200 ms 60.419 ms	-

Upgrade the Firmware

TP-LINK aims at providing better network experience for users.

We will inform you throught the web management page if there's any update firmware available for your router. Also, the latest firmware will be released at the TP-LINK official website <u>www.tp-link.com</u>, and you can download it from the <u>Support</u> page for free.

Note:

- Make sure you remove all attached USB devices from the router before the firmware upgrade to prevent data loss.
- Backup your router configuration before firmware upgrade.
- Do NOT turn off the router during the firmware upgrade.

4.8.1. Online Upgrade

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you've set for the router.
- 2. When the latest firmware is available for your router, the update icon will display in the top-right corner of the page. Click the icon to go to the Firmware Upgrade page.

Alternatively, you can go to Advanced > System Tools > Firmware Upgrade, and click Check for upgrade to see whether the latest firmware is released.

Online Upgrade		
Latest Version:	1.0.0 (6.0) (************************************	
		Check for upgrade

3. Focus on the Online Upgrade section, and click Upgrade.

Online Upgrade	
Latest Version:	
A MARTIN DATE OF	Upgrade

4. Wait a few minutes for the upgrade and reboot to complete.

Ø Tips:

If there's a new and important firmware update for your router, you will see the notification (similar as shown below) on your computer as long as a web browser is opened. Click Upgrade now, and log into the web management page with the username and password you set for the router. You will see the Firmware Upgrade page.



4.8.2. Manual Upgrade

- 1. Download the latest firmware file for the router from <u>www.tp-link.com</u>.
- 2. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 3. Go to Advanced > System Tools > Firmware Upgrade.
- 4. Focus on the Device Information section. Make sure the downloaded firmware file is matched with the Hardware Version.
- 5. Focus on the Manual Upgrade section. Click Browse to locate the downloaded new firmware file, and click Upgrade.

Manual Upgrade		
New Firmware File:	Browse	
		Vøgrade

6. Wait a few minutes for the upgrade and reboot to complete.

4.8.3. Restore Interrupted Upgrade after Power Failure

If your router cannot start up after an upgrade interruption due to power failure, follow the steps below to restore the interrupted upgrade. Otherwise, your router cannot work again.

- 1. Make sure you have the latest firmware file in your computer. If not, try another way to connect your computer to the Internet and download the latest firmware file from www.tp-link.com.
- 2. Connect your computer to the router with an Ethernet cable.
- 3. Visit <u>192.168.0.1</u> and you will see the following upgrade page.

System error. The router car Please upgrade your router.	nnot start up normally. You can download the firmware file	e from www.tp	o-link.com.	
New Firmware File:		Browse	Upgrade	

- 4. Click Browse and select the downloaded firmware file.
- 5. Click Upgrade and wait for a few minutes until the router completes the upgrading and restarts.

Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the router. You can backup the configuration file to your computer for future use and restore the router to a previous settings from the backup file when needed. Moreover, if necessary you can erase the current settings and reset the router to the default factory settings.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools_>_Backup & Restore.
- To backup configuration settings:

Click Backup to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored to your computer.

Backup	
Save a copy of your current settings.	
	Васкир

- To restore configuration settings:
- 1. Click Browse to locate the backup configuration file stored on your computer, and click Restore.

Restore		
Restore saved settings from a file.		
File:	Browse	
		Restore

2. Wait a few minutes for the restoring and rebooting.

Note: During the restoring process, do not turn off or reset the router.

- To reset the router to factory default settings:
- 1. Click Factory Restore to reset the router.



2. Wait a few minutes for the resetting and rebooting.

Note:

- During the resetting process, do not turn off or reset the router.
- We strongly recommend you backup the current configuration settings before resetting the router.

Change the Administrator Account

The account management feature allows you to change your login username and password of the web management page.

- 1. Visit http://tplinkwifi.net, and log in with password you set for the router.
- 2. Go to Advanced > System Tools_> Administration and focus on the Account Management section.

Account Managemer	t	
Old Username:		
Old Password:		
New Username:		
New Password:		
	Low Middle High	
Confirm New Password:		
		Save
		Save

- 3. Enter the old username and old password, then a new username and a new password twice (both case-sensitive). Click Save.
- 4. Use the new username and password for the following logins.

Password Recovery

This feature allows you to recover your default login username and password in case you forget them.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools > Administration and focus on the Password Recovery section.
- 3. Check the box for Enable Password Recovery.
- 4. Specify a mailbox (From) for sending the recovery letter and enter its SMTP Server address. Specify a mailbox (To) for receiving the recovery letter. If the mailbox (From) to send the recovery letter requires encryption, select Enable Authentication and enter its username and password.

Tips:

• SMTP server is available for users in most webmail systems. For example, the SMTP server address of Gmail is smtp.gmail.com. You can refer to their Help page to learn the SMTP server address.

• Generally, Enable Authentication should be selected if the login of the mailbox requires username and password.

Password Recov	very		
	Enable Password Recovery		
From:			
To:			
SMTP Server:			
	Enable Authentication		
Username:			
Password:			
		Test Email	Save

5. Click Save.

You can click Test Email to test whether the configuration is successful. To recover the default login username and password, please refer to FAQ.

Local Management

This feature allows you to limit the number of client devices on your LAN from accessing the router by using the MAC address-based authentication.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools > Administration and complete the settings In Local Management section according to your needs.
- Allow all LAN connected devices to manage the router:

Toggle on Access for All LAN Connected Devices.

Local Management	
Access for All LAN Connected	Toggle On to enable the management for all devices on LAN or keep it Off to enable the management for a specific device.

- Allow specific devices to manage the router:
 - 1) Toggle off Access for All LAN Connected Devices.
 - 2) Click Add.

ccess for evices:	All LAN Conr		On to enable the manageme it Off to enable the manage		
				🕀 Add	O Delete
	ID	MAC Address	Description	Status	Modify
		-	-	-	-
	AC Address: escription :	Enable Thi		isting Devices	
			Cano	el OK	

- 3) Click View Existing Devices and select the device to manage the router from the Existing Devices list, or enter the MAC address of the device manually.
- 4) Specify a Description for this entry.
- 5) Check the box for Enable This Entry.
- 6) Click OK.

Remote Management

This feature allows you to control remote devices' authority to manage the router.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools > Administration and complete the settings in Remote Management section according to your needs.

	Disable Remote Management
	 Enable Remote Management for All Devices
	O Enable Remote Management for Specified Devices
Web Management Port:	
Remote Management IP Address:	
emote management IP Address:	

• Forbid all devices to manage the router remotely: Select Disable Remote Management and click Save.

- Allow all devices to manage the router remotely:
 - 1) Select Enable Remote Management for All Devices.
 - 2) Enter Web Management Port (1024-65535 or 80).
 - 3) Click Save.

Devices on the Internet can log in to <u>http://Router's WAN IP address:port number</u> (such as <u>http://113.116.60.229:1024</u>) to manage the router.

- Ø Tips:
- You can find the WAN IP address of the router on Basic > Network Maps > Internet.
- The router's WAN IP is usually a dynamic IP. Please refer to Set Up a Dynamic DNS Service Account if you want to log in to the router through a domain name.
- Allow specific devices to manage the router remotely:
 - 1) Select Enable Remote Management for Specified Devices.
 - 2) Enter Web Management Port (1024-65535 or 80).
 - 3) In Remote Management IP address, enter the IP address of the remote device to manage the router.
 - 4) Click Save.

Devices using this WAN IP can manage the router by logging in to <u>http://Router's WAN</u> IP:port number (such as http://113.116.60.229:1024).

Ø Tips:

The router's WAN IP is usually a dynamic IP. Please refer to Set Up a Dynamic DNS Service Account if you want to log in to the router through a domain name.

System Log

When the router does not work properly, you can save the system log and send it to the technical support for troubleshooting.

- To Save the System Log in Local:
- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools > System Log.
- 3. Choose the type and level of the system logs according to your need.
- 4. Click Save Log to save the system logs to local.

				🖒 Refresh 🛛 🖨 Delete A
ID	Time	Туре	Level	Log Content
1	2016-06-24 04:28:31	Local Management	NOTICE	[19000] Accessable mode change: Device in the list.
2	2016-06-24 04:25:12	Locale	INFO	[16605] Language is changed to 'en_US
3	2016-06-24 04:25:12	Locale	DEBUG	[16605] Explorer language is 'zh_CN'
4	2016-06-24 04:25:02	Locale	INFO	[16435] Language is changed to 'en_US
5	2016-06-24 04:25:02	Locale	DEBUG	[16435] Explorer language is 'zh_CN'
6	2016-06-24 04:24:58	Locale	INFO	[16283] Language is changed to 'en_US
7	2016-06-24 04:24:58	Locale	DEBUG	[16283] Explorer language is 'zh_CN'

• To Send the System Log to a Mailbox at a Fixed Time:

For example, I want to check my router's working status at a fixed time every day, however, it's too troublesome to log in to the web interface every time I want to go checking. It would be great if the system logs could be sent to my mailbox at 8 a.m. every day.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools > System Log.
- 3. Click Mail Settings.
- 4. Enter the information with the help of page tips:

Mail Settings		
From:		
То:		
SMTP Server:		
	Enable Authentication	
Username:		
Password:		
	Enable Auto Mail	
	● Log at 00 ▼ : 00 ▼ (HH:MM) everyday	
	O Log every 24 hours	
	Sa	ve

- 1) From: Enter the email address used for sending the system log.
- 2) To: Enter the recipient's email address, which can be the same as or different from the sender's email address.
- 3) SMTP Server: Enter the SMTP server address.

✓ Tips: SMTP server is available for users in most webmail systems. For example, the SMTP server address of Hotmail is smtp-mail.outlook.com. You can refer to their Help page to learn the SMTP server address.

4) Select Enable Authentication.

© Tips: Generally, Enable Authentication should be selected if the login of the mailbox requires username and password.

- 5) Username: Enter the email address used for sending the system log.
- 6) Password: Enter the password to login the sender's email address.
- 7) Select Enable Auto Mail.
- Tips: The router will send the system log to the designated email address if this option is enabled.
 - 8) Set a fixed time. The recipient will receive the system log sent at this time every day.
- 5. Click Save.

Monitor the Internet Traffic Statistics

The Traffic Statistics page displays the network traffic of the LAN, WAN and WLAN sent and received packets, allowing you to monitor the volume of Internet traffic statistics.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Advanced > System Tools_>_Traffic Statistics.

3. Toggle on Traffic Statistics, and then you can monitor the traffic statistics in Traffic Statistics List section.

Fraffic Statisti	CS				
Fraffic Statistics:					
Traffic Statisti	cs List				
			Ċ) Refresh 🧳 Reset	All 😑 Delete Al
IP Address/MAC Address	Total Packets	Total Bytes	Current Packets	Current Bytes	Modify

Click Refresh to update the statistic information on the page.

Click Reset All to reset all statistic values in the list to zero.

Click Delete All to delete all statistic information in the list.

Click 👌 to reset the statistic information of the specific device.

Click 🔳 to delete the specific device item in the list.

Control LEDs

The router's LEDs indicate router's activities and status. You can turn on or turn off the LEDs either from the web management page or by pressing the LED button.

4. 8. 4. To turn on or off the LEDs:

- Press the LED button on the router (if available) about 2 seconds to turn on or off the LEDs.
- Visit http://tplinkwifi.net, and log in with password you set for the router. Click the LED icon in the top right corner of the page.

4. 8. 5. To turn off LEDs during Night Mode Period:

- 1) Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2) Go to Advanced > System Tools > System Parameters.
- 3) In the LED Control section, check the box for Enable Night Mode.
- 4) Specify a time period in the Night Mode Period as needed, and the LEDs will be off during this period.
- 5) Click Save.

LED Control												
Night mode:	🕑 En	able Ni	ght Mo	de								
Night Mode Period:	22	Ψ.	00	٣	to	06	Ŧ	:	00	*	(HH:MM)	
											1	Save

Chapter 5

Configure the Router in Access Point Mode

This chapter presents how to configure the various features of the router working as an Access Point.

This chapter contains the following sections:

- Change the Working Mode
- Guest Network
- Parental Controls
- Customize Your Wireless Settings
- Customize Your Network
- Manage the Router

5.1. Change the Working Mode

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the router.
- 2. Click Mode button in the top-right corner of the page, select Access Point and click Save.

M	ode Selection
۲	Access Point Transforms your existing wired network to a wireless network.
0	Router Provides Internet access for multiple wired and wireless devices simultaneously.
0	Range Extender Extends your existing wireless coverage by repeating the wireless
	signal.
	Cancel Save

5.2. Guest Network

This function allows you to provide Wi-Fi access for guests without disclosing your main network. When you have guests in your house, apartment, or workplace, you can create a guest network for them. In addition, you can customize guest network options to ensure network security and privacy.

Create a Network for Guests

- 1. Visit http://tplinkwifi.net, and log in with password you set for the router.
- 2. Go to Settings > Guest Network. Locate the Wireless section.
- 3. Create a guest network as needed.
 - 1) Enable Guest network.
 - 2) Customize the SSID. Do not select Hide SSID unless you want your guests to manually input the SSID for guest network access.
 - 3) Select the Security type.

- If No security is selected, no password is needed to access your guest network.
- If WAP/WPA2-Personal is selected, keep the default Version and Encryption values, and customize your own password.

Wireless			
2.4GHz Wireless:	Enable Guest Network		
Network Name (SSID):	TP-LINK_Guest	🗌 Hide SSID	
5GHz-1 Wireless:	Enable Guest Network		

4. Click Save. Now your guests can access your guest network using the SSID and password you set!

Ø Tips:

To view guest network information, go to Settings > Status and locate the Guest Network section.

Customize Guest Network Options

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Settings > Guest Network. Locate the Settings section.
- 3. Customize guest network options according to your needs.

Settings	
Allow guests to see each other	
□ Allow guests to access my local network	
	Save

Allow guests to see each other

Check this box if you want to allow the wireless clients on your guest network to communicate with each other via methods such as network neighbors and Ping.

Allow guests to access my local network

Check this box if you want to allow the wireless clients on your guest network to communicate with the devices connected to your router's LAN ports or main network via methods such as network neighbors and Ping.

4. Click Save. Now you can ensure network security and privacy!

Ø Tips:

To view guest network information, go to Settings > Status and locate the Guest Network section.

5.3. Parental Controls

This function allows you to block inappropriate, explicit and malicious websites, and control access to specified websites at specified time.

I want to: Control the times of day my children or other home network users are allowed to access the Internet and even types of websites they can visit.

For example, I want to allow my children's devices (e.g. a computer or a tablet) to access only <u>www.tp-link.com</u> and <u>Wikipedia.org</u> from 18:00 (6PM) to 22:00 (10PM) at the weekend and not other times.

How can I1. Visit http://tplinkwifi.net, and log in with password you set fordo that?the router.

2. Go to Settings_>_Parental Controls and_enable Parental Controls.

Parental Control	S
Parental Controls:	

3. Click Add. And then Click View Existing Devices, and select the access device. Or, input the Device Name and MAC Address manually.

ID Device Name MAC Address Internet Access Time Description Status Modify Device Name:						🔂 Add	O Delete
MAC Address: Internet Access Time: Description: COptional) Enable This Entry	ID	Device Name	MAC Address		Description	Status	Modify
MAC Address: Internet Access Time: Description: COptional) Coptional)	 -	-	-	-			-
	MAC	Address:					

4. Click the S icon to set the Internet Access Time. Drag the cursor over the appropriate cell(s) and click OK.

	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
24:00							
	Time						

- 5. Enter a Description for the entry, check the box for Enable This Entry, and then click OK.
- 6. Select Whitelist as the restriction policy.

Content Restriction			
Restriction Policy:	O Blacklist	Whitelist	

Ø Tips:

- With Blacklist selected, the controlled devices cannot access any websites containing the specified keywords during the Internet Access Time period.
- With Whitelist selected, the controlled devices can only access websites containing the specified keywords during the Internet Access Time period.
- 7. Click 😌 Add a New Domain Name . Enter a website and click Save.

You can add up to 32 keywords for either Blacklist or Whitelist.

Below are some sample entries to allow access.

- For Whitelist: Enter a web address (e.g. wikipedia.org) to allow access only to its related websites. If you wish to block all Internet browsing access, do not add any keyword to the Whitelist.
- For Blacklist: Specify a web address (e.g. wikipedia.org), a web address keyword (e.g. wikipedia) or a domain suffix (eg. .edu or .org) to block access only to the websites containing that keyword or suffix.

Content Restriction		
Restriction Policy:	🔿 Blacklist 💿 Whitelist	
🕒 Add a New Domain Na	ne	
wikipedia.org	•	
		Save

Done!

Now you can control your children's Internet access as needed.

5.4. Customize Your Wireless Settings

Specify Wireless Settings

The router's wireless network name (SSID) and password, and security option are preset in the factory. The preset SSID and password can be found on the label of the router. You can customize the wireless settings according to your needs.

Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

- To enable or disable the wireless function:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. The wireless radio is enabled by default. If you want to disable the wireless function of the router, just uncheck the box for Enable Wireless Radio. In this case, all the wireless settings will be invalid.
- To change the wireless network name (SSID) and wireless password:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. Create a new SSID in Network Name (SSID) and customize the password for the network in Password. The value is case-sensitive.

Note:

If you change the wireless settings with a wireless device, you will be disconnected when the settings are effective. Please write down the new SSID and password for future use.

- To hide SSID:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. Select Hide SSID, and your SSID won't display when you scan for local wireless networks on your wireless device and you need to manually join the network.

Use WPS for Wireless Connection


Wi-Fi Protected Setup (WPS) provides an easier approach to set up a security-protected Wi-Fi connection.

1. Visit http://tplinkwifi.net, and log in with password you set for the router.

2. Go to Settings > Wireless > WPS.

5.4.1. Use the WPS button

Click WPS start button on the page, and immediately tap the WPS button on your WPSsupported devices such as Android phones, tablets or most network cards within two minutes.

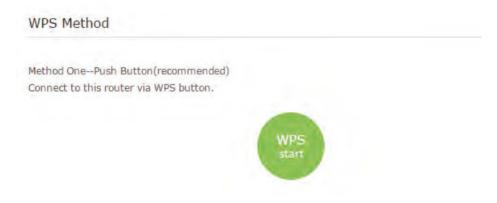

5. 4. 2. Set the Router's PIN

Router's PIN is enabled by default to allow wireless devices to connect to the router using the PIN. You can use the default one or generate a new one.

Router's PIN			
Router's PIN:			
PIN:	35498841	Generate Default	

Note:

- If you want to enable/disable the WPS feature, go to System Tools > System Parameters > WPS, check or uncheck the box for Enable WPS.
- PIN (Personal Identification Number) is an eight-character identification number preset to each router. WPS supported devices can connect to your router with the PIN. The default PIN is printed on the label of the router.

5. 4. 3. Use the Client's PIN

Enter the client's PIN in the field, and click Connect.

WPS Wizard	
Select a WPS connection method:	○ Push Button (Recommended)
Enter the client's PIN:	
Connect	

Success will appear on the above screen and the WPS LED on the router will keep on for five minutes if the client has been successfully added to the network.

5.5. Customize Your Network

Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > Network.
- 3. Select Use the following IP address.
- 4. Enter a new IP address as needed and leave the Subnet Mask as the default settings and enter the gateway that is in the same subnet as the IP address. The gateway is usually the LAN IP address of your extender.

Network Settings		
	O Obtain an IP address automatically	
	Use the following IP address	
IP Address:	192.168.0.254	
Subnet Mask:	255.255.255.0	
Default Gateway:	192.168.0.254	
		Save

5. Click Save.

Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

- 1. Visit <u>http://tplinkwifi.net</u> and log in with the password you set for the extender.
- 2. Go to Settings > Advanced Settings > Wi-Fi Coverage.
- 3. Select Min, Mid or Max to adjust your Wi-Fi coverage of the extender.

 


4. Click Save.

Set Access Control

Access Control allows you to permit or block specific devices from accessing the Internet for a specific period.

- 1. Visit <u>http://tplinkwifi.net</u> and log in with the password you set for the extender.
- 2. Go to Settings > Advanced Settings > Access Control.
- 3. Enable Access Control.



> To block specific device(s):

Note:

Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select Blacklist and click Save.

Access Mode		
Default Access Mode:	Blacklist O Whitelist	
		Save

- 2. Select the device to be blocked in the Online Devices table by ticking the corresponding checkbox.
- 3. Click Block and the selected device(s) will be added to the Devices in Blacklist table.

				() Refresh	S Block
ID	Device Name	IP Address	MAC Address	Connection Type	Modify
1		192.168.0.102		Wireless	0

4. Click in the Devices in Blacklist table to set the Effective Time for a certain entry as needed.

Device Name:	Phone
MAC Address:	14-CD-83-12-6E-78
Effective Time:	 Cannot access at any time
	Cannot access based on the time schedule
	Time: Select 🔻 : Select 🔻 . Select 🔻 : Select 🔻
	Day(s): Select 🔹 🗌 Monday 📄 Tuesday
	🗌 Wednesday 🗌 Thursday
	🗌 Friday 🔲 Saturday
	🗋 Sunday
	Cancel OK
	LOILER UN

5. Click OK.

- > To permit specific device(s):
- 1. Select Whitelist and click Save.

Access Mode		
Default Access Mode:	O Blacklist Whitelist	
		Save

2. Click Add in the Devices in Whitelist table. Enter the Device Name and MAC Address. And you can set the Effective Time for a certain entry as needed.

Device Name:	Phone											
MAC Address:	14-CD	-83-12-6	E-78	5								
Effective Time:	O Acces	s at any	time									
	Acces	s based (on th	ie tin	ne scheo	düle						
	Time:	Select	٣	:	Select	٧	e.	Select	Ŧ	:	Select	
	Day(s):	Select		Ŧ	M	Ionda	y		Tueso	day		
						Vedne	esday		Thurs	sday		
					F	riday			Satur	day		
					S	unda	Y					

3. Click OK.

5.6. Manage the Router

Set Up System Time

The System Time of the extender will be used for time-based functions such as the Power Schedule function. If you have enabled the Daylight Saving Time feature, the system time will be sychronized with the daylight saving time you configure.

4. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.

5. Go to Settings > System Tools > Time Settings.

To get system time:

1. Select your local Time Zone from the drop-down list.

Time Settings			
Current Time:	01/01/2016 00:05:29		
Time Zone:	(GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels	÷.	
			Save

2. Click Save.

- > To set up Daylight Saving Time:
- 1. Select Enable Daylight Saving Time.

Enable Daylight	Saving Time								
Start:	2016	Mar	٣	Last	٣	Sun	٣	1 AM	. •
End:	2016	Oct		Last	Ŧ	Sun	٧	1 AM	٣
Current Status:	Dayligh	t Saving	Time	is not ac	tive.				

- 2. Select the Start and End date and time of the daylight saving time at your local time zone.
- 3. Click Save.

Control LEDs

The LEDs of the extender indicate its activities and status. You can enable the Night Mode feature to specify a time period during which the LEDs are off.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > LED Control.
- > To specify a time period when LEDs are off:
- 1. Select Night Mode.
- 2. Specify a time period in the LED Off Time field, and the LEDs will be off during this period.
- 3. Click Save.

LED Control									
🕑 Night Mode									
LED Off Time:	21	• :	00	٣	-	09	· • :	00	
Note: Before enabli	ng the LED (Control, n	nake su	re <u>Time</u>	Sett	ings is c	correct.		
									-
									Sav

Power Schedule

The Power Schdule feature allows you to specify a time period during which the extender is off.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > Advanced Settings > Power Schedule.
- > To specify a time period when the extender is off:

- 1. Select Enable Power Schedule.
- 2. Specify a time period in the Power-Off Time field and days in the Day(s) field, and the extender will be off during this period.

Power Schedule					
Enable Power Sch	edule				
Power-Off Time:	21	:	00 = _ (09 🔻 : 00	7
Day(s):	Every Day	v	Monday	🖃 Tuesday	🕑 Wednesday
			Thursday	💌 Friday	Saturday
			💽 Sunday		
Note: The extender v	vill automaticall	y turi	n off according to the	time schedule. Pleas	e make sure the syster
Time Settings are con	rect.				

3. Click Save.

Upgrade the Firmware

TP-LINK is committed to improving product features, giving you a better network experience. You can download the latest firmware file from the Support page at our website www.tp-link.com and upgrade the firmware to the latest version.

- 1. Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).
- 2. Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
- 3. Backup your extender configuration.
- 4. Do NOT power off the extender during the firmware upgrade.

> To upgrade the firmware online:

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > Firmware Upgrade, and click Check for upgrade to see whether a new firmware is released.

		ne Upgrade
		t Version:
a source and	Stands Free	and the second second
r	Check for	

3. Focus on the Online Upgrade section, and click Upgrade.

Online Upgrade	
Latest Version:	
	Upgrade

4. Wait a few minutes for the firmware upgrade to complete and the router to reboot.

> To upgrade the firmware locally:

- 1. Download the latest firmware file for the extender from our website <u>www.tp-link.com</u>.
- 2. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 3. Go to Settings > System Tools > Firmware Upgrade.
- 4. Click Browse to locate the downloaded new firmware file, and then click Upgrade.

Firmware Upgrade		
New Firmware File:	Browse	
Firmware Version:		
Hardware Version:		
		Upgrade

5. Wait a few minutes for the firmware upgrade to complete and the router to reboot.

Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.

2. Go to Settings > System Tools > Backup & Restore.

To backup configuration settings:

Click Backup to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

Backup	
Save a copy of your current settings.	
	Backup

> To restore configuration settings:

1. Click Browse to locate the backup configuration file stored on your computer, and click Restore.

Restore		
Restore saved settings fror	n a file.	
File:	Browse	
		Restore

2. Wait a few minutes for the restore and reboot.

Note: During the restore process, do not power off or reset the extender.

> To reset the extender to factory default settings:

1. Click Factory Restore to reset the extender.



2. Wait a few minutes for the reset and reboot.

Note:

- 1. During the reset process, do not power off or reset the router.
- 2. We strongly recommend you backup the current configuration settings before resetting the extender.

Change Login Password

The account management feature allows you to change your login password of the management webpage.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > Admin Account.
- 3. Enter the old password, then the new password twice (both case-sensitive) and click Save.

Admin Account		
Old Password:		
New Password:		
	Low Middle High	
Confirm Password:		
		Save

4. Use the new password for future logins.

System Log

If the extender is not working normally, you can save the system log and send it to our technical support team.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > System Log.
- > To Save the system log locally:
- 1. Choose the type and level of the system log as needed.
- 2. Click Save Log to save the system logs to a local disk.

.og Filte	er: Type = ALL		Level =	ALL 🔻				
					👌 Refresh 😑 Delete Al			
ID	Time	Туре	Level	C	ontent			
5	0 days 00:10:59	DHCPC	ERROR	DHCP detection failed.				
4	0 days 00:10:56	DHCPC	INFO	Sent a detection for DHCP.				
3	0 days 00:10:53	DHCPC	INFO	Sent a detection for DHCP.				
2	0 days 00:10:50	DHCPC	INFO	Sent a dete	ection for DHCP.			
1	0 days 00:10:47	OTHERS	INFO	User cleared	d up all the logs.			

Chapter 6

Configure the Router in Range Extender Mode

This chapter presents how to configure the various features of the router working as a Range Extender.

This chapter contains the following sections:

- Change the Working Mode
- Guest Network
- Parental Controls
- Customize Your Wireless Settings
- Customize Your Network
- Manage the Router

6.1. Change the Working Mode

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the router.
- 2. Click Mode button in the top-right corner of the page, select Range Extender and click Save.

M	ode Selection
0	Access Point
	Transforms your existing wired network to a wireless network.
0	Router
	Provides Internet access for multiple wired and wireless devices simultaneously.
۲	Range Extender
	Extends your existing wireless coverage by repeating the wireless signal.
	Cancel Save

6.2. Guest Network

This function allows you to provide Wi-Fi access for guests without disclosing your main network. When you have guests in your house, apartment, or workplace, you can create a guest network for them. In addition, you can customize guest network options to ensure network security and privacy.

Create a Network for Guests

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Settings > Guest Network. Locate the Wireless section.
- 3. Create a guest network as needed.
 - 1) Enable Guest network.
 - 2) Customize the SSID. Do not select Hide SSID unless you want your guests to manually input the SSID for guest network access.
 - 3) Select the Security type.

- If No security is selected, no password is needed to access your guest network.
- If WAP/WPA2-Personal is selected, keep the default Version and Encryption values, and customize your own password.

Wireless			
2.4GHz Wireless:	Enable Guest Network		
Network Name (SSID):	TP-LINK_Guest	Hide SSID	
5GHz-1 Wireless:	🗑 Enable Guest Network		

4. Click Save. Now your guests can access your guest network using the SSID and password you set!

Customize Guest Network Options

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.
- 2. Go to Settings > Guest Network. Locate the Settings section.
- 3. Customize guest network options according to your needs.

Settings	
□ Allow guests to see each other	
□ Allow guests to access my local network	
	Save

• Allow guests to see each other

Check this box if you want to allow the wireless clients on your guest network to communicate with each other via methods such as network neighbors and Ping.

• Allow guests to access my local network

Check this box if you want to allow the wireless clients on your guest network to communicate with the devices connected to your router's LAN ports or main network via methods such as network neighbors and Ping.

4. Click Save. Now you can ensure network security and privacy!

6.3. Parental Controls

This function allows you to block inappropriate, explicit and malicious websites, and control access to specified websites at specified time.

I want to: Control the times of day my children or other home network users are allowed to access the Internet and even types of websites they can visit.

For example, I want to allow my children's devices (e.g. a computer or a tablet) to access only <u>www.tp-link.com</u> and <u>Wikipedia.org</u> from 18:00 (6PM) to 22:00 (10PM) at the weekend and not other times.

How can I1. Visit http://tplinkwifi.net, and log in with password you set fordo that?the router.

2. Go to Settings_>_Parental Controls and_enable Parental Controls.

Parental Contro	ls		
Parental Controls:			

3. Click Add. And then Click View Existing Devices, and select the access device. Or, input the Device Name and MAC Address manually.

						🔂 Ádd	O Delete
	ID	Device Name	MAC Address	Internet Access Time	Description	Status	Modify
-	-	-		-			-
	MAC	Address:					
	Inte	: Address: rnet Access Time cription:	C Enable Thi		(Optional) Cancel	ØK	

4. Click the S icon to set the Internet Access Time. Drag the cursor over the appropriate cell(s) and click OK.

	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							
24:00							
	Time						

- 5. Enter a Description for the entry, check the box for Enable This Entry, and then click OK.
- 6. Select Whitelist as the restriction policy.

Content Restriction			
Restriction Policy:	O Blacklist	Whitelist	

Ø Tips:

- With Blacklist selected, the controlled devices cannot access any websites containing the specified keywords during the Internet Access Time period.
- With Whitelist selected, the controlled devices can only access websites containing the specified keywords during the Internet Access Time period.
- 7. Click 😌 Add a New Domain Name . Enter a website and click Save.

You can add up to 32 keywords for either Blacklist or Whitelist.

Below are some sample entries to allow access.

- For Whitelist: Enter a web address (e.g. wikipedia.org) to allow access only to its related websites. If you wish to block all Internet browsing access, do not add any keyword to the Whitelist.
- For Blacklist: Specify a web address (e.g. wikipedia.org), a web address keyword (e.g. wikipedia) or a domain suffix (eg. .edu or .org) to block access only to the websites containing that keyword or suffix.

Content Restriction	
Restriction Policy;	🗇 Blacklist 💿 Whitelist
Add a New Domain Mi	ame
wikipedia.org	•
	Save

Done!

Now you can control your children's Internet access as needed.

6.4. Customize Your Wireless Settings

Specify Wireless Settings

The router's wireless network name (SSID) and password, and security option are preset in the factory. The preset SSID and password can be found on the label of the router. You can customize the wireless settings according to your needs.

Visit <u>http://tplinkwifi.net</u>, and log in with password you set for the router.

- To enable or disable the wireless function:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. The wireless radio is enabled by default. If you want to disable the wireless function of the router, just uncheck the box for Enable Wireless Radio. In this case, all the wireless settings will be invalid.
- To change the wireless network name (SSID) and wireless password:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. Create a new SSID in Network Name (SSID) and customize the password for the network in Password. The value is case-sensitive.

Note:

If you change the wireless settings with a wireless device, you will be disconnected when the settings are effective. Please write down the new SSID and password for future use.

- To hide SSID:
- 1. Go to Settings > Wireless > Wireless Settings.
- 2. Select Hide SSID, and your SSID won't display when you scan for local wireless networks on your wireless device and you need to manually join the network.

Use WPS for Wireless Connection


Wi-Fi Protected Setup (WPS) provides an easier approach to set up a security-protected Wi-Fi connection.

1. Visit http://tplinkwifi.net, and log in with password you set for the router.

2. Go to Settings > Wireless > WPS.

6.4.1. Use the WPS button

Click WPS start button on the page, and immediately tap the WPS button on your WPSsupported devices such as Android phones, tablets or most network cards within two minutes.

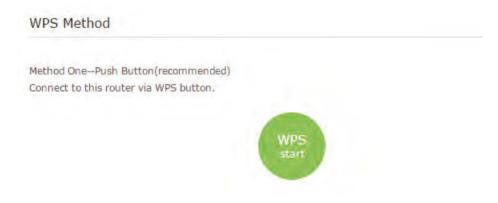

6. 4. 2. Set the Router's PIN

Router's PIN is enabled by default to allow wireless devices to connect to the router using the PIN. You can use the default one or generate a new one.

Router's PIN			
Router's PIN:			
PIN:	35498841	Generate Default	

Note:

- If you want to enable/disable the WPS feature, go to System Tools > System Parameters > WPS, check
 or uncheck the box for Enable WPS.
- PIN (Personal Identification Number) is an eight-character identification number preset to each router. WPS supported devices can connect to your router with the PIN. The default PIN is printed on the label of the router.

6.4.3. Use the Client's PIN

Enter the client's PIN in the field, and click Connect.

WPS Wizard	
Select a WPS connection method:	○ Push Button (Recommended)
Enter the client's PIN:	
Connect	

Success will appear on the above screen and the WPS LED on the router will keep on for five minutes if the client has been successfully added to the network.

6.5. Customize Your Network

Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > Network > LAN.
- 3. Select Use the following IP address.
- 4. Enter a new IP address as needed and leave the Subnet Mask as the default settings and enter the gateway that is in the same subnet as the IP address. The gateway is usually the LAN IP address of your extender.

Obtain an IP address automatically	
Use the following IP address	
192.168.0.254	
255.255.255.0	
192.168.0,254	
	 Use the following IP address 192.168.0.254 255.255.255.0

5. Click Save.

Specify DHCP Server Settings

By default, the DHCP (Dynamic Host Configuration Protocol) Server is enabled and the extender acts as a DHCP server; it dynamically assigns TCP/IP parameters to client

devices from the IP Address Pool. You can change the settings of the DHCP Server if necessary.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > Network > DHCP Server.
- > To specify the IP address that the extender assigns:

DHCP Server:	🔿 Auto 💿 On 🔾	Off	
IP Address Pool:	192.168.0.100	- 192.168.0.199	
Address Lease Time:	1 minutes	(1 default, 2880 maximum)	
Default Gateway:	192.168.0.254	(Optional)	
Primary DNS:	0.0.0.0	(Optional)	
Secondary DNS:	0.0.0	(Optional)	

- 1. Select Auto (recommended) or On to enable the DHCP Server.
- 2. Enter the starting and ending IP addresses in the IP Address Pool.
- 3. Enter other parameters if the ISP requires them. The Default Gateway is automatically filled in and is the same as the LAN IP address of the extender.
- 4. Click Save.

> To view the DHCP Client List:

You can view the information of the DHCP clients connected to the extender in the DHCP Client List.

HCP Cli	ent List			
lient Numb	per: 1			🖒 Refres
ID	Client Name	MAC Address	Assigned IP Address	Lease Time
1		FC-AA-14-C4-3D-0C	192.168.0.100	00:00:43

Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

- 1. Visit <u>http://tplinkwifi.net</u> and log in with the password you set for the extender.
- 2. Go to Settings > Advanced Settings > Wi-Fi Coverage.
- 3. Select Min, Mid or Max to adjust your Wi-Fi coverage of the extender.



4. Click Save.

Set Access Control

Access Control allows you to permit or block specific devices from accessing the Internet for a specific period.

- 1. Visit <u>http://tplinkwifi.net</u> and log in with the password you set for the extender.
- 2. Go to Settings > Advanced Settings > Access Control.
- 3. Enable Access Control.

Access Control		
Access Control:		

> To block specific device(s):

Note:

Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select Blacklist and click Save.



- 2. Select the device to be blocked in the Online Devices table by ticking the corresponding checkbox.
- 3. Click Block and the selected device(s) will be added to the Devices in Blacklist table.

				() Refresh	S Bloc
ID	Device Name	IP Address	MAC Address	Connection Type	Modify
1		192.168.0.102		Wireless	0

4. Click in the Devices in Blacklist table to set the Effective Time for a certain entry as needed.

Device Name:	Phone
MAC Address:	14-CD-83-12-6E-78
Effective Time:	 Cannot access at any time
	Cannot access based on the time schedule
	Time: Select 🔻 : Select 🔻 . Select 🔻 : Select
	Day(s): Select 🔹 🗌 Monday 🗌 Tuesday
	🗌 Wednesday 👘 Thursday
	🗌 Friday 📄 Saturday
	🔲 Sunday

5. Click OK.

> To permit specific device(s):

1. Select Whitelist and click Save.

Default Access Mode:	O Blacklist Whitelist	

2. Click Add in the Devices in Whitelist table. Enter the Device Name and MAC Address. And you can set the Effective Time for a certain entry as needed.

MAC Address:	14-CD	-83-12-6	E-78								
Effective Time:	O Acces	s at any	time								
	Acces	s based o	on th	ie tin	ne scheo	dule					
	Time:	Select	٣	:	Select	۷	-	Select	Ψ.	:	Select
	Day(s):	Select		Ŧ		Ionda	y		Tuesd	lay	
					V	Vedne	esday		Thurs	day	
					F	riday			Satur	day	
					_ s	Sunda	y				

3. Click OK.

6.6. Manage the Router

Set Up System Time

The System Time of the extender will be used for time-based functions such as the Power Schedule function. If you have enabled the Daylight Saving Time feature, the system time will be sychronized with the daylight saving time you configure.

4. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.

5. Go to Settings > System Tools > Time Settings.

To get system time:

1. Select your local Time Zone from the drop-down list.

Time Settings			
Current Time:	01/01/2016 00:05:29		
Time Zone:	(GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels	÷	
			Save

2. Click Save.

- > To set up Daylight Saving Time:
- 1. Select Enable Daylight Saving Time.

Enable Daylight	Saving Time								
Start:	2016	Mar	٣	Last	٣	Sun	٣	1 AM	. •
End:	2016	Oct		Last	Ŧ	Sun	٣	1 AM	٣
Current Status:	Dayligh	t Saving	Time	is not ac	tive.				

- 2. Select the Start and End date and time of the daylight saving time at your local time zone.
- 3. Click Save.

Control LEDs

The LEDs of the extender indicate its activities and status. You can enable the Night Mode feature to specify a time period during which the LEDs are off.

- 1. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > LED Control.
- > To specify a time period when LEDs are off:
- 1. Select Night Mode.
- 2. Specify a time period in the LED Off Time field, and the LEDs will be off during this period.
- 3. Click Save.

LED Control							
🕑 Night Mode							
LED Off Time:	21	*	: 00	v	_ 09	• : 00	
Note: Before enabli	ng the LED (Control,	make su	re <u>Time</u>	Settings is	correct.	

Upgrade the Firmware

TP-LINK is committed to improving product features, giving you a better network experience. You can download the latest firmware file from the Support page at our website www.tp-link.com and upgrade the firmware to the latest version.

1. Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).

- 2. Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
- 3. Backup your extender configuration.
- 4. Do NOT power off the extender during the firmware upgrade.

> To upgrade the firmware online:

- 1. Visit <u>http://tplinkwifi .net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > Firmware Upgrade, and click Check for upgrade to see whether a new firmware is released.

Online Upgrade	
Latest Version:	
and a state of the	
	Check for upgrade

3. Focus on the Online Upgrade section, and click Upgrade.

Online Upgrade	
Latest Version:	
	Upgrade

4. Wait a few minutes for the firmware upgrade to complete and the router to reboot.

> To upgrade the firmware locally:

- 1. Download the latest firmware file for the extender from our website <u>www.tp-link.com</u>.
- 2. Visit <u>http://tplinkwifi.net</u>, and log in with the password you set for the extender.
- 3. Go to Settings > System Tools > Firmware Upgrade.
- 4. Click Browse to locate the downloaded new firmware file, and then click Upgrade.

Firmware Upgrade		
New Firmware File:	Browse	
Firmware Version:		
Hardware Version:		
		Upgrade

5. Wait a few minutes for the firmware upgrade to complete and the router to reboot.

Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

- 1. Visit <u>http://tplinkwifi .net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > Backup & Restore.

> To backup configuration settings:

Click Backup to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

Backup	
Save a copy of your current settings.	
	Backup

> To restore configuration settings:

1. Click Browse to locate the backup configuration file stored on your computer, and click Restore.

Restore		
Restore saved settings from	a file.	
File:	Browse	
		Restore

2. Wait a few minutes for the restore and reboot.

Note: During the restore process, do not power off or reset the extender.

> To reset the extender to factory default settings:

1. Click Factory Restore to reset the extender.

Factory Default Restore	
Revert all settings to factory defaults.	
	Factory Restore

2. Wait a few minutes for the reset and reboot.

Note:

- 1. During the reset process, do not power off or reset the router.
- 2. We strongly recommend you backup the current configuration settings before resetting the extender.

Change Login Password

The account management feature allows you to change your login password of the management web page.

- 1. Visit <u>http://tplinkwifi .net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > Administration.
- 3. Enter the old password, then the new password twice (both case-sensitive) and click Save.

Admin Account		
Old Password:		
New Password:		
	Law Middle High	
Confirm Password:		
		Save

4. Use the new password for future logins.

System Log

If the extender is not working normally, you can save the system log and send it to our technical support team.

- 1. Visit <u>http://tplinkwifi .net</u>, and log in with the password you set for the extender.
- 2. Go to Settings > System Tools > System Log.
- > To Save the system log locally:
- 1. Choose the type and level of the system log as needed.
- 2. Click Save Log to save the system logs to a local disk.

Log Filter: Type = ALL		♥ Level =	ALL T		
				👸 Refresh 🛛 🖨 De	lete Al
ID	Time	Туре	Level	Content	
5	0 days 00:10:59	DHCPC	ERROR	DHCP detection failed.	
4	0 days 00:10:56	DHCPC	INFO	Sent a detection for DHCP.	
3	0 days 00:10:53	DHCPC	INFO	Sent a detection for DHCP.	
2	0 days 00:10:50	DHCPC	INFO	Sent a detection for DHCP.	
1	0 days 00:10:47	OTHERS	INFO	User cleared up all the logs.	

FAQ

Q1. What should I do if I forget my wireless password?

The default wireless password is printed on the label of the router. If the password has been altered, please connect your computer to the router using an Ethernet cable and follow the steps below:

- 1. Visit http://tplinkwifi.net, and log in with the username and password you set for the router.
- 2. Go to Wireless > Wireless Security to retrieve or reset your wireless password.

Q2. What should I do if I forget my login password of the web management page?

The default username and password of the web management page are admin (in lowercase).

If you have altered the username and password but Password Recovery is disabled:

- 1. Reset the router to factory default settings: press and hold the Reset button for about 7 seconds and then release;
- 2. Visit http://tplinkwifi.net, and enter admin (in lowercase) as both username and password to log in.

Note: You'll need to reconfigure the router to surf the internet once the router is reset, and please mark down your new password for future use.

Q3. What should I do if I cannot access the web management page?

- 1. This can happen for a variety of reasons. Please try the methods below to log in again.
- Make sure your computerthe has connected to the router correctly and the corresponding LED light up.
- Make sure the IP address of your computer is configured as Obtain an IP address automatically and Obtain DNS server address automatically.
- 2. Make sure you enter the correct IP address to log in: http://tplinkwifi.net.
- Check your computer's settings:
- 3. Go to Start > Control Panel > Network and Internet, and click View network status and tasks.
 - 1) Click Internet Options on the bottom left.
 - 2) Click Connections and select Never dial a connection.

eneral Security Privacy Content Connections	Programs Advanced
To set up an Internet connection, click Setup. Dial-up and Virtual Private Network settings	Setup
Broadband Connection	Add
	Add VPN
	Remove
Choose Settings if you need to configure a proxy server for a connection.	Settings
Never dial a connection	
Dial whenever a network connection is not pres	ent
Always dial my default connection	
Current None	Set default
Local Area Network (LAN) settings	
LAN Settings do not apply to dial-up connections. Choose Settings above for dial-up settings.	LAN settings

3) Click LAN settings and deselect the following three options, and click OK.

	n n may override manual settin disable automatic configurat	
Automatically detec		
Use automatic confi	guration script	
Address		
Proxy server		
Use a proxy server dial-up or VPN conne	for your LAN (These settings ections).	will not apply to
	Port: 80	Advanced
Address:		
	erver for local addresses	

4) Go to Advanced > Restore advanced settings, and click OK to save the settings.

eneral	Security	Privacy	Content	Connections	Programs	Advanced
Setting	s					
	Enable Move Move Reset Reset Reset Browsing Auton Close Disable	s expand caret Br system ca text size text size zoom leve natically re unused for e script de	aret with fo to medium to medium el for new ecover fron olders in His	new windows a bous/selection d for new window while zooming ⁴ windows and ta n page layout e story and Favor Internet Explore	hanges ws and tabs bs rrors with C ites*	
	📃 Displa	y a notific	ation abou	t every script e on selection	rror	-
*Ta	kes effect a	after you	restart Int	ernet Explorer		
				Restore	advanced s	ettings
		plorer set	tings			
Rese	lition.	t Explorer		to their default wser is in an un	Kes	

- Use another web browser or computer to log in again.
- Reset the router to factory default settings and try again. If the login still fails, please contact the technical support.

Note: You'll need to reconfigure the router to surf the internet once the router is reset.

Q4. How do I use the WDS Bridging function to extend my wireless network?

For example, my house covers a large area. The wireless coverage of the router I'm using (the root router) is limited. I want to use an extended router to extend the wireless network of the root router.

Note:

- WDS bridging only requires configuration on the extended router.
- 1. Visit http://tplinkwifi.net, and log in to with the username and password you set for the router.
- 2. Configure the IP address of the router:
 - Go to Network >_LAN, configure the IP address of the extended router to be in the same subnet with the root router; (For example, the IP address of the root router is 192.168.0.1, the IP address of the extended router can be 192.168.0.2~192.168.0.254. We take 192.168.0.2 as example.)
 - 2) Click Save.

Note: Log in to the web management page again if the IP address of the router is altered.

MAC Address:	0C-4A-08-45-F3-60
IP Address:	192.168.0.1
Subnet Mask:	255.255.255.0 •
IGMP Proxy:	Enable T
	Note: IGMP(Internet Group Management Protocol) works for IPTV multicast stream. The device supports both IGMP proxy with enabled/disabled option and IGMP snooping.

- 3. Survey the SSID to be bridged:
 - 1) Go to Wireless > Wireless Settings and click Enable WDS Bridging.
 - 2) Click Survey, locate the root router's SSID and click Choose (Here we take TP-LINK_2512 as example).
 - 3) If the root router is set with a wireless password, you should enter the wireless password of the root router.
 - 4) Click Save.

Wireless Network Name:	(Also called the SSID)
Mode:	11bgn mixed 🔹
Channel Width:	Auto 🔻
Channel:	Auto 🔻
	Enable Wireless Router Radio
	Enable SSID Broadcast
	Enable WDS Bridging
SSID (to be bridged):	
BSSID (to be bridged):	Example:00-1D-0F-11-22-33
boold (to be bridged).	Survey
WDS Mode:	Auto
	None
Key type: WEP Index:	
	1
Auth type:	open •
Password:	

- 4. Disable DHCP:
 - 1) Go to DHCP, select Disable, and click Save.

Now you can go to Status_to check the WDS status. When the WDS status is Run, it means WDS bridging is successfully built.

Q5. What should I do if I cannot access the internet even though the configuration is finished?

1. Visit http://tplinkwifi.net, and log in to with the username and password you set for the router.

2. Go to Status to check WAN status:

If IP Address is a valid one, please try the methods below and try again:

- Your computer might not recognize any DNS server addresses, please manually configure DNS server.
 - 1) Go to DHCP.
 - 2) Enter 8.8.8.8 as Primary DNS, and click Save.

Tips: 8.8.8.8 is a safe and public DNS server operated by Google.

DHCP Server:	🔘 Disab	le 🖲 Enable	
Start IP Address:	192.168	3.0.100	
End IP Address:	192.168	3.0.199	
Address Lease Time:	120	minutes (1~2880 minutes, the default value is 120)
Default Gateway:	192.168	3.0.1	
Default Domain:			(Optional)
Primary DNS:	0.0.0.0		(Optional)
Secondary DNS:	0.0.0.0		(Optional)
he change of DHCP config will not take effect until t	this device n	eboots, please	click here to reboot.

- Restart the modem and the router.
 - 1) Power off your modem and the router, and leave them off for 1 minute.
 - 2) Power on your modem first, and wait about 2 minutes.
 - 3) Power on the router, and wait another 1 or 2 minutes and check the internet access.
- Reset the router to factory default settings and reconfigure the router.
- Upgrade the firmware of the router.
- Check the TCP/IP settings on the particular device if all other devices can get internet from the router.

If the IP Address is 0.0.0.0, please try the methods below and try again:

- Make sure the physical connection between the router and the modem is proper.
- Clone the MAC address of your computer.
 - 1) Visit http://tplinkwifi.net, and log in with the username and password you set for the router.
 - 2) Go to Network > MAC Clone, select Clone MAC Address and click Save.

WAN MAC Address:	0C-4A-08-45-F3-61	Restore Factory MAC
Your PC's MAC Address:	74-04-35-98-42-A8	Clone MAC Address

Ø Tips:

- Some ISP will register the MAC address of your computer when you access the internet for the first time through their Cable modem, if you add a router into your network to share your internet connection, the ISP will not accept it as the MAC address is changed, so we need to clone your computer's MAC address to the router.
- The MAC addresses of a computer in wired connection and wireless connection are different.

• Modify the LAN IP address of the router.

Note:

Most TP-LINK routers use 192.168.0.1/192.168.1.1 as their default LAN IP address, it may conflict with the IP range of your existent ADSL modem/router. If so, the router is not able to communicate with your modem and cause you can't access the internet. To resolve this problem, we need to change the LAN IP address of the router to avoid such conflict, for example, 192.168.2.1.

- 1) Visit <u>http://tplinkwifi.net</u>, and log in with the username and password you set for the router.
- 2) Go to Network_> LAN.
- 3) Modify the LAN IP address as the follow picture shows. Here we take 192.168.2.1 as an example.
- 4) Click Save.

	to should
MAC Address:	0C-4A-08-45-F3-60
IP Address:	192.168.2.1
Subnet Mask:	255.255.255.0 *
IGMP Proxy:	Enable *
	Note IGMP(Internet Group Management Protocol) works for IPTV multicast stream. The device supports both IGMP proxy wi enabled/disabled option and IGMP snooping.
	Save

- Restart the modem and the router.
 - 1) Power off your modem and the router, and leave them off for 1 minute.
 - 2) Power on your modem first, and wait about 2 minutes.
 - 3) Power on the router, and wait another 1 or 2 minutes and check the internet access.
- Double check the Internet Connection Type.
 - 1) Confirm your Internet Connection Type, which can be learned from the ISP.
 - 2) Visit http://tplinkwifi.net, and log in with the username and password you set for the router.

- 3) Go to Network > WAN.
- 4) Select your WAN Connection Type and fill in other parameters.
- 5) Click Save.

WAN Connection Type:	Dynamic IP	
IP Address:	0.0.0.0	
Subnet Mask:	0.0.0.0	
Default Gateway:	0.0.0.0	
	Renew	
MTU Size (in bytes):	1500 (The default is 1500, do not change unless neces	ssary.)
Primary DNS:	0.000	
Secondary DNS:	(Optional)	
Host Name:	TL-WR841N	
	Get IP with Unicast DHCP (It is usually not required.)	

- 6) Restart the modem and the router.
- Please upgrade the firmware of the router.

If you've tried every method above but cannot access the internet, please contact the technical support.

Q6. What can I do if I cannot find my wireless network or I cannot connect the wireless network?

If you fail to find any wireless network, please follow the steps below:

- Make sure the wireless function of your device is enabled if you're using a laptop with a built-in wireless adapter. You can refer to the relevant document or contact the laptop manufacturer.
- Make sure the wireless adapter driver is installed successfully and the wireless adapter is enabled.
 - On Windows 7
 - 1) If you see the message No connections are available, it is usually because the wireless function is disabled or blocked somehow.
 - 2) Clicking Troubleshoot and windows might be able to fix the problem by itself.
 - On Windows XP

- 1) If you see the message Windows cannot configure this wireless connection, this is usually because windows configuration utility is disabled or you are running another wireless configuration tool to connect the wireless.
- 2) Exit the wireless configuration tool (the TP-LINK Utility, for example).
- 3) Select and right click My Computer on Desktop, and select Manage to open Computer Management window.
- 4) Expand Services and Applications > Services, and find and locate Wireless Zero Configuration in the Services list on the right side.
- 5) Right click Wireless Zero Configuration, and then select Properties.
- 6) Change Startup type to Automatic, click Start and make sure the Service status is Started. And then click OK.

If you can find other wireless network except your own, please follow the steps below:

- Check the WLAN LED indicator on your wireless router/modem.
- Make sure your computer/device is still in the range of your router/modem. Move closer if it is currently too far away.

If you can find your wireless network but fail to connect, please follow the steps below:

- Authenticating problem/password mismatch:
 - Sometimes you will be asked to type in a PIN number when you connect to the wireless network for the first time. This PIN number is different from the Wireless Password/Network Security Key. Usually you can only find it on the label of your router.

Connect to a Network	X
	N from the router display t the general wireless password
PIN:	
Connect using a security	(key instead
	Back Next Cancel

- 2) If you cannot find the PIN or PIN failed, you may choose Connecting using a security key instead, and then type in the Wireless Password/Network Security Key.
- 3) If it continues to show note of Network Security Key Mismatch, it is suggested to confirm the wireless password of your wireless router.

Note: Wireless Password/Network Security Key is case sensitive.

- Windows unable to connect to XXXX / Can not join this network / Taking longer than usual to connect to this network:
 - Check the wireless signal strength of your network, if it is weak (1~3 bars), please move the router closer and try again.
 - Change the wireless Channel of the router to 1,6,or 11 to reduce interference from other networks.
 - Re-install or update the driver for your wireless adapter of the computer.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. Ptre-link is a registered trademark of TP-LINK TECHNOLOGIES CO., LTD. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-LINK TECHNOLOGIES CO., LTD. Copyright © 2016 TP-LINK TECHNOLOGIES CO., LTD. All rights reserved.

FCC STATEMENT

Operating Frequency Range:2400MHz-2483.5MHz;5150MHz-5250MHz;5725MHz-5850MHz

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device is restricted for indoor use.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be colocated or operating in conjunction with any other antenna or transmitter."

CE Mark Warning

Operating Frequency Range:2400MHz-2483.5MHz;5150MHz-5250MHz

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

RF Exposure Information

This device meets the EU requirements (1999/5/EC Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

National restrictions

Restricted to indoor use.

Korea Warning Statements:

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice:

注意!

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅 自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行; 經發現有干擾現象時, 應立即停用, 並改善至無干擾時方得繼續使用。前項合法通信, 指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮,請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用,以確保本產品的操作可靠並防止過熱,請勿堵塞或覆蓋 開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風,否則不可放在密閉位置中。
- 請不要私自打開機殼,不要嘗試自行維修本產品,請由授權的專業人士進行此項 工作。

無線資訊傳輸設備必須具備安全功能,以保護未經授權之一方任意更改軟體 進而避免發射機操作於非經認證之頻率、輸出功率、調變形式或其他射頻參 數設定。



Продукт сертифіковано згідно с правилами системи Ун вимогам нормативних документів та вимогам, що п законодавчими актами України.

EHC

Safety Information

- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The plug considered as disconnect device of adapter.
- It Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.

For EU/EFTA, this product can be used in the following countries:

AT	BE	BG	СН	CY	CZ	DE	DK
EE	ES	FI	FR	GB	GR	HR	HU
IE	IS	IT	LI	LT	LU	LV	MT
NL	NO	PL	PT	RO	SE	SI	SK

Explanations of the symbols on the product label

Symbol	Explanation
	DC voltage
X	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/ EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.