



User Guide

Wi-Fi Range Extender
RE205/RE305

Contents

About This Guide	1
 Chapter 1. Get to Know About Your Extender	 2
1. 1. Product Overview	3
1. 2. Appearance	3
1. 2. 1.LED Explanation.....	4
1. 2. 2.Port and Button Description	4
 Chapter 2. Set Up Internet Connection	 5
2. 1. Power On the Extender	6
2. 2. Set Up the Extender	6
2. 2. 1.Method 1: Via the TP-Link Tether App.....	6
2. 2. 2.Method 2: Via a Web Browser.....	8
2. 2. 3.Method 3: Via the WPS Button.....	12
 Chapter 3. OneMesh with Seamless Roaming	 14
3. 1. What's a OneMesh Network.....	15
3. 2. How to Set Up a OneMesh Network	16
3. 2. 1.Method 1: Via the TP-Link Tether App.....	16
3. 2. 2.Method 2: Via a Web Browser.....	16
3. 3. Remove Extender from OneMesh Network	17
3. 3. 1.Method 1: Via the TP-Link Tether App.....	17
3. 3. 2.Method 2: Via a Web Browser.....	19
 Chapter 4. TP-Link Cloud Service	 20
4. 1. Register a TP-Link ID.....	21
4. 2. Change Your TP-Link ID Information.....	21
4. 3. Manage the User TP-Link IDs	22
4. 3. 1.Add TP-Link ID to Manage the Extender	23
4. 3. 2.Remove TP-Link ID(s) from Managing the Extender	23
4. 4. Manage the Extender via the TP-Link Tether App.....	24
 Chapter 5. Customize Your Network.....	 25
5. 1. Check Internet Status.....	26
5. 2. Configure Wireless Network	27
5. 3. Change LAN Settings.....	28

5. 4.	Adjust Wi-Fi Coverage	29
5. 5.	Set Access Control	30
5. 6.	Set High Speed Mode.	32

Chapter 6. More Features of Your Extender..... 34

6. 1.	Use Your Extender as a Wireless Adapter.....	35
6. 2.	Transform Your Existing Wired Network to a Wireless One	35
6. 2. 1.	To Set Up the Extender as an Access Point	35
6. 2. 2.	To Connect Your Wireless Devices to the Extender via WPS.....	36

Chapter 7. Manage Your Extender 38

7. 1.	Set System Time	39
7. 2.	Control LEDs	39
7. 3.	Set Power Schedule	40
7. 4.	Upgrade the Firmware	41
7. 4. 1.	Online Upgrade	41
7. 4. 2.	Local Upgrade	42
7. 5.	Backup and Restore Configuration Settings.....	42
7. 6.	Change Login Password	44
7. 7.	Check System Log	44

FAQ46

About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick internet setup, while this guide contains details of each function and demonstrates how to configure them.

Note:

Features available in the range extender may vary by model and software version. The range extender availability may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual range extender experience.

Conventions

In this guide the following conventions are used:

Convention	Description
<u>Underline</u>	Underlined words or phrases are hyperlinks. You can click to redirect to a website or a specific section.
Teal	Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons and so on.
>	The menu structures to show the path to load the corresponding page. For example, Advanced > Wireless > MAC Filtering means the MAC Filtering function page is under the Wireless menu that is located in the Advanced tab.
Note:	Ignoring this type of note might result in a malfunction or damage to the device.
Tip:	Indicates important information that helps you make better use of your device.

More Info

The latest software, management app and utility are available from [Download Center](https://www.tp-link.com/support/) at <https://www.tp-link.com/support/>.

The Quick Installation Guide can be found where you find this guide or inside the package of the extender.

Specifications can be found on the product page at <https://www.tp-link.com>.

A community is provided for you to discuss our products at <https://community.tp-link.com>.

Our Technical Support contact information can be found at the Contact Technical Support page at <https://www.tp-link.com/support/>.

Speed/Coverage Disclaimer

Maximum wireless signal rates are the physical rates derived from IEEE Standard 802.11 specifications. Actual wireless data throughput and wireless coverage are not guaranteed and will vary as a result of 1) environmental factors, including building materials, physical objects, and obstacles, 2) network conditions, including local interference, volume and density of traffic, product location, network complexity, and network overhead, and 3) client limitations, including rated performance, location, connection quality, and client condition.

Chapter 1

Get to Know About Your Extender

This chapter introduces what the extender can do and its appearance.

It contains the following sections:

- [Product Overview](#)
- [Appearance](#)

1.1. Product Overview

Bring Dead Zones Back to Life

The TP-Link extender is connected to your router wirelessly, strengthening its signal and expanding its coverage into areas that could not otherwise be reached.

Easy Installation & Quick Position

Instantly connect the extender to a router by pressing the router's WPS button (if available) followed by the extender's WPS button. Alternatively, follow the Quick Setup instructions found on the extender's web management page.

Once the extender is connected to a router, you can relocate it to your preferred location with no further configuration required. The intelligent signal light can help to find the best location.

Easy Management with the Tether App

Tether provides a simple, intuitive way to access and manage your extender with your smart devices.

1.2. Appearance



Note:

The provided plug may differ from the picture due to different regional power specifications.

1.2.1. LED Explanation

You can check the extender's working status by following the LED Explanation table.

Name	Status	Indication
Power	On/Off	The extender is on or off.
	Blinking	The system is starting up or firmware is being upgraded.
Signal	Solid Blue	The extender is connected to your router's wireless network and is in a suitable location.
	Solid Red	The extender is experiencing poor signal strength. Try relocating it closer to your router.
	Blinking	WPS connection is in progress.
	Off	No wireless connection is established.
2.4GHz	On/Off	The extender is connected or not connected to the 2.4GHz wireless network of your host router.
5GHz	On/Off	The extender is connected or not connected to the 5GHz wireless network of your host router.

1.2.2. Port and Button Description

Ports or Buttons	Description
WPS Button	Press the WPS button on your host router, and immediately press the WPS button on the extender for 1 second. The Signal LED of the extender should change to solid on, indicating successful WPS connection.
RESET Button (Hole)	Use a pin to press the button for 1 second to reset the extender.
Ethernet Port	Connect your Ethernet-only device to the Ethernet port of the extender to join the Wi-Fi network.

Chapter 2

Set Up Internet Connection

This chapter introduces how to boost your host wireless coverage. Please follow the step-by-step instructions to set up the internet connection.

It contains the following sections:


- [Power On the Extender](#)
- [Set Up the Extender](#)

2.1. Power On the Extender

Plug the extender into an electrical outlet [near your host router](#), and then wait until the Power LED is solid on.

■ Note:

1. For safety, only plug the extender in upright direction as shown below. The antennas are not detachable. Do not force the antennas to rotate to avoid damaging your extender.
2. The operating temperature should be between 0°C and 40°C (32°F - 104°F).

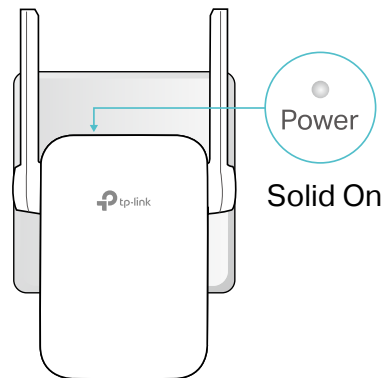

2.2. Set Up the Extender


There are three ways to set up the extender: via the TP-Link Tether app, via a web browser, or via the WPS button.

2.2.1. Method 1: Via the TP-Link Tether App


1. Launch the Apple App Store or Google Play Store and search [TP-Link Tether](#) or simply scan the QR code to download and install the app.




2. Go to Wi-Fi Settings and connect your device to the extender's wireless network: [TP-Link_Extender](#).

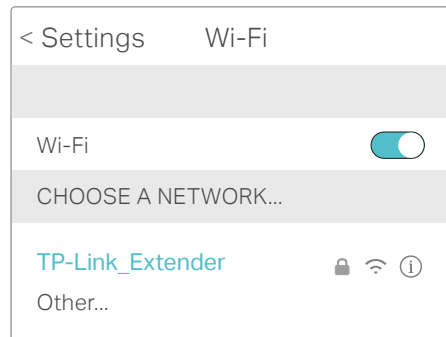

3. Launch Tether and select your extender from the Local Devices list.

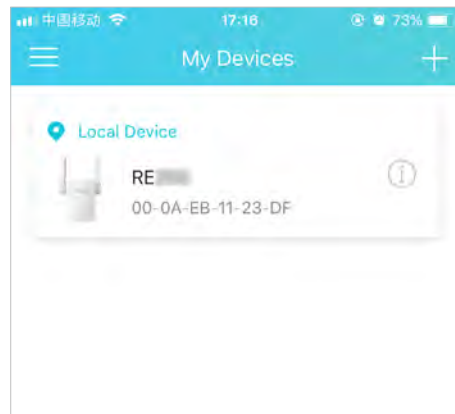


4. Create a password to log in.

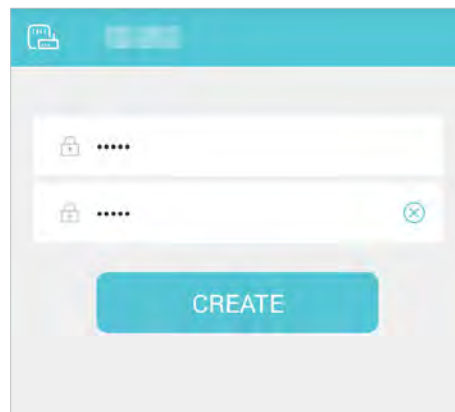

5. Follow app instructions to set up your extender.

6. (Optional) Enable [Join OneMesh](#) to copy the router's wireless settings for seamless roaming. For more information about OneMesh, refer to [OneMesh with Seamless Roaming](#).

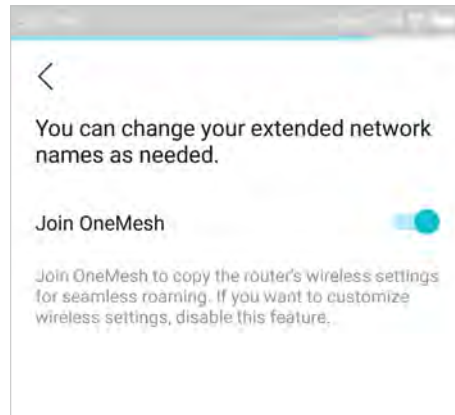

Tips:

It is recommended to enable [Smart Connect](#) on your host router to enjoy a seamless connection between dual-band networks. With Smart Connect enabled, your host router's 2.4GHz and 5GHz share the same SSID (network name) and password. Refer to your host router's user guide to enable Smart Connect.

7. Relocate your extender and follow app instructions to enjoy the extended network.


Tips:

For more intuitive location assistant, access extender settings via Tether and go to [Tools > Location Assistant](#). You can also manage your extender via Tether, such as controlling LEDs, sharing passwords of your networks and blocking devices.


2.2.2. Method 2: Via a Web Browser

1. Connect your computer to the extender via your Ethernet cable, or connect wirelessly as follows:

- For Windows Users
 - 1) Unplug the Ethernet cable from your computer (if any).
 - 2) Click the Wi-Fi icon on the taskbar and connect to the extender's wireless network: [TP-Link_Extender](#).

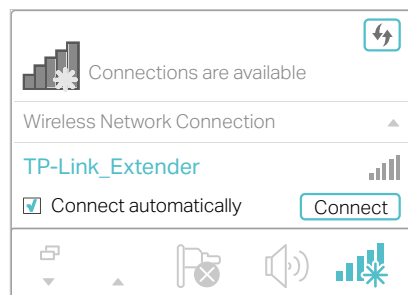


- For Mac OS X Users
 - 1) Unplug the Ethernet cable from your computer (if any).
 - 2) Click the Wi-Fi icon in the top right corner of the screen, and connect to the extender's network: [TP-Link_Extender](#).

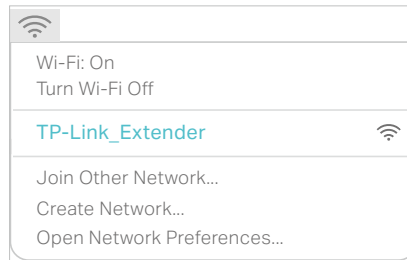

2. Follow the instructions of the Quick Setup Wizard to connect the extender to your host router.

- 1) Launch a web browser, enter <http://tplinkrepeater.net> or <http://192.168.0.254> in the address bar, and then create a password to log in.

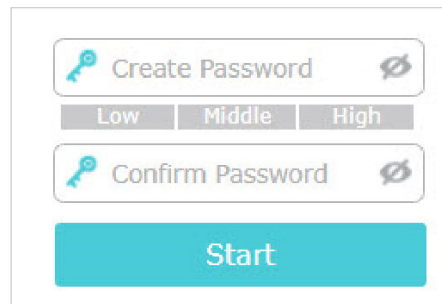

☞ **Tips:** If the login window does not appear, please refer to [FAQ](#).

- 2) Select your host router's 2.4GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

Select a 2.4GHz host network to extend. [Can't find your Wi-Fi?](#)

ID	SSID	Signal	MAC Address	Security
1	AFREEWIFI1		be-84-c6-27-fe-98	
2	TP-Link_0969		00:0a:eb:13:09:69	

Host 2.4GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

- 3) Select your host router's 5GHz SSID (network name), enter its password (NOT the password you just created for management), and click [Next](#).

Select a 5GHz host network to extend. [Can't find your Wi-Fi?](#)

ID	SSID	Signal	MAC Address	Security
1	AFREEWIFI1		be-84-c6-27-fe-98	
2	TP-Link_0969_5G		00:0a:eb:13:09:69	

Host 5GHz Password:

[Next](#)

[Exit](#) [Other...](#) [Rescan](#) [Skip](#)

🔗 **Tips:** If your host router does not support 5GHz wireless network, please click [Skip](#) to continue.

4) Confirm your host network password.

Please confirm your host network password.

2.4GHz Host Network

SSID: TP-Link_0969

Password: 123456789

5GHz Host Network

SSID: TP-Link_0969_5G

Password: 123456789

[Back](#) [Confirm](#)

5) Either keep the default SSIDs (network names) or customize them for the extended networks, and then click [Next](#).

Set the extended network names (SSIDs).

Extended 2.4GHz SSID:

Extended 2.4GHz Password:
(Same as your host network password)

Extended 5GHz SSID:

Extended 5GHz Password:
(Same as your host network password)

[Back](#) [Next](#)


🔗 **Tips:**

If you connect the extender to a TP-Link OneMesh router, the extender will automatically join the router's OneMesh network and copy the router's wireless settings. For more information, refer to OneMesh with Seamless Roaming.

6) Follow web instructions to relocate your extender for optimal Wi-Fi coverage and performance, and then click [Done](#).

Relocate your extender to optimize Wi-Fi coverage and performance.

- Plug in the extender about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of the host network.
- Wait for about 2 minutes until the Signal LED turns solid blue. If it doesn't, relocate the extender closer to the router to achieve better signal quality.

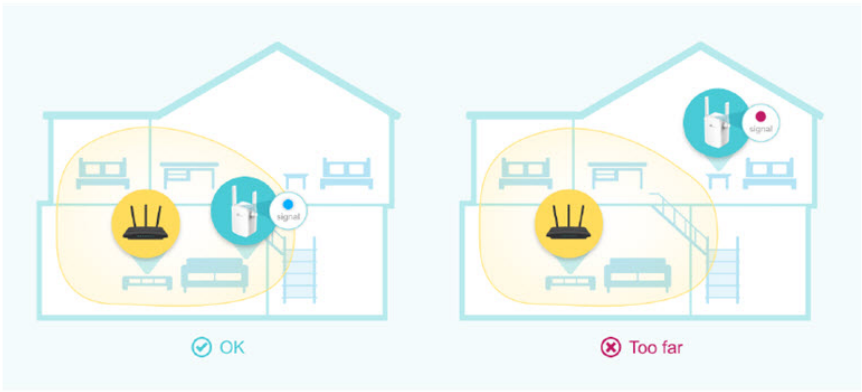

Done

7) **Enjoy!** Connect to the extended network and enjoy the internet.

Now connect to the extended network, then click **Finish**.

2.4GHz Extended Network		5GHz Extended Network	
SSID:	TP-Link_0969_EXT	SSID:	TP-Link_0969_5G_EXT
Password:	123456789	Password:	123456789

☒ I have connected to the extended network.

Finish

 Tips:

1. If you connect the extender to a TP-Link OneMesh router and a success screen as below appears at the end of the setup, the extender has successfully joined the router's OneMesh network and copied the router's wireless settings. For more information, refer to [OneMesh with Seamless Roaming](#).
2. It is recommended to enable [Smart Connect](#) on your host router to enjoy a seamless connection between dual-band networks. With Smart Connect enabled, your host router's 2.4GHz and 5GHz share the same SSID (network name) and password. Refer to your host router's user guide to enable Smart Connect.

All done! Now, enjoy seamless roaming in the mesh network.

2.4GHz Extended Network	5GHz Extended Network
SSID: _OneMesh	SSID: _OneMesh_5G
Password: 12345678	Password: 12345678

Tip: You can manage all mesh devices in the network on your router's web page <http://tplinkwifi.net>.

2.2.3. Method 3: Via the WPS Button

Use this way if your router has a WPS button. The button might look like one of these:



1. Press the WPS button on your host router, and then press the WPS button on the extender for 1 second within 2 minutes.



Note:


For more information about using WPS button on your host router, please refer to the router manufacturer's user guide.

2. Wait until the Signal LED changes to solid on, which indicates that the WPS connection is successful.

Note:

If the LED does not turn solid on, try again or refer to [Method 1: Via the TP-Link Tether App](#) or [Method 2: Via a Web Browser](#).

3. If the extender connects to a dual band router, repeat steps 1 and 2 above to connect to the other band.
4. Wait until the Signal LED turns solid on, setup is done.

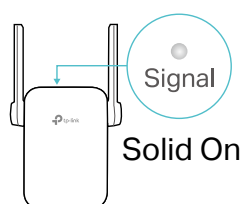

Extended Network Names:

Router's network name with _EXT at the end

Passwords:

Same as your router


Note:

- If you want to customize the extended network name, refer to [To change the wireless network name \(SSID\)](#).

- If you cannot find the network names with _EXT in your Wi-Fi network list, this means that the extender has been connected to a OneMesh router and automatically copied its wireless settings. For more information, refer to [OneMesh with Seamless Roaming](#).
- For some early firmware versions, the extender share the same network name as your router.

5. Relocate your extender for optimal Wi-Fi coverage and performance.

- 1) Plug in the extender about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of your router.
- 2) Wait for about 2 minutes until the Signal LED turns solid blue. If it doesn't, relocate the extender closer to the router to achieve better signal quality.

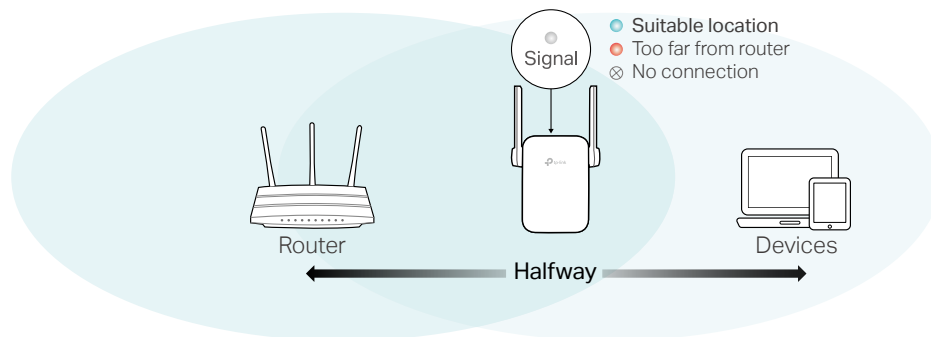

ⓘ Tips:

To minimize signal interference, please choose a location which is far away from Bluetooth devices and other household electronic devices, such as cordless phones, microwave ovens and baby monitors.

6. [Enjoy!](#) Connect to the extended network and enjoy the internet.

Chapter 3

OneMesh with Seamless Roaming

This chapter introduces the TP-Link OneMesh™ feature.

It contains the following sections:

- [What's a OneMesh Network](#)
- [How to Set Up a OneMesh Network](#)
- [Remove Extender from OneMesh Network](#)

3. 1. What's a OneMesh Network

TP-Link OneMesh  router and TP-Link OneMesh  extenders work together to form one unified Wi-Fi network. Walk through your home and stay connected with the fastest possible speeds thanks to OneMesh's seamless coverage.



Unified Wi-Fi Network

Router and extenders share the same wireless settings, including network name, password, access control settings and more.



Seamless Roaming

Devices automatically switch between your router and extenders as you move through your home for the fastest possible speeds.



Easy Setup and Management


Set up a OneMesh network with a push of WPS buttons. Manage all network devices on the Tether app or at your router's web management page.

To check full list of TP-Link OneMesh devices, scan the QR code, or visit

<https://www.tp-link.com/One-Mesh/compatibility>.



Unified OneMesh Network

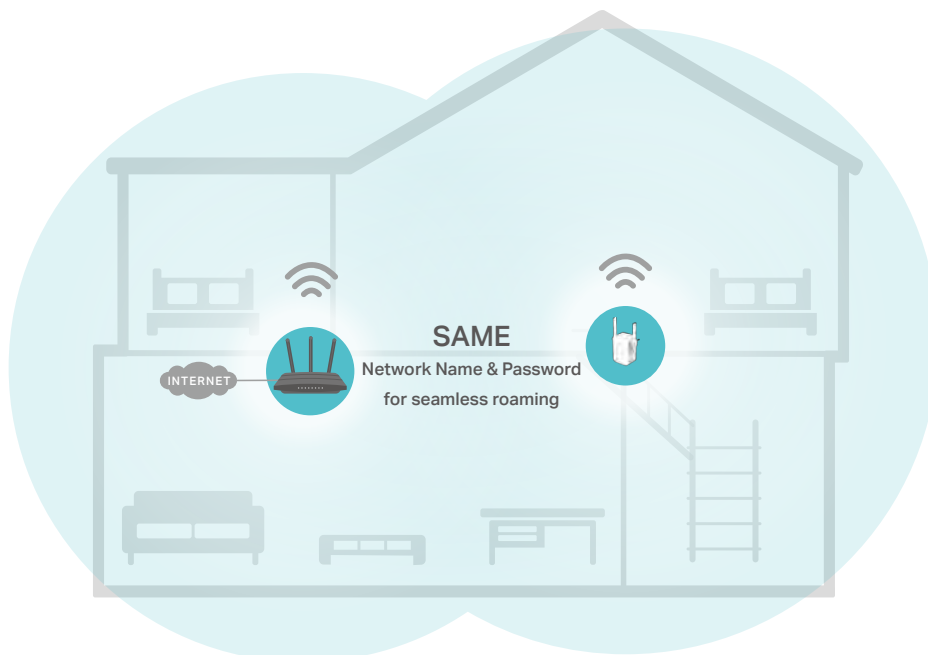

3.2. How to Set Up a OneMesh Network

Once the extender is connected to a TP-Link OneMesh router via web browser or WPS button, the extender will automatically join the router's OneMesh network and copy the router's wireless settings. You can manually join a OneMesh network during the configuration via the TP-Link Tether app. For more information about setting up the extender with OneMesh network, refer to [Set Up the Extender](#).

If you have already set up the extender before without joining the OneMesh network, choose one of the methods below to set up a OneMesh network:

■ **Note:**


Before setting up a OneMesh network, it is recommended to enable [Smart Connect](#) on your host router to enjoy a seamless connection between dual-band networks.

3.2.1. Method 1: Via the TP-Link Tether App

1. Launch Tether and select the extender you want to join the OneMesh network.
2. Go to [Tools > OneMesh](#) and enable [OneMesh](#).

📌 **Tip:**

If your host router does not support OneMesh, you need to reselect a host network first. Go to [Tools > Host Network](#) and click [Reselect Host Network](#), and then follow the app instructions to complete the configuration.

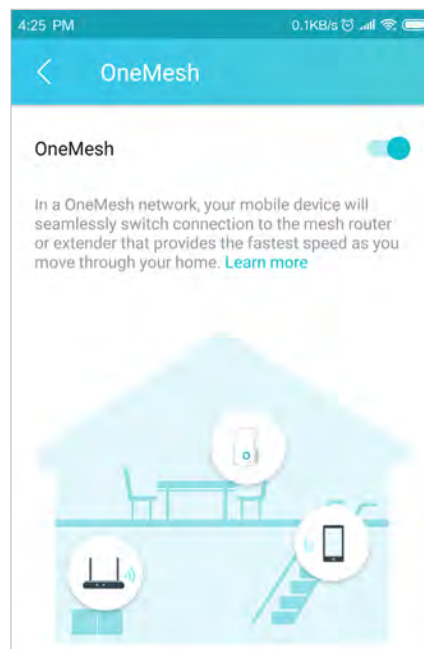


3. Follow the app instructions to join the OneMesh network.

3.2.2. Method 2: Via a Web Browser


1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings > OneMesh](#) and enable [Join OneMesh](#).

Tip:

If your host router does not support OneMesh, you need to reselect a host network first. Go to [Settings > Wireless > Connect to Network](#) and follow the instructions to complete the configuration.

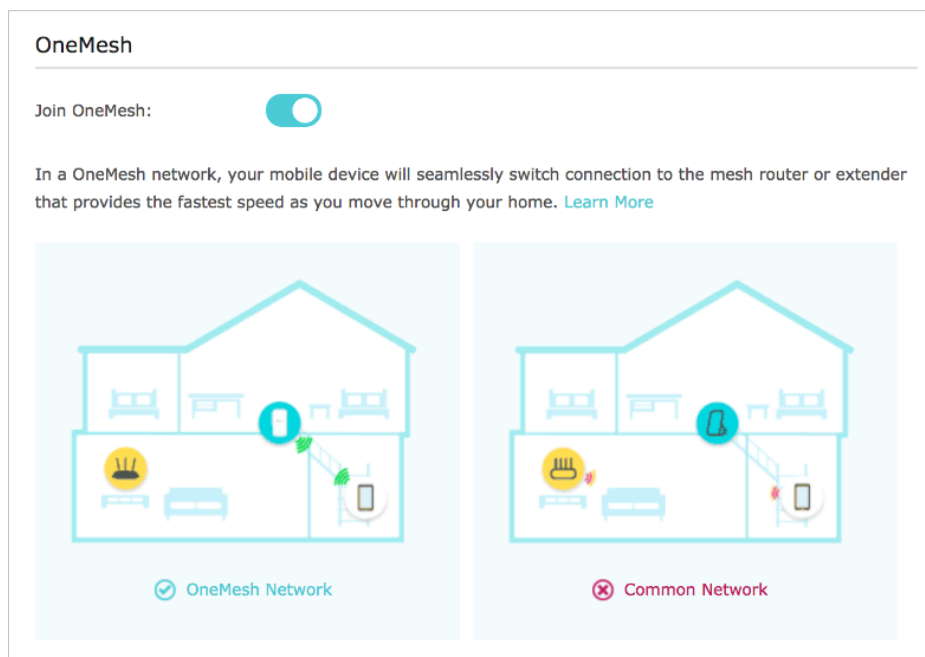

- Follow the web instructions to join the OneMesh network. After that, you can view all the devices in OneMesh network in [Basic > OneMesh](#) on the web management page of your host router.

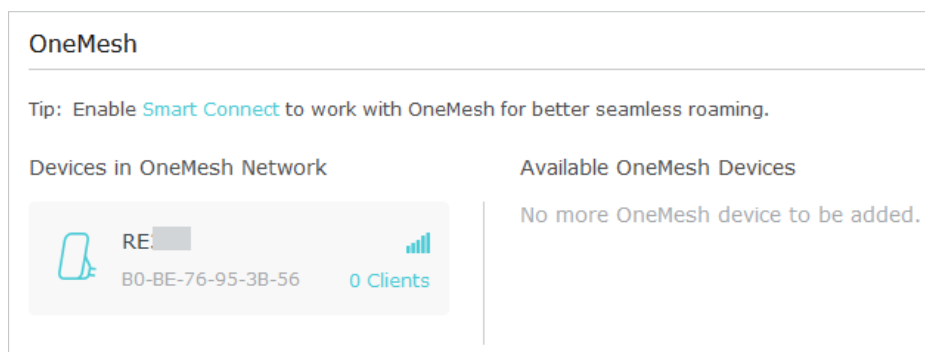


3.3. Remove Extender from OneMesh Network

If you want to remove the extender from the OneMesh network, follow the steps below:

3.3.1. Method 1: Via the TP-Link Tether App

- Launch Tether and select the extender you want to remove from the OneMesh network.
- Go to [Tools > OneMesh](#) and disable [OneMesh](#).

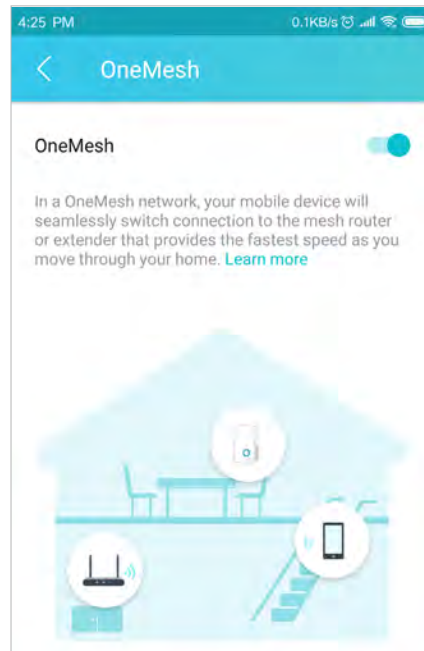


Or

1. Launch Tether and select your host router of the OneMesh network.
2. Go to **Tools > OneMesh** and select the extender you want to remove from the OneMesh network.
3. Click **Remove Device**.



3.3.2. Method 2: Via a Web Browser

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to **Settings > OneMesh** and disable **Join OneMesh**.

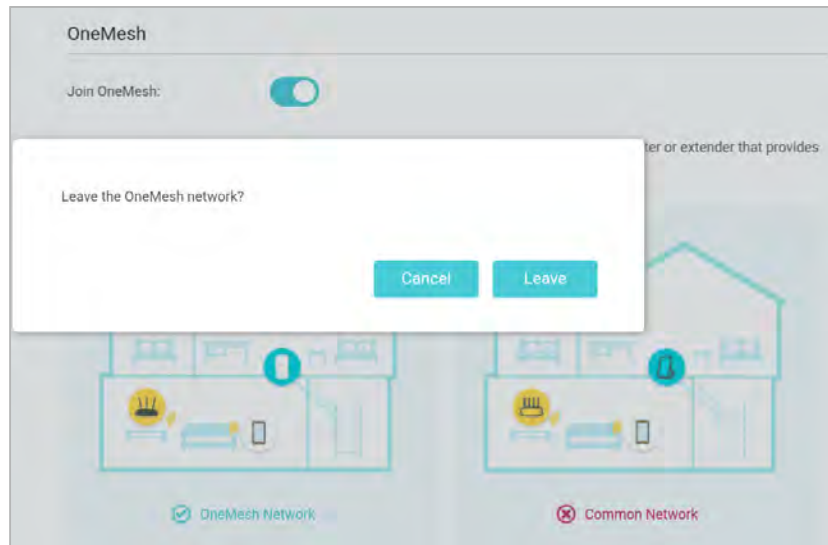

Chapter 4

TP-Link Cloud Service

TP-Link Cloud service provides a better way to manage your cloud devices. Log in to your cloud device with a TP-Link ID, and you can easily monitor and manage your home network when you are out and about via the Tether app on your smartphone or tablet. To ensure that your cloud device stays new and gets better over time, the TP-Link Cloud will notify you when an important firmware upgrade is available. Surely you can also manage multiple TP-Link Cloud devices with a single TP-Link ID.

This chapter introduces how to register a new TP-Link ID, bind or unbind TP-Link IDs to manage your cloud device, and the Tether app with which you can manage your home network no matter where you may find yourself.


It contains the following sections:

- [Register a TP-Link ID](#)
- [Change Your TP-Link ID Information](#)
- [Manage the User TP-Link IDs](#)
- [Manage the Extender via the TP-Link Tether App](#)

4.1. Register a TP-Link ID

When you log in after initial setup, the web page will ask whether you need TP-Link Cloud service. You can also access the TP-Link Cloud settings as follows:

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [TP-Link Cloud](#).
3. Click [Register Now](#) and follow the instructions to register a TP-Link ID.

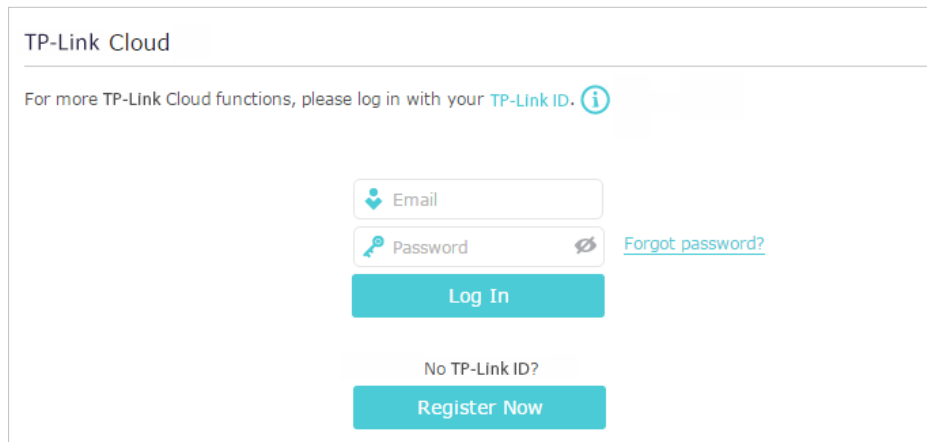

TP-Link Cloud

For more TP-Link Cloud functions, please log in with your TP-Link ID. ⓘ

Email

Password  [Forgot password?](#)

Log In

No TP-Link ID?

Register Now

4. After activating your TP-Link ID, come back to the TP-Link Cloud page to log in. The TP-Link ID used to log in to the extender for the first time will be automatically bound as an [Admin](#).


■ Notes:

- To learn more about the [Admin](#) and [User](#) TP-Link ID, refer to [Manage the User TP-Link IDs](#).
- Once you have registered a TP-Link ID on the web management page, you can only register another TP-Link ID via the Tether APP. Please refer to [Manage the Extender via the TP-Link Tether App](#) to install the app and register a new one.
- If you want to unbind the admin TP-Link ID from your extender, please go to [Settings](#) > [TP-Link Cloud](#), and click [Unbind](#) in the [Device Information](#) section.

4.2. Change Your TP-Link ID Information

Follow the steps below to change your email address and password of your TP-Link ID as needed.


1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
 2. Go to [Settings](#) > [TP-Link Cloud](#), and focus on the [Account Information](#) section.
- **To change your email address:**
 1. Click  behind the Email.
 2. Enter the password of your TP-Link ID, then a new email address. And click [Save](#).

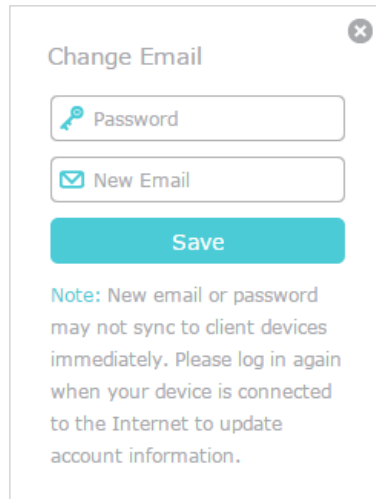

A dialog box titled "Change Email" with a close button (X) in the top right corner. It contains two input fields: "Password" with a key icon and "New Email" with an envelope icon. Below the fields is a teal "Save" button. At the bottom, a note states: "Note: New email or password may not sync to client devices immediately. Please log in again when your device is connected to the Internet to update account information."

- **To change your password:**

1. Click  behind the Password.
2. Enter the current password, then a new password twice. And click [Save](#).

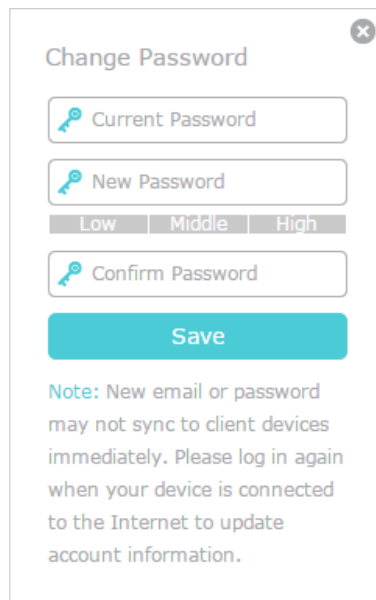

A dialog box titled "Change Password" with a close button (X) in the top right corner. It contains three input fields: "Current Password", "New Password", and "Confirm Password", each with a key icon. Below the "New Password" field are three tabs: "Low", "Middle", and "High". Below the fields is a teal "Save" button. At the bottom, a note states: "Note: New email or password may not sync to client devices immediately. Please log in again when your device is connected to the Internet to update account information."

4.3. Manage the User TP-Link IDs

The TP-Link ID used to log in to the extender for the first time will be automatically bound as the [Admin](#) account. An admin account can add or remove other TP-Link IDs to or from the same extender as [Users](#). All accounts can monitor and manage the extender locally or remotely, but user accounts cannot:

- Reset the extender to its factory default settings either on the web management page or in the Tether app.


- Add/remove other TP-Link IDs to/from the extender.

4.3.1. Add TP-Link ID to Manage the Extender

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
2. Go to **Settings > TP-Link Cloud**, and focus on the **Bound Accounts** section.
3. Click **+ Bind**, enter another TP-Link ID as needed and click **Save**.

Note:

If you need another TP-Link ID, please register a new one via the Tether app. Please refer to [Manage the Extender via the TP-Link Tether App](#) to install the app and register a new TP-Link ID.

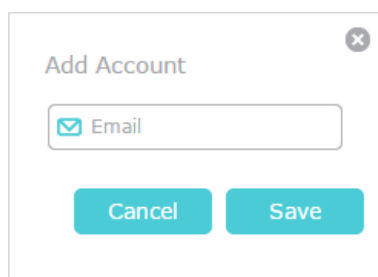

A modal dialog box titled "Add Account" with a close button (X) in the top right corner. It contains a text input field with a checkmark icon and the label "Email". Below the input field are two buttons: "Cancel" and "Save".

4. The new TP-Link ID will be displayed in the Bound Accounts table as a **User**.

Bound Accounts				
+ Bind - Unbind				
☐	ID	Email	Binding Date	Role
☐	1	shangyu_xu@163.com	06/11/2018	Admin
☐	2	shangyufighting@163.com	06/11/2018	User

4.3.2. Remove TP-Link ID(s) from Managing the Extender

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID.
2. Go to **Settings > TP-Link Cloud**, and focus on the **Bound Accounts** section.
3. Tick the checkbox(es) of the TP-Link ID(s) you want to remove and click **Unbind**.

Bound Accounts				
+ Bind - Unbind				
☐	ID	Email	Binding Date	Role
☐	1	shangyu_xu@163.com	06/11/2018	Admin
☒	2	shangyufighting@163.com	06/11/2018	User

4. 4. Manage the Extender via the TP-Link Tether App

The Tether app runs on iOS and Android devices, such as smartphones and tablets.

1. Launch the Apple App Store or Google Play store and search “TP-Link Tether” or simply scan the QR code to download and install the app.



2. Connect your device to the extender's or host router's wireless network.
3. Launch the Tether app, select the model of your extender and log in with your TP-Link ID or the password you set for the extender.
4. Manage your extender as needed.

■ Note:

If you need to remotely access your extender from your smart devices, you need:

- Log in with your TP-Link ID. If you don't have one, refer to [Register a TP-Link ID](#).
- Make sure your smartphone or tablet can access the internet with cellular data or a Wi-Fi network.

Chapter 5

Customize Your Network

This chapter guides you on how to configure network settings that are available for this extender.


It contains the following sections:

- [Check Internet Status](#)
- [Configure Wireless Network](#)
- [Change LAN Settings](#)
- [Adjust Wi-Fi Coverage](#)
- [Set Access Control](#)
- [Set High Speed Mode](#)


5.1. Check Internet Status

You can view the internet status of your extender to check whether you have successfully set up the extended network(s).


1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Status](#) to view the internet status of your extender.
 - The extender runs normally.

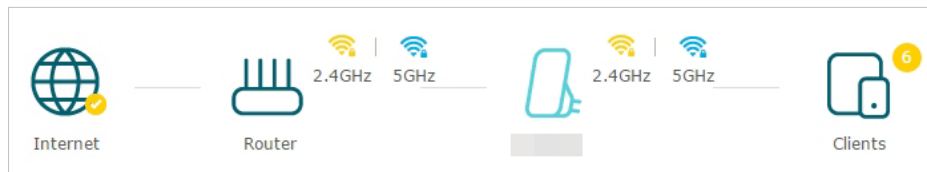


- The extender fails to connect to the host networks. Please go to [Settings](#) > [Wireless](#) > [Connect to Network](#) to check whether the host network passwords are correct. If the problem still exists, relocate the extender closer to the router to achieve better signal quality.

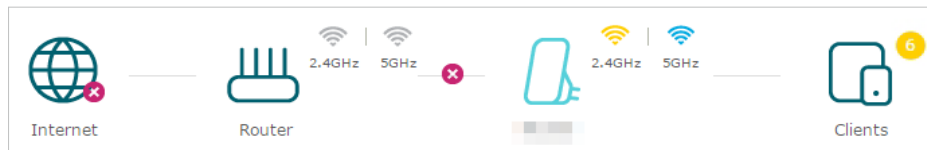

- The extender is connected to the host networks, but is not transmitting data. Please check the internet connection of your router.

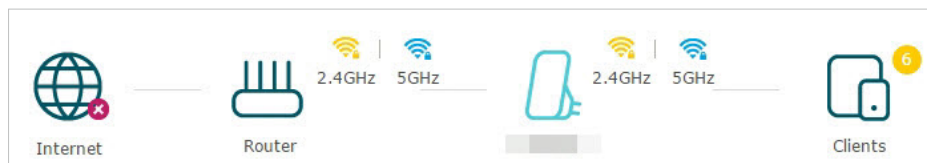

- The extender is connected to the router abnormally. Please go to [Settings](#) > [Network](#) and try setting your extender to obtain an IP address automatically.

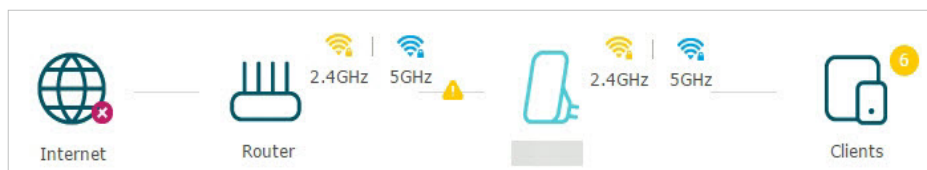

Click the icon of the Internet/Router/Range Extender/Clients to view corresponding information.

5.2. Configure Wireless Network

If you want to extend another host network after Quick Setup, you can refer to this section. Moreover, you can change the wireless settings for your extended networks.

Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.

Note:

Here we take the configuration of the 2.4GHz network as an example. If the 5GHz network is available on your extender, please refer to the instructions to set your 5GHz network.

• **To extend another host network:**

1. Go to [Settings](#) > [Wireless](#) > [Connect to Network](#).
2. Enable [Connect to 2.4GHz Network](#) and click [Wireless Scanner](#) to find all available networks.

Note:

It is unable to change host network settings when the extender is in a OneMesh network.

Connect to Host Network

2.4GHz Network: ☒ [Connect to 2.4GHz Network](#)

[Wireless Scanner](#)

Host 2.4GHz SSID:

Host 2.4GHz Security:

Host 2.4GHz Password:

5GHz Network: ☒ [Connect to 5GHz Network](#)

[Wireless Scanner](#)

Host 5GHz SSID:

Host 5GHz Security:

Host 5GHz Password:

[Save](#)

3. Select the 2.4GHz host network you want to extend.

Note:

If the network you want to extend is on but not listed, please try the following steps.

- Move the extender closer to your router, and click [Rescan](#) in the top-right corner of the list.
- You can manually enter the SSID (network name) and password of the network you want to extend, and click [Save](#).

4. Once a host network is selected, the SSID and security type will be automatically filled in. If the selected network is encrypted, enter the password in the [Password](#) field.
5. Click [Save](#).

- **To enable or disable the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Extended networks are enabled by default. If you want to disable the wireless function of a certain band, just clear the [Enable](#) checkbox. In this case, all the wireless settings of this band will be invalid.
3. Click [Save](#).

- **To change the wireless network name (SSID):**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Create a new SSID in [Extended 2.4GHz SSID](#) or click [Copy Host SSID](#). The value is case-sensitive.
3. Click [Save](#).

■ **Note:**

If you have changed the wireless settings via a wireless device, you will be disconnected after the settings are applied. Please write down the new SSID for future use.

- **To hide the SSID of the extended network:**

1. Go to [Settings](#) > [Wireless](#) > [Extended Network](#).
2. Select [Hide SSID broadcast](#), and the corresponding SSID will not be displayed when wireless devices scan for local wireless networks. You need to manually enter the SSID to join the network.
3. Click [Save](#).

5.3. Change LAN Settings

The extender is preset with a default LAN IP 192.168.0.254, with which you can log in to the web management page. The LAN IP address, together with the Subnet Mask, also defines the subnet that the connected devices are on. If the IP address conflicts with another device on your local network or your network requires a specific IP subnet, you can change it.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Network](#).
3. Select [Use the following IP address](#).

Network Settings

☐ Obtain an IP address automatically

☒ Use the following IP address

IP Address:

192.168.0.254

Subnet Mask:

255.255.255.0

Default Gateway:

192.168.0.254

Primary DNS:

192.168.0.1

Secondary DNS:

8.8.8.8

(Optional)

Save

4. Enter a new [IP Address](#) as needed, and leave the subnet mask as the default settings.
5. Enter the gateway that is in the same subnet as the [IP Address](#). The gateway is usually the LAN IP address of your extender.
6. Leave the primary and secondary DNS addresses as the default settings.
7. Click [Save](#).


5. 4. Adjust Wi-Fi Coverage

You can set the extender's Wi-Fi coverage depending on how large you want your Wi-Fi area to be.

1. Visit <http://tplinkrepeater.net> and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Wi-Fi Coverage](#).
3. Select your desired Wi-Fi coverage level for the extender.

Wi-Fi Coverage

Set the Wi-Fi coverage of your extender as needed.

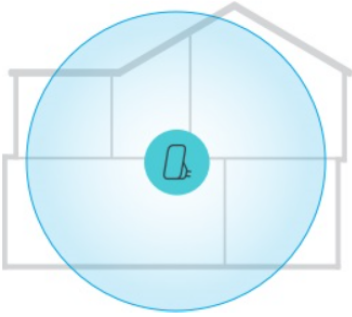

- ☒ **Maximum Coverage**
The extender will provide a long-range Wi-Fi signal but use up more power.
- ☐ **Intermediate Coverage**
The extender will provide a medium-range Wi-Fi signal.
- ☐ **Minimum Coverage**
The extender will provide a short-range Wi-Fi signal and use up less power.

Save

4. Click [Save](#).

5.5. Set Access Control

Access Control allows you to permit or block specific devices from accessing the internet for a specific period.

Note:

Access Control is not available when your range extender is in a OneMesh network, where it automatically synchronizes network settings from your host router.

1. Visit <http://tplinkrepeater.net> and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Access Control](#).
3. Enable [Access Control](#).

Access Control

Access Control: ☒

- **To block specific device(s):**

Note:

Devices connected to the extender via an Ethernet cable cannot be blocked.

1. Select **Blacklist** and click **Save**.

Access Mode

Access Mode: ☒ **Blacklist** ☐ Whitelist

Save

2. Select the device to be blocked in the **Online Devices** table by ticking the corresponding checkbox.
3. Click **Block** and the selected device(s) will be added to the **Devices in Blacklist** table.

Online Devices

[Refresh](#) [Block](#)

☐	ID	Device Name	IP Address	MAC Address	Connection Type	Modify
☐	1		192.168.0.102		Wireless	Block

4. Click [Block](#) in the **Devices in Blacklist** table to set the **Effective Time** for a certain entry as needed.

Device Name:

MAC Address:

Effective Time: ☐ Cannot access at any time

☒ Cannot access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday

☐ Wednesday ☐ Thursday

☐ Friday ☐ Saturday


☐ Sunday

Cancel **OK**

5. Click **OK**.

- To permit specific device(s):

1. Select **Whitelist** and click **Save**.

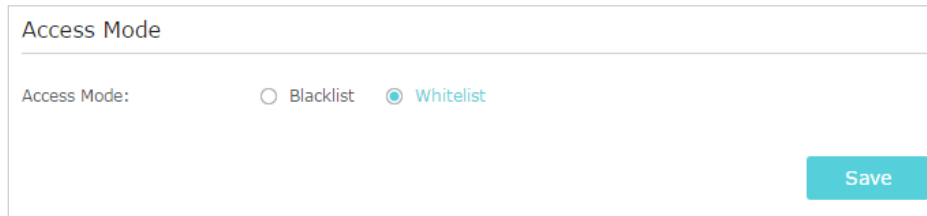


Access Mode

Access Mode: ☐ Blacklist ☒ Whitelist

Save

2. Click [Add](#) in the [Devices in Whitelist](#) table. Enter the [Device Name](#) and [MAC Address](#). And you can set the [Effective Time](#) for a certain entry as needed.

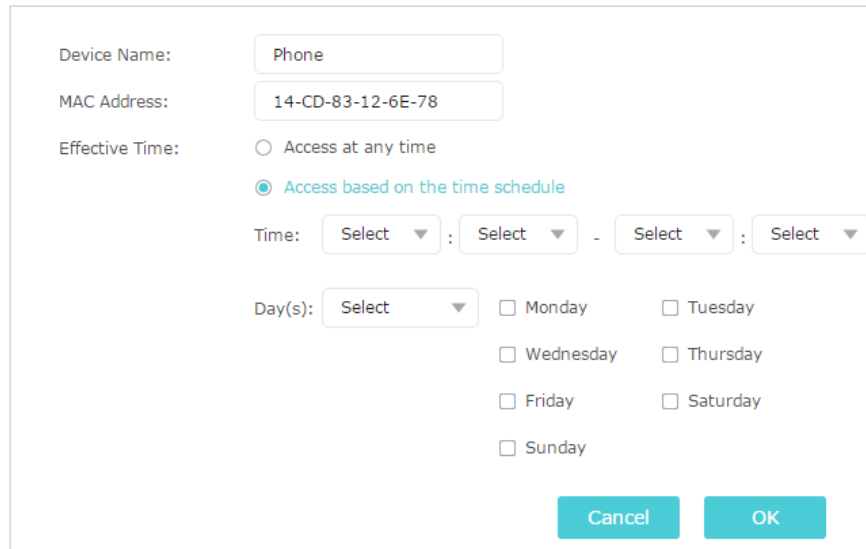

Device Name:

MAC Address:

Effective Time: ☐ Access at any time ☒ Access based on the time schedule

Time: : - :

Day(s): ☐ Monday ☐ Tuesday ☐ Wednesday ☐ Thursday ☐ Friday ☐ Saturday ☐ Sunday

Cancel OK

3. Click [OK](#).

5. 6. Set High Speed Mode

The High Speed feature switches off one of the wireless bands to leave one high-performance, super-fast network, ideal for HD streaming and gaming applications.

If most of your devices are connected to one wireless band, this feature can increase the overall performance of your wireless network.

Note:

Before enabling this feature, please go to [Settings](#) > [Wireless](#) > [Extended Network](#) and check that the 2.4GHz and 5GHz bands are both enabled. Additionally, if you are going to disable the 2.4GHz network, it's recommended to first make sure all your wireless devices support 5GHz network connection.

1. Visit <http://tplinkrepeater.net> and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [High Speed](#).
3. Enable [High Speed Mode](#).
4. Select a high speed mode as needed.

- Select the **Auto** mode. The extender will decide which band the high-speed network will work on based on its wireless connection to your host router. The other band will be disabled.

High Speed

High Speed Mode: ☒ Enable
☒ Auto

Note: With High Speed enabled, the 2.4GHz band of extender will be switched off.



Router 5GHz Range Extender 2.4GHz Clients

☐ Manual

Save

- Select the **Manual** mode and choose to transmit 2.4GHz band or 5GHz band only.

☒ Manual

☐ Transmit only the 2.4GHz band.



Router 5GHz Range Extender 2.4GHz Clients

☒ Transmit only the 5GHz band.



Router 2.4GHz Range Extender 5GHz Clients

Save

5. Click **Save**.

Chapter 6

More Features of Your Extender

This chapter explains how to use the extender as a wireless adapter and as an access point .

It contains the following sections:

- [Use Your Extender as a Wireless Adapter](#)
- [Transform Your Existing Wired Network to a Wireless One](#)

6.1. Use Your Extender as a Wireless Adapter


The extender can be used as a wireless adapter to connect any wired-only device, such as a Blu-ray player, game console, DVR, or smart TV, to your wireless network.

After configuration, you can connect an Ethernet-enabled device to the extender via an Ethernet cable.

Note:

Extenders that have no Ethernet port do not support this feature.

Ethernet Connection

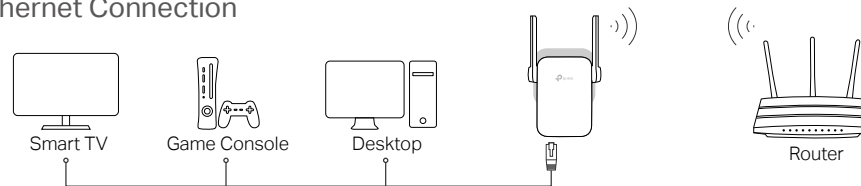

6.2. Transform Your Existing Wired Network to a Wireless One

The extender can work as an access point, transforming your existing wired network to a wireless one.

6.2.1. To Set Up the Extender as an Access Point

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Click **Mode** in the top right corner of the page. Select **Access Point** and click **Save**. The extender will reboot and switch to Access Point mode.

Mode Selection

☒ **Access Point**
Transforms your existing wired network to a wireless network.

☐ **Repeater**
Extends your existing wireless coverage by repeating the wireless signal.

CancelSave

3. After rebooting, connect the extender to your modem or wired router via an Ethernet cable.

4. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
5. Go to **Quick Setup** to configure your extender.
 - 1) Select your time zone, and click **Next**.

Select your Time Zone.

Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels ▼

Exit Next

- 2) Configure your wireless settings and click **Next**.

Wireless 2.4GHz: ☒ **Extend network on 2.4GHz**

Extended 2.4GHz SSID: TP-Link_0969 ☐ Hide SSID broadcast

Extended 2.4GHz Password: 123456789

Wireless 5GHz: ☒ **Extend network on 5GHz**

Extended 5GHz SSID: TP-Link_0969_5G ☐ Hide SSID broadcast

Extended 5GHz Password: 123456789

Exit Next

- 3) Confirm the information and click **Finish**. Now, you can enjoy Wi-Fi.

2.4GHz Extended Network		5GHz Extended Network	
Extend network on 2.4GHz:	On	Extend network on 5GHz:	On
Extended 2.4GHz SSID:	TP-Link_0969	Extended 5GHz SSID:	TP-Link_0969_5G
Hide SSID:	Off	Hide SSID:	Off
Extended 2.4GHz Password:	123456789	Extended 5GHz Password:	123456789


Back Finish

6.2.2. To Connect Your Wireless Devices to the Extender via WPS

Wi-Fi Protected Setup (WPS) provides an easier way to set up a secure Wi-Fi connection.

Wireless devices that support WPS, including Android phones, tablets, and most USB network cards, can be connected to your extender through this method (not supported by iOS devices).


1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [WPS](#).
3. Enable [WPS](#).

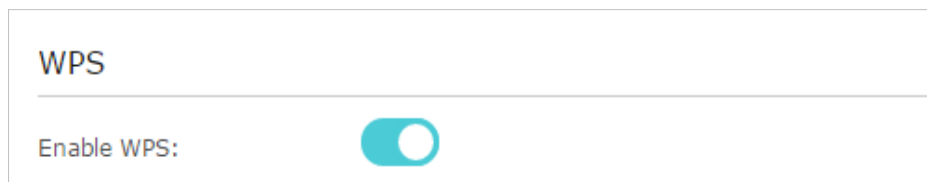

The screenshot shows the 'WPS' settings page. At the top, the title 'WPS' is displayed. Below it, there is a section labeled 'Enable WPS:' followed by a teal toggle switch that is currently turned on.


4. Connect via WPS:

- **AP's PIN:** Enable [AP's PIN](#) and enter the PIN on your device. You can click [Generate](#) to get a new PIN or click [Default](#) to restore the PIN to its factory one.

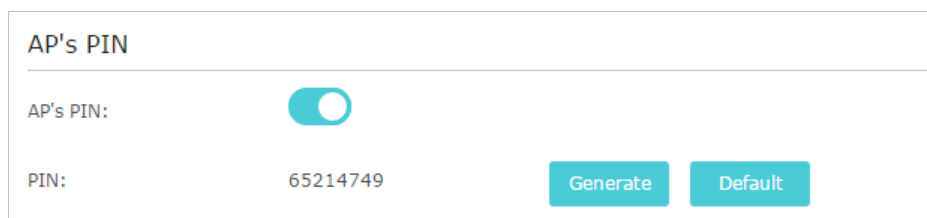


The screenshot shows the 'AP's PIN' settings page. At the top, the title 'AP's PIN' is displayed. Below it, there is a section labeled 'AP's PIN:' followed by a teal toggle switch that is currently turned on. Below this, the current PIN is displayed as '65214749'. To the right of the PIN, there are two buttons: 'Generate' and 'Default'.

- **Push Button (Recommended):** Click [Connect](#) and push the WPS button on the client device.

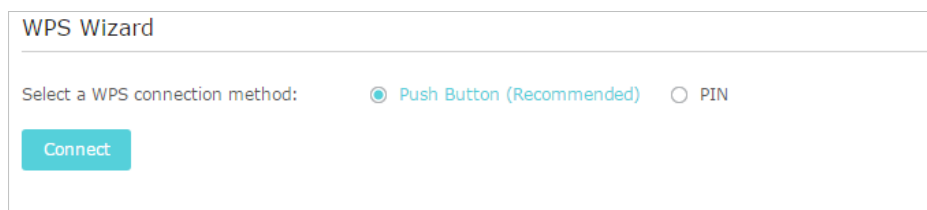

The screenshot shows the 'WPS Wizard' interface. At the top, the title 'WPS Wizard' is displayed. Below it, there is a section labeled 'Select a WPS connection method:'. There are two radio buttons: 'Push Button (Recommended)' which is selected, and 'PIN'. Below the radio buttons, there is a teal button labeled 'Connect'.

- **PIN code:** Enter the client's PIN, and click [Connect](#).

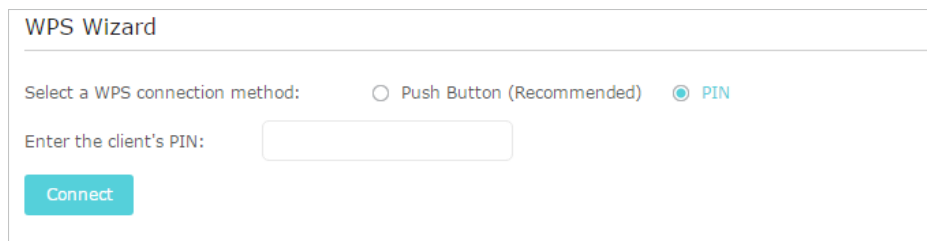

The screenshot shows the 'WPS Wizard' interface. At the top, the title 'WPS Wizard' is displayed. Below it, there is a section labeled 'Select a WPS connection method:'. There are two radio buttons: 'Push Button (Recommended)' and 'PIN' which is selected. Below the radio buttons, there is a text input field labeled 'Enter the client's PIN:'. Below the input field, there is a teal button labeled 'Connect'.

Chapter 7

Manage Your Extender

This chapter presents how to manage and maintain your extender.

It includes the following sections:

- [Set System Time](#)
- [Control LEDs](#)
- [Set Power Schedule](#)
- [Upgrade the Firmware](#)
- [Backup and Restore Configuration Settings](#)
- [Change Login Password](#)
- [Check System Log](#)


7.1. Set System Time

The System Time of the extender will be used for time-based function such as the Power Schedule function. If you have enabled the Daylight Saving Time feature, the system time will be synchronized with the daylight saving time you configure.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Time Settings](#).

- **To get system time:**

1. Select your local [Time Zone](#) from the drop-down list.

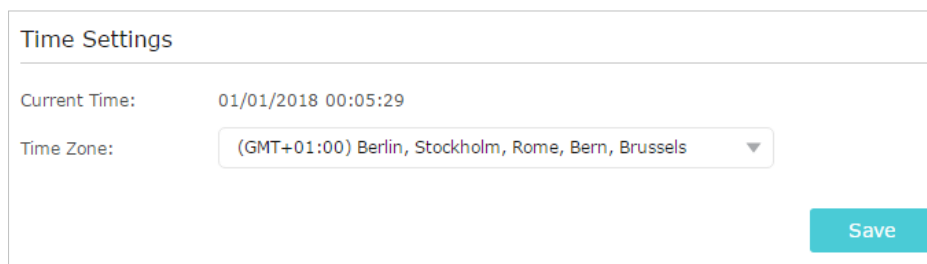

Time Settings

Current Time: 01/01/2018 00:05:29


Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels ▼

Save

2. Click [Save](#).

- **To set up Daylight Saving Time:**

1. Select [Enable Daylight Saving Time](#).

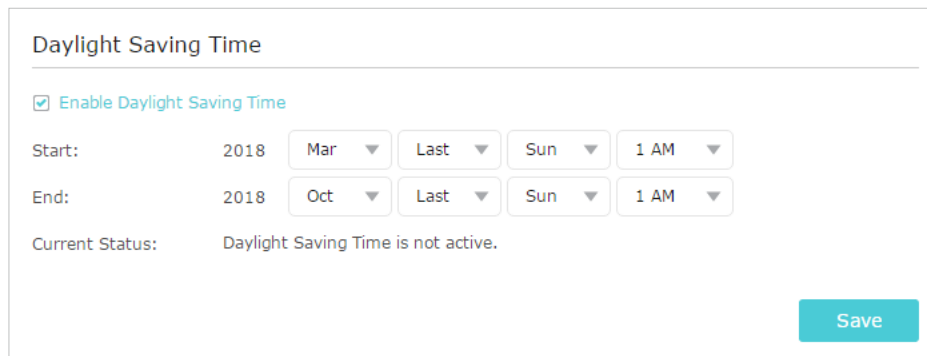

Daylight Saving Time

☒ Enable Daylight Saving Time

Start: 2018 Mar ▼ Last ▼ Sun ▼ 1 AM ▼

End: 2018 Oct ▼ Last ▼ Sun ▼ 1 AM ▼

Current Status: Daylight Saving Time is not active.

Save

2. Select the [Start](#) and [End](#) date and time of the daylight saving time at your local time zone.
3. Click [Save](#).


7.2. Control LEDs

The LEDs of the extender indicate its activities and status. You can turn off LEDs when you don't need them.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [LED Control](#).

- To turn off the LEDs:

Disable [LED Status](#).

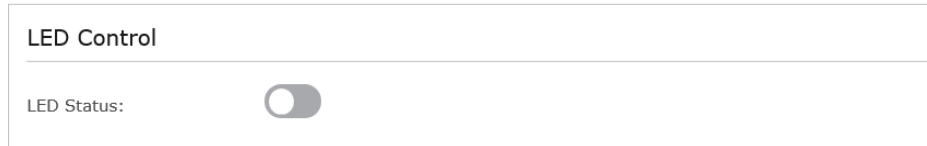

LED Control

LED Status: ☐

- To specify a time period when LEDs are off:


1. Select [Night Mode](#).
2. Specify the LED off time period.

■ Note:

The effective LED off time is based on the time of the extender. You can go to [Settings](#) > [System Tools](#) > [Time Settings](#) to modify the time.

3. modify the time.

4. Click [Save](#).

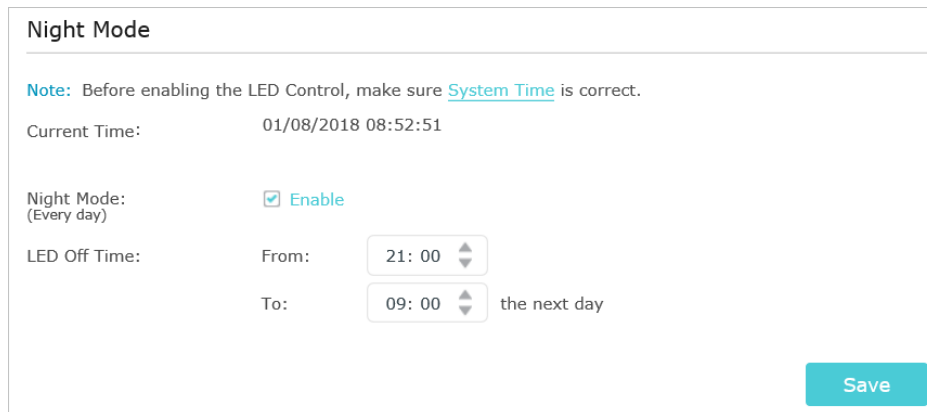

Night Mode

Note: Before enabling the LED Control, make sure [System Time](#) is correct.

Current Time: 01/08/2018 08:52:51

Night Mode: (Every day) ☒ [Enable](#)

LED Off Time:

From: 21:00

To: 09:00 the next day

[Save](#)

7.3. Set Power Schedule

The Power Schedule feature allows you to specify a time period during which the extender is off.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [Advanced Settings](#) > [Power Schedule](#).

- To specify a time period when the extender is off:

1. Click [Add](#).

2. Specify the power off time period and repetitive days.

Note:

The effective power off time is based on the time of the extender. You can go to [Settings > System Tools > Time Settings](#) to modify the time.

Power Schedule

Note: Before enabling Power Schedule, please make sure the [System Time](#) is correct.

Current Time: 01/08/2018 07:59:11

+ Add
 - Delete

☐	ID	Power Off Time	Repeat	Status	Modify
☐	--	--	--	--	--

Power Off Time

From: 21 : 00

To: 09 : 00 (the next day)

Repeat:
 Mon
Tue
Wed
Thu
Fri
Sat
Sun

Cancel
Save

3. Click [Save](#).

7.4. Upgrade the Firmware


TP-Link is committed to improving product features, giving you a better network experience. You can download the latest firmware file from the [Support](#) page at our website www.tp-link.com and upgrade the extender to the latest firmware version.

Note:

- Make sure the latest firmware file is matched with the hardware version (as shown in the download section of the Support page).
- Make sure that you have a stable connection between the extender and your computer. It is NOT recommended to upgrade the firmware wirelessly.
- Backup your extender configuration.
- Do NOT power off the extender during the firmware upgrade.

7.4.1. Online Upgrade

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings > System Tools > Firmware Upgrade](#).
3. Click [Check for upgrade](#) and follow the web instructions to upgrade online.

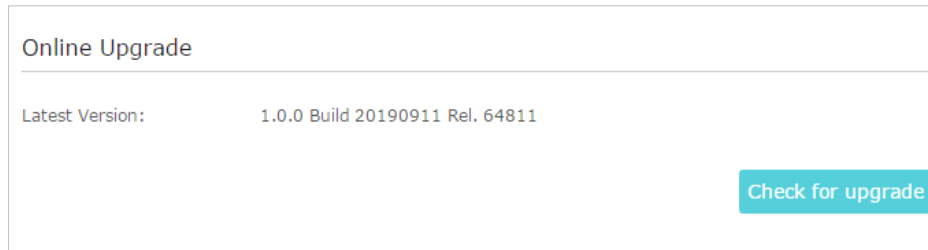


Online Upgrade

Latest Version: 1.0.0 Build 20190911 Rel. 64811

Check for upgrade

7.4.2. Local Upgrade

1. Download the latest firmware file for the extender from our website www.tp-link.com.
2. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
3. Go to **Settings > System Tools > Firmware Upgrade**.
4. Click **Browse** to locate the downloaded new firmware file, and then click **Upgrade**.

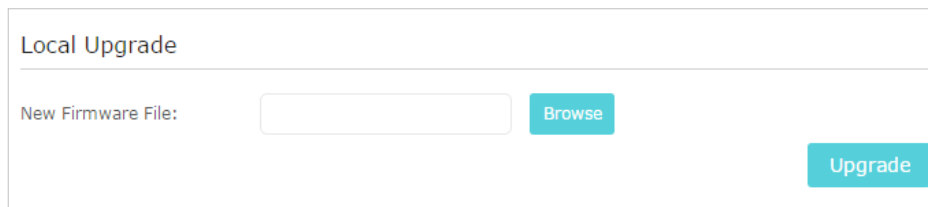

Local Upgrade

New Firmware File: Browse

Upgrade

5. Wait a few minutes for the firmware upgrade to complete and the extender to reboot.


7.5. Backup and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can backup the configuration file and restore the extender to the previous settings from the backup file when needed. Moreover, if necessary, you can erase the current settings and reset the extender to the default factory settings.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to **Settings > System Tools > Backup & Restore**.

- **To backup configuration settings:**


Click **Backup** to save a copy of the current settings to your local computer. A '.bin' file of the current settings will be stored on your computer.

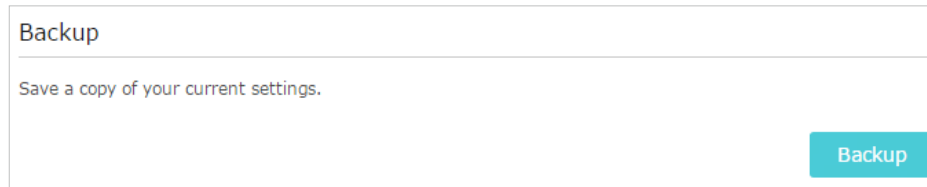

The screenshot shows a web interface for the 'Backup' function. At the top, the word 'Backup' is displayed in a header. Below it, the instruction 'Save a copy of your current settings.' is shown. In the bottom right corner, there is a teal button labeled 'Backup'.

- **To restore previous settings from a saved file:**

1. Click [Browse](#) to locate the backup configuration file stored on your computer, and click [Restore](#).

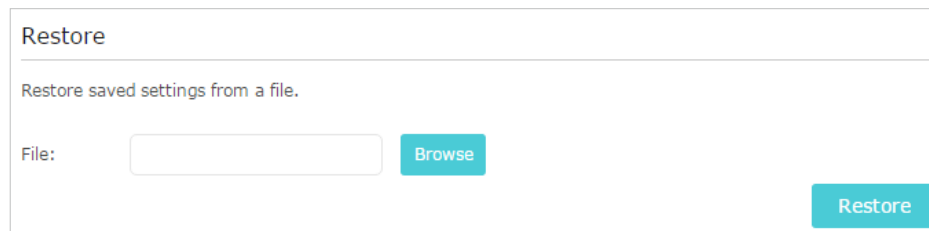

The screenshot shows a web interface for the 'Restore' function. The header is 'Restore'. Below it, the instruction 'Restore saved settings from a file.' is shown. There is a 'File:' label followed by a text input field and a teal 'Browse' button. In the bottom right corner, there is a teal button labeled 'Restore'.


2. Wait a few minutes for the restore and reboot.

■ **Note:** During the restore process, do not power off or reset the extender.

- **To restore configuration settings**

In [Factory Default Restore](#), click [Restore](#) to restore all configuration settings to default values, except your login and cloud account information.


■ **Note:** During the restore process, do not power off or reset the extender.

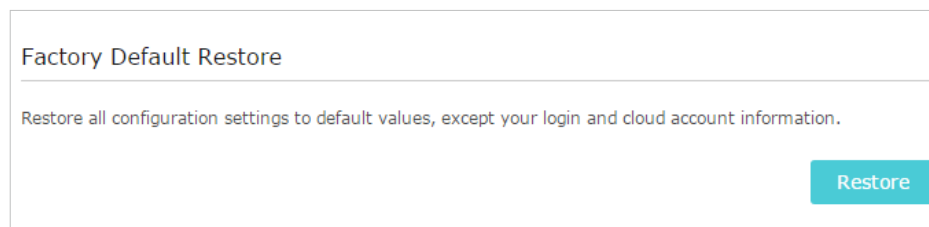

The screenshot shows a web interface for the 'Factory Default Restore' function. The header is 'Factory Default Restore'. Below it, the instruction 'Restore all configuration settings to default values, except your login and cloud account information.' is shown. In the bottom right corner, there is a teal button labeled 'Restore'.

- **To reset the extender to factory default settings:**

1. Click [Factory Restore](#) to reset the extender.

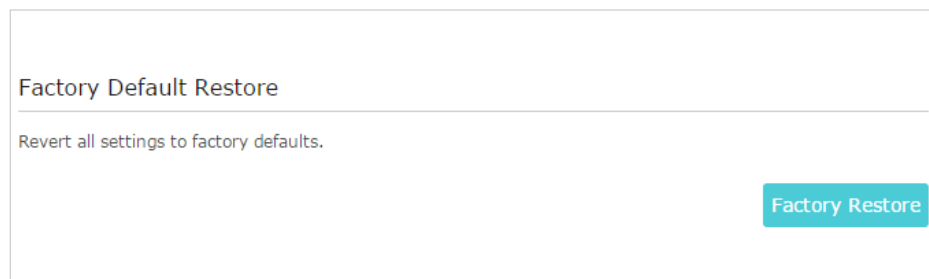

The screenshot shows a web interface for the 'Factory Default Restore' function. The header is 'Factory Default Restore'. Below it, the instruction 'Revert all settings to factory defaults.' is shown. In the bottom right corner, there is a teal button labeled 'Factory Restore'.

2. Wait a few minutes for the reset and reboot.

■ **Note:**


1. During the reset process, do not power off or reset the extender.

2. We strongly recommend you backup the current configuration settings before resetting the extender.

7.6. Change Login Password

The account management feature allows you to change your login username and password of the web management webpage.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [Admin Account](#).
3. Enter the old password. Then enter the new password twice (case-sensitive) and click [Save](#).

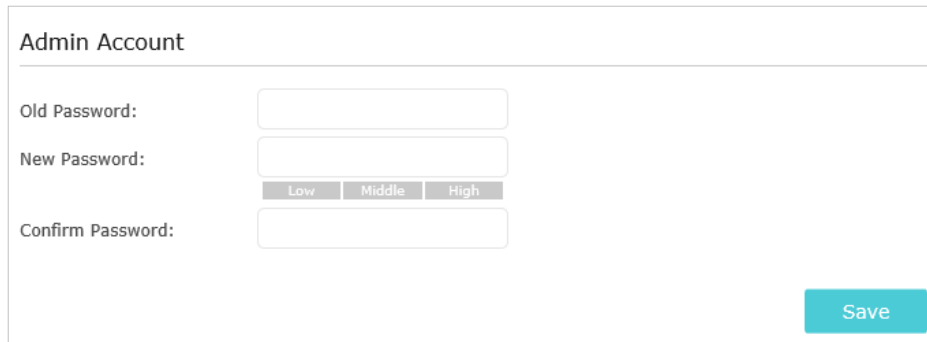

The screenshot shows the 'Admin Account' settings page. It has a title bar 'Admin Account' with a horizontal line below it. There are three password input fields: 'Old Password:', 'New Password:', and 'Confirm Password:'. The 'New Password:' field has a strength indicator below it with three buttons: 'Low', 'Middle', and 'High'. A 'Save' button is located at the bottom right of the form.

4. Use the new password for future logins.

7.7. Check System Log

If the extender is not working properly, you can save the system log and send it to our technical support team.

1. Visit <http://tplinkrepeater.net>, and log in with your TP-Link ID or the password you set for the extender.
2. Go to [Settings](#) > [System Tools](#) > [System Log](#).
 - **To save the system log locally:**
 1. Choose the type and level of the system log as needed.
 2. Click [Save Log](#) to save the system logs to a local disk.

System Log

Log Filter: Type =

ALL

 Level =

ALL

Refresh

Delete All

ID	Time	Type	Level	Content
5	0 days 00:10:59	DHCPC	ERROR	DHCP detection failed.
4	0 days 00:10:56	DHCPC	INFO	Sent a detection for DHCP.
3	0 days 00:10:53	DHCPC	INFO	Sent a detection for DHCP.
2	0 days 00:10:50	DHCPC	INFO	Sent a detection for DHCP.
1	0 days 00:10:47	OTHERS	INFO	User cleared up all the logs.

Save Log

FAQ

Q1. How to reset the extender to its factory default settings?

- With the extender powered on, use a pin to press the [RESET](#) button for 1 second. The extender will reboot.
- Log in to the extender's web management page. Go to [System Tools](#) > [Backup & Restore](#) and click [Factory Restore](#).

Q2. What should I do if I forget my login password?

- If you are using a TP-Link ID to log in, or you have enabled the Password Recovery feature of the extender, click [Forgot Password?](#) on the login page and then follow the instructions to reset it.
- Refer to FAQ > Q1 to reset the extender, and then visit <http://tplinkrepeater.net> to create a new login password.

■ **Note:** The extender must be reconfigured after a reset to access the internet. Please note down your login password for future logins.

Q3. What should I do if I forget my wireless password?

In Range Extender mode, the extender shares the same wireless passwords as those of your host networks.

In Access Point mode, please connect your computer to the extender using an Ethernet cable and follow the steps below:

1. Visit <http://tplinkrepeater.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [Wireless](#) > [Wireless Settings](#) to retrieve or reset your wireless password.

Q4. What should I do if I can't access the web management page?

This can happen for a variety of reasons. Please try the methods below to log in again.

- If your computer is wirelessly connected, make sure that you have connected to the extender's SSID.
- If your computer is connected via an Ethernet cable, please make sure that the connection is stable.
- Make sure your computer is configured as [Obtain an IP address automatically](#) and [Obtain DNS server address automatically](#).
- Verify that <http://tplinkrepeater.net> is correctly entered in the web browser and press [Enter](#).

- Use the IP address to access the extender. The default IP is [192.168.0.254](#). If the extender is connected to the router, you should go to your router's DHCP client list to obtain the extender's current IP address.
- Reset the extender and try again.

Q5. I have enabled wireless MAC filter, wireless access control, or access control list (ACL) on my router. What should I do before configuring the extender?

When a device connects through the extender to your router, the MAC address of the device shown on the router is translated to another MAC address. If your router's MAC filter, wireless access control, or ACL is enabled, the devices connected to the extender cannot get an IP address from the extender and cannot access the Internet.

To solve this problem, please follow the steps below:

1. Log in to your router and disable the MAC filter, wireless access control or ACL.

 **Note:** For more information about how to disable your router's MAC filter, wireless access control or ACL, please refer to your router's user guide.

2. Power on your extender, and run the [Quick Setup](#) to configure your extender.
3. Connect all of your devices to the extended network, and make sure the router's Link LED remains lit.
4. On your router, add all the Online Devices' MAC addresses to your router's MAC filter table.
5. Enable the router's MAC filter, wireless access control, or ACL to complete the configuration.

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2019 TP-Link Technologies Co., Ltd. All rights reserved.

FCC compliance information statement



Product Name: Wi-Fi Range Extender

Model Number: RE205/RE305

Responsible Party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

This device is restricted in indoor environment only.

We, TP-Link USA Corporation, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 19/10/31

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY (the maximum transmitted power)

2400 MHz -2483.5 MHz (20dBm)

5150 MHz -5250 MHz (23dBm)

5250 MHz -5350 MHz (23dBm)

5470 MHz -5725 MHz (30dBm for RE205, 23dBm for RE305)

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU) 2015/863.

The original EU declaration of conformity may be found at <http://www.tp-link.com/en/ce>

RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

Attention: This device may only be used indoors in all EU member states and EFTA countries.

	AT	BE	BG	CH	CY	CZ	DE	DK
	EE	EL	ES	FI	FR	HR	HU	IE
	IS	IT	LI	LT	LU	LV	MT	NL
	NO	PL	PT	RO	SE	SI	SK	UK

Canadian Compliance Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution:

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

The high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

DFS (Dynamic Frequency Selection) products that operate in the bands 5250- 5350 MHz, 5470-5600MHz, and 5650-5725MHz.

Avertissement:

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

En outre, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

Les produits utilisant la technique d'atténuation DFS (sélection dynamique des fréquences) sur les bandes 5250- 5350 MHz, 5470-5600MHz et 5650-5725MHz.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

Korea Warning Statements

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

4.7.9.1應避免影響附近雷達系統之操作。

4.7.9.2高增益指向性天線只得應用於固定式點對點系統。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	—	○	○	○	○	○
備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 系指限用物質之百分比含量超出百分比含量基準值。						
備考2. "○"系指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. " — " 系指該項限用物質為排除項目。						



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Explanations of the symbols on the product label

Symbol	Explanation
	Class II equipment
	AC voltage
	Indoor use only
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/ EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Protection earth