



300Mbps Wireless N Router

TL-WR845N

Highlights

- 300Mbps wireless speed ideal for interruption sensitive applications like HD video streaming
- · Three antennas greatly increase the wireless robustness and stability
- · Easy wireless security encryption at a push of WPS button
- IP based bandwidth control allows administrators to determine how much bandwidth is allotted to each PC
- · Compatible with IPv6 -the more recent Internet Protocol version
- IP based bandwidth control allows administrators to determine how much bandwidth is allotted to each PC
- TP-LINK Tether App allows quick installation and easy management using any mobile device



300Mbps 2.4GHz



Maximum Range





WDS



Guest



arental



TP-LINK Tether App

Quick Installation Guide


300Mbps Wireless N Router

TL-WR845N

7106505851 REV1.0

Connect the Hardware

If your Internet connection is through an Ethernet cable from the wall instead of through a DSL / Cable / Satellite modem, connect the Ethernet cable directly to the router's WAN port, then follow steps 4 and 5 to complete the hardware connection.

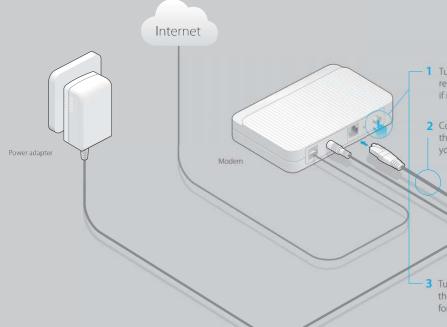

 Turn off the modem and remove the backup battery if it has one. 4 Turn on the router.

Power adapter

2 Connect an Ethernet cable from the modem to the WAN port on your router.


3 Turn on the modem and then wait about 2 minutes for it to restart. 5 Verify that the hardware connection is correct by checking these LEDs.







Note: If the WLAN LED is not on, please press the Wi-Fi/WPS Button on the back panel for more than 2 seconds and check the LEDs again in a few seconds later.

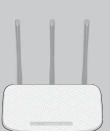

Configure the Router

1. Connect your computer to the router (Wired or Wireless)

Wired

Turn off Wi-Fi on your computer and connect the devices as shown below.



Wireless

Connect wirelessly by using the SSID (Network Name) and Wireless Password/PIN printed on the product label at the bottom of the router.



You can also connect by pressing the WPS button. For more information about WPS, refer to the User Guide at www.tp-link.com.

2. Configure the router using a web browser

A Enter http://tplinkwifi.net or http://192.168.0.1 in the address bar of the web browser. Enter admin for both username and password, and then click Login.

Note: If the login window does not appear, please refer to FAQ > Q1.

http://tplinkwifi.net	,0 → →
admin admin Login	

B Click Quick Setup on the left menu, and click Next. Select your WAN Connection Type. If you are unsure of your connection type, select Auto-Dectect. Click Next and follow the onscreen instructions.


Quick	Setup - WAN Connection Type
0	Auto-Detect Dynamic IP (Most Common Cases) Static IP PPPOE/Russian PPPOE LZTP/Russian LZTP PPTP/Russian PPTP
	ote: For users in some areas (such as Russia, Ukraine etc.), please contact your ISP to choose nnection type manually. Back Nex

 Either use the default or customize your wireless settings, select your region and click Next.

Note: If you change the default SSID and password, write down the new wireless settings.



D Click Finish to complete the Quick Setup.

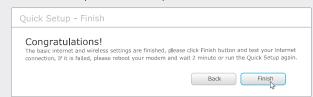


LED & Button Explanation


LED/Button	Status	Indication	
() (Power)	On	System initialization complete.	
	Flashing	System initializing or firmware upgrading is in process. Do not disconnect or power off the router.	
	Off	Power is off.	
(Wireless)	On	The wireless is working properly.	
	Off	The wireless is disabled.	
☐ (Ethernet)	On	The Ethernet port is connected.	
	Off	The Ethernet port is disconnected.	
(Internet)	Blue On	Internet is available.	
	Orange On	The router's Internet port is connected, but the Internet is not available.	
	Off	The router's Internet port is not connected.	
(WPS)	On/Off	Turns On when a WPS synchronization is established and automatically turns Off about 5 minutes later.	
	Flashing	A wireless device is trying to connect to the network via WPS. This process may take up to 2 minutes.	
	Press this Wi-Fi/WPS button for more than 2 seconds to turn on or off the wireless function of your router.		
Wi-Fi/WPS Button	the WPS butt	Press this Wi-Fi/WPS button less than 2 seconds, and immediately press the WPS button on your client device. The WPS LED of the router should change from flashing to solid on, indicating successful WPS connection.	
Reset Button	Press this Reset button for more than 5 seconds, And then release the button and wait the router to reboot to its factory default settings.		

Configure via Tether App

TP-LINK Tether app lets you conveniently access the router and:

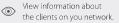

Block network access from specific users or devices.

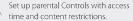

Change the basic wireless network settings.

How to begin?

1. Download the TP-LINK Tether app from the Apple App Store or Google Play

- 2. Ensure your device is wirelessly connected to the router.
- 3. Launch the Tether app and start managing your router.



FAQ (Frequently Asked Questions)

Q1. What can I do if the login window does not appear?

- If the computer is set to a static or fixed IP address, change the settings to obtain an IP address automatically.
- Verify if http://tplinkwifi.net or http://192.168.0.1 is correctly entered in the web browser. Alternatively, enter http://192.168.1.1 in the web browser and press Enter.
- · Use another web browser and try again.
- · Reboot your router and try again.
- Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

- Check if the Internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, contact your Internet Service Provider.
- Open a web browser, enter http://tplinkwifi.net or http://192.168.0.1 and run the setup again.
- · Reboot your router and try again.

Note: For cable modern users, reboot the modern first. If the problem still exists, log in to the Web Management page of the router, and go to **Network > MAC Clone**, click **Clone MAC Address** and then click **Save**.

Q3. How do I restore the router to its factory default settings?

- While the router is powered on, press and hold the **Reset** button on the rear panel of the router for approximately 5 seconds.
- Log in to the Web Management page of the router, and go to System Tools > Factory
 Defaults, click Restore, and then wait until the p rogress bar is finished.

Q4. What can I do if I forget my web management page password?

 Refer to FAQ > Q3 to reset the router, and then use the default admin (all ilowercase) for both username and password to log in.

Q5. What can I do if I forget my wireless network password?

- If you have not changed the default Wireless Password, it can be found on the product label of the router.
- If you have changed your password, log in to the router's Web Management page, go
 to Wireless > Wireless Security to obtain or reset your password.

Note: If your questions are not answered here, please refer to http://www.tp-link.com/en/support/faq and click Contact Technical Support for further assistance.

Specifications

Hardware

• External Power Supply: 9VDC / 0.6A


· Antenna: 3*4dBi Fixed Omni Directional Antenna

• Dimensions (W x D x H): 9.1x 5.7 x 1.24n. (230 x 144 x 35mm)

• Interface: 4 10/100Mbps LAN Ports, 1 10/100Mbps WAN Port

· Button: Wi-Fi/WPS Button Power On/Off Button

· Wireless Standards: IEEE 802.11n, IEEE 802.11g, IEEE 802.11b

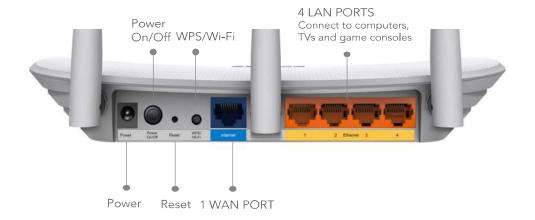

Wireless

• **Frequency:** 2.4-2.4835GHz

· Signal Rate: 11n: Up to 300Mbps(dynamic)

11g: Up to 54 Mbps(dynamic)

11b: Up to 11Mbps(dynamic)

• Transmit Power: CE: <20dBm

FCC:<30dBm

• Reception Sensitivity: 270M: -70dBm@10% PER

130M: -74dBm@10% PER

108M: -74dBm@10% PER

54M: -77dBm@10% PER

11M: -87dBm@8% PER

6M: -90dBm@10% PER

1M: -98dBm@8% PER

· Wireless Function: Enable/Disable Wireless Radio, WDS Bridge, WMM,

Wireless Statistics

Wireless Security: 64/128/152-bit WEP / WPA / WPA2, WPA-PSK /

WPA2-PSK

• Wireless Security: 64/128/152-bit WEP, WPA / WPA2, WPA-PSK / WPA2-PSK

Specifications

Software

- · Quality of Service: WMM, Bandwidth Control
- WAN Type: Dynamic IP/Static IP/PPPoE/PPTP/L2TP/BigPond
- · Management: Access Control, Local Management, Remote Management
- · DHCP: Server, Client, DHCP Client List, Address Reservation
- Port Forwarding: Virtual Server, Port Triggering, UPnP, DMZ
- · Dynamic DNS: DynDns, Comexe, NO-IP
- · VPN Pass-Through: PPTP, L2TP, IPSec (ESP Head)
- Access Control: Parental Control, Local Management Control, Host List, Access Scheule, Rule Management
- Firewall Security: DoS, SPI Firewall, IP Address Filter/MAC Address Filter/Domain Filter, IP and MAC Address Binding
- · Protocols: Support IPv4 and IPv6
- · Guest Network: 2.4GHz Guest Network x1

Others

Certification: CE, FCC, RoHS

Package Contents: Wireless N Rotuer TL-WR845N, Power supply unit,

Ethernet Cable, Quick Installation Guide

System Requirements: Microsoft® Windows® XP/Vista/7/8/8.1/10, MAC®

OS, NetWare®, UNIX® or Linux

Environment:

· Operating Temperature: 0° C ~40 $^{\circ}$ C (32 $^{\circ}$ F ~104 $^{\circ}$ F)

· Storage Temperature: -40°C ~70°C (-40°F ~158°F)

· Operating Humidity: 10%~90% non-condensing

· Storage Humidity: 5%~90% non-condensing