



Quick Installation Guide



TEW-656BRG

1.01

# **Table of Contents**

English	1
1. Before You Start	1
Hardware Installation	3
3. Configure the TEW-656BRG	4
4. LEDs	8
Troubleshooting	9
Wireless Tips	11



# **Package Contents**

- TEW-656BRG
- CD-ROM (User's Guide)
- Multi-Language Quick Installation Guide
- USB Power Cable
- Power Adapter (5V DC, 1.2A)
- Carrying Case

 
# **System Requirements**

- A computer with a wireless network adapter properly installed
- Web Browser: Internet Explorer (6.0 or above)
- Valid and activated 3G Internet Service
- 3G USB Adapter\*
- \* For a list of compatible 3G USB Adapters, please go to <a href="http://www.trendnet.com/products/TEW-656BRG">http://www.trendnet.com/products/TEW-656BRG</a>.

## Collect Internet Service Provider (ISP) Information

During the installation of the TEW-656BRG, the Setup Wizard will automatically detect your ISP connection type. If the router cannot detect your ISP connection type, you can manually specify the connection type. Please contact your ISP and ensure you have all the information for one of the following connection types:

3G (Au	to Detection)
	Pin Code (Optional):
3G (Ma	nual)
`	Country:
	Telecom:
	3G Network:
	APN (Optional):
	Pin Code (Optional):
	Dialed Number:
	Account (Optional):
	Password (Optional):
iBurst	
	Account:
	Password:
	Primary DNS:
	Secondary DNS:
	Service Name (Optional):
	Assigned IP Address (Optional):
	riosignou ii riddiooo (Optional).



Note: You may need to activate your Internet connection. Please contact your ISP for more information



Connect the Mini-USB end of the power adapter to the TEW-656BRG.



- 3. Connect the power adapter to a power outlet.
- **4.** Connect your 3G USB adapter to the USB port on the TEW-656BRG.




- 5. Move the Power switch to the On position.
- **6.** Verify that the following panel lights are on: Wireless (Blue) and 3G (USB) (Blue).
- 7. Connect your computer wirelessly to the TEW-656BRG. The default SSID (Wireless Network Name) of the TEW-656BRG is TRENDnet656. Contact the manufacturer of your wireless network adapter and make sure the wireless network adapter is configured with the proper SSID.




#### Note:

Gather all information related to your Internet Connection before you start. If necessary, contact your Internet Service Provider (ISP).

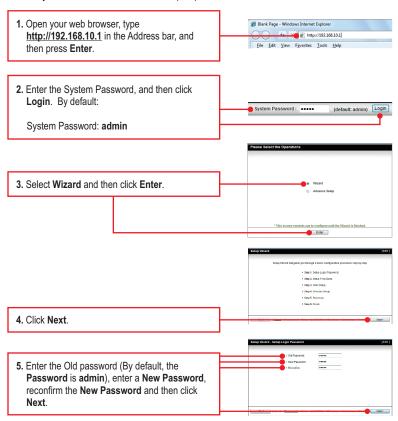

#### Note:

- Setting a password prevents other users from accessing the TEW-656BRG configuration.
- 2. It is recommended that you enter a new password. If you decide to change this setting, please write down the new password.
- 3. Password is limited to up to 8 characters.

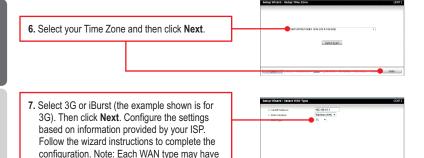


#### Note:

different options.

8. Select Auto-Detection and then click Next.

The example below is for Auto-detection. If the Setup Wizard could not automatically detect your Internet connection, select Manual and input the information using the information provided by your ISP.

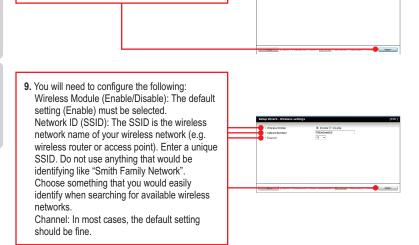

#### Note:

- To protect your network from any unauthorized access it is recommended to enable wireless encryption.
- The example below is for WPA2-PSK (AES) security. If you select WPA-PSK or WPA2-PSK, make sure your wireless adapters support WPA or WPA2. If your wireless adapters do not support WPA or WPA2, then select WEP.





11. Click Apply Settings.

12. Click OK.



 Wait around 40 seconds while the TEW-656BRG reboots.





14. Click Finish.

 Open up your browser and enter in a URL (e.g. <u>www.trendnet.com</u>) to verify that you have Internet connection.



### Your Configuration is now complete

For detailed information regarding the **TEW-656BRG**'s configuration and advanced settings, please refer to the Troubleshooting section, User's Guide CD-ROM, or TRENDnet's website at http://www.trendnet.com.

# **Register Your Product**

To ensure the highest level of customer service and support, please take a moment to register your product Online at: **www.trendnet.com/register** 

Thank you for choosing TRENDnet

### Wireless

Blue (Solid):

Wireless is enabled.

Blue (Blinking):

Activity is occurring from this link.

Not Illuminated:

Wireless is not enabled or no power is being supplied to the TEW-656BRG.



#### 3G(USB)

Blue (Solid):

3G connection is established

Blue (Blinking):

Activity is occurring from this link

Not Illuminated:

3G connection is not established.

