
TRULY®	Introduction of eTimer G2	Screen display	Main functions	Bluetooth Connection	3.Turn off eTimer G2(Pic.3)	••••••中国移动 ♥ 11:54 @ 54% ■	●●●●● 中國務助 12:00
Quisk Start Guide	Image: State Stat	The meaning of icons on the screenPress the touch button area to wake to check area constantly to check to check on the screenImage: Screen display. Keep to check on the screen display. KeepImage: Screen display. Keep To check on the screen display. KeepImage: Screen display. Keep To check on the screen display. KeepImage: Screen display. Keep To check on the screen display. Keep 	Time displayContactsSMS &SedentaryNotificationsreminderSleep monitorPedometerMensesGesture controlSmart alarmWechat sportTime interfaceNo disturbMP installation1.Search " eTimer G2" in Googleplay and Apple store and install it;2.Contact TRULY (service.sale@trulycom.cn)for the APP	Please make sure eTimer G2 has turned on Bluetooth. Power icon is twinkling : power charging Power icon shows four cells : charging completed 1.Pair the Bluetooth (Pic. 2) Activate the APP and press " Add device" and the APP will pop up 'Device list" interface to search the Bluetooth signal of eTimer G2. Press the Bluetooth signal to pair. 2.Disconnect device (Pic. 3) If the Bluetooth connection has successed, press " Disconnect device" to disconnect the phone and the device.	Press "Turn off Bluetooth", then the Bluetooth of the device will be turned off. The mobile phone APP will not able to search the Bluetooth of the device. Please charge the device or restart the device to activate the Bluetooth.	Wy device *Add device* Turn off Bluetooth Battery Ø Aarn	eTimer 92 Disconnect devi Battery Battery () () () () () () () () () () () () ()
 9.5port & Health To turn on/off of the sport and sleep function. D.Wechat sport Hease set the Wechat sport in the app. D.Gesture control Sort of to control specific functions of the device. 	<section-header><text><text><text><text><text><text></text></text></text></text></text></text></section-header>	 c.All man-made damage or damage due to negligence, fault third, abuse, misuse caused (such as: host liquid inlet, external shatter, peripheral parts of scratch damage), are not within the scope of the warranty. 3.To provide free warranty service on demand, users should provide for unchase and the shop name. Please require the shop to seal the warranty card when you purchase, otherwise, the company will not free repair. 4.To repair the product, please take the product to the distributor which you purchase the product. 5.If you have any questions when using this product, please feel free to call us at: 400-830-1989. 	<section-header><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item><list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></list-item></section-header>	<section-header><section-header></section-header></section-header>	Truly Semiconductors Ltd. Address: Truly Industrial Town, Shanwei City, Guangdong Province, China Fax: + 86-660-338 0759 Email: service.sale@truly.com.cn Website: www.trulymid.com Hot lines: 400-830-1989 WeChat: TRULY-SD	This device complets with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference teachers, funding interference to the second second second second second second by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection agains harmful interference in a readomial and used in acordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee to radio communications. However, the sparation between the equipment device of the separation between the equipment and used in separation between the equipment and used in separation between the equipment device of relocate the receiving anterna. -Roceiver or relocate the receiving anterna. -Roceiver or relocate the receiving anterna. -Conset the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.	

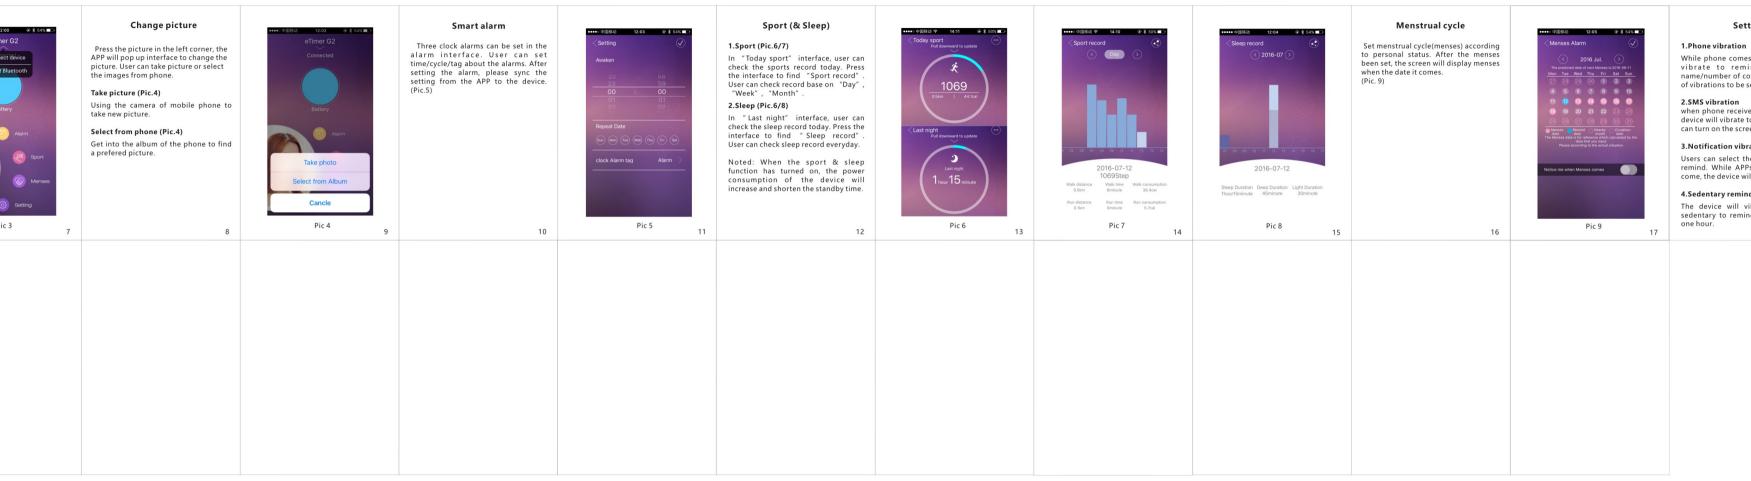

Setting

While phone comes in, the device will vibrate to remind and display name/number of contacts. Three types of vibrations to be selected.

device will vibrate to remind user. User again. can turn on the screen to check.

3.Notification vibration

remind. While APPs have notification device will vibrate to remind. come, the device will vibrate to remind.

4.Sedentary reminder

sedentary to remind after seating for wrist turn over. 18

5.No distrub

Besides clock alarm, all notification and phone call will not display or vibration

6.Lower power vibration

When power lower than 30%, the device will vibrate to notice; once when phone receive new message, the power lower than 10% will remind

7. Disconnection vibration

While device disconnect with mobile Users can select the APPs need to be phone or connect automaticly, the

8.Turn wrist to wake up screen

Please keep the wrist plane, the screen The device will vibrate and display will automatically light up after the