

GMRS-7000

USER MANUAL

2-WAY PORTABLE HANDHELD RADIO

DECEMBER, 20 , 2001

CONTENT

- 1. GENERAL**
 - 1.1 General
 - 1.2 Characteristic
 - 1.3 Composition
- 2. SPECIFICATION**
 - 2.1 General Specification
 - 2.2 Electrical Specification
- 3. OPERATION**
 - 3.1 ICON on LCD
 - 3.2 Key Functions
 - 3.3 Setting and Operation

4. CHANNEL DATA

1. GENERAL

1.1 GENERAL

This equipment, GMRS-7000 is called 2 way portable handheld radio. The frequency range is 462MHz, UHF operating Channel for international 2 way radio. Also it has a 38 CTCSS feature to achieve the clear communication without interference.

1.2 CHARACTERISTIC

- a) All active device in this radio is composed of semiconductor and high density IC.
- b) CPU of this equipment is H8/3802 from HITACHI
- c) Its power is operated by Ni-MH 7.2V battery.

1.3 COMPOSITION

This radio is composed of following.

- a) Transceiver (W/Antenna)
- b) Belt clip

2. SPECIFICATION

2.1 GENERAL SPECIFICATIONS

- a) Frequency range : 462.5500 ~ 462.7250 MHz
- b) Channel Frequency (Weather) : 161.6500 ~ 163.2750
- c) Communication Mode : Half duplex
- d) Channel Capacity : 15 channel
- e) Channel Spacing : 12.5 kHz
- f) Power : 7.2 V (Ni-MH)
- g) Battery Life : Alkaline. 9hours (Tx5%, Rx5%, Stand-by90%)
- h) Operating Temperature : -30°C ~ +50°C
- i) Dimension : 117(H) x 52(W) x 36(D) without antenna
- j) Weight : 240.5g (with battery), 135.5g (without battery)

2.2 ELECTRICAL SPECIFICATION

a) TRANSMITTER

- 1) Output power : Hi : 3.0W / Lo : 1.0W
- 2) Frequency Stability : ± 5 ppm
- 3) Modulation Method : FM
- 4) Oscillation Method : PLL SYNTHESIZER
- 5) Spurious Emission : < -60 dBc
- 6) FM Hum/Noise : 35dB Min
- 7) Distortion : $< 5\%$ at 1 KHz
- 8) Current Drain : 1200 mA Max


b) RECEIVER

- 1) Sensitivity : 12dB SINAD
- 2) Selectivity : -50dB

- 3) Intermodulation : -50dB
- 4) Spurious and Image Rejection : -50dB
- 5) Audio Out Power : 300mW Max at 8 ohm
- 6) FM Hum & Noise : -45dB

3. OPERATION

3.1 ICONS on LCD

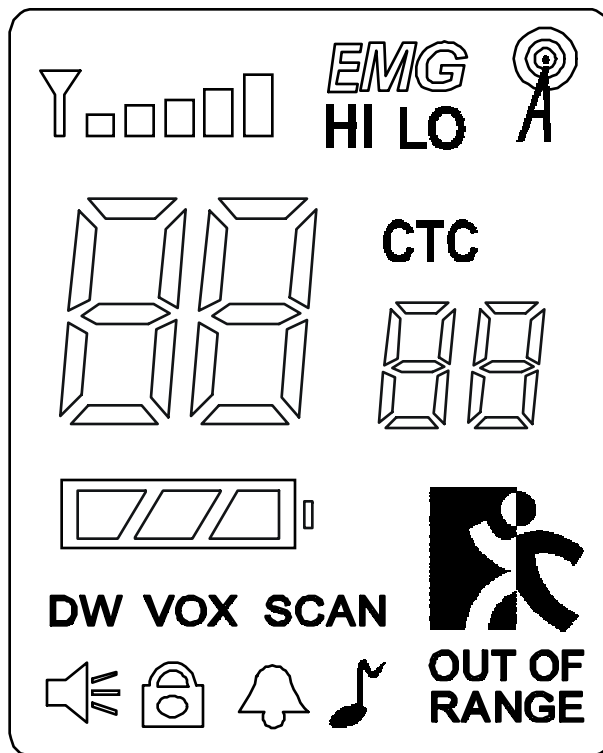

- 1) Monitor indicator : Appears when the Monitor (M) button is pressed and the channel monitor function is activated.
- 2) Key lock indicator : Appears when the keypad is locked. This function disables keys such as channel up/down and MODE.
- 3) Beep ON/OFF indicator : Appears while key tone is in use and disappears when tone is off.
- 4) Roger On/Off indicator : Appears while Roger tone is on, and disappears when tone is not in use.
- 5) Battery indicator : Indicates the battery charge level.
- 6) Signal Strength Indicator : Appears when a signal is being received. The icon

consists of five bars to indicate the received signal level. The icon is also represents transmit signal power during transmission.

7) Weather mode indicator : Icon will be on steady when in the weather band mode. The Icon will blink in every 2 seconds when in the GMRS mode with the alert active.

8) Hi/LO Indicator : Appropriate icon appears when the transmit power is set to desired output power level.

9) Channel readout : Shows the channel number in use.

10) SCAN indicator : Indicates that scan is enabled.

11) CTCSS indicator : Appears when the CTCSS function is in use.


12) Dual Watch indicator : Appears when the Dual Watch function is in use.

13) Out Of Range indicator : Appears when the Out Of Range function is in use.

14) VOX (Voice Activated Transmission) Indicator : This function allows hands free conversation. The icon appears when the VOX mode is activated.

16) Emergency Indicator : EMG Icon appears when the EMG button is pressed (The frequency is NOT monitored by authorities).

3.2 Key Function

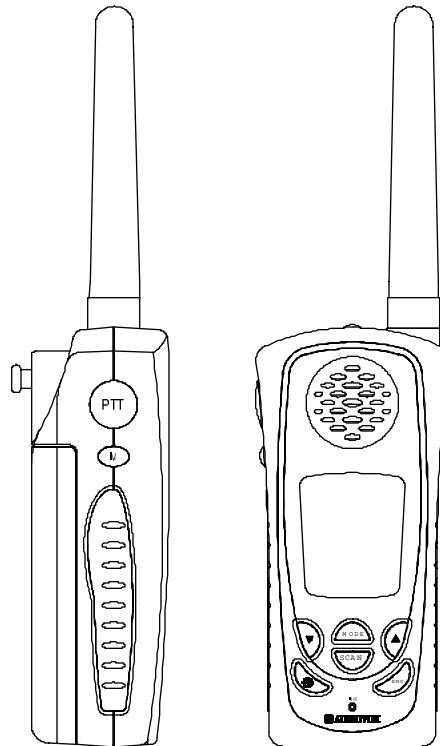

1) PTT Button : Push and hold to transmit ; release to receive.

2) Monitor Button : This button is used to check activity on the current frequency before transmitting.

3) Up/Down key : In the stand-by mode, Pressing this button will increment or

decrement the listening volume. When in function edit mode, this button will be used to adjust the unit's settings..

- 4) Scan / Lock key : Press this button momentarily to enable or disable the scan mode. Press and hold the button for over 2seconds to lock or unlock the keypad.
- 5) Mode (Function) key : Push to select the following function setting mode.

Βριεφ πρεσσ μοδε : 1εστ πρεσσ Χηαννελ ,
 2 νδ πρεσσ ΧΤΧΣΣ,
 3 ρδ πρεσσ Ποωερ Ηι / Λο
 4ετη πρεσσ ζΟΞ λεωελ
 5 τη πρεσσ Δυαλ Ωατχη
 6ετη πρεσσ Ρογερ Βεεπ
 7 τη πρεσσ Βεεπ Τονε
 8 τη πρεσσ Χαλλ

- 6) Emergency (EMG) Call Button : This radio has a quick access button(EMG) to the Emergency and Assistance Channel. This channel is not monitored by local authorities. When using this channel, EMG appears on the display. Pressing this button will set the transceiver to the channel 10

7) Speaker / Microphone

8) LCD (Liquid Crystal Display)

9) Transmit / Receive indicator : When receiving an incoming signal, the LED indicator will light green, and while the PTT button is pressed, the LED will light red. These LED's are used for backlighting as well.

10)External speaker/mic jacks : Connect an optional speaker/mic or headset, if desired. The internal mic and speaker will not function when either one is connected.

2) Function display



Monitor Indicator: Icon appears when the monitor button is pressed and the channel



Key Lock Indicator: Icon appears when the keypad is locked. This function disables keys such as channel up/down and mode.



Signal Strength Indicator: Icon appears when a signal is being received. The Icon
Beep Tone Indicator: Icon appears when beep tone confirmation tone is selected. Icon disappears when tone is off.



 
Roger Beep Tone On/Off Indicator: Icon appears when the roger beep tone is selected. Icon disappears when tone is off.



Battery Level Indicator: Icon indicates the battery charge level.



Scan Indicator: This function allows users to scan a channel to search for a valid signal.



Small Segment Display: Displays CTCSS tone option in the channel from 00 to 38, and also displays the caller ID number(01–10) when caller ID function is active.

CTC

Coded Tone Controlled Squelch System(CTC) Indicator: Icon appears when the CTCSS tone function is active.

DW

Dual Watch mode Indicator: Icon appears when dual watch mode is active.

VOX

Voice Activated Transmission (VOX) Indicator: This function allows handsfree conversation. The Icon appears when the VOX mode is activated.



OUT OF RANGE

Out of Range Alarm Indicator: Icon blinks as the receiving signal is getting weaker. The Icon stops blinking when the receiving signal comes back to the normal strength.



Weather Mode Indicator: Icon will be on steady when in the weather band mode. The icon will blink when in the GMRS mode with the alert active.

3-3. SETTING AND OPERATION

In order to communicate with other GMRS/FRS units, both you and the receiving party must be on the same channel. GMRS-7000 has 15 channels indicated by the large digits on the LCD display panel. Before trying to transmit on the selected channel, you should press the Monitor Button to check the activity on that channel. If someone is already on the selected channel, you should try another channel which is clear

1) On/Off & Volume control Switch

Radio ON : Press the power button at least for 2 seconds. You will hear confirming melody to indicate the unit is on.

Radio OFF : Press the power button at least for 2 seconds.

Volume setting : Press up[\uparrow] or down[\downarrow] button to adjust a level comfortable for you while monitor is active.

2) Setting the Channel and Tone Code(CTCSS)

GMRS-7000 has 15 main channels and 38 sub-channels.

- 14 Frequency channels
- 38 CTCSS Code (indicated by CTC icon on the LCD)

To select the channel

- Turn the radio on.
- Press MODE button once, [XX] digit will blink on the LCD. XX is a channel.
- Press up[\uparrow] or down[\downarrow] button to choose the channel.
- Press the PTT button or MODE button to confirm.

To set the tone codes(CTCSS)

- Press MODE button once more, [XX oF, 01 up to 38] will appear and CTC icon and tone code digit will blink on the LCD. "oF" means no CTCSS code.
- Press up[\uparrow] or down[\downarrow] button to choose the desired sub-channel to use.
- Press the PTT button or MODE button to confirm.

NOTE : To communicate with other GMRS/FRS units, they must be switched to the same channel and CTCSS sub-code. To communicate with other GMRS/FRS units which do not have sub-codes, switch your unit to the same channel with the sub-code setting to OFF.

3) VOX (Voice Operated Switching)

This option enables you to have hands-free conversation. You do not have to operate the PTT button each time when you want to transmit.

You can also choose the VOX sensitivity suit your environment of operation.

(Ex : noisy road, motor bike, factory etc.)

To Set the VOX mode

- Press the MODE button until the [Uo oF or XX] appears. XX is a vox level

- **VOX** icon will be appeared on the LCD.

To set the VOX level

- Press the up[↑]or down[↓] button to set the VOX level from 1 to 5.
 “oF” is disable the VOX function.
 “01” is least sensitive.
 “05” is most sensitive.
- Press the PTT button or MODE button to confirm.

4) Setting the DW (dual watch)

To set the DW mode

- Press the MODE button until the [oF of 01 up to 15] and **DW** icon blink on the LCD.
- DW icon will appear on the LCD.

To set the dual watch(DW) channel

- Press the up[↑]or down[↓] button to choose the channel.
 “oF” means no DW mode.
 “01 up to 15” means the channel is dual-watched.
- Press the PTT button or MODE button to confirm.

5) Power Selection Mode

This feature permits selection of the transmitting power level to high or low. Using low power, the unit will have a lower transmit range but battery life will be increased.

To access the transmitter power selection function

- Press the MODE button until the Po icon appears with a flashing Hi or Lo indication on the display.
- Press the Up or Down button to toggle between the Hi or Lo selections.
- Press the PTT button momentarily to confirm selection.

6) Roger tone

This feature will give the tone signal to other parties when transmitting is finished

(when PTT button is released.)

To activate or disable the Roger tone

- Press the Mode button until [rb On or oF] and the **roger** icon blink on the LCD.
- Πρεσς της υπ[↑]ορ δωv[↓] βυττον.
- Press the PTT button or MODE button to confirm.

7) Beep tone

Hearing this tone, users will make sure that any button has been correctly pressed.

To set the beep tone

- Press the Mode button until [**bP On** or **oF**] and the **BELL** icon blink on the LCD.
- Press the up[↑]or down[↓] button.
- Press the PTT button or MODE button to confirm.

8) Call Ringer Selection Mode

This feature Provides 3 user selectable call ringer signal.

To set your favorite call ringer signal.

- Press the MODE button until the [**C 01** or up to **03**] appears on the LCD.
- Press the up[↑]or down[↓] button to select the call melody type.
- Press the PTT button to confirm.
- To activate the call, click the “**PTT**” button twice quickly.

9) Out-of-range Alarm

Icon blinks as the receiving signal is getting weaker. The Icon stops blinking when the receiving signal comes back to normal strength.

10) Transmitting

- Press and hold the PTT button (The LED light red during transmission.)
- Speak slowly and clearly
- To Stop the transmission, release the PTT button.
- If there is no more receiving signal for 5 seconds, the unit will go into power save mode.

11) Receiving

The Coding feature reduces the possibility of interference and provide enhanced Communication. You can only listen to a call which has correct matching codes.

** Upon receiving a signal, the LED will light green. In case that a signal, which has different CTCSS channel, is received when the Radio is on the CTCSS mode, the LED blinks in green.

Important :

Before transmitting or receiving, the users have to make sure that the correct channel (1 to 15) and code (00 to 38) are selected.

12) Channel Scanning

This feature allows you to monitor all activated channels while scanning.

To activate the Scan

- Press the **SCAN** button
- Radio will begin scanning.
- When in scan mode, the display will show each scanning channel.
- After an activated channel is scanned, a signal will be received. If there is no more signal, the scan will resume automatically.

** If a channel is scanned, a user can resume the scan by pressing the monitor button.

13) Call

- Click the PTT button twice quickly.

14) Monitoring the Channel

It is used to check activity on the current frequency before transmitting.

To activate the monitor feature

- Press and hold the “**M**”(monitor) button for over two seconds.
- You will hear static if frequency is clear.
(The monitor icon will appear on the LCD.)

To disable the monitor feature

- Press and hold the “**M**”(monitor) button for over two seconds.
(The monitor icon will disappear on the LCD.)

15) Keypad Lock

The lock function is to avoid the accidental channel change to the preferred settings of the unit. All buttons will be locked except the Power, PTT, Monitor, Volume UP/Down.

To lock the keypad

- Press and hold the “**SCAN**” button for over two seconds.
- Keypad will be locked (**LOCK** icon will appear on the LCD)

To unlock the Auto Key function

- Press and hold the “**SCAN**” button for over two seconds.
- Keypad will be unlocked (**LOCK** icon will disappear on the LCD)

3-4. SETTING AND OPERATION ON WEATHER BAND

1) Channel Selection

This feature provides access to 10 channels within the weather band(7 NOAA channels and 3 Canadian marine channels). To select a weather channel, the unit must be in the weather channel mode. Press and hold the MODE button for at least 2 seconds, the weather alert icon(A) will appear, together with a channel

number in the band. Press the mode button until the channel number flashes.

To change the channel,

- Press the Up button briefly to move to the next higher main channel number.
- Press the Down button briefly to move to the next lower main channel number.

2) Weather Alert Mode

The weather alert mode notifies the user of unusual weather situations. To access the weather alert function:

- From weather band standby mode, press the mode button once to access the weather channels and use the Up or Down button to select the desired channel.
- Press the mode button again to access the weather alert function; weather icon(A) and **AL On** or **oF** appear flashing on the display.
- Use the Up or Down button to enable(**On**) or disable(**oF**) the alert function. The weather icon will stop blinking on the display when the alert is disabled.
- Press the PTT button to confirm your selection
- Press and hold the mode button for at least 2 seconds to exit the weather function.

When the unit is in GMRS/FRS, if a weather alert signal is received, the unit will generate a warning tone. The weather alert tone will be generated for 2 seconds and the unit will then automatically revert to a previously selected weather channel.

3-5. Battery status indicator

The Battery icon will blink when the radio is in low battery power. The alarm tone will beep once in 10 seconds. Then charge the rechargeable batteries or replace the batteries.

- Full battery – three segments are displayed.
- Low battery – the battery icon(only the rim) blinks.

4. CHANNEL DATA

1) GMRS Frequency Chart

Channel	Frequency (MHz)	Channel	Frequency (MHz)
1	462.5625	8	462.5750
2	462.5875	9	462.6250
3	462.6125	10	462.6750
4	462.6375	11	462.5500
5	462.6625	12	462.6000
6	462.6875	13	462.6500
7	462.7125	14	462.7000
		15	462.7250

2) CTCSS Tone Frequency Chart

NO	FREQ.(Hz)	NO	FREQ. (Hz)	NO	FREQ. (Hz)
1	67.0	14	107.2	27	167.9
2	71.9	15	110.9	28	186.2
3	74.4	16	114.8	29	179.9
4	77.0	17	118.8	30	186.2
5	79.7	18	123.0	31	192.8
6	82.5	19	127.3	32	203.5
7	85.4	20	131.8	33	210.7
8	88.5	21	136.5	34	218.1

9	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3
13	103.5	26	162.2	OF	0

3) Weather Channel Frequencies:

Channel	Freq. MHz	Channel	Freq. MHz
1	162.550	6	162.500
2	162.400	7	162.525
3	162.475	8	161.650
4	162.425	9	161.775
5	162.450	10	163.275