

Speaker.

LCD Window.

ENTER Key : Input function that select using "F" button and / button.
 Reception air state sends CALL signal.

/ (UP/DOWN) Keys : Use to set the function options.

Microphone.

FUNCTION Key. : Use to select a desired function menu.

PTT(Push To Talk) Key : Press and hold to talk on the radio. Press twice to transmit a call tone.


MONITOR/SCAN button : Been using channel monitor or search channel .

On-Off/Volume Knob : Turns the radio on/off. Adjusts the volume when the radio is on.

Antenna.

External Microphone/Charger Jack : Plug the microphone or charger into this jack.

2) **LCD Display.**

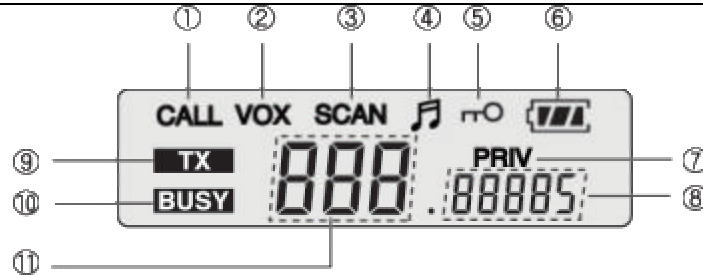

CALL : Appears when is sending CALL signal to other person.

VOX : Appears when the VOX is activated.

SCAN : Appears while channel scan is functioning.

BEEP : Appears when the BEEP function is on.

LOCK : Appears when the key Lock function is activated.

Battery : Mark battery state by 3 steps.

PRIV : Appear when established ton code. (01 ~ 38).

Displays the current ton code. (01 ~ 38)
 "00" is situation that ton code is not set.

TX : Appears while transmitting by pressing and holding the [PTT] key.

BUSY : Appears while monitoring or receiving. You must not transmit while this icon is visible.

Display the current channel number. (1 ~ 22)

7. Basis use method

1 . Power On/Off and VOLUME adjustment

1) Power On

Until lamp enters [VOL/PWR] handle to LCD, it is dolly for clockwise.

2) Power Off

Do so that sign may disappear to LCD to turn [VOL/PWR] handle for class clockwise.