 


MODEL : TOUCH 2000

900MHz Cordless Compact Telephone

User Guide

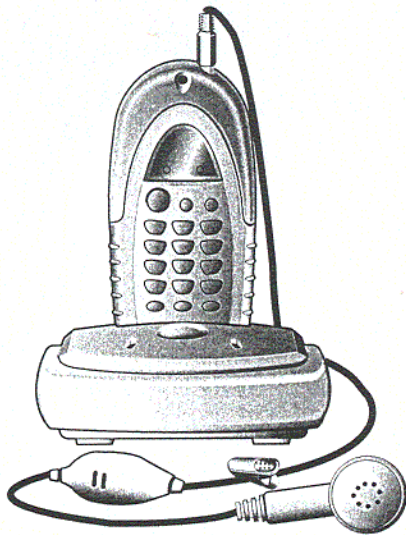

TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT

EXHIBIT # :

12A

1. Contents

- 1. Contents.....2
- 2. Getting Start.....4
 - Description4
 - Package Contents.5
 - Features (Base / Handset).....6
 - Precaution.....8
- 3. Main Functions.....9
- 4. Installation.....11
- 5. Replacing the Battery Pack.....12
- 6. Notes & Security.....13
 - Notes.....13
 - Registering the Handset to the Base.....13
- 7. Telephone Operation.....14
 - Making Calls.....14
 - Receiving Calls..... 15

- 8. Memory Dialling.....16
 - Storing a Number in Memory.....16
 - Calling a Number Saved in Memory.....17
- 9. Special Functions.....18
 - Redial / Pause.....18
 - Channel Auto scan.....18
 - Flash / Bell.....19
 - Volume.....19
- 10. Daily Check Points.....21
 - Charging the Battery Pack.....21
 - General Checking.....21
- 11. Troubleshooting.....22

TAEKWANG INDUSTRIAL CO
 FCC ID : BESTKP-910A
 JOB # : 127A0.RPT
 EXHIBIT # : 12B



2. Getting Start

● Description

Your TOUCH 2000 cordless telephone operates in the same principle as a two-way radio. The location of the Base determines the range of reception. In most homes, maximum range is obtained by locating the Base at the highest point in the house. Once installed on a tone or pulse dialling phone line, the telephone operates like any other, but without the limitations of a cord.

 
This cordless telephone consists of an electronic Base with a built-in charger, and a push button Handset.

The Base operates from an AC electrical outlet. The Handset is powered by a heavy-duty rechargeable Battery Pack.


NOTE

Loss of mains power will prevent the TOUCH 2000 from operating.

● Package Contents

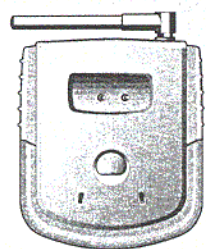


Base

 

Handset




 Ear-Microphone, Strap, Belt Clip

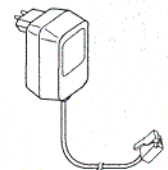


(DC 9V 150mA/300mA)

 AC Adapter




TEL Line

 

(Ni-MH 400mAh)

 Battery Pack

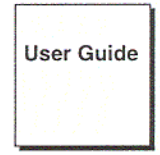

User Guide


User Guide



EXHIBIT #: 120
 TAEKWANG INDUSTRIAL CO
 FCC ID: BESTKP-910A
 JOB #: 127A0.RPT


● Features

 [Base]

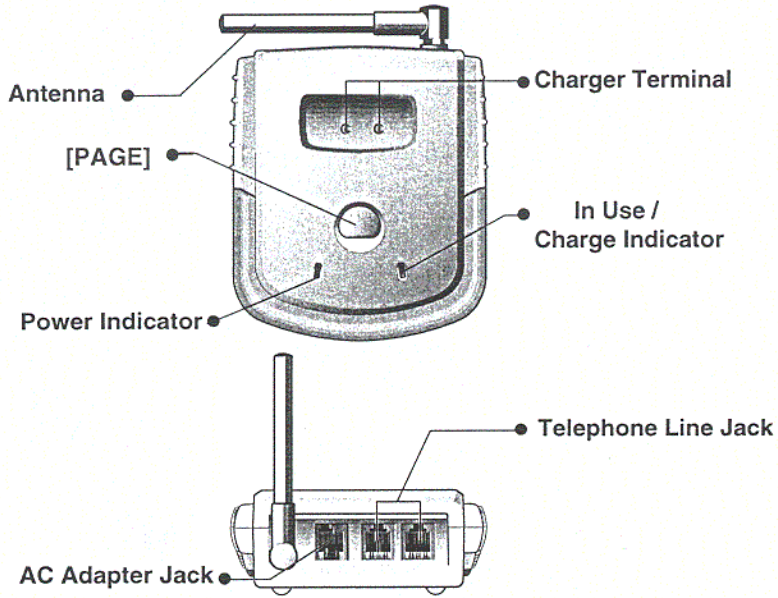


6

 [Handset]

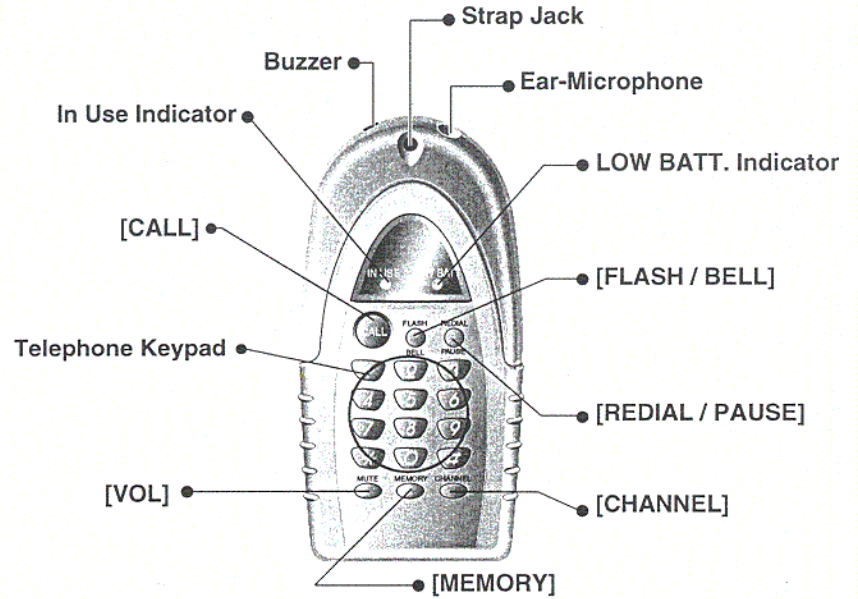

7

 

TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT
EXHIBIT # : 12D

● Precaution



Do not use this telephone near water.



Do not connect another antenna to the Base.



Do not take this telephone apart.

 
WARNING



Keep this telephone away from electric appliances.

Operate this telephone only with the correct electrical voltage.

Do not expose this product to heat or impact.

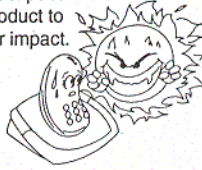

8

3. Main Functions

1. Filtered Sound System (40 Channel)

Gets considerably less noise than conventional cordless telephones because of special 40 channels which deliver the clearest possible reception.

2. Channel Auto Scan

Press the [CHANNEL] on the Handset to find and lock on to the clearest channel for any call.

3. Registering the Handset to the Base

Your TOUCH 2000 has a factory-set security code. This ensures that other cordless phone users in your neighborhood should not interfere with the operation of your unit.

4. Special Service - [FLASH]

Can use CALL WAITING, CALL CONFERENCE supplied by your telephone company or company switchboard.

5. [PAGE]

When the Handset is away from the Base, the person with the Handset may be paged if the POWER Switch is ON.

6. [REDIAL]

Redials the last number called.

7. [MEMORY]

Stores up to 10 frequently called numbers.

9



TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT

EXHIBIT # : 12E

8. Bell and Volume Level Control Switch (Handset)

Can select the Bell sound and the volume level those are desired.

9. Auto Standby Mode

To answer the call, just pick up the Handset and talk. After finishing a call you may hang up by simply returning the Handset to the Base. The Handset automatically switches from talk to standby mode.

10. Out- of- Range Warning (Handset)

A warning beep sounds if you take the Handset too far away from the Base.

11. LOW BATT. Indicator (Handset)

The Battery Pack should be recharged whenever the LOW BATT. Indicator lights

12. ANY KEY Function

Just press the ANY KEY, when the telephone rings. You can answer a call.

13. [VOL]

Can adjust the volume level during the conversation.

 
10

4. Installation

[Base]

① Insert the small plug on the end of the AC adapter into the jack on the back of the Base. And then plug the AC adapter into a 220V AC wall outlet.

② Insert one plug of the telephone line cord into the house telephone jack and the other end into the telephone line jack on the back of the Base.

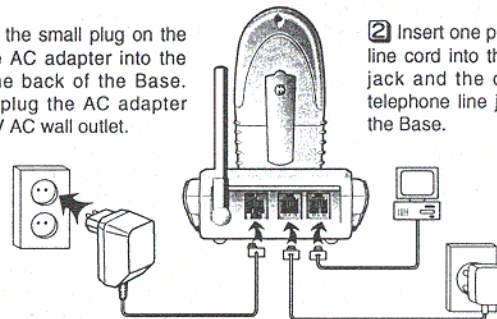


[Handset]

① Place the Battery Pack before using the phone.
(Refer to page 12.)


② Use this telephone after setting the Security Code.
(Refer to page 13.)

③ Charge the Battery Pack for the first time for approximately 10 hours on the Base.

 ④ Insert the Ear - Microphone Jack into the Handset .

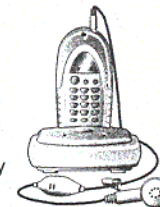

11

 


TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT

EXHIBIT # : 12F


5. Replacing a Battery Pack

Charge the Handset before using the cordless phone for the first time. Do not attempt to use the phone before charging the Battery Pack for a full 10 hours.

 
[Replacing a Battery Pack]

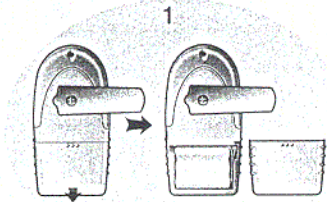

 
Remove the Handset Battery Compartment Cover by sliding it down.

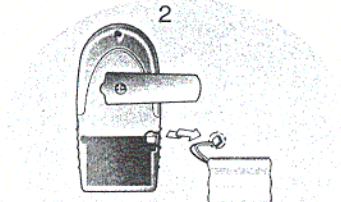

 Pull out the Battery Connector and remove the Battery Pack.

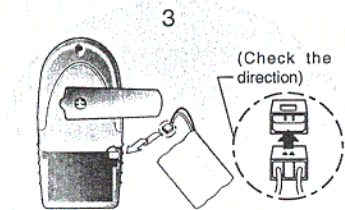

 Plug the new Battery Pack into the Battery Connector. Slide the Handset Battery Compartment Cover firmly into place in its closed position.

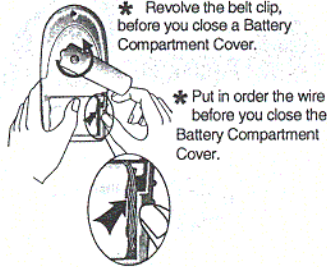

* Revolve the belt clip, before you close a Battery Compartment Cover.

* Put in order the wire before you close the Battery Compartment Cover.

12

 
6. Notes & Security

● Notes

1. Place the Handset on the Base.
CHARGE Indicator lights and the Battery Pack is automatically charged.
2. Registering the Handset to the Base
3. Auto Standby Mode
To answer the call, just pick up the Handset and talk.

● Registering the Handset to the Base

You should set the Security Code of the Handset according to a following way before using the Handset for the first time.

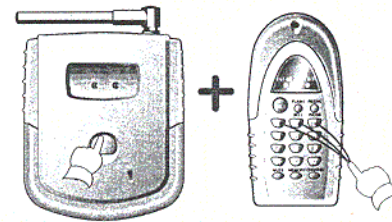

- ① Press the [PAGE] on the Base and the [1] on the Handset at one time for 3 seconds.
- ② A beep will sound to confirm the Handset has been set.
(If a beep does not sound or it does not work properly, set again.)

13




TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT


EXHIBIT # : 125

7. Telephone Operation

 
● Making a Call

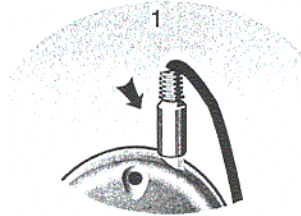

 
1
Insert a Ear- Microphone Jack into the Handset.

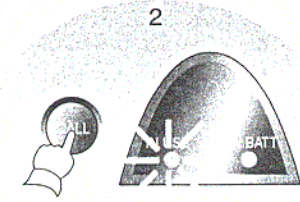

 2
Press the [CALL] IN USE Indicator of the Handset lights.

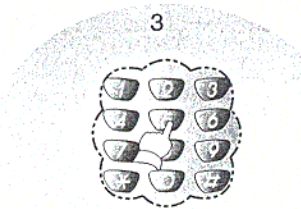


 3
Dial the phone number when you hear a dial tone.

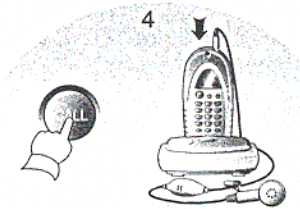


4
When the call is over, press the [CALL] or place the Handset on the Base.

 
● Receiving a Call

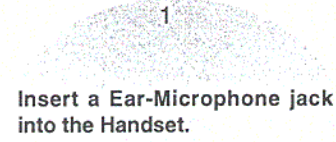

 1
Insert a Ear-Microphone jack into the Handset.

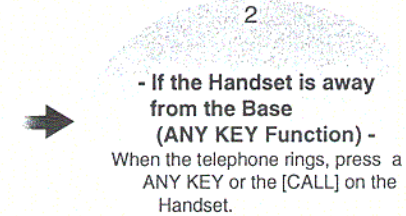


 2
- If the Handset is away from the Base (ANY KEY Function) -
When the telephone rings, press a ANY KEY or the [CALL] on the Handset.

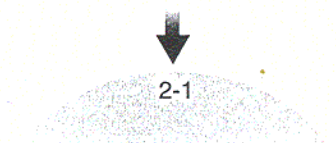




2-1
- If the Handset is on the Base -

 Just pick up the Handset.



8. Memory Dialling

   ● Storing a Number in Memory

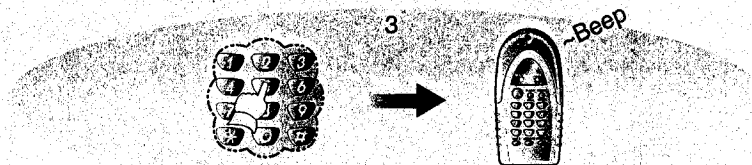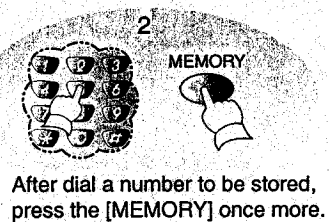
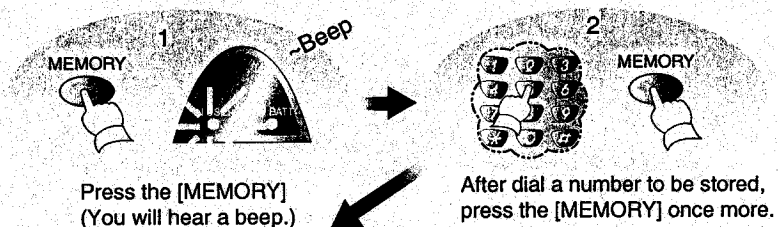


EX.) You want to store 555-1234 at "3"



16

  ● Calling a Number Saved in Memory

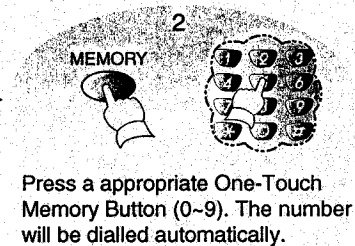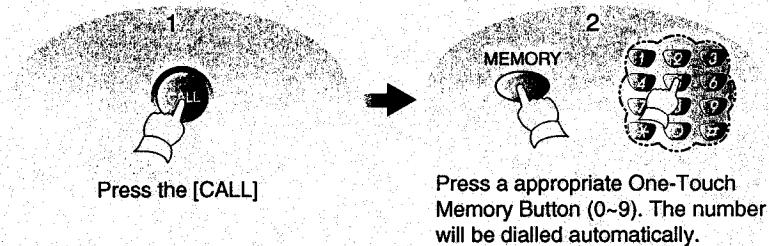

EX) You want to make a call with One-Touch Memory Button "3"



The number will be dialled automatically.

* Note!

Please do not press the [MEMORY] when you are calling .
If the [MEMORY] is pressed, other buttons do not work properly ([MUTE], [CHANNEL] etc.) .

17

TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT
EXHIBIT # : 12 I

9. Special Functions

● [REDIAL / PAUSE]

 
[REDIAL]

1. Press the [CALL].
2. Press the [REDIAL/P].

Last number called will be redialed automatically.

[PAUSE]

The Pause facility is used when your telephone is connected to a PABX. The [RDL/PAU] is used to insert a break (approx. 5 seconds), between the outside line access code and the telephone number when storing numbers into memory.

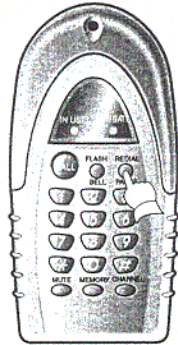

● Channel Auto Scan

Press the [CHANNEL] on the Handset to find and lock on to the clearest channel for any call.

18

● [FLASH / BELL]

[FLASH]

Contact your telephone company to use this function.

◆ CALL WAITING

You can receive another call during a phone conversation using the [FLASH].

1. When another party calls you during a phone conversation, you will hear a tone. Then, press the [FLASH].
The conversation will be placed on hold.
2. To speak to the first caller, press the [FLASH] again.
Then, the second caller will be placed on hold.

◆ CALL CONFERENCE

Use this function to have a three party conversation.

1. Press the [FLASH] during a call.
2. Dial the phone number of the other party.
3. Press the [FLASH].

19




TAEKWANG INDUSTRIAL CO
FCC ID : BESTKP-910A
JOB # : 127A0.RPT

EXHIBIT # : 125

[BELL]

Press the [BELL] in STANDBY Mode.

 Select the 3 kinds of Bell sounds and 2 kinds of volume levels.

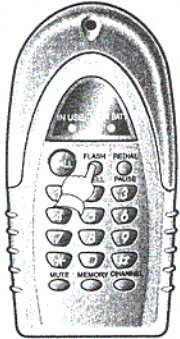

☞ If you hear the bell sound desired, stop pressing to select it.

- * You will hear a high volume bell sound, when you press the [BELL] one times.
- * You will hear a low bell sound, when you press the [Bell] once more. (It is a same kind of Bell sound.)
- * You can select the Bell sound and volume with pressing the [BELL] repeatedly.

● [PAGE]

When the Handset is away from the Base, it may be paged if you press the [PAGE].

● [VOL]

Each time the button is pressed the talk volume is increased by one level. When you press the button again, it will be reduced. You can select the 4 kind of volume levels.

10. Daily Check Points

● Charging the Battery Pack

- ① Charge the Handset before using the cordless phone for the first time.
Do not attempt to use the phone before charging the Battery Pack for a full 10 hours. (Battery Type is Ni- MH 400mA)
- ② Place the Handset on the Base and then Charge Indicator lights.
- ③ Charge for approximately 10 hours.

● General Checking

- ① Make sure the Handset Battery Pack is fully charged and installed correctly.
- ② Loss of mains power will prevent the TKP-910 from operating.
So, charge your telephone at all times.

11. Troubleshooting

Refer to the following suggestions for the remedy.

Trouble	Check Point
A call is not made or answered.	<ul style="list-style-type: none"> * The battery of the Handset is weak. * Check the AC adapter and the telephone line connection. * The Handset is too far away from the Base. * Check if the voltage of the AC adapter is incorrectly set. * Set the security code.
Sound flutters or fades.	<ul style="list-style-type: none"> * Move the Base. * The Handset is too far away from the Base. * Keep the Base away from electric appliances.
No dial tone	<ul style="list-style-type: none"> * Press the [CALL] on the Handset. * The Handset is too far away from the Base. * Set the security code.

22

Trouble	Check Point
The telephone does not ring.	<ul style="list-style-type: none"> * Check the telephone line and AC adapter connection. * The battery of the Handset is weak. * The Handset is too far away from the Base. * Press the [CALL] on the Handset.
Handset does not receive a page.	<ul style="list-style-type: none"> * Press the [CALL] on the Base. * The Base is turned off. Set the Power ON / OFF switch to ON. * The Handset is too far away from the Base.
The range of the Handset is limit.	<ul style="list-style-type: none"> * The battery of the Handset is weak. * Move the Base. * Keep the Base away from electric appliances.
Any button does not work during a call.	<ul style="list-style-type: none"> * The [MEMORY] is pressed. * Hang up the phone and call again.

23

EXHIBIT #: 122
 TAEKWANG INDUSTRIAL CO
 FCC ID : BESTKP-910A
 JOB # : 127A0.RPT