

Getting Started

First Use of Radio

- IMPORTANT**
Long condition the battery. Refer to the Battery Charger User Guide.
- Install the Antenna
- Install the Battery
- Turn on radio, adjust speaker volume, make a call.
- Press PTT to Talk. Release to Listen.

Radio Configuration

Your Tait Orca radio has been configured for your requirements by your authorised Tait Dealer or your company administrator. Therefore, some functions will vary in operation or will not be available. The configuration information can be written onto this User Guide. For more information on trunking call functions, contact your Network Operator.

Batteries

Use Tait Orca 5000 NiCd/NiMH batteries or Tait Orca Elan/Excel/Eclipse NiCd/NiMH batteries. For more information on batteries, refer to the Battery Care Guide.

IMPORTANT
Do not put Tait Orca 5000 batteries into older battery chargers. Tait Orca 5000 NiCd/NiMH batteries are ONLY for Tait Orca battery chargers with software version 2.07+.

Parts

If any parts are damaged or missing, report this to your authorised Tait dealer immediately.

Making Calls

Standard Operation
Illustration shows the recommended method for standard operation. Use the upper microphone to speak.

PTT
Press PTT to talk. Release PTT to listen.

Handset mode
Illustration shows the recommended method for use in handset mode. Use the lower microphone to speak.

Function Keys
Use a short press or a long press to operate the function keys 1, 2, and 3. See Radio Configuration.

Keypad
Dial the number. (5040 radios only)

Example: 159 307823



To make the call, short press: #

16-way Selector
The selector uses the presets numbered 1 to 16


Example: 159 PETER



To make the call, short press: #

Menu
Use the Menu to make a call.

Example: MENU PETER

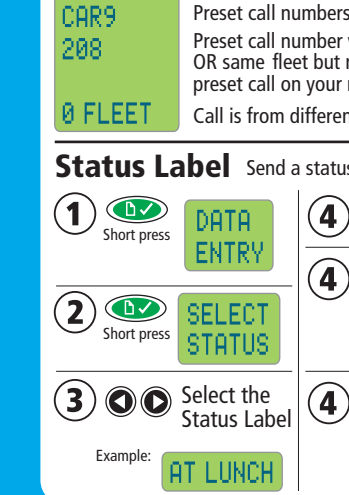

To make the call, short press: #

Function Key 1
Function Key 2
Press PTT to talk. Release PTT to listen.

Example: AT LUNCH



To make the call, short press: #


Call Information

GO	Go. Call accepted. Press PTT to Talk. Release PTT to listen.
QUEUED	Queued. Recipient has queued your call.
MISSED CALLS	Missed Calls. Call is Queued.
SYS BUSY	System is busy.
ENGAGED	Engaged. Recipient is busy.
NOT HOME	Recipient has turned radio off. Recipient is in Quiet mode (do not disturb) Recipient is out of range.
WAIT	Wait. System is busy but will connect you as soon as possible.
UNAVAIL	Unavailable. Call is not permitted.
UNOBTAIN	Unobtainable. Number is not supported.
ACCEPTED	Accepted. Call has been accepted.
QUIET	Quiet. Do not disturb.
CALLBACK	Callback. Return call by pressing PTT or Menu.
CAR9	Preset call numbers with label.
208	Preset call number without label OR same fleet but not set as a preset call on your radio.
Ø FLEET	Call is from different fleet.


Phonetic Alphabet	
Alpha	A
Bravo	B
Charlie	C
Delta	D
Echo	E
Foxtrot	F
Golf	G
Hotel	H
India	I
Juliet	J
Kilo	K
Lima	L
Mike	M
November	N
Oscar	O
Papa	P
Quebec	Q
Romeo	R
Sierra	S
Tango	T
Uniform	U
Victor	V
Whisky	W
X-ray	X
Yankee	Y
Zulu	Z

Status Label Send a status label to a user or the despatcher (not a group)


Example: DATA ENTRY

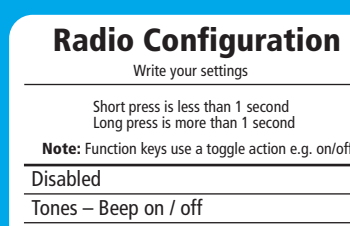

Example: SELECT STATUS

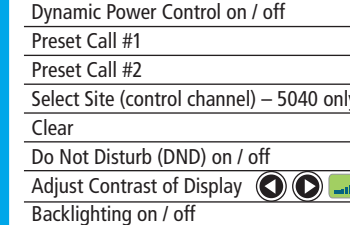

Example: AT LUNCH

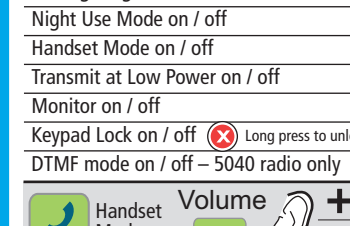

Radio Configuration

Presets	
0	50
1	51
2	52
3	53
4	54
5	55
6	56
7	57
8	58
9	59
10	60
11	61
12	62
13	63
14	64
15	65
16	66
17	67
18	68
19	69
20	70
21	71
22	72
23	73
24	74
25	75
26	76
27	77
28	78
29	79
30	80
31	81
32	82
33	83
34	84
35	85
36	86
37	87
38	88
39	89
40	90
41	91
42	92
43	93
44	94
45	95
46	96
47	97
48	98
49	99

Action List		
1		
2		
3		
Status Labels		
1		16
2		17
3		18
4		19
5		20
6		21
7		22
8		23
9		24
10		25
11		26
12		27
13		28
14		29
15		30
Radio Identification		
Prefix #	Fleet #	Radio ID #
Group Information		
Emergency Call Numbers		



Battery
100% charged
60% charged
Low
DTMF Mode on
Monitor Mode on
Scroll
Handset Mode on

Call Timer
02:14:0

16-way Selector
On/Off and Volume
LED
Speaker
Standard Microphone
Scroll in Menu: Forwards
Menu: Backwards
Jump to Menu: Top
Menu: Bottom
Display
Clear, Cancel or Back in Menu
Menu, Select, Toggle (on/off) or Send (make call)
Alphanumeric Keypad (e.g. for Alpha-Search)
Send (make call)
Manual Dialling
Handset Microphone

Function Key 1
Function Key 2
Press to Talk (PTT), Toggle (on/off) or Send (make call)
Function Key 3 or Action List

Control or Traffic Channel
Conventional Mode
Queue: Call # of # (20 maximum)
75
JIM Caller ID

Menu

MENU Short press: Clear, Cancel or Back in Menu. Long press: Delete queued calls.

QUEUED CALLS Select call (CL 1/07) Return call (and delete from Queue) Read status or message (Short press) Delete call (Long press)

SELECT PRESET Select from list: who to call, status call, radio setting, radio mode. (2 ABC) Alphanumeric Search RADIO 5 GROUP 1... Alphabetic display

DATA ENTRY SELECT STATUS → Select status from list of status labels: LUNCH BACKIN15 AT SITE1...

USER SETTINGS
HANDSET → Handset mode: on/off
LOW PWR → Transmit at low power: on/off
KEYLOCK → Keypad lock: on/off Long press to unlock
SQUELCH → Squelch: city/country
DTMF → Dual Tone Multifrequency (DTMF) mode: on/off
QUEUE → Queue incoming calls: on/off. Maximum 20 calls
QUIET → Quiet. Do not disturb: on/off
DYN PWR → Dynamic power control: on/off (MPT1327)
PTTLOCK → PTT Lock. PTT is locked.

ALERT SETTINGS
TONES → Radio Tones: on/off
LEVEL → Volume of Radio Tones: high/low
KEYTONE → Keypress Tones: on/off

DISPLAY SETTINGS
NIGHT → Night use mode: on/off
ADJUST CONTRAST → Adjust contrast of display

ADV SETTINGS
SELECT → Select Site (control channel) from list: 123 156...
SITE RESUMING Resuming normal signal hunting
SELECT NETWORK → Select Network from list: NETWORK1... Short press for Radio Identification.

VERSION INFO Select version from list: HW VER Software MAIN DB Database CAL DB Calibration

Modes

Dynamic Power Control MPT1327 Conventional Mode Radio to radio
Automatically reduces the transmit power in high signal strength areas.

Backlighting
When you press a key, the backlighting is turned on. Turns off after 1 to 10 seconds of no activity.

Night Use mode
If on, the keypad backlighting is turned on when there is activity on the channel or if a scan group is selected. Turns off after 1 to 10 seconds of no activity.

Handset mode
Speaker volume is reduced so that radio can be held near to the ear. Use the handset microphone.

Monitor mode
In conventional mode, listen to all traffic and all groups on a channel.

Groups

Group Calls
Broadcast Call – Group members can listen but not respond.
Conference Call – Group members can listen and respond.
A user can be assigned to some groups, all groups or no groups.
Trunked – Permanent groups are set by the trunking system. Persons are assigned when the radio is configured.

Temporary Groups
A user can become a member of a group temporarily by selecting the group or when the despatcher assigns the user to a group.

Group Call Limitations
Sender has no indication of how many group members have received the call. No connection acknowledgment. Need the recipient to acknowledge by voice.
Radios that are off, out of range, or engaged will not receive.

Group Numbering Scheme
User's have an individual ID plus membership in none, some or all of the Group IDs.

Group Types
User Selectable Group
Scan Group
User Selectable plus Scan Group
Permanent Group
Dynamic Group
Manual Group Select

Manual Group Select
Users can select the groups that they want to be assigned to using the 16-way selector.

Group Select
The despatcher controls which groups the user is assigned to. This feature can be dependent or independent of the position of the 16-way selector, so that group control from the despatcher can be ignored or accepted.

Radio Configuration

Write your settings		F1	F2	F3	External
Short Press	Long Press	Short Press	Long Press	Short Press	Long Press
Disabled					
Tones – Beep on / off					
Dynamic Power Control on / off					
Preset Call #1					
Preset Call #2					
Select Site (control channel) – 5040 only					
Clear					
Do Not Disturb (DND) on / off					
Adjust Contrast of Display					
Backlighting on / off					
Night Use Mode on / off					
Handset Mode on / off					
Transmit at Low Power on / off					
Monitor on / off					
Keypad Lock on / off Long press to unlock					
DTMF mode on / off – 5040 radio only					
Handset Mode	Volume				Inactivity seconds =

16-way Selector

The selector uses the presets numbered 1 to 16.

1	9
2	10
3	11
4	12
5	13
6	14
7	15
8	16

Trunking Call Functions 5040 radio only

Common Trunking Functions		R = Radio number G = Group number
Dialling String	Function	
*0 #	Request base despatcher to call you back Cancel	
*0*RRR #	Request another despatcher to call you back Cancel	
*0SS*RRR #	Status call. SS = status 01 to 30	
*0PP*RRR #	Status label to despatcher. PP = preset 00-99	
*1*GGG #	Conference call to group GGG	
*11*GGG #	Broadcast call to group GGG	
*31*NNN #	Non-prescribed data calls	
*41*RRR #	Divert own calls to radio RRR	
*41#	Cancel	
*41*0NNN... #	Divert own calls to PSTN NNNN... Cancel	
*44*RRR*RRR #	Divert third party calls from RRR to RRR Cancel	
*44*RRR #	Cancel	
*48 #	Queue incoming calls. Cancel = #48 #	
*480	Empty the Queue	
*49 #	Quiet. Do not disturb	
*49 #	Cancel	
*700 #	Display the name of the current network	
*701 #	Change to network 1 to 4 (701 702 703 704)	
*8*RRR #	Priority call to radio number RRR	
*8*1*GGG #	Priority conference call to group number GGG	
*9*RRR #	Emergency call to radio RRR	
*9*1*GGG #	Emergency conference call to group GGG	
**49 #	Abbreviated dialling codes 1 to 49	
#45 #	Cancel call divert from other user	

MPT1343 Common Call Setup		
Dialling String	Call To	Example
0	PSTN number	0 03 3456789 #
20 to 89	Radio in same fleet as you (RR)	89 #
200 to 899	Radio in same fleet as you (RRR)	899 #
2001 to 6050	Radio in another fleet with same prefix as you	6050 RRR #
200 to 327	Radio in another fleet with different prefix to you	327 6050 RRR #
90 to 99	Group in same fleet as you (GG)	90 #
900 to 999	Group in same fleet as you (GGG)	900 #

ANN Fleet Calls		
Fleet Size	Call To	Example
Large	Radio 234 in Fleet 1 with same prefix as you	7 1 234 #
	Radio 235 in Fleet 2 with different prefix i.e. 32	7 32 2 235 #
Medium	Radio 23 in Fleet 51 with same prefix as you	7 51 23 #
	Radio 23 in Fleet 52 with different prefix i.e. 126	7 126 52 23 #
Small	Radio 23 in Fleet 80 with same prefix as you	7 (80r9) 80 23 #
	Radio 23 in Fleet 81 with different prefix to you i.e. 3	9 3 81 23 #

LMS Dialling		
Call Type	Call To	Example
Own fleet	Radio 213 in Fleet 34 in same fleet as you	213 #
Interfleet	Radio 215 in Fleet 36 (another fleet)	36 215 #
Interprefix	Radio 217 in Fleet 38 (another fleet) of Prefix 202	202 38 217 #

Preset Numbers		
Dialling String	To	Example
0 then 0 to 99 #	Preset strings (leading zero)	069 #

Conventional Channels		
Dialling String	To	Example
101 to 110 #	Conventional channels	106 #



Performance

- To maintain the optimum performance of the radio:**
- Use only the supplied antenna.
 - Use only the radio and accessories for their design purpose.
 - Use only accessories that are approved by Tait Electronics Ltd.
 - Avoid high temperatures. If the temperature exceeds 80°C (176°F) the radio will make two short high-pitched beeps and will not work. Temperatures above 90°C (194°F) cause permanent damage to the radio.
- To maintain the optimum performance of the battery:**
- Charge the battery as soon as the radio gives the 'low battery' warning.
 - Short condition the battery weekly.
 - Long condition the battery only for the following reasons: on first use, if performance is poor, and after more than two weeks of storage.
 - Do not charge a battery that has had little or no use.
 - Do not leave charged batteries in the charger for more than a day.
 - Turn the radio off when it is unattended for long periods.

Recycle
Recycle batteries that are of no use. Contact your authorised Tait dealer for advice.

Trunking System

OACSU – on air-call setup
FOACSU – full off air-call setup

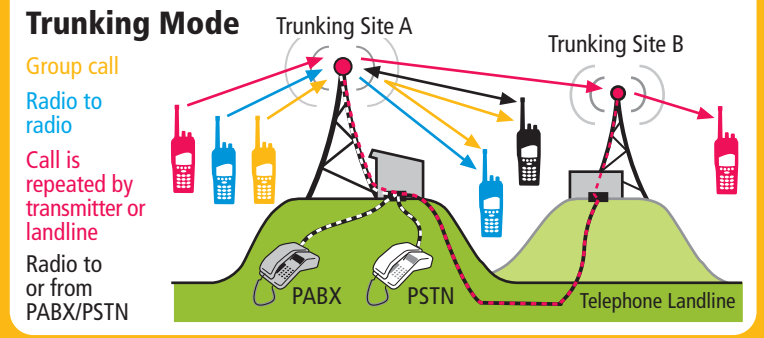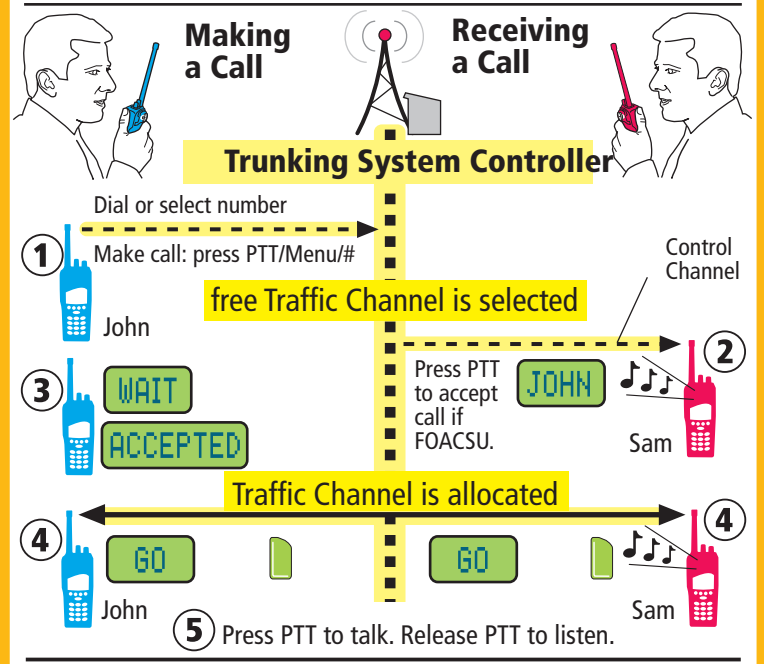

Looking after your Radio

- Your radio does not require routine maintenance. However, it is a sophisticated electronic device and should be treated with care.
- Clean the radio, accessories and charger weekly using a clean dry lint-free cloth. When cleaning, do not use solvents, detergents, alcohol, aerosol sprays or petroleum-based products.
- Clean the electrical contacts on the battery and charger weekly using a fibre glass pencil, or the graphite tip of a type 4h (#4) or harder pencil.
- Do not put the radio and accessories in fluids.
- Do not drop the radio onto hard surfaces, place it down carefully.
- Do not use if the radio, antenna or accessories are damaged.
- Repairs and modifications must only be carried out by a Tait approved dealer.
- Always have the D-Clip or protective cover installed to protect the radio from dust ingress and electrostatic discharges.

Troubleshooting

Blank Display If the display is blank after turning on the radio and the radio turns itself off automatically after a few minutes, it is likely there is no power.

Medium flash Radio is incorrectly configured. Contact your authorised Tait dealer or your company administrator.

ERROR XX Contact your authorised Tait dealer or your company administrator.

Battery is low Charge the battery.

Battery is too low to operate the radio Turn off the radio. Charge the battery.

Checklist

- Is the radio turned on?
- Is the correct channel selected?
- Is the battery installed on the radio?
- Is the battery charged?
- Is the antenna damaged?
- Is the battery charger working properly?

Accessory Use

Installing the Battery

Removing the Battery

Using the radio, lapel microphone and carry case

Installing the D-clip

- 15°
- 2
- 3
- 4

Removing the D-clip

- 1
- 2
- 3

Accessories

Contact your authorised Tait Dealer

Antennas

Belt Loop

6-Way Multi-Charger

Battery

Battery Charger

D-Clip

Accessory Connector Kits

Leather Carry Cases

Accessory Adaptors

Headphones

Earphones, Palm and Lapel Microphones

Speaker Microphones

Servicing and Programming Kits

Car Kit

Belt Loop

Installing the Radio and Carry Case

- 1 Install the Belt Loop
- 2 Install the Radio
- 3 Install the Carry Case

Removing the Radio and Carry Case

- 1 Rotate the Carry Case by 180 degrees
- 2 Slide the Carry Case upwards
- 3 Unfasten the Clip and remove the Radio

Note for Accessories
To use the belt loop, the accessory needs the D-clip fitting. For example: a lapel microphone.

Safety Precautions

- When transmitting, hold the radio microphone 25–50mm (1–2 inches) from your mouth.
 - When transmitting, keep the antenna at least 25mm (1 inch) from any part of your body, especially your face and eyes.
 - Turn off the radio where radio waves could interfere with electronic devices.
 - Turn off the radio at fuel/gas stations.
 - Turn off the radio in an area where detonators/explosives are being used.
 - Turn off the radio before boarding/leaving an aircraft and whilst on board an aircraft.
 - Do not use the radio whilst driving vehicles or operating machinery.
 - Do not use earphones or headsets at high volume levels.
 - Do not transmit in frequency bands that are reserved for use by distress beacons, such as 406 to 406.1 MHz.
 - Do not put the radio, battery or accessories in liquids as they will be damaged.
 - Do not allow children to play with the radio; it is not a toy.
- Hazardous Atmospheres**
A hazardous atmosphere has the potential for fire or explosion from dusts, gases, liquids and solids. Make sure of the following in hazardous atmospheres:
- Turn off the radio, unless the radio is qualified for use in hazardous atmospheres.
 - Do not replace batteries, even if the radio is qualified for use in hazardous atmospheres.
 - Do not use damaged radios. If the radio was originally qualified for use in such environments, the radio is not qualified if it has a cracked casing.
 - Do not modify the configuration of a radio that is qualified as intrinsically safe for use in hazardous atmospheres. If you do, it will not be qualified.
- Electromagnetic Interference**
Turn off your radio where radio waves could interfere with electronic devices. Some facilities use equipment that is sensitive to Electromagnetic Interference such as: hospitals, medical centres, aircraft and some industrial facilities. Only use your radio in these situations if the radio is qualified for use in such areas.
- Note: The following warning applies to FCC approved radios in the 800 MHz and 900 MHz frequency bands:
- FCC RF Exposure Limits**
This product generates radio frequency energy during transmissions. It is classified by the FCC as suitable for occupational users in a controlled exposure environment. The following conditions apply to the use of this radio:
- It must only be used with authorised accessories and antennas.
 - Do not exceed a duty cycle ratio of 50% transmit mode to stand-by or receive modes. The radio is in transmit mode when the PTT key on the radio is pressed and the TX indicator LED is lit.
-