 


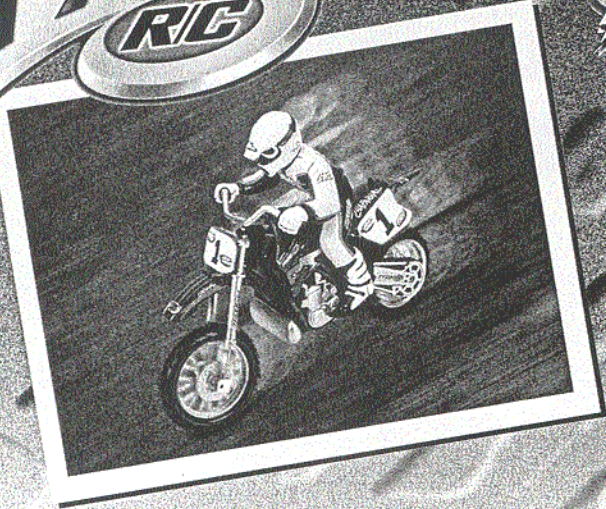

X-TREME CYCLE™



TYCO R/C SERVICE CENTER



If you have questions or difficulty operating this vehicle,
DO NOT RETURN IT TO THE STORE!
 Call Toll-Free 1-888-557-TYCO (1-888-557-8926)
 for **EXPERT** technical help and **RAPID** parts
 and service assistance.

OWNER'S MANUAL

Please read thoroughly before operating your vehicle. Keep these instructions for future reference: they contain important information.

FEATURES

 
- Full function
- Available in 2 frequencies 27 MHz and 49 MHz (refer to labels on transmitter & vehicle for frequency)
- Range up to 65'/20m

“SMART CIRCUITRY”

If your vehicle gets stuck or stalls, a special sensor will cut power to protect it. To reset the sensor, just release the control sticks, reposition your vehicle (if necessary) and take off again!

I. CONTENTS


NOTE: When you unpack your new vehicle, it will be locked into the Display Stand for safe shipping. Just rotate the Battery Latches to unlock the vehicle and lift up to remove it from the stand. You'll be able to store it on the stand without locking it into place.

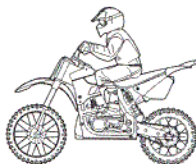

(1) TMH™ X-TREME CYCLE™ Vehicle



 (1) Display Stand




(1) Transmitter

VEHICLE

Powerful Mabuchi Motor

 Heavy-Duty Suspension

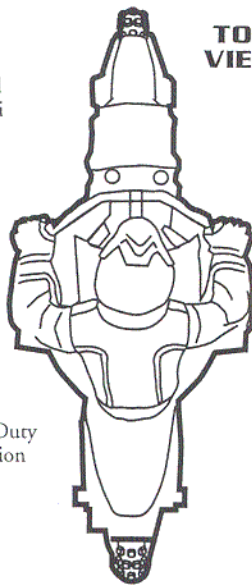

TOP VIEW

Battery Latches (2)

Gyro Stabilizer (inside rear wheel)

BOTTOM VIEW

ON/OFF Switch

Battery Compartment

 
TRANSMITTER

NOTE: Your transmitter is equipped with a special automatic ON battery-saving feature. Just turn your vehicle ON. Then push either transmitter stick and you will be able to run and control your vehicle.

Left Stick Controls Forward, “Turbo” & Braking

Whip Antenna

Right Stick Controls Turning

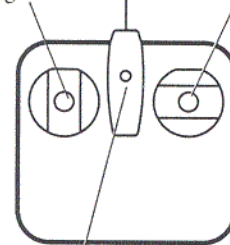

Automatic “ON” Power Indicator Light

Refer to label on transmitter and vehicle for frequency. Do not race vehicles with the same frequency.

 
II. QUICK START

Please read this Owner's Manual thoroughly.


1. Start with a full charge.
2. Turn vehicle switch ON. Press transmitter controls to run and control your vehicle.
3. When you're done driving, turn vehicle switch OFF. Remove all batteries for storage.

III. OPERATING YOUR VEHICLE


FORWARD

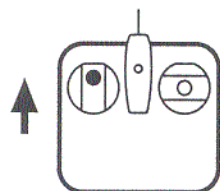



FORWARD "TURBO"

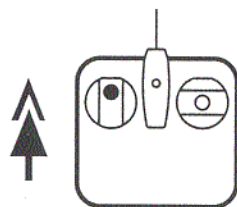 


BRAKING

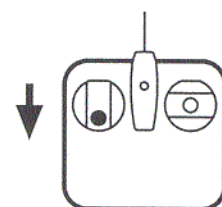 

LEFT TURN

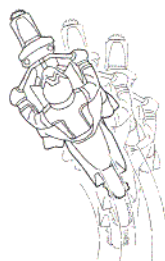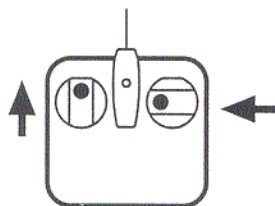  


RIGHT TURN

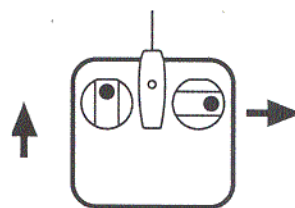 


IV. QUICK TIPS

1. When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries (or a recharge). Your vehicle's running time may change depending on your driving style.
2. Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical wires; large buildings; or CB radios. Try to stay away from these!
3. Point your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
4. Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe with a towel and allow to dry completely.
5. Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.

 
1.

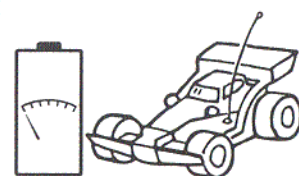

 
2.

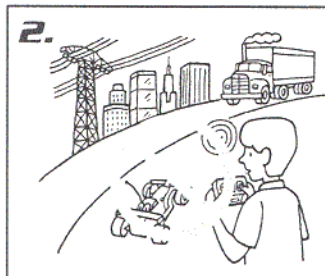

 
3.

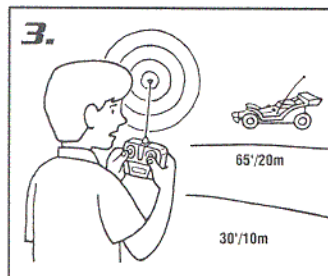

 4.

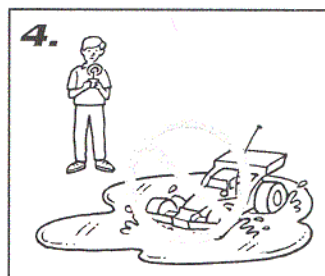

 5.

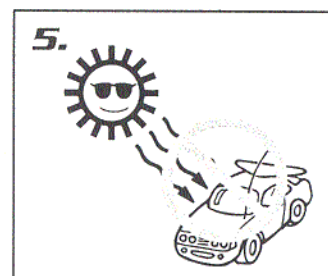

V. BATTERY CHARGING/CARE

(BATTERIES AND CHARGER NOT INCLUDED)

Your vehicle will not operate without the TYCO® R/C TMH™ FlexPak™ Battery Pack and Charger. The TMH™ FlexPak™ battery pack is designed for use exclusively in TYCO® R/C TMH™ Power vehicles. It will not work in any 6.0V or 9.6V NiCd battery-powered vehicles.

Your TMH FlexPak battery pack features a unique design (Patent Pending) which allows it to be configured in different ways for use in different TMH power vehicles. This feature allows maximum performance for each vehicle. To configure your FlexPak battery pack for use in this vehicle, please refer to Section VI, Battery Installation.

1. Plug the battery charger into standard wall outlet.
2. Hold the battery pack fully open, with the metal contacts at the top, as shown. The labels marked 1 and 2 in the upper left-hand corner should be facing you. Now slide the battery pack securely into the charger.
3. To disconnect, push the red button on the side of the charger. Hold the red button down while you slide out the battery pack.
4. New battery packs must be charged for 5 1/2 hours the first two times charged. After that, subsequent charges will require only 4 hours.
5. After charging, the battery pack will feel warm. This is normal for fully charged batteries.
6. Unlike alkaline batteries, which lose power gradually, your TMH FlexPak battery will run for its normal running time, depending on your particular vehicle, and then lose most of its power at once. It is now time to recharge the battery pack.
7. Unlike NiCd (Nickel-Cadmium) rechargeable batteries, your TMH FlexPak battery pack may be recharged at any time, irrespective of the level of charge remaining in the battery: you do not have to wait until the battery pack is fully discharged to recharge it.
8. After use, the battery pack will be hot! Wait at least 20 minutes until the battery pack cools down before recharging. Recharging a hot battery will greatly reduce the number of times your battery pack can be recharged.

BATTERY PACK CARE

Because of its unique design, other battery chargers will be unable to charge your TMH FlexPak battery pack. To charge your battery pack, use only the Tyco R/C TMH FlexPak battery charger.

IMPORTANT BATTERY INFORMATION:

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- For best performance use alkaline batteries (where disposable batteries are called for). Battery life may vary depending on battery brand.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable batteries before recharging. Recharge batteries only under adult supervision.
- Dispose of batteries safely.

CAUTIONS

- ✗ DO NOT RECHARGE BATTERY PACK IF IT'S HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- ✗ DO NOT RECHARGE A BATTERY PACK THAT SHOWS LEAKAGE OR CORROSION.
- ✗ DO NOT DISASSEMBLE THE BATTERY PACK. THE BATTERY PACK IS A SEALED NiMH (NICKEL-METAL HYDRIDE) BATTERY.
- ✗ DO NOT DISPOSE OF THE BATTERY PACK IN FIRE.
- ✗ EXERCISE CAUTION IN HANDLING A HOT BATTERY PACK.
- ✗ IF BATTERY PACK AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE CHARGING.

SPECIAL NOTE TO ADULTS:

- The battery charger is age-graded for ages 8 and over; the battery charger should be operated in the presence of children under age 8 only with adult supervision.
- Regularly examine for damage to the plug, enclosure and other parts. In the event of any damage, the toy must not be used with the transformer until the damage has been repaired.
- This toy is not intended for children under 3 years old. The transformer is not a toy.

 
 
 


TMH™ FlexPak™ Battery Pack and Charger



Additional TMH™ FlexPak™ Battery Pack

Have additional Battery Packs charged ahead of time for longer non-stop racing action. Uses the TMH FlexPak Charger.

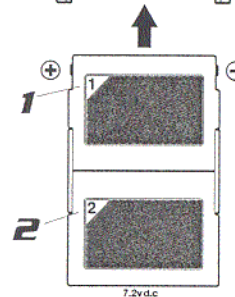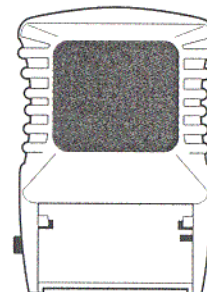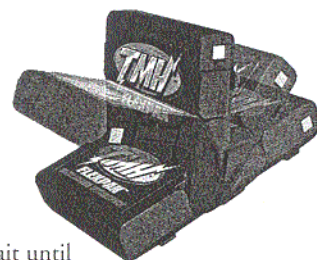

7.2vdc

Unlike NiCd (Nickel-Cadmium) rechargeable batteries, your TMH FlexPak battery pack requires no special procedures or precautions for disposal. However, as with all products, you should dispose of your battery pack in an environmentally responsible and considerate manner.



VI. BATTERY INSTALLATION

 
VEHICLE

1. Turn vehicle over. Fold the FlexPak battery pack over as shown, so that the label marked 4 in the upper left-hand corner is facing up, as shown. The metal battery contacts should be on the bottom, as shown.
2. Snap the folded FlexPak battery pack into the battery compartment with the contacts as shown. Rotate the battery compartment latches inward toward the battery pack until they engage fully, locking the battery pack into position.
3. To remove the battery pack, rotate the battery compartment latches to release the battery pack.

Estimated run time for this vehicle: 20-30 minutes




Estimated run time for this vehicle: 20-30 minutes

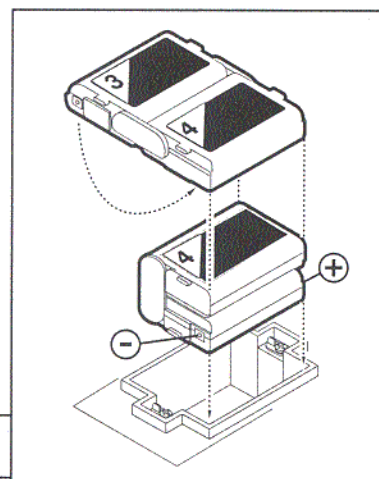

TRANSMITTER

 1. Install one 9-volt battery with polarity (+/-) as shown inside battery compartment.
2. The 9-volt transmitter battery will last much longer than the run time of the TMH FlexPak rechargeable battery pack.

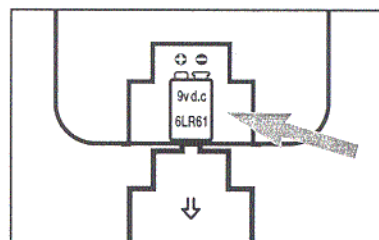


VII. CAUTIONS

Adults, this toy is recommended for children 6 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

Caution

 - DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- If this toy is being operated in the presence of children under 5 years of age, adult supervision is recommended.
- To avoid accidental operation, remove all batteries when not in use.
- DO NOT OPERATE your vehicle on streets! They're for real cars!

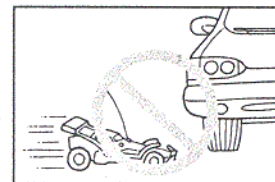

TROUBLESHOOTING

PROBLEM? - SOLUTIONS

Symptom	Probable Cause	Correction
Vehicle runs slowly or will not run.	<ul style="list-style-type: none"> • Loose battery connection or vehicle switch not ON. • Weak or uncharged rechargeable battery. • Weak transmitter battery. 	<ul style="list-style-type: none"> • Check battery connector and vehicle switch. • Charge battery or replace. • Replace with fresh alkaline battery.
Erratic operation or only short range possible.	<ul style="list-style-type: none"> • Radio interference likely. 	<ul style="list-style-type: none"> • Change location (see point 2 - Quick Tips).
Short battery life.	<ul style="list-style-type: none"> • Battery not fully charged. 	<ul style="list-style-type: none"> • Recharge TMH FlexPak battery pack. For maximum running time, make sure you give your battery pack a full 4 hour charge.
Vehicle doesn't work after going through water or snow.	<ul style="list-style-type: none"> • Water in the electronics area. 	<ul style="list-style-type: none"> • Vehicle will take several hours to dry. Allow to dry thoroughly before trying again. • Operate your vehicle in a dry area. Avoid driving in water and snow.

© 1999 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A.
PRINTED IN CHINA.
 All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Retain this address for future reference: Mattel U.K. Ltd., Meridian West, Leicester LE3 2WT.
 Mattel Australia Pty., Ltd., Richmond, Victoria 3121 - Consumer Advisory Service: 1800 800 812 (valid only in Australia).
 Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China. In Britain 49 MHz is not available. 27 MHz can be raced against 40 MHz vehicles.

COMPLIANCE WITH FCC REGULATIONS
 THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

CAUTION: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.