

# Setting Up the Remote Control

 
## Setup Remote to Control the Digital Adapter

### RF Remote Pairing Process:

When multiple remotes work in a shared space, interference can result. To avoid this problem, the remote must be paired with the Digital Adapter.

#### Step 1

Turn on your TV using the buttons on the TV or the TV remote. Make sure power is connected to your Digital Adapter and it is plugged into the TV.

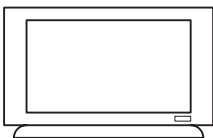

**Note:** Your TV must always be set to the proper channel (Ch 3 or Ch 4) or HDMI Input to match the output channel on the back of your Digital Adapter.

#### Step 2

Install the batteries (included in your kit) in your new remote control.

#### Step 3

 
Make certain no other Digital Adapter remote is in the area. Make sure power is connected to your Digital Adapter. Turn on your TV using the buttons on the TV or the TV remote (not a digital adapter remote in this instance).

#### Step 4

Press and hold both **DTA POWER** and **SELECT** keys at the same time.


Once the red light on the remote turns on, then release both keys.

Wait 10 seconds, a 3 digit validation code will display on the TV.

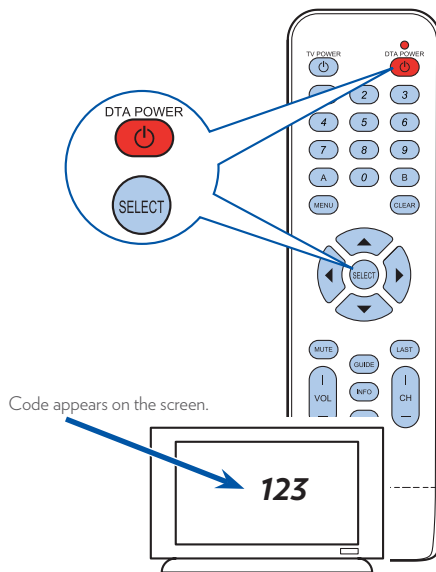

#### Step 5

 Enter the 3 digit code using the Digital Adapter remote. When remote is successfully paired with the Digital Adapter, the remote's red light will blink twice.

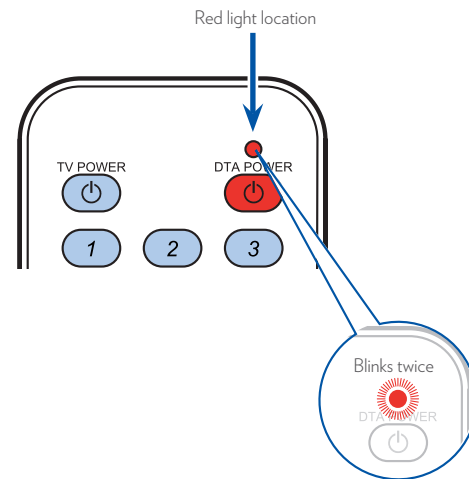

Proceed to back of this page to setup the Remote Control with your television.




## Setup Remote to Control the Television
 
### Step 6

Press and hold both Digit **1** and Digit **3** keys together until the red light turns on.

Release both keys.

Keep your eyes on the Remote so you can watch the red light.

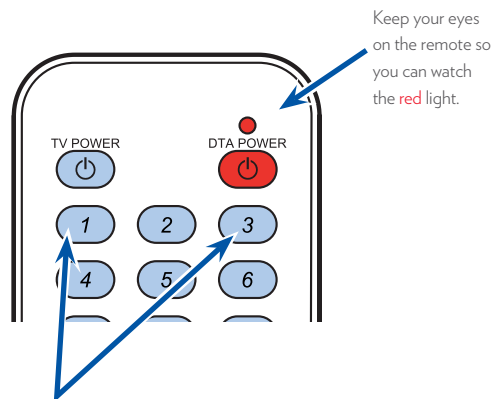

Press and hold both buttons at the same time

**Note:** Your TV must always be set to the proper channel (Ch 3 or Ch 4) or HDMI Input to match the output channel on the back of your Digital Adapter.

3698714A


### Step 7

 Point the new remote at the TV.

Press and hold the **TV POWER** key.

The remote will start searching for the right code while you are holding this key.

When the TV turns off, release the key within 2 seconds to lock in the code.

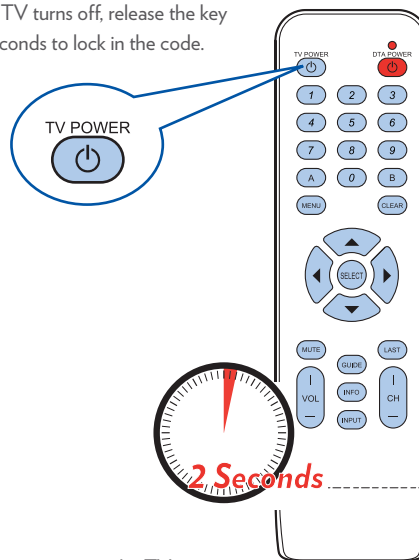

### Step 8

Point the new remote at the TV.

Press **TV POWER** on your Remote to turn on your TV.

If your TV responds (*turns on*), then you have successfully programmed your Remote.

**The setup of the Remote is now complete.**

If you are not successful the first time, try again.

## Two Remotes

If you were unable to program your remote, you will need to use two remotes to operate your TV:  
the Digital Adapter Remote  
*and*  
the one that came with your TV.

## Setting the Remote Volume

1. Use the remote control that came with your TV to adjust the volume to a comfortable level. This should be the last time you'll use this remote for volume control.
2. Going forward use only your Digital Adapter Remote to adjust volume up or down.

### Caution:

Don't use your TV remote to change channels.  
Your TV must always be set to the proper HDMI Input, Ch 3 or Ch 4  
or you will see a snowy or blank screen.