

Need more help?

Additional help is available online at www.technicolor.com.

Copyright 2013 Technicolor. All rights reserved.
DNS-QIG-20130131-0000 v2.0. Printed in EU.



PAP



DSL37173390

TECHNICOLOR WORLDWIDE HEADQUARTERS
1, Rue Jeanne d'Arc 1
92443 Issy-les-Moulineaux
France
www.technicolor.com



QUICK INSTALLATION GUIDE

Technicolor MediaAccess TG233

1

technicolor

EN	Safety Instructions and Regulatory Notices <small>Read this document prior to installation!</small>	1
FR	Consignes de Sécurité et Informations Réglementaires <small>Lisez ce document avant d'effectuer l'installation!</small>	8
DE	Sicherheitshinweise und Zulassungsbestimmungen <small>Lesen dieses Dokument vor Installation!</small>	14
ES	Instrucciones de Seguridad e Información Sobre Regulaciones <small>Lea este documento antes de proceder a la instalación!</small>	20
PT	Instruções de Segurança e Informações Sobre Normas <small>Leia este documento antes de iniciar a instalação!</small>	26
IT	Precauzioni di Sicurezza e Informazioni Sulla Normativa <small>Leggere questo documento prima di eseguire l'installazione!</small>	32
SV	Säkerhetsföreskrifter och Information <small>Läs säkerhetsföreskrifterna noggrant!</small>	37
NL	Veiligheidsvoorschriften en Regelgevinginformatie <small>Geleef dit document te lezen alvorens te starten met installatie!</small>	42

2

3

4

5

6

Setting up your Wi-Fi Media Bridge


Step 1: Carefully read the Safety Instructions and Regulatory Notices

Carefully read the Safety Instructions and Regulatory Notices included in the box before continuing with the installation of your Wi-Fi Media Bridge.

Step 2: Choose which of the following scenarios applies to your home


■ Scenario 1: TG233 Video Bridge

Your gateway is not a 5GHz gateway. You want to use one Wi-Fi Media Bridge near your gateway, and one near your set-top box. Continue with “Step 3: Set up one Wi-Fi Media Bridge near your gateway”.

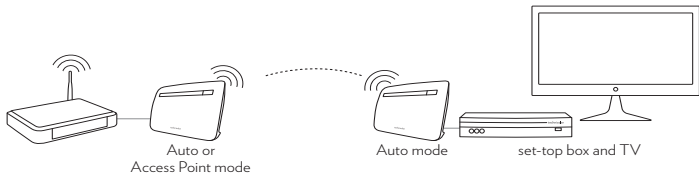

■ Scenario 2: Xstream Video Bridge

Your gateway is a 5GHz gateway. You only need a Wi-Fi Media Bridge near your set-top box. Continue with “Step 4: Set up one Wi-Fi Media Bridge near your set-top box”.

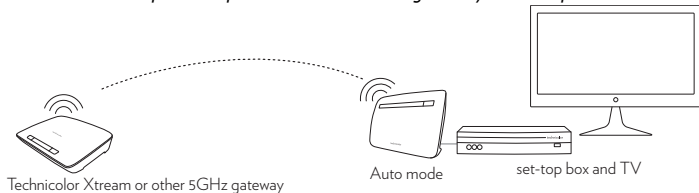

Step 3: Set up one Wi-Fi Media Bridge near your gateway

- 1 Make a wired connection to the Wi-Fi Media Bridge.
 - 1 Connect one end of the Ethernet cable (this is the cable with the yellow connectors) to the yellow Ethernet port on the back of your Wi-Fi Media Bridge.
 - 2 Connect the other end of the Ethernet cable to your gateway.
- 2 Connect the power supply adapter.
 - 1 Plug the connector of the electric power supply adapter into the Wi-Fi Media Bridge power inlet port.
 - 2 Plug the adapter into a nearby power outlet.
- 3 Turn on the Wi-Fi Media Bridge.

Wait two minutes. The **Power LED** must be **solid** green. If this is not the case, check the connections you made in the previous steps.
- 4 After two minutes, check the **Access Point LED** on the front panel. This LED must be green. If this is not the case:
 - 1 Switch the Wi-Fi Media Bridge to **Access Point** mode using the switch on the back panel.
 - 2 Restart the Wi-Fi Media Bridge by turning the power off and on again.
 - 3 Wait two minutes and check the **Access Point LED** again.

Step 4: Set up one Wi-Fi Media Bridge near your set-top box

- 1 Make a wired connection to the Wi-Fi Media Bridge.
 - 1 Connect one end of the Ethernet cable (this is the cable with the yellow connectors) to the yellow Ethernet port on the back of your Wi-Fi Media Bridge.
 - 2 Connect the other end of the Ethernet cable to your set-top box.
- 2 Connect the power supply adapter.
 - 1 Plug the connector of the electric power supply adapter into the Wi-Fi Media Bridge power inlet port.

- 2 Plug the adapter into a nearby power outlet.
- 3 Turn on the Wi-Fi Media Bridge.
Wait two minutes. The **Power LED** must be *solid* green. If this is not the case, check the connections you made in the previous steps.

Step 5: Make a wireless connection between both sides

- 1 Make sure your Wi-Fi Media Bridge has been turned on for at least two minutes. Shortly press the **WPS** (🔑) button on the front panel of the Wi-Fi Media Bridge near your gateway (for scenario 1) or on the gateway itself (for scenario 2).
- 2 The **WPS LED** (🔑) on the front panel starts blinking orange.
- 3 Within two minutes, start WPS on the Wi-Fi Media Bridge near your set-top box.
- 4 After some time The **WPS LED** (🔑) on the front panel turns green. Shortly after, the **Wireless LED** turns green as well. The wireless connection is now successfully established.

What if the WPS LED is blinking red?

This indicates that the Wi-Fi Media Bridge could not make a wireless connection.

Do the following:

- 1 Wait until the red blinking LED goes out, then try using WPS again.
- 2 Reposition the Wi-Fi Media Bridge slightly and try again.

If you still have trouble connecting to the Wi-Fi Media Bridge, refer to the user manual on www.technicolor.com for more detailed information.

Step 6: Optimize the link quality

You may need to optimize the link quality of the Wi-Fi Media Bridge. To do this, check the color of the **Link Quality LED** on the front panel of the Wi-Fi Media Bridge near your set-top box. If it is:

- Green: the link quality is optimal. You are now finished.

- Orange: the link quality is average. Change the position of the Wi-Fi Media Bridge until the LED turns green.
- Red: the link quality is bad. Change the position of the Wi-Fi Media Bridge until the LED turns green or orange.

Step 7: Optional: add an additional set-top box to the wireless network

If you have more than one set-top box you wish to connect to the wireless network, simply repeat the procedure from “*Step 4: Set up one Wi-Fi Media Bridge near your set-top box*” using another Wi-Fi Media Bridge.