


# OPERATOR'S MANUAL MANUAL DEL OPERADOR



## 19.2 VOLT RADIO/CHARGER RADIO/CARGADOR DE 19,2 V

Model No.  
315.EL2200  
Número de modelo  
315.EL2200

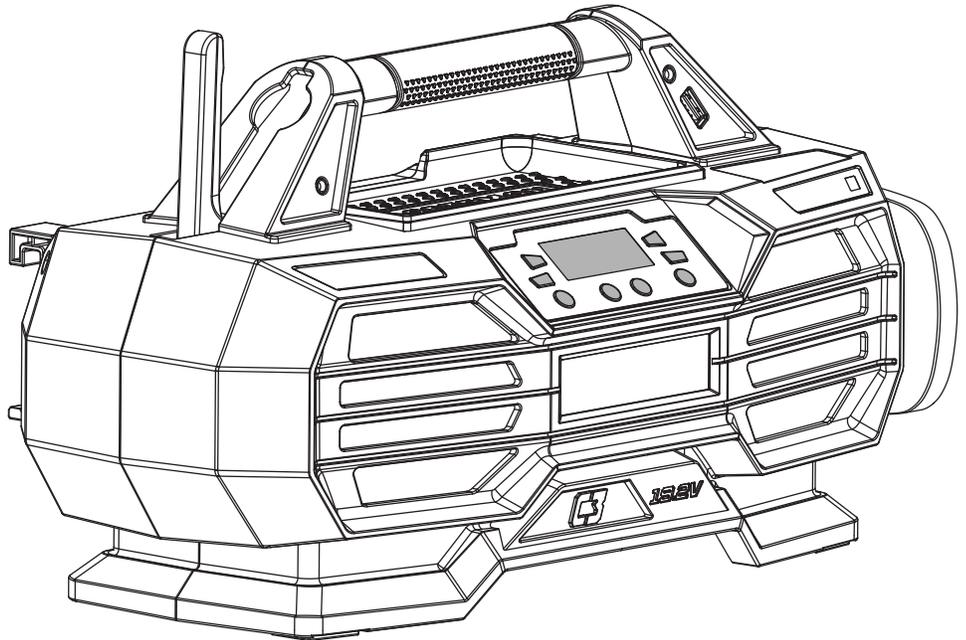

**⚠ WARNING:** To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

**⚠ ADVERTENCIA:** Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador antes de usar este producto.

**BATTERIES SOLD  
SEPARATELY**

**LAS BATERÍAS SE VENDEN POR  
SEPARADO**

Customer Help Line: 1-800-932-3188  
Teléfono de atención al consumidor: 1-800-932-3188

Sears Brands Management, 3333 Beverly Rd., Hoffman Estates, IL 60179 USA  
Visit the Craftsman web page: [www.sears.com/craftsman](http://www.sears.com/craftsman)  
Visite el sitio web de Craftsman: [www.sears.com/craftsman](http://www.sears.com/craftsman)

**Save this manual for future reference  
Guarde este manual para futuras consulta**

991000121  
8-8-14 (REV:01)



# TABLE OF CONTENTS / ÍNDICE DE CONTENIDO

## ENGLISH

■ Warranty .....	2
■ Introduction .....	2
■ Important Safety Instructions .....	3-4
■ Safety Rules for Charger .....	5
■ Symbols.....	6
■ Electrical .....	7
■ Assembly .....	7
■ Operation.....	8-12
■ Maintenance.....	12
■ Illustrated Parts List.....	13
■ Illustrations .....	i-iii
■ Parts Ordering / Service .....	Back Page

## ESPAÑOL

■ Garantía .....	2
■ Introduction .....	2
■ Instrucciones de seguridad importantes.....	3-4
■ Reglas de seguridad para el empleo del cargador.....	5
■ Símbolos.....	6
■ Aspectos eléctricos .....	7
■ Armado .....	7
■ Funcionamiento.....	8-12
■ Mantenimiento.....	12
■ Ilustraciones .....	i-iii
■ Pedidos de piezas / Servicio .....	Pág. posterior

# WARRANTY / GARANTÍA

## CRAFTSMAN LIMITED WARRANTY

FOR ONE YEAR from the date of sale, this product is warranted against defects in material or workmanship. WITH PROOF OF SALE, a defective product will be replaced free of charge.

**For warranty coverage details to obtain free replacement, visit the web page: [www.craftsman.com/warranty](http://www.craftsman.com/warranty).**

This warranty does not cover brackets, which are expendable parts that can wear out from normal use within the warranty period.

This ONE YEAR warranty is void if this product is ever used while providing commercial services or if rented to another person. For 90 DAY commercial and rental use terms, see the Craftsman warranty web page.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Sears Brands Management Corporation, Hoffman Estates, IL 60179**

\* \* \*

## GARANTÍA LIMITADA DE CRAFTSMAN POR UN AÑO

A partir de la fecha de venta, y DURANTE UN AÑO, este producto goza de garantía por defectos en materiales o mano de obra.

ANTE LA PRESENTACIÓN DEL COMPROBANTE DE VENTA, un producto defectuoso se reemplazará gratis.

**Si desea conocer los detalles de la cobertura de la garantía para conseguir reparaciones o recambios, visite el sitio Web: [www.craftsman.com/warranty](http://www.craftsman.com/warranty).**

Esta garantía no cubre los soportes, que son las piezas fungible que puede desgastarse por el uso normal durante el período de garantía.

Esta garantía POR UN AÑO se anulará en caso de que el producto se utilice al menos una vez en servicios comerciales o si se lo alquila a otra persona. Para conocer los términos de 90 DÍAS para aplicaciones comerciales y alquileres, consulte la página web de garantía de Craftsman.

Esta garantía le otorga derechos legales específicos y también puede gozar de otros derechos que varían según el estado.

**Sears Brands Management Corporation, Hoffman Estates, IL 60179**

# INTRODUCTION / INTRODUCCIÓN

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

\*\*\*

Este producto ofrece numerosas características para hacer más agradable y placentero su uso. En el diseño de este producto se ha conferido prioridad a la seguridad, el desempeño y la fiabilidad, por lo cual se facilita su manejo y mantenimiento.

# IMPORTANT SAFETY INSTRUCTIONS

**⚠ WARNING! READ THESE INSTRUCTIONS.** Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

## KEEP THESE INSTRUCTIONS

### HEED ALL WARNINGS

### FOLLOW ALL INSTRUCTIONS

- **Do not use this apparatus near water.**
- **Clean only with dry cloth.**
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- **Only use attachments/accessories specified by the manufacturer.**
- **Unplug this apparatus during lightning storms or when unused for long periods of time.**
- **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **When servicing a product, use only identical replacement parts. Follow instructions in the Maintenance section of this manual.** Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.
- **Know your product. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this product.** Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Do not operate products in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Products create sparks which may ignite the dust or fumes.

## ELECTRICAL SAFETY

- **A battery operated product with integral batteries or a separate battery pack must be recharged only with the specified charger for the battery.** A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- **Use battery operated product only with specifically designated battery pack.** Use of any other batteries may create a risk of fire.
- **Use battery only with charger listed.** For use with 19.2V nickel-cadmium and 19.2V lithium-ion battery packs, see tool/appliance/battery pack/charger correlation supplement 988000-272.

## PERSONAL SAFETY

- **Do not use on a ladder or unstable support.** Stable footing on a solid surface enables better control of the product in unexpected situations.
- **Do not use the radio to listen to music or other audio programs while operating machinery.** Doing so may cause distractions that could result in serious personal injury.
- **This radio is capable of producing sound levels that can be dangerous to long-term hearing.** Listening to music at high volume for any period of time may cause noise-induced hearing loss. The higher the volume, the less time required before your hearing may be affected.

## PRODUCT USE AND CARE

- **When battery pack is not in use, keep it away from other metal objects like: paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another.** Shorting the battery terminals together may cause sparks, burns, or a fire.
- **Keep the radio and its handle dry, clean and free from oil and grease.** Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean the radio. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.
- **To reduce the risk of electric shock, do not expose to water or rain.**
- **Battery products do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery product or when changing accessories.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.

# IMPORTANT SAFETY INSTRUCTIONS

- **Do not place battery products or their batteries near fire or heat.** This will reduce the risk of explosion and possibly injury.
- **Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow.** A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- **Batteries can explode in the presence of a source of ignition, such as a pilot light.** To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- **Do not charge battery product in a damp or wet location.** Following this rule will reduce the risk of electric shock.
- **For best results, your battery product should be charged in a location where the temperature is more than 50°F but less than 100°F.** To reduce the risk of serious personal injury, do not store outside or in vehicles.
- **Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.** Following this rule will reduce the risk of serious personal injury.
- **To reduce the risk of personal injury and electric shock, the product should not be played with or placed where small children can reach it.**
- **Inspect power supply cord for damage such as frays, splits, discoloration, etc.** Do not use the product if the cord is damaged.
- **If the power supply cord is damaged,** it must be replaced only by the manufacturer or by an authorized service center to avoid risk.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan them these instructions also.

## BLUETOOTH® LICENSE STATEMENT

The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sears Brands Management is under license. Other trademarks and trade names are those of their respective owners.

# SAFETY RULES FOR CHARGER

**⚠ WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS.** Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

- **Before using charger**, read all instructions and cautionary markings in this manual, on charger, battery, and product using battery to prevent misuse of the products and possible injury or damage.

**⚠ WARNING!** Charge only one nickel-cadmium or lithium-ion rechargeable battery at a time. Other types of batteries may burst, causing personal injury or damage. For compatible battery packs see tool/appliance/battery pack/charger correlation supplement 988000-272.

- **Do not use charger outdoors or expose to wet or damp conditions.** Water entering charger will increase the risk of electric shock.
- **Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.** Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- **Do not abuse cord or charger.** Never use the cord to carry the charger. Do not pull the charger cord rather than the plug when disconnecting from receptacle. Damage to the cord or charger could occur and create an electric shock hazard. Replace damaged cords immediately.
- **Make sure cord is located so that it will not be stepped on, tripped over, come in contact with sharp edges or moving parts or otherwise subjected to damage or stress.** This will reduce the risk of accidental falls, which could cause injury, and damage to the cord, which could result in electric shock.
- **Keep cord and charger from heat to prevent damage to housing or internal parts.**
- **Do not let gasoline, oils, petroleum-based products, etc. come in contact with plastic parts.** They contain chemicals that can damage, weaken, or destroy plastic.
- **Always wear eye protection with side shields marked to comply with ANSI Z87.1.** Failure to do so could

result in objects being thrown into your eyes resulting in possible serious injury.

- **An extension cord should not be used unless absolutely necessary.** Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:

- a. That pins on plug of extension cord are the same number, size and shape as those of plug on charger.
- b. That extension cord is properly wired and in good electrical condition; and
- c. That wire size is large enough for AC ampere rating of charger as specified below:

Cord Length (Feet)	25'	50'	100'
Cord Size (AWG)	16	16	16

**NOTE:** AWG = American Wire Gauge

- **Do not operate charger with a damaged cord or plug**, which could cause shorting and electric shock. If damaged, have the charger replaced by an authorized serviceman.
- **Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way.** Take it to an authorized serviceman for electrical check to determine if the charger is in good working order.
- **Do not disassemble charger.** Take it to an authorized serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- **Unplug charger from outlet before attempting any maintenance or cleaning to reduce the risk of electric shock.**
- **Disconnect charger from the power supply when not in use.** This will reduce the risk of electric shock or damage to the charger if metal items should fall into the opening. It also will help prevent damage to the charger during a power surge.
- **Risk of electric shock.** Do not touch uninsulated portion of output connector or uninsulated battery terminal.
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also to prevent misuse of the product and possible injury.

---

## IMPORTANT SAFETY INSTRUCTIONS

### 1. SAVE THESE INSTRUCTIONS - DANGER: TO REDUCE RISK OF FIRE OR ELECTRIC SHOCK CAREFULLY FOLLOW THESE INSTRUCTIONS.

This manual contains important safety and operating instructions for radio/charger EL2200.

2. **Before using battery charger**, read all instructions and cautionary markings on battery charger, battery, and product using battery.
3. **⚠ CAUTION:** To reduce the risk of injury, charge only lithium-ion or nickel-cadmium rechargeable batteries. Other types of batteries may burst, causing personal injury or damage.

# SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	<b>DANGER:</b>	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	<b>WARNING:</b>	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	<b>CAUTION:</b>	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	<b>NOTICE:</b>	(Without Safety Alert Symbol) Indicates important information not related to an injury hazard, such as a situation that may result in property damage.

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear eye protection with side shields marked to comply with ANSI Z87.1.
	Electric Shock Alert	Indicates uninsulated material within the unit that may cause electrical shock. Do not remove product covering.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Recycle Symbols	This product uses nickel-cadmium and lithium-ion batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
	Alternating Current	Type of current
	Direct Current	Type or a characteristic of current
	Class II Construction	Double-insulated construction
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time

## CALIFORNIA PROPOSITION 65

 **WARNING:** This product may contain chemicals, including lead, known to the State of California to cause cancer, birth defects or other reproductive harm. **Wash hands after handling.**

# ELECTRICAL

## DOUBLE INSULATION

Double insulation is a concept in safety in electric products, which eliminates the need for the usual three-wire grounded power cord. All exposed metal parts are isolated from energized internal components with protecting insulation.

**⚠ WARNING:** The double insulated system is intended to protect the user from shock resulting from a break in the product's internal wiring. Observe all normal safety precautions to avoid electrical shock.

**NOTE:** Servicing of a product with double insulation requires extreme care and knowledge of the system and should be performed only by a qualified service technician. For service, we suggest you return the product to your nearest authorized service center for repair. Always use original factory replacement parts when servicing.

## ELECTRICAL CONNECTION

This product should be connected to a **power supply that is 120 volts, AC only (normal household current), 60 Hz**. Do not operate this product on direct current (DC) through the power cord. If the product does not operate when plugged into an outlet, double-check the power supply.

## EXTENSION CORDS

When using a product at a considerable distance from a power source, be sure to use an extension cord that has the capacity to handle the current the product will draw. An undersized cord will cause a drop in line

voltage, resulting in overheating and loss of power. Use the chart to determine the minimum wire size required in an extension cord. Only round jacketed cords listed by Underwriter's Laboratories (UL) should be used.

When using this product outdoors, use an extension cord that is designed for outside use. This type of cord is designated with "WA" or "W" on the cord's jacket.

Before using any extension cord, inspect it for loose or exposed wires and cut or worn insulation.

\*\*Ampere rating (on product data plate)

Cord Length	Wire Size (A.W.G.)					
	0-2.0	2.1-3.4	3.5-5.0	5.1-7.0	7.1-12.0	12.1-16.0
25'	16	16	16	16	14	14
50'	16	16	16	14	14	12
100'	16	16	14	12	10	—

\*\*Used on 12 gauge - 20 amp circuit.

**NOTE:** AWG = American Wire Gauge

**⚠ WARNING:** Keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools, or other obstructions while you are working with this product. Failure to do so can result in serious personal injury.

**⚠ WARNING:** Check extension cords before each use. If damaged replace immediately. Never use a product with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

# ASSEMBLY

**⚠ WARNING:** Do not use this product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled could result in serious personal injury.

**⚠ WARNING:** Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

If any parts are damaged or missing, please call 1-800-932-3188 for assistance.

# OPERATION

**⚠ WARNING:** Do not allow familiarity with this product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

**⚠ WARNING:** Always remove the battery pack from the product and disconnect the AC power cord when you are assembling parts, cleaning, or when not in use. Removing these energy sources will prevent accidental starting that could cause serious personal injury.

**⚠ WARNING:** The radio/charger is not waterproof. Do not submerge in liquid. Failure to heed this warning could result in serious personal injury.

**NOTICE:** Always refer to the manual for any device recommended for use as an attachment or accessory. Proper use of any device, when attached to the radio/charger, is the sole responsibility of the operator. Improper use may damage the device or the product.

**⚠ WARNING:** This radio is capable of producing sound levels that can be dangerous to long-term hearing. Listening to music at high volume for any period of time can cause noise-induced hearing loss. The higher the volume, the less time required before your hearing could be affected.

## APPLICATIONS

You may use this product for the purposes listed below:

- Listening to AM/FM radio, MP3 players, CD players, and other audio devices
- Charging 19.2 V battery packs and USB capable devices
- Streaming audio from BLUETOOTH® enabled devices

For complete charging instructions, refer to **Charging** later in the *Operation* section.

## ATTACHING VERSATRACK BRACKETS

See *Figure 1, page ii*.

- Push the VersaTrack brackets into the slots on the back of the radio, as shown.
- Slide the brackets up to lock them in place.

## INSTALLING/REMOVING AAA BATTERIES

See *Figure 2, page ii*.

It is advisable to write down saved channels before replacing the AAA batteries.

There is a 15-second time frame for replacing the AAA batteries. If the batteries are not replaced within 15 seconds, the radio will lose all settings previously stored in memory, and they will require reprogramming.

Always use new alkaline batteries for replacement.

**⚠ WARNING:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

- Remove the AC power cord from the cord wrap.
- Loosen the screw in the battery door. Remove door and set aside.
- Install two new AAA batteries according to polarity indicators inside the battery compartment.
- Replace the battery door and tighten screw to secure.

## CHARGER ONLY OPERATION

See *Figure 2, page ii*.

A switch has been installed in the bottom of the AAA battery compartment. The purpose of this switch is to disable the radio circuits so that the charging functions of the radio/charger can be tested for compliance with California Energy Commission requirements for Battery Charger systems. If the switch is in the up position, the radio/charger will operate normally; if the switch is in the down position, the radio circuits will be disabled while the charger circuits continue to function normally.

You should not need to operate this switch under normal use conditions. However, if you find that the radio is not working while the charger seems to work normally, confirm that this switch is in the up position.

## INSTALLING/REMOVING BATTERY PACK

See *Figure 3, page ii*.

- Place the battery pack in the radio/charger, aligning the rib on the battery pack with the groove in the battery port.
- Make sure the latches on the battery pack snap into place and the battery pack is secured to the radio before beginning operation.
- Depress the latches to remove the battery pack.

## AC POWER CORD

See *Figure 4, page ii*.

The AC power cord can connect the radio/charger to a power supply when a battery is not available or when a battery has a low charge. The power cord has a pass-through plug which allows you to connect the radio/charger and another device to the same outlet.

# OPERATION

Always turn the radio/charger off before disconnecting it from the power source.

**NOTE:** Always remove the battery pack from the radio/charger before unplugging the unit from a power source, or before plugging the unit into a power source. Connecting the product to a power source with the battery pack installed could affect the performance of the radio/charger or the battery pack.

## CHARGING

See Figures 3 - 5, page ii.

Battery packs are shipped in a low charge condition to prevent possible problems. Therefore, you should charge them before first use. If the charger does not charge the battery pack under normal circumstances, return both the battery pack and radio/charger to your nearest repair center for electrical check.

This product charges battery packs in as little as 6 hours, depending upon the type of battery pack.

- Connect the radio/charger to an AC power supply.
  - NOTE:** Make sure the power supply is normal household voltage, **120 volts, AC only, 60 Hz.**
- Install battery pack into the radio/charger as described earlier.
- Press on the battery pack to be sure contacts on the battery pack engage properly with contacts in the radio/charger.

## LED FUNCTIONS

See Figure 5, page ii.

MODE	LED	ACTION
<b>Evaluating</b>	● ● ● ● ● Flashing	Battery is being tested. If battery is hot or cold, charger will begin charging when temperature reaches an appropriate level.
<b>Charging</b>	— — — Flashing	Battery is being charged.
<b>Charged</b>	————— On	Battery pack is fully charged and charger is in Energy Save mode.

- If charger indicates “Evaluate” for longer than 30 minutes at room temperature, battery pack may be defective. Try to repeat the conditions a second time by removing and reinstalling the battery pack. If the LED status repeats a second time, try charging a different battery.
- If a different battery charges normally, dispose of the defective pack (see battery pack operator’s manual).
- If a different battery also indicates “Evaluate” for longer than 30 minutes, the charger may be defective.

- Do not place the radio/charger or battery pack in an area of extreme heat or cold. It will work best at normal room temperature.
- The battery pack may become slightly warm to the touch while charging. This is normal and does not indicate a problem.
- When the battery pack is fully charged, remove the battery pack.

## CHARGING A HOT BATTERY PACK

When using a tool continuously, the battery pack may become hot. A hot battery pack may be placed directly into the radio/charger but charging will not begin until the battery temperature cools to within acceptable temperature range. When the battery pack cools to approximately 120°F (40°C), the radio/charger will automatically begin charging.

## CHARGING A COLD BATTERY PACK

A cold battery pack may be placed directly into the radio/charger but charging will not begin until the battery temperature warms to within acceptable temperature range. When the battery pack warms to approximately 32°F (0°C), the charger will automatically begin charging.

# OPERATION

## LCD DISPLAY

See Figures 6 - 7, pages ii and iii.

When the radio/charger is connected to a power supply and in the ON position, the LCD display will show the time, frequency, mode, and settings.

**NOTE:** The illustrations of the LCD display shown in this manual are only examples of the frequencies you may see on your radio/charger and are not the exact frequencies that you may choose to listen to.

## MENU NAVIGATION BUTTONS

See Figures 6 - 7, pages ii and iii.

Use the menu navigation buttons to turn the radio/charger on and off, control the volume, change frequencies, toggle between modes and set the time.

### TURNING THE RADIO/CHARGER ON AND OFF:

Press the **ON/OFF** button to turn the radio/charger ON and OFF.

When the radio/charger is on and a battery pack is connected as the power supply, the  symbol will be shown in the LCD display. If the battery charge is low, a flashing low battery indicator will be displayed . If the radio is connected to an AC power supply, the battery indicator will disappear.

### ADJUSTING THE VOLUME:

When the radio/charger is turned ON, the unit will return to the last volume setting used.

- To increase the volume, press the **VOL +** button.
- To decrease the volume, press the **VOL -** button.

### SWITCHING MODES:

To switch modes, press the **MODE** button. The selected mode will be displayed above the frequency. Press the **MODE** button until the desired mode is selected. There are four modes:

- FM mode
- AM mode
- AUX mode
- BLUETOOTH® mode

### AM/FM TUNING:

Use the **SCAN ◀** and **SCAN ▶** buttons to manually tune to the desired radio frequency. The selected frequency is displayed on the LCD.

- Press the **SCAN ◀** button to tune to a lower frequency and press the **SCAN ▶** button to tune to a higher frequency.

**NOTE:** Briefly press either button (not press and hold) to tune one frequency step at a time. Press and hold either button to quickly find the next frequency with clear reception.

- To decrease interference or electrical noise, adjust the position of the antenna or move the radio/charger to a higher elevation. The antenna folds into the handle and out of the way when not in use.

### STORING A PRESET IN MEMORY:

The memory feature saves up to 20 frequencies as presets in the radio's memory. You can save up to ten (10) frequencies each for FM and AM modes.

- Tune to the desired AM or FM frequency.
- Press and hold the **PRESET** button until the word "MEMORY" and the preset position number flash on the screen.

- Press the **SCAN ◀** or **SCAN ▶** button to choose a preset position number.

**NOTE:** There are ten (10) preset positions for FM and ten (10) for AM. Only one station can be saved in each preset position.

- Press the **PRESET** button again to store the frequency.

### To tune to presets (FM or AM mode):

- Press and release the **PRESET** button to cycle through each preset position number and its associated frequency.

### SETTING THE CLOCK:

The time appears on the LCD display when the radio/charger is on.

- Press and hold the **CLK/DSPY** button until the "hour" display blinks.

- Press the **VOL +** or **VOL -** button to select the hour.

**NOTE:** Time is displayed in 12-hour format only. To select an hour that is after noon and before midnight, cycle the hours until "PM" appears in the display.

- Press and release the **CLK/DSPY** button to lock in the hour setting. "Minutes" will begin to blink.

- Press the **VOL +** or **VOL -** button to select the desired number.

- Press and release the **CLK/DSPY** button again to confirm the time.

### USING A PHONE/MP3 PLAYER (NOT INCLUDED) WITH THE RADIO/CHARGER

See Figure 8, page iii.

- Press the **MODE** button until AUX mode is highlighted.
- Connect one end of a 3.5 mm audio patch cord (maximum 8 in. long) to the device.
- Connect the other end of the 3.5 mm patch cord to the auxiliary input jack.
- The phone/MP3 player must be on and in play mode for sound to be heard through the speakers.

# OPERATION

- All phone/MP3 player controls can be used normally while connected to radio.  
**NOTE:** Volume for any device connected through the auxiliary input jack can be adjusted using the volume control for that device or by using the radio's **VOL +** or **VOL -** button.
- Turning the radio/charger off will NOT turn the phone/MP3 player off.
- The auxiliary input jack DOES NOT provide charging function.
- For complete operating instructions for the connected device, always refer to the manual that was included with your device.

## USING THE USB DEDICATED CHARGING PORT

See Figure 9, page iii.

The USB dedicated charging port provides charging power of 5 Volts DC at up to 2 Amps for your cell phone, MP3 player, tablet, or other USB devices.

**NOTICE:** Attempting to charge devices rated more than 2 Amps could damage the USB dedicated charging port and/or the device.

- Connect one end of a USB cable (not provided) to your USB device.
- Connect the other end of the USB cable (not provided) to the USB dedicated charging port to begin charging the device.  
**NOTE:** The USB dedicated charging port provides power only; it does not provide any communication capabilities.
- When the radio/charger is operating on battery power, the USB dedicated charging port will continue to function for approximately 1 hour after turning the radio OFF. If the radio remains inactive after this time, charging will stop. Turn the radio on to resume operation.

## USING AN EXTERNAL SPEAKER/RECORDING DEVICE (NOT INCLUDED) WITH THE RADIO/CHARGER

See Figure 10, page iii.

- Connect one end of a 3.5 mm audio patch cord (maximum 8 in. long) to the device.
- Connect the other end of the 3.5 mm patch cord to the auxiliary output jack.
- External speakers must be on for sound to be heard. Recorders must be on and in record mode to record sound.

**NOTE:** Use recording devices only in accordance with manufacturer's instructions, and all local, state, and federal laws when dealing with copyrighted material.

- All external speakers/recorder controls can be used normally while connected to the radio/charger.
- Turning the radio/charger off WILL NOT turn the external speakers/recorder off.
- The auxiliary output jack DOES NOT provide charging function.
- For complete operating instructions for all external speakers and recorders, always refer to the manual that was included with your model.

## USING A BLUETOOTH® ENABLED DEVICE (NOT INCLUDED) WITH THE RADIO/CHARGER

See Figure 11, page iv.

- Press the **MODE** button until the (📶) BLUETOOTH® mode is highlighted.
- When the radio/charger is switched to (📶) BLUETOOTH® mode, the unit will attempt to pair to a BLUETOOTH® enabled device and "bt" will flash in the LCD display.  
**NOTE:** The radio/charger will automatically attempt to connect to the last device it was paired to. If a connection cannot be established within five seconds, the radio/charger will make itself available to other BLUETOOTH® enabled devices.
- BLUETOOTH® enabled devices must be within 30 ft. of the radio and set to search/scan in order to pair with the radio/charger.
- Select "Craftsman Stereo" from your device's list of available BLUETOOTH® signals to pair the device and the radio/charger. No password or PIN is required for connection.
- When the device has successfully paired with the radio/charger, "bt" will stop flashing.  
**NOTE:** When a device is paired to the radio/charger, information for connecting to the device is saved in the radio/charger's memory.
- When streaming audio from a BLUETOOTH® enabled device, press the **SCAN** ◀ or **SCAN** ▶ button to go to the previous or next track. Briefly press and release the **PRESET** button to cycle between pausing and playing the audio.  
**NOTE:** These controls may not be supported by the BLUETOOTH® device and/or application you are using.

# OPERATION

- All BLUETOOTH® enabled device controls can be used normally while paired to the radio.

**NOTE:** Volume for any device paired to the radio can be adjusted using the volume control for that device or by using the radio's **VOL +** or **VOL -** button.

- To disconnect the BLUETOOTH® enabled device, press and hold the **PRESET** button. When the device is disconnected, "bt" will begin flashing in the LCD display and the radio/charger will begin searching for another device.

## ATTACHING THE RADIO/CHARGER TO A VERSATRACK TRACKWALL (NOT INCLUDED)

*See Figures 12 - 13, page iv.*

The VersaTrack brackets included with your radio/charger can be used to secure the product to the VersaTrack trackwall.

**NOTE:** To purchase a VersaTrack trackwall, visit your nearest Sears retail store or go to [www.sears.com](http://www.sears.com).

- Ensure that the trackwall is securely installed to the mounting surface and the brackets are attached to the radio correctly.
- Place the product on the trackwall by aligning the rib on the brackets with the grooves in the trackwall as shown.
- Slide the tool down until it is fully seated on the trackwall.

## FCC COMPLIANCE

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation is subject to the following two conditions:

1. This device may **not** cause harmful interference and,
2. This device must accept any interference received, including interference that may cause undesired operation.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# MAINTENANCE

 **WARNING:** When servicing, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

## GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.


 **WARNING:** Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced by a qualified service dealer.

## CRAFTSMAN RADIO – MODEL NUMBER 315.EL2200

The model number will be found on a label attached to the radio/charger housing. Always mention the model number when ordering repair parts. To purchase parts, call the following toll free number: 1-888-331-4569.

### SEE BACK PAGE FOR PARTS ORDERING INSTRUCTIONS

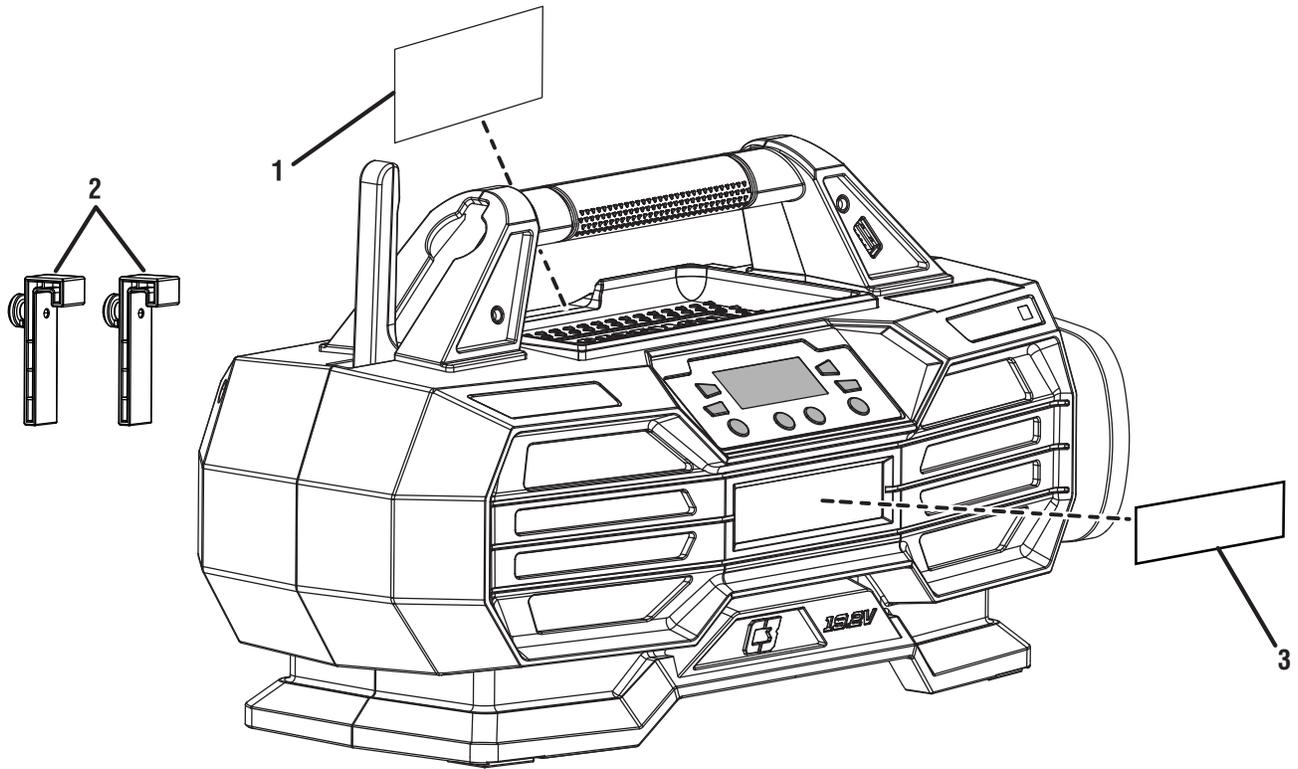

### PARTS LIST

Key No.	Part Number	Description	Qty.
1	941121381	Data Label .....	1
2	019508001046	VersaTrack Bracket .....	2
3	941002144	Logo Label .....	1
	991000121	Operator's Manual (Not Shown)	

# **CRAFTSMAN®**

**Product questions or problems?**

# **1-888-331-4569**

## **Customer Care Hot Line**

**Get answers to questions, troubleshoot problems,  
order parts, or schedule repair service.**

Para respuestas a preguntas o problemas, y ordenar  
piezas o pedir servicio para la reparación de su equipo.

**To help us help you, register your product at [www.craftsman.com/registration](http://www.craftsman.com/registration)**

Para poderte ayudar mejor, registra tu producto en [www.craftsman.com/registration](http://www.craftsman.com/registration)

---

**Join the Craftsman Club today!**

## **CRAFTSMAN® CLUB**

**[www.craftsman.com/signup](http://www.craftsman.com/signup)**

**Receive exclusive member benefits including special pricing and offers,  
project sharing, expert advice, and SHOP YOUR WAY REWARDS!**

Como miembro exclusivo, recibe diversos beneficios como ofertas, precios especiales, proyectos nuevos, consejos de expertos y nuestro programa de puntos SHOP YOUR WAY REWARDS!