 
 
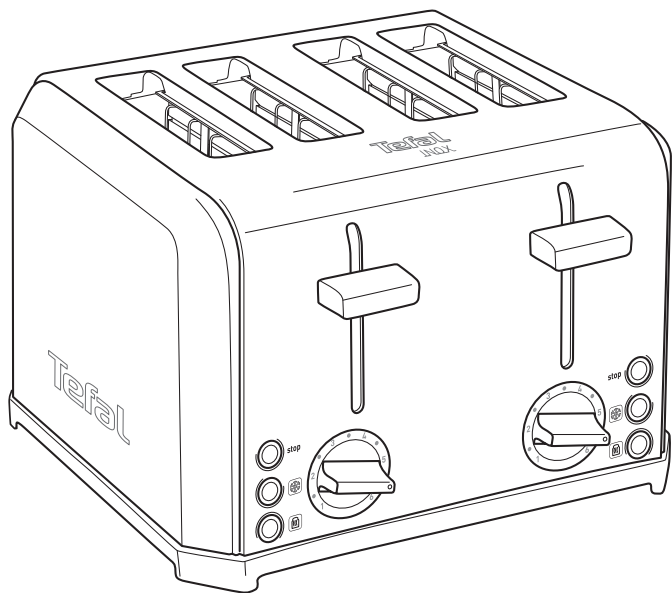 
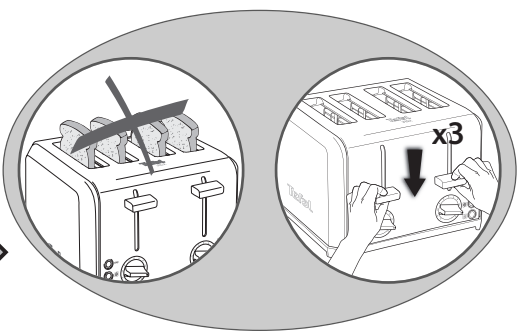 
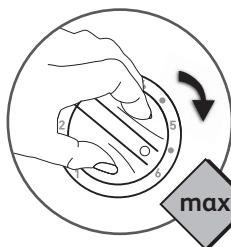 
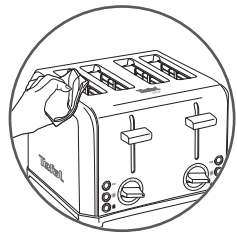 


# Tefal

 
 
 
 
 
## INOX

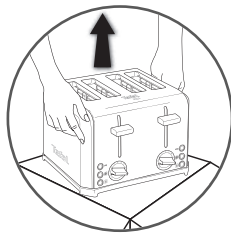




# 1. FIRST USE



## 2. TOASTING

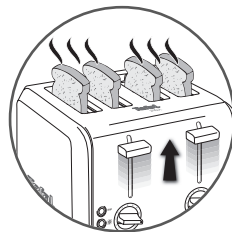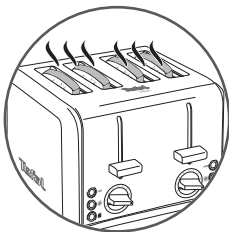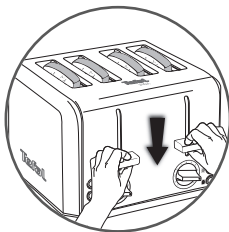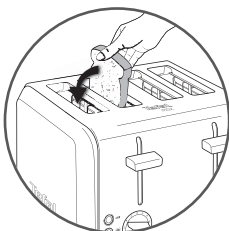



## 3. HIGH-LIFT



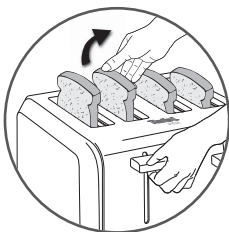 
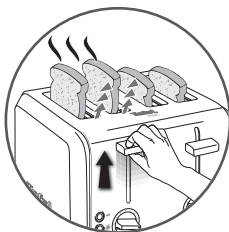 
 


## 4. STOP/EJECT




 
 
stop/eject

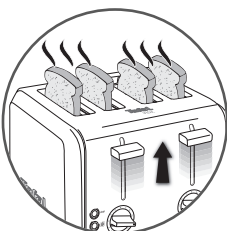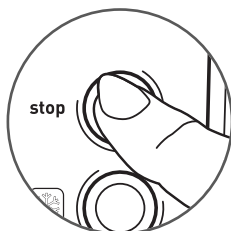





## 5. REHEAT

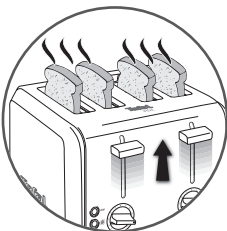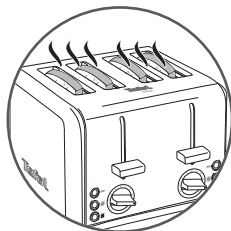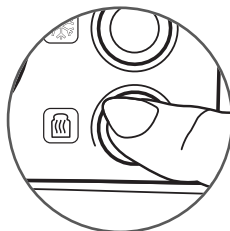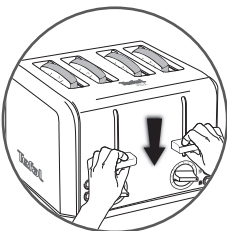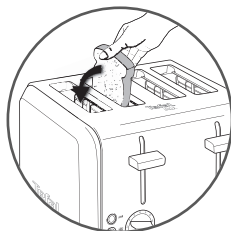     






## 6. DEFROST

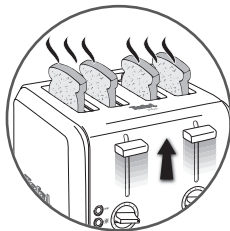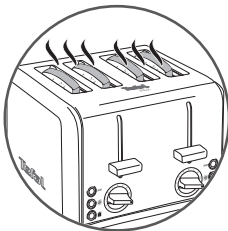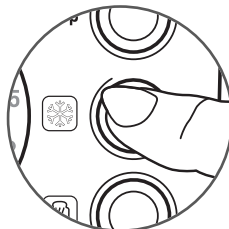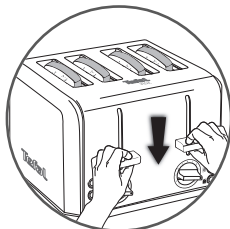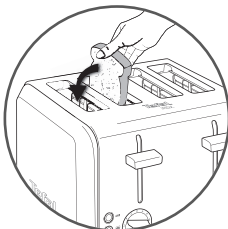     

## 7. CLEANING

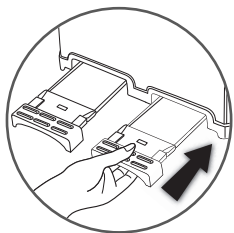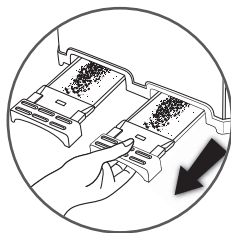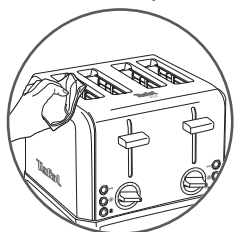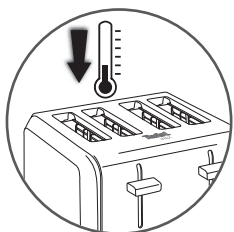    

## 8. DO NOT

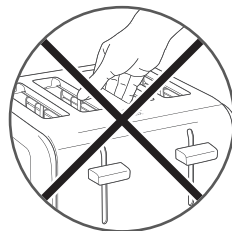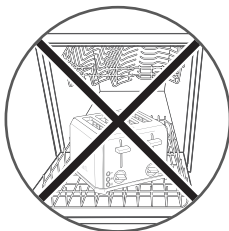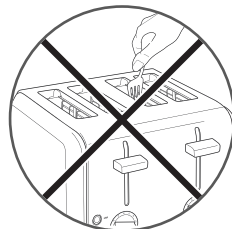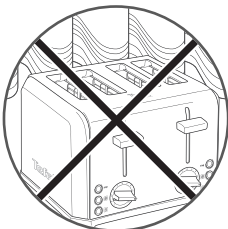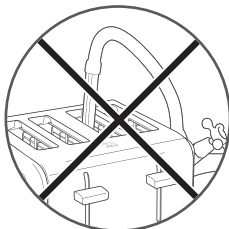     

Réf. NC00018171 • 09/2010 • Subject to modifications  
**ESPACE GRAPHIQUE**