 


| | |
|---------------------------|----|
| • MANUAL DEL USUARIO | 1 |
| • OWNER'S INSTRUCTIONS | 9 |
| • MODE D'EMPLOI | 17 |
| • BEDIENUNGSANLEITUNG | 25 |
| • ISTRUZIONI PER L'UTENTE | 33 |
| • HANDLEIDING | 41 |
| • MANUAL DO UTILIZADOR | 49 |

NF1-350.. / NF1-370.. / NF-347.. / NF-340..

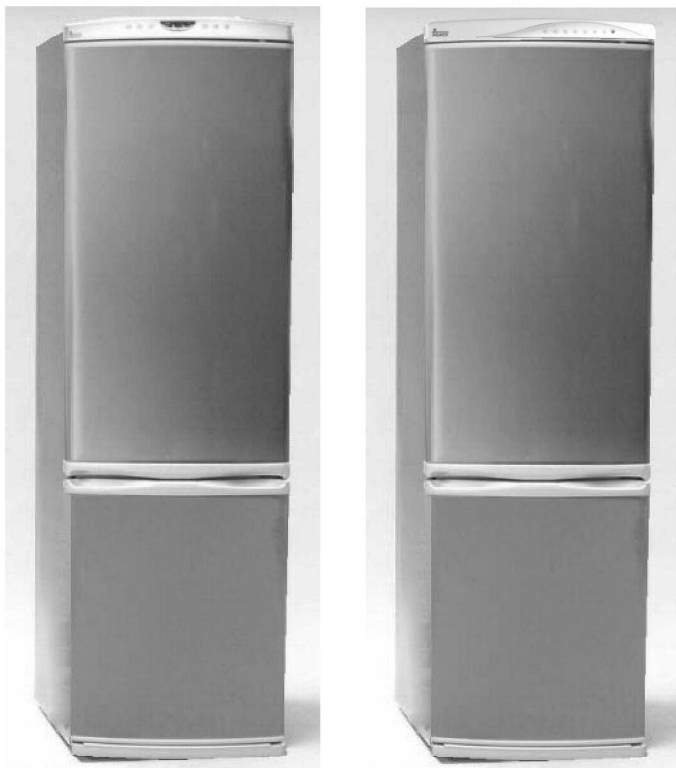

teka

WARNING / SAFETY PRECAUTIONS

To avoid any risk of personal injury, material damage or incorrect use of the appliance, be sure to observe the following safety precautions. (After reading these owner's instructions, please keep them in a safe place for reference). Remember to hand them over to any subsequent owner.



Indicates that a danger of death or serious injury exists



Indicates that a risk of personal injury or material damage exists.



WARNING

Do not plug several appliances into the same sockets.

- This could cause overheating and the risk of fire.

Keep the power plug away from the rear of the fridge / freezer.

- A damaged power plug may cause fire due to overheating.

Do not directly spray water inside or outside the fridge / freezer.

- There is a risk of fire or electric shock.

Do not spray water inside or outside the fridge / freezer.

- There is a risk of explosion or fire.

Do not bend the power cord excessively or place heavy articles on it.

- This constitutes a fire hazard. If the power cord is damaged, have it replaced immediately by the manufacturer, its service agent or a similarly qualified person.

Do not insert the power plug with wet hands.

- You may receive an electric shock.

Do not put a container filled with water on top of the appliance.

- If the water spills on to any electrical parts, it may lead to fire or electric shock.

Do not install the fridge / freezer in a damp place, where it could be splashed with water.

- Incorrect insulation of the electrical parts may cause an electric shock or fire.

Do not store volatile and flammable substances in the refrigerator.

- The storage of benzene, thinner, alcohol, ether, LP gas or other such substances may cause an explosion.

Do not disassemble, repair or alter the appliance.

- It may cause fire or abnormal operations, which may lead to injury.

Pull the power plug out of the socket before replacing the interior light in the refrigerator.

- Otherwise, there is a risk of electric shock.

Be sure to earth the appliance.

- Otherwise, it may cause material damage and electric shock.

If you wish to dispose of the fridge / freezer, throw it away after removing the door or its seals.

- In this way, it is not possible for a child to remain trapped inside it.



CAUTION

Do not store too much food in the appliance.

- When you open the door, an item may fall out and cause personal injury or material damage.

Do not put bottles or any kind of glass in the freezer.

- The container may break and cause personal injury.

If the wall socket is loose, do not insert the power plug.

- It may cause electric shock or fire.

Do not disconnect the power cord by pulling on it.

- You may disconnect a wire and cause a short circuit.

Do not store article on top of the appliance.

THERE IS A NOTICE BELOW FOR APPLIANCES USING R-600a AS A REFRIGERANT.



NOTICE

Environment-friendly fridge / freezer using R-600a refrigerant and cyclopentane blowing agent

- This product protects the environment by using the R-600a refrigerant and the cyclopentane blowing agent.
- Properties:

ODP (Ozone Depletion Potential): 0

GWP (Global Warming Potential): Lowest

High-energy efficiency

- Optimized power consumption when using R-600a and cyclopentane.

R134a or R-600a is used as a refrigerant. You can check the compressor label on the rear of the appliance and the rating label inside the fridge.



This appliance contains a small amount of isobutane refrigerant (R600a), a natural gas with high environmental compatibility, but it is also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.

Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.

- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1m³ in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.



WARNING

- Keep ventilation openings in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of a type recommended by the manufacturer.

English

- When you open or close the door, the articles may fall and cause personal injury or material damage.
Do not store pharmaceutical products, scientific material or other temperature-sensitive products in the refrigerator.
- Products that require strict temperature controls must not be stored in the refrigerator.

Do not let a child hang from the door.

Do not touch any containers and food in the freezer with wet hands.

- It may cause frostbite.
Remove any foreign matter from the power plug pins.
- Otherwise, there is a risk of fire.
Do not insert your hand into the bottom area of appliance.
- Any sharp edges may cause personal injury.
After unplugging the appliance, wait for at least five minutes before plugging it again to the wall socket.
- Abnormal operation of the freezer may cause material damage.

If the appliance is not to be used for a long period of time, pull out the power plug.

- Any deterioration in the insulation may cause fire.
Do not let children touch or play with the control panel on the front of the appliance.
- Do not allow children to play with this appliance.
- Do not stand or lean on the base panel, pull-out parts, door and so on.
- Repairs and maintenance of the appliance should only be performed by a qualified technician. Incorrect repairs by an unqualified person are a potential source of danger that may have critical consequences for the user of the appliance.
- Never put ice cubes or ice lollies straight from the freezer into your mouth. (The low temperature may cause "cold burns".)



CAUTION

The refrigerant used in fridge / freezers and the gases in the insulation material require special disposal procedures. Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.

DISPOSAL

INSTALLING THE FRIDGE / FREEZER

1. Allow an adequate space and install the fridge / freezer on a firm, level floor.
 - If the appliance is not level, there may be unusual noises and poor cooling.
2. Clean the fridge / freezer
 - Wipe and clean the inside and outside of appliance with a damp cloth.
3. Plug the fridge / freezer into a wall socket used exclusively by this appliance.
 - This appliance must be properly earthed.
4. Place the food in the fridge / freezer.
 - It is recommended that you wait for the appliance to cool for 3-4 hours before storing food in it.
5. Keep 60 mm of space between the refrigerator and the back wall.
 - Insufficient space causes the noise of vibration, weakening of refrigerating power and the waste of electricity
6. The electrical plug must be accessible without moving the set.
7. For ambient temperature below 10°C, the perfect performance of our refrigerator can not be achieved.



 
WARNING

Use of an earthed socket exclusively for the appliance:

- If you are using a socket with an earthed terminal, you do not require a separate earthed connection.

Use of a non-earthed socket:

- Connect the "earthed wire" to the steel plate and bury it at depth of at least 25cm in the ground.

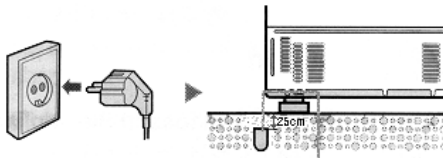

LEVELING

If the front of the appliance is slightly higher than the rear, the door can be opened and closed more easily.

1. The appliance tilts down to the left.

Turn the left adjusting leg in the direction of the arrow until the appliance is level.



2. The appliance tilts down to the right.

Turn the right adjusting leg in the direction of the arrow until the appliance is level.



PREPARING THE FRIDGE / FREEZER

To prepare your appliance for use and check that it is running correctly, take the following steps.

1. Install removed all shelves and compartments during transport in the correct positions.
2. Clean the fridge/freezer and accessories to remove any dust that accumulated during packing and shipping.
3. The interior light will be turned on when the refrigerator door's opened.
4. Set the temperature control to the coldest temperature and let the refrigerator operate for one hour. The freezer should get slightly chilled and the motor should run smoothly with a soft hum and no noise. Your fridge / freezer is operated by a compressor which switches "on and off" to maintain the internal temperature. When the compressor is new, it requires running in for a period of up to five months. During this period, it may be slightly noisy. This is quite normal and does not represent a fault.
5. Store food once the temperature in the refrigerator is sufficiently low. It takes a few hours after starting the refrigerator to reach the proper temperature.
If the appliance does not operate correctly, check the electricity supply. If the problem persists, contact your dealer.

CE

This product has been designed, constructed and marketed in accordance with EEC directives 73/23, 89/336, 96/57 and 93/68.

 
Please read this manual carefully to ensure maximum satisfaction from your appliance. Keep the manual in a safe place for future reference. For drawings referenced in the text below, see flap at back of the manual.

ABOUT THIS PRODUCT

- This product is designed for domestic household use only.
- Use the 4-star freezer compartment
 - to freeze fresh and cooked foods,
 - to store deep-frozen and frozen products,
 - to make ice-cubes.
- Use the refrigerator compartment
 - to store fresh foods,
 - to cool drinks.
- The freezer and refrigerator compartments defrost automatically.
- Owing to cool air circulation (Multi-Airflow System) an even temperature is maintained on every shelf of the refrigerator compartment. The temperature in the specially designed low temperature compartment is kept at approximately 0°C, extending nutritional value and original freshness of the food.

BEFORE CONNECTING TO THE MAINS

1. Wait 2 hours after delivery before you connect the appliance to the power supply, in order to ensure trouble-free operation
2. **In the UK only.** Electrical connections:
 - Check that the voltage on the rating plate (8) corresponds to the voltage in your home.
 - The wires of the mains lead fitted to this appliance are connected in accordance with the following code:

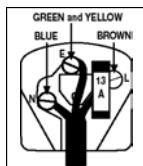

GREEN and YELLOW = EARTH
(GREEN or GREEN and YELLOW)

BLUE = NEUTRAL (BLACK)

BROWN = LIVE (RED)

As the colours of the wires in the mains lead fitted to this appliance may not correspond with the coloured markings identifying the terminals in the plug, proceed as follows:

- The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is marked with the letter "E" or by the earth symbol (\perp) or coloured GREEN or GREEN and YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

DESCRIPTION OF YOUR REFRIGERATOR

See flap at the back of the manual.

1. Shelves.
2. Cover vegetable case (The material could be changed by model).
3. Interior light for refrigerator compartment.
4. Multi air flow duct.
5. Refrigerator & freezer temperature control button.
6. Low temperature compartment*.
7. Vegetable case: 2 boxes type.
8. Rating plate. It's attached in the refrigerator compartment on the left-hand side next to the vegetable case (with serial number).
9. Ice cube tray.
10. Case for storing & freezing.
11. Butter case.
12. Butter pocket.
13. Egg pocket & egg tray.
14. Wine rack*.
15. Bottle pocket.
16. R door pocket.
17. Adjustable foot.

* Only in some models.

- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter "L" or coloured RED.

If the terminals in the plug are unmarked or you are in any doubt as to the correct connections, consult a qualified electrician.

3. **In the UK only.** Moulded plugs:
 - Applicable only if moulded plug is fitted.
 - Should it be necessary to remove a moulded on plug from the mains cable, it should be cut off and replaced with a suitable replacement.

- The moulded plug cannot be used for any other appliance, therefore remove the fuse and dispose immediately and safely to prevent anyone, especially children, from plugging it into a wall socket, which will create a safety hazard.
 - Should the mains lead ever require a replacement, it is essential that this operation be carried out by a qualified electrician and should only be replaced with a flexible cord obtained from the manufacturer.
 - After replacement of a fuse in the plug, the fuse cover must be refitted. If the fuse cover is lost a replacement cover must be obtained. The colour of the correct replacement fuse cover is that of the coloured insert in the base of the plug or the colour that is embossed in words in the base of the plug recess or elsewhere on the plug. Always state this colour when ordering a replacement fuse cover.
 - Only 13 amp. replacement fuses which are ASTA approved to BS 1362 should be fitted.
4. Check the rating plate (8) for voltage information.
 5. The socket should be easily accessible and not directly behind the appliance.
 6. Electrical connections must be made in accordance with local regulations. The appliance must be earthed as described by law (connected through a properly earthed plug and socket). The manufacturer rejects all liability for injury to persons and animals or damage to property resulting from failure to comply with this requirement.
 7. A 10A fuse or one of a higher value must be used in the socket circuit.
 8. If the appliance plug and the wall socket are incompatible, the socket must be replaced by a qualified electrician.
 9. If the supply cord is damaged, it must be replaced by the manufacturer or his service agent or a similarly qualified person in order to avoid hazard.
 10. Do not use extension leads or multiple adapters, etc.
 11. In some countries a plug has to be fitted. Make sure that the installation and electrical connections are performed by a qualified technician in compliance with the manufacturer's instructions and current local safety regulations. The wires in the mains lead are coloured in accordance with the following code:
 - green/yellow = earth
 - blue = neutral
 - brown = live.

DISCONNECTION

Note: does not apply in the UK.

 
Electrical disconnection: remove the plug from the mains, or (if applicable) disconnect the two-pole circuit breaker upstream from the socket.

PROTECTING THE ENVIRONMENT


- The packaging may be completely recycled, as confirmed by the recycling symbol; follow local disposal regulations.
- The appliance is manufactured from reusable materials.
- When you decide to scrap this product, please check the cable to be disconnected from the mains. Then cut off the

IMPORTANT


1. Although this product was carefully checked before packing, please check the product:
 - for damage;
 - for correct closing of the doors.Complaints must be reported to your retailer within 24 hours of delivery.
2. Installation instructions (6 drawings below).
3. Keep potentially hazardous packing materials (plastic bags, etc.) out of reach of children to prevent the risk of trapping and suffocation.

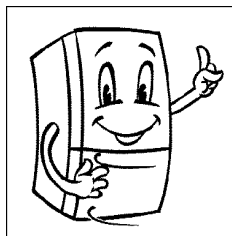

 
Check for damages and correct closing of the doors.

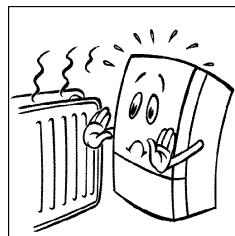


Not in the vicinity of a heat source.

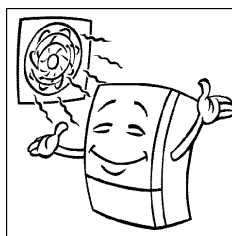 


Keep room dry and well ventilated.

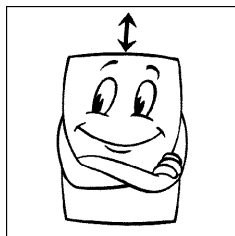 

 Keep more than 5cm distance space at the top for ventilation.

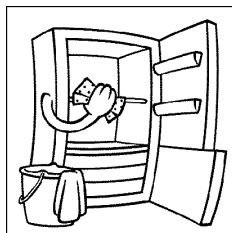


Clean interior with a damp cloth.

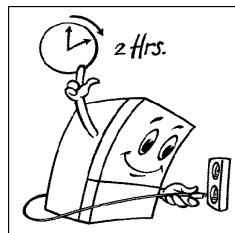 


Wait 2 hours before connecting to the mains.

 GENERAL RECOMMENDATIONS

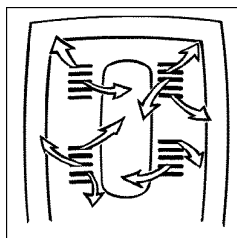


Keep air vents open.

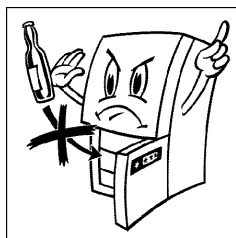 


No glass bottles in the freezer compartments. The bottles might burst.



 
Ice cubes and ice lollies straight out of the freezer are too cold for consuming. They may cause 'cold' burns.

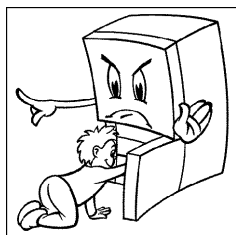

 Do not allow children to play or hide in the refrigerator to prevent the risk of trapping and suffocation.

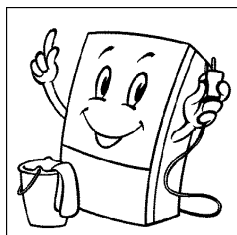

 Always unplug before cleaning and servicing.

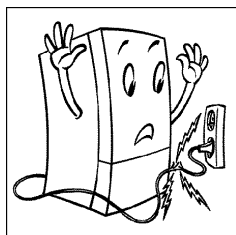

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

cable and dispose of the product according to local waste disposal laws.

- This product is free of CFC's (cooling circuit contains R-600a). Check the compressor label on the rear of the appliance or the rating label inside the fridge to see which refrigerant is used for your refrigerator.

HOW TO USE THE REFRIGERATOR COMPARTMENT

1. Connect the lead to the mains. (At least wait 2 hours after delivery: refer to section "Before connecting to the mains) Food can be stored after 3 to 4 hours cooling.

- the interior light switches on when the door is opened;
- the compressor operates and starts cooling;

The suitable storage temperature for fresh food is provided in the "MID" position at an ambient temperature of 16 ~ 32°C.

Model: NF1-350.../NF1-370...

1. See the CONTROL PANEL. There are six buttons, "POWER", "SUPER", "DISP. TEMP.", "REF. TEMP.", "ECO" and "LOCK".



NOTE: If you connect the lead to the mains, you can see the lights of the control panel display are "On". Initially both compartments temperatures are set to "3" position automatically.


| | |
|-------------|---|
| POWER | Main on & off switch – for switching complete appliance on or off. |
| SUPER | Instant cooling with powerful supply of cold air. This button is for the fast freeze function. While this function is selected, the refrigerating device remains switched on continuously and produces a very low temperature inside the freezer. If SUPER mode is cancelled by pressed this button, the new mode will be returned on last condition. |
| DISP. TEMP. | To display the temperature of refrigerator compartment and freezer compartment. When this button is pressed one time, the current set temperature of refrigerator compartment will be shown in display for 5sec. When this button is pressed two times, the temperature of freezer compartment on each step will be shown in display for 5sec. |
| REF. TEMP. | To indicate the current set temperature when this button is pressed one time. User can set new temperature when this button is pressed repeatedly until the required temperature is shown. |
| ECO | Energy saving, e.g. when you are away from home for a long period. ECO indicator remains on while the ECO function is operating. If ECO mode is cancelled by pressed this button, the new mode will be returned on last condition. |
| LOCK | To lock & unlock all keys on CONTROL PANEL. If lock icon is on, any other key doesn't work until 'LOCK' button is pressed to cancel 'locked' condition. |

2. If you want to change the compartment temperature, press "REF. TEMP." button. When you press this button, the lights illuminate in sequence. It is composed of 6 steps. It follows 3 _ 2 _ 1 _ 6 _ 5 _ 4 _ 3 _ 2 _ 1 _ 6 _ 5
3. The storage temperature suitable for fresh food is provided at "3" position at an ambient temperature of 16°C to 32°C.

NOTE: After power failure or momentary power failure happens, when power is back on, the unit returns previously "set temperature".

Model: NF-347.. / NF-340..

 Temperature Control Panel (see flap on the back of the manual).



| | | |
|---|------------------------------|--|
| ① | “FREEZER” | Indicator of freezer room temperature condition. |
| ② | “REFRIGERATOR” | Indicator of refrigerator room temperature condition. |
| ③ | 1 “VAC” | Energy saving, e.g. when you are away from home for a long period. |
| ④ | 2 “LOW” | Means that freezer & refrigerator compartment temperature is warmer than position “MID”. |
| ⑤ | 3 “MID” | Means normal storage temperature. |
| ⑥ | 4 “HIGH” | Means that both compartment temperatures are colder than position “MID”. |
| ⑦ | 5 “SUPER FREEZING” | Instant cooling with powerful supply of cold air. |
| ⑧ | “TEMPERATURE CONTROL” button | |

- When you connect the lead to the mains, lamps ①, ②, ⑤ will illuminate and will go red, due to the high temperature of the compartments: after some time they turn green.
- The interior light switches on when the door is opened.
- The compressor operates and starts cooling.

1. If you want to change the compartment temperature, push button ⑧. If you press this button, the lamps ⑤, ⑥, ⑦, ③ and ④ will illuminate in sequence. Push the button, so you can set the temperature that you want.

Note Initially both compartments temperatures are set “MID” position automatically.

2. The suitable storage temperature for fresh food is provided at “MID” position at an ambient temperature of 16°C to 32°C.

NOTES ON FREEZING AND STORAGE

1. Follow storage times indicated by the frozen food manufacturer. Make sure that the packaging is undamaged.
2. Save energy: minimize opening of the door by storing identical food items together.
3. Items suitable for freezing: meat, poultry, fresh fish, vegetables, fruits, dairy products, bread, baked goods, pre-cooked meals.
4. Items not suitable for freezing: lettuces, radishes, grapes, whole apples and pears, fatty meats.
5. When you freeze food yourself, pack it in appropriate quantities. In order to freeze food right through do not exceed the following quantities to best preserve the quality:
 - fruit and vegetables: up to 1 kg,
 - meat: up to 2.5 kg.

6. Blanch vegetables after washing and cutting them. (2-3 minutes in boiling water; then quickly cool them down in cold water. When you use a steamer or microwave oven, follow the operating instructions).
7. Keep packs dry in order to avoid them freezing together.
8. Freeze fresh food separately from already frozen foods.
9. Do not salt or season fresh food or blanched vegetables before freezing. Other foods may be lightly salted or seasoned. The intensity of flavour of some spices can change.
10. Use materials or containers specially suitable for freezing in order to avoid loss of quality.
11. Write contents and date of freezing on the packs. Do not exceed the storage time indicated in order to preserve quality.
12. Do not freeze bottles or cans with carbonated drinks as they might burst.
13. Take out as much food as is immediately required for thawing. Prepare it as soon as possible after thawing.

WHEN PURCHASING FROZEN FOOD

1. Make sure that the packaging is undamaged (damage may have caused the food to deteriorate). Bulging packs or packs which are marked with liquid stains could have been improperly stored and may have been partially thawed.
2. Leave frozen food purchases until last and transport the items in insulated bags.
3. Place the items in the freezer as soon as possible.
4. Do not refreeze partially thawed food. Consume it within 24 hours.
5. Observe the date of consumption and storage information.

CLEANING

1. Always disconnect the appliance from the mains supply.
2. Do not use abrasives. Periodically clean with a sponge dampened in lukewarm water. A neutral pH detergent may be used. Rinse and dry with a soft cloth.
3. Wipe the outside with a soft cloth dampened in water.
4. Periodically clean the front grille and the radiator at the back with a vacuum cleaner or a brush.

PROLONGED DISUSE

1. Empty the refrigerator and freezer compartments.
2. Unplug the appliance from the mains.
3. Clean and dry both compartments.
4. Leave the doors open to prevent the formation of unpleasant odours.

AFTER SALES SERVICE

Before contacting our After Sales Service Department:

1. Try to remedy the problem (please read section "trouble shooting guide").
2. Restart the appliance to check whether the fault repeats. If the malfunction persists, switch off the appliance and try again after an hour.
3. If the malfunction still persists, then contact our Customer Service, specifying:
 - the nature of the problem,
 - the appliance model number,
 - the service number (please see the rating plate 8),
 - your full address, telephone number and area code.

Note: door opening direction changes carried out by our Customer Service are not covered by the terms of guarantee.

TROUBLESHOOTING GUIDE

1. The appliance does not work. Check:
 - power failure,
 - properly inserted plug,
 - (if applicable) connection of the two-pole circuit breaker,
 - damage to the mains lead,
 - correct setting of temperature control (5).
2. The temperature inside the compartments is not low enough. Check for:
 - closure of the doors,
 - installation near a heat source,
 - inhibited air circulation,
 - correct setting of temperature control (5).
3. The refrigerator compartment temperature is too low. Check for:
 - correct setting of temperature control (5).
4. The internal light does not work. Refer to point 1 and then:
 - unplug the appliance from the mains,
 - check the bulb and replace if necessary (max.15W).
 - to change the lamp, first remove the lamp cover by pushing lower part upward and pulling forward.
 - take out the lamp and replace it for a new one.
 - finally replace lamp cover.



Disposal of Used Electrical & Electronic Equipment

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

APPLIANCE PACKAGING INFORMATION

All material are environmentally sound! They can be dumped or burned at an incinerating plant without danger!

About the materials: The plastics can be recycled and are identified as follows:

- PE : for polyethylene, e.g. the outer covering and the bags in the interior.
- PS : for polystyrene foam, e.g. the pads, which are all free of chlorofluorocarbon.

The carton parts are made from recycled paper and should be disposed of at a waste-paper recycling collection location.

DISPOSAL OF OLD APPLIANCES

For environmental reasons, refrigeration appliances must be disposed of properly. This applies to your old appliance, and -at the end of its service life- for your new appliance as well.

Warning! Before disposing of old appliances make them inoperable. Remove plug from mains, cut the power cable, remove or destroy any snap or latch closures. This eliminates the danger that could children playing lock themselves into the appliance (danger of suffocation!) or place themselves into other life-endangering situations.

Disposal:

- The appliance may not be disposed of with domestic waste or bulky refuse.
- The refrigerant circuit, especially the heat exchanger at back of the appliance, may not be damaged.
- Information concerning collection schedules or locations can be obtained from the local disposal authorities or town hall.



NOTICE

The lamp of the refrigerator can be switched off even though the doors are not completely closed.


Note: The edge of the refrigerator door and the front side of the refrigerator cabinet may be hot. This is normal and intended to prevent the formation of condensation.

Gurgling noises etc. inside the refrigerating circuit are normal.


NF1-350.. / NF1-370..

- Invertir las puertas de lado en 5 pasos.
- How to reverse doors in 5 steps.
- Inversion du sens d'ouverture des portes en 5 étapes.
- Türanschlag in 5 schritten wechseln.

 
- Inversione dell'apertura degli sportelli in 5 fasi.
- De draairichting van de deuren veranderen in 5 stappen.
- Inversao do sentido de abertura das portas em 5 passos.

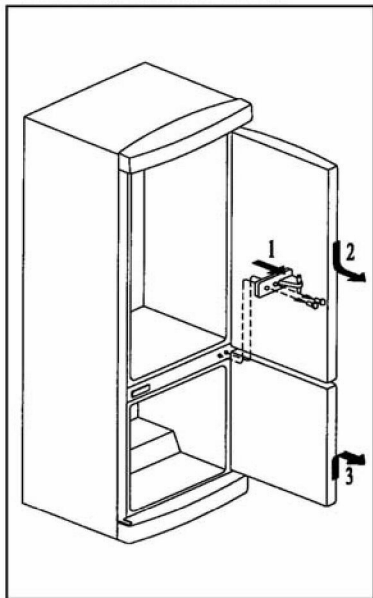


1

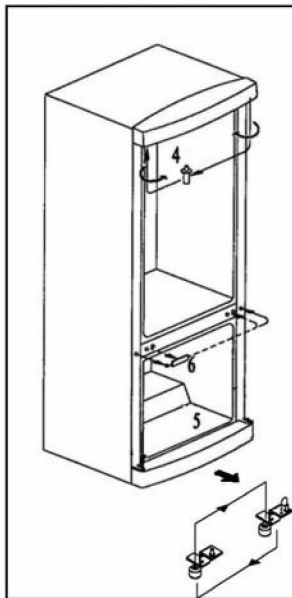 


2

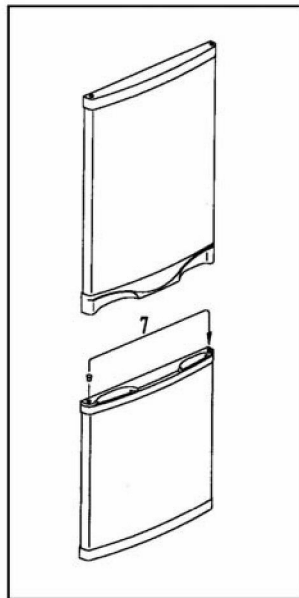 

3

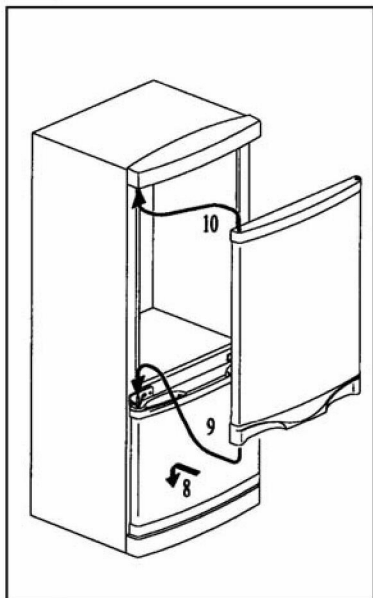 


4

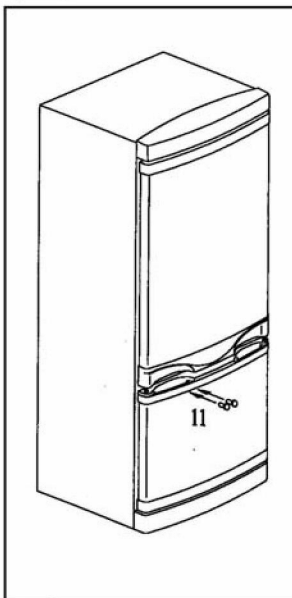 


5

NF-347.. / NF-340..

 
- Invertir las puertas de lado en 5 pasos.
- How to reverse doors in 5 steps. (Hidden Handle).
- Inversion du sens d'ouverture des portes en 5 étapes.
- Inversione dell'apertura degli sportelli in 5 fasi.
- De draarichting van de deuren veranderen in 5 stappen.
- Inversao do sentido de abertura das portas em 5 passos.

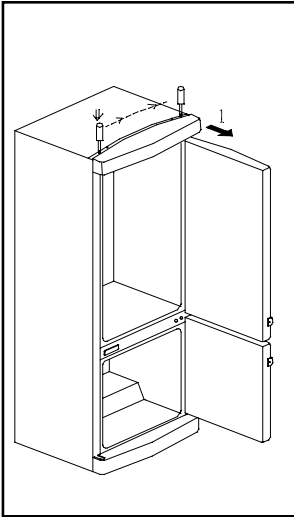


1

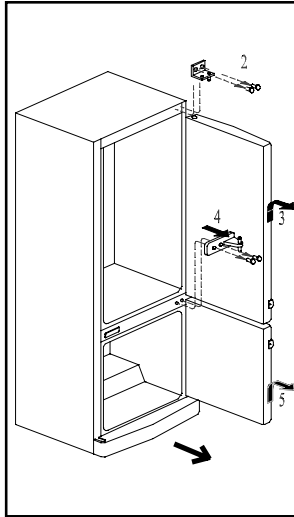 


2

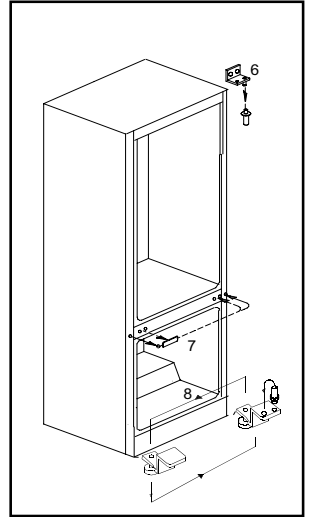 

3

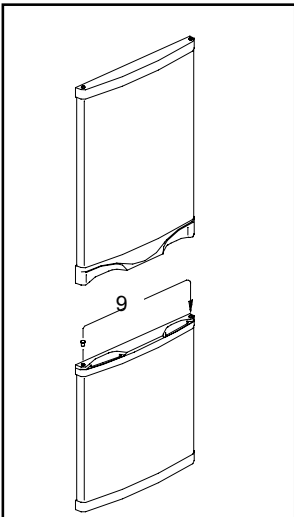 

4

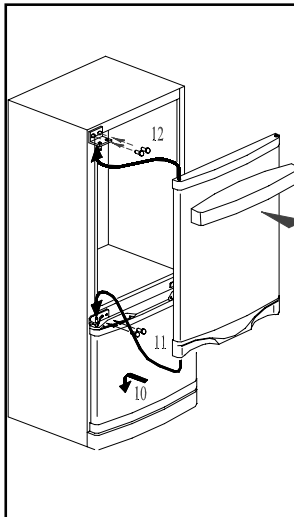 

5

NF1-350.. / NF1-370.. / NF-347.. / NF-340..

| | |
|---------------|------------|
| Frigorífico | |
| Refrigerator | |
| Réfrigérateur | SUPER 0° C |
| Kühlschrank | HIGH 1° C |
| Frigorifero | MID 3° C |
| Koelkast | LOW 5° C |
| Frigorifico | VAC 7° C |

Compartimento para carne /fiambre
 Cold meats compartment
 Compartiment pour viande /charcuterie
 Fleisch/Wurstfach
 Scompartimento per carne /salumi
 Diepvriezer
 Compoartimento de carne

 
2° C ~ 2° C

Compartimento para verduras
 Vegetables compartment
 Compartiment pour légumes
 Gemüsefach
 Scompartimento per verdure
 Vlesvak
 Compoartimento de legumes





0° C ~ 5° C

Congelador
 Freezer
 Congélateur
 Gefrierschrank
 Congelatore
 Groentelade
 Congelador

SUPER -23° C
 HIGH -22° C
 MID -20° C
 LOW -18° C
 VAC -16° C

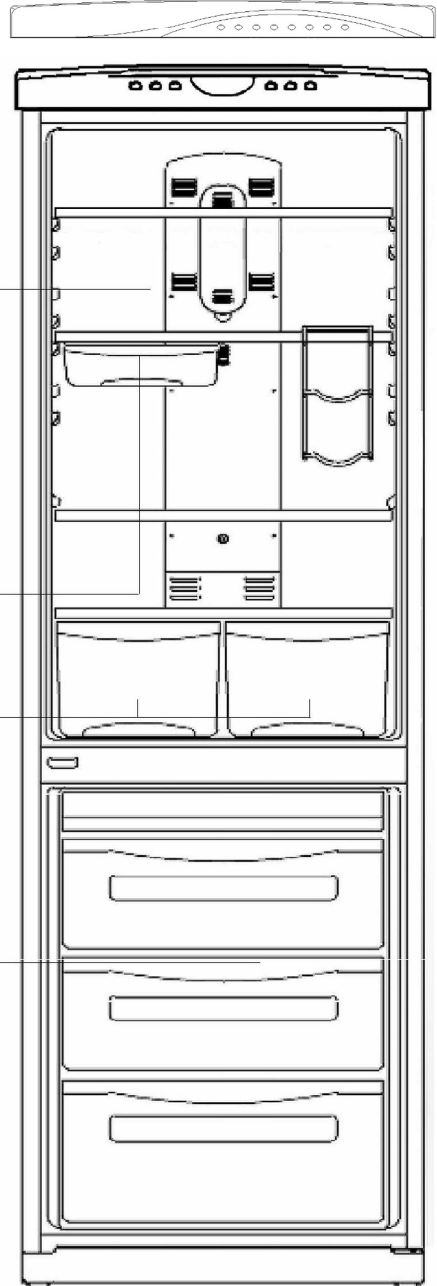

NF1-350.. / NF1-370.. / NF-347.. / NF-340..

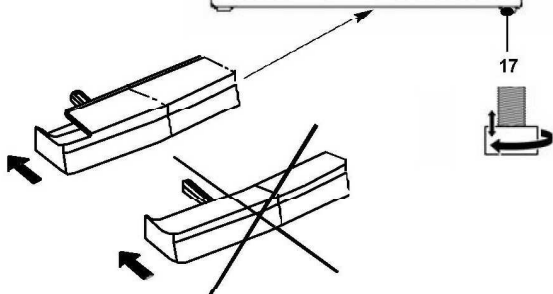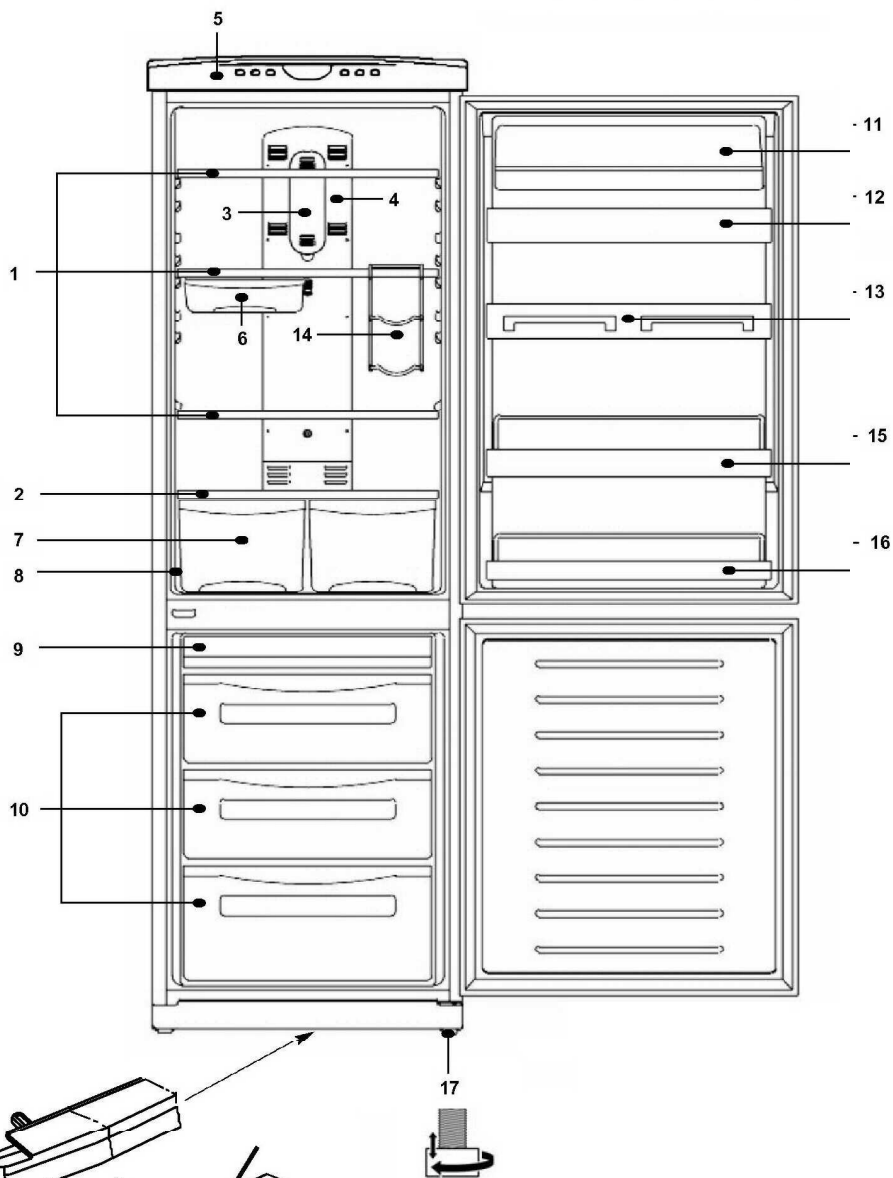    

TEKA GROUP

| COUNTRY | CITY | COMPANY | CC | PHONE | FAX |
|-----------------|-------------------|--|-----|----------------|---------------|
| Austria | Wien | KÜPPERSBUSCH GES.M.B.H. | 43 | 1-86680-20 | 1-86680-82 |
| Chile | Santiago de Chile | TEKA CHILE S.A. | 56 | 2-273.19.45 | 2-273.10.88 |
| China | Shanghai | TEKA CHINA LTD. (SHANGHAI OFFICE) | 86 | 21-6272-6800 | 21-6272-6149 |
| Czech Republic | Brno | TEKA-SWIAG S.R.O. | 42 | 05-4921-0478 | 05-4921-0479 |
| France | Paris | TEKA FRANCE SARL | 33 | 1-48.91.37.88 | 1-48.91.29.73 |
| Greece | Athens | TEKA HELLAS A.E. | 30 | 1-976.02.83 | 1-971.27.25 |
| Hong Kong | Hong Kong | TEKA CHINA LIMITED | 852 | 2865-7336 | 2861-2507 |
| Hungary | Budapest | TEKA HUNGARY KFT. | 36 | 1-311.58.03 | 1-311.58.05 |
| Indonesia | Jakarta | P.T. TEKA BUANA | 62 | 21-39052-74 | 21-39052-79 |
| Malaysia | Kuala Lumpur | TEKA KÜCHENTECHNIK (MALAYSIA) SDN BHD | 60 | 3-762.01.600 | 3-762.01.626 |
| Mexico | Mexico D.F. | TEKA MEXICANA S.A. DE C.V. | 52 | 5-762.04.90 | 5-762.05.17 |
| Poland | Warszawa | TEKA POLSKA SP. Z O Q. | 48 | 22-652.18.94 | 22-850.12.48 |
| Portugal | Ilhavo | TEKA PORTUGUESA LTDA. | 351 | 234-32.95.00 | 234-32.54.57 |
| Singapore | Singapore | THIELMANN TEKA PTE. LTD. | 65 | 734.24.15 | 734.68.81 |
| Thailand | Bangkok | TEKA (THAILAND) CO. LTD. | 66 | 2-693.32.37/41 | 2-693.32.42 |
| The Netherlands | Zoetermeer | TEKA BV | 31 | 79-345.15.89 | 79-345.15.84 |
| Turkey | Istambul | TEKA TEKNİK MUTFAK A.S. | 90 | 212-274.61.04 | 212-274.56.86 |
| U.K. | Abingdon | TEKA PRODUCTS (UK) LTD. | 44 | 1235-86.19.16 | 1235-83.21.37 |
| United States | Tampa | TEKA USA, INC. | 1 | 813-229.3536 | 813-229.0982 |
| Venezuela | Caracas | TEKA ANDINA, S.A. | 58 | 2-291.28.21 | 2-291.28.25 |



Teka Industrial S.A.
 Cajo, 17
 39011 Santander (Spain)
 Tel.: 34 - 942 - 35 50 50
 Fax: 34 - 942 - 34 76 94
<http://www.teka.net>

Teka Küchenteschnick GmbH
 Sechsheldener Str. 122
 35708 Haiger (Germany)
 Tel.: 49 - 2771 - 8141-0
 Fax: 49 - 2771 - 8141-10
<http://www.teka.net>