

Tele Radio Lynx Manual

T1-1 TRANSCEIVER



IMPORTANT SAFETY INSTRUCTIONS

CAUTION! NEVER OPEN THE EQUIPMENT WHILE THE WARRANTY IS STILL VALID WITHOUT CONTACTING YOUR DEALER. FAILURE TO READ THIS INFORMATION OR UNAUTHORIZED ACCESS INTO THE DEVICES MAY RELEASE TELE-RADIO FROM ALL LIABILITY AND ANNUL THE WARRANTY.


SAFETY INSTRUCTIONS

- Read all safety, installation and operating instructions before installing and using the product.
- Retain the safety and operating instructions for further reference.
- Follow all installation and operating instructions in the manual, on the web site and on the product.
- Only qualified personnel should have access to the transmitter.
- Do not leave the handheld transceiver unsupervised.
- Switch off the handheld transceiver when not in use.
- Refer installation and all non-routine servicing to qualified personnel only.


PACK LIST

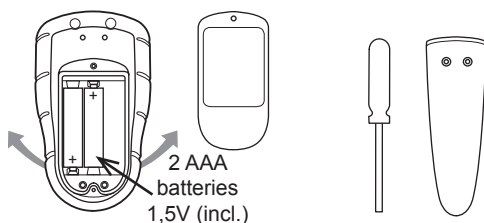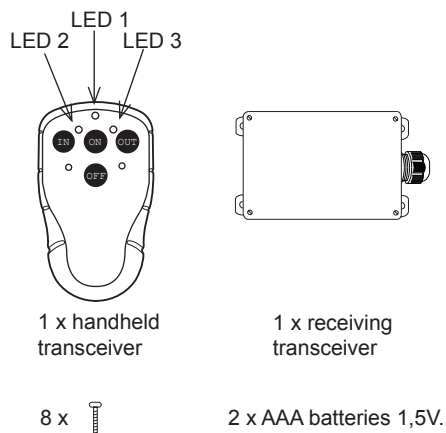

GETTING STARTED

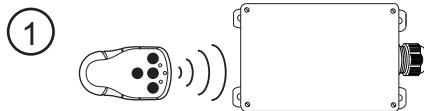

Place units in line of sight.

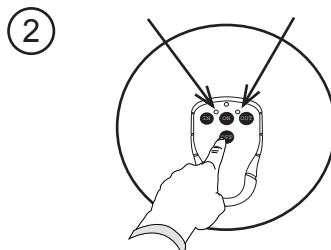

To start the handheld transmitter, press the OFF button. When LEDs 2 and 3 are lit, the handheld transceiver is ready for transmission.


PROGRAMMING



The handheld transceiver can be set at 3 different 802.15.4 channels. To set a channel, press the buttons IN, ON or OUT. LED 1 indicates what channel the transmission is set at.


Button	Channel	LED blink intervall
IN	11	2 blinks/ sec.
ON	18	4 blinks/ sec.
OUT	26	8 blinks/ sec.

TURNING OFF

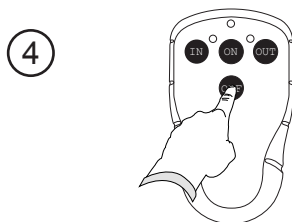

To turn the handheld transceiver off, press the OFF button. LEDs 2 and 3 are no longer lit. The handheld transceiver will stay in receiving (listening) mode until batteries are removed.

LABELS

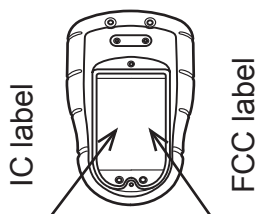

HOW TO PLACE

Place the receiving transceiver with the cable glands downward. Keep protected from moisture, snow, rain and wind. Do not place close to a high-pressure washing facility.

RECYCLING

This electronic product and its batteries are subject to disposal and recycling regulations that may vary by country and region.

Tele-Radio systems and any batteries, accessories or spare parts no longer in use should be recycled according to local environmental regulations. For more information about proper disposal and recycling of this product, please contact your dealer.

CE0678

EC Declaration of Conformity for Tele Radio radio remote control systems can be found at <http://www.tele-radio.com>

FCC STATEMENTS

15.19 - TWO PART WARNING STATEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1. THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND 2. THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

15.21 - MODIFICATION STATEMENT

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

TELE RADIO AB
Sweden, Main office
Tel. +46 (0)31-748 54 60
e-mail: info@tele-radio.com

www.tele-radio.com

TELE RADIO SVERIGE
Sweden
Tel. +46 (0)31-724 98 00
e-mail: sverige@tele-radio.com

TELE RADIO OÜ
Estonia
Tel. +372 44 511 55
e-mail: m.jyrissoo@tele-radio.com

TELE RADIO BV
Benelux
Tel. +31-(0)70-419 41 20
e-mail: info@teleradio.nl

TELE RADIO LTD
England
Tel. +44 (0) 1625 509125
e-mail: sales@teleradiouk.com

TELE RADIO LLC
North America & Latin America
Tel. +1 (305) 459 0763
e-mail: america@tele-radio.com

TELE RADIO ASIA
China
Tel. +86-(0)592-3111168
e-mail: bsun@tele-radio.cn

TELE RADIO TURKEY
Turkey
Tel. +90-532 292 4448
e-mail: cmelevioglu@tele-radio.com

TELE RADIO AS
Norway
Tel. +47-6933 4900
e-mail: norway@tele-radio.com

TELE RADIO GmbH
Germany
Tel. +49 (0)94 51-944 8 550
e-mail: kontakt@tele-radio-gmbh.de

TELE RADIO®
REMOTE CONTROL