



WIRELESS TV HEADPHONES

CONGRATULATIONS on your purchase of MyZone Headphones™ – the amazing new headphones that let YOU listen to TV at the volume you want without disturbing others! MyZone Headphones™ are wireless so you'll never miss a second of your favorite show – even if you go into a different room!


Just follow some quick and easy installation instructions and be on your way to the best private listening experience ever with MyZone Headphones!™

IMPORTANT SAFETY INFORMATION:

- Read all the safety and installation instructions before using this device.
- Extended headphone use may result in hearing damage; always listen at lower volumes.
- This device is not intended for the use of children under the age of 10.
- DO NOT use MyZone Headphones™ when it is unsafe to do so – when driving or operating machinery that requires your full attention.

1. MYZONE HEADPHONES™ INCLUDE:

- A. Wireless Headphones
B. Wireless Transmitter with Audio Cable

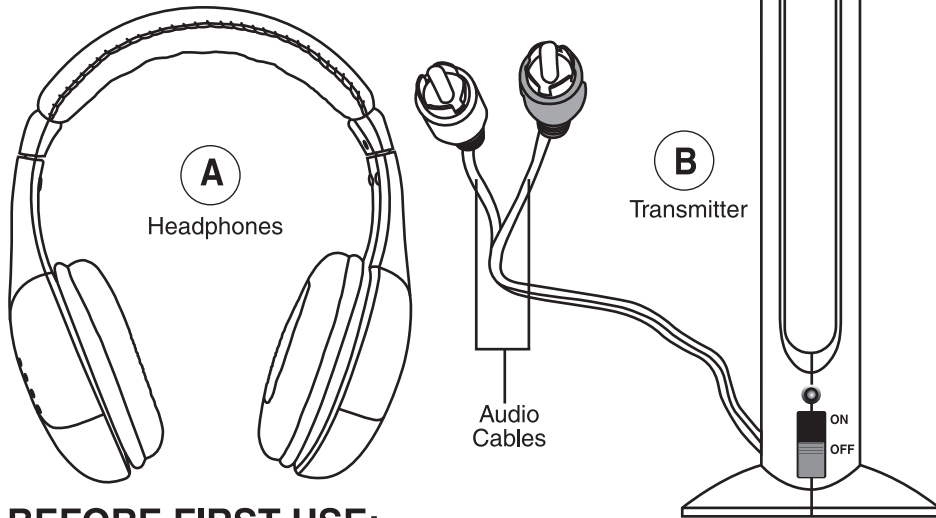

BEFORE FIRST USE:

Before using MyZone Headphones™, you must first install two AAA batteries in the Headphones and two AA batteries in the Wireless Transmitter.

2.

INSTALL BATTERIES TO HEADPHONES:

Find the battery compartment on the right earpiece (marked R at the base of the headband) and slide the cover off (Fig. 1).

Insert two AAA batteries into the compartment, and slide the cover back on.

NOTE: To conserve batteries, ALWAYS turn the Headphones OFF when the device is not in use.

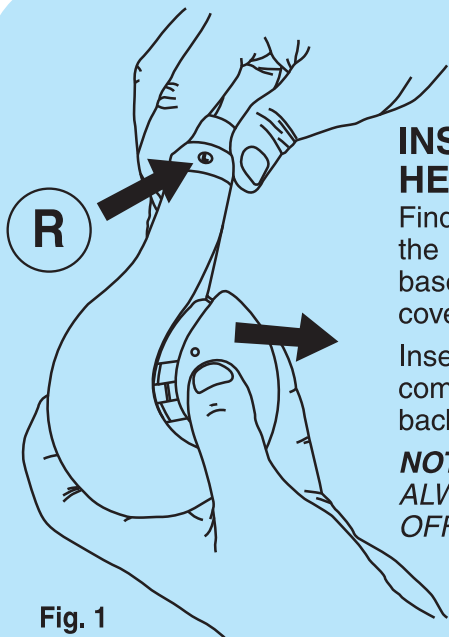


Fig. 1

3. INSTALL BATTERIES TO WIRELESS TRANSMITTER:

Find the battery compartment on the bottom of the Wireless Transmitter, push the cover tab back, and lift the cover off (as shown in Fig. 2).

Insert two AA batteries into the compartment, make sure to put batteries in the proper direction or unit will not function. Push cover back on until it clicks.

NOTE: To conserve batteries, ALWAYS turn the Wireless Transmitter OFF when the device is not in use.

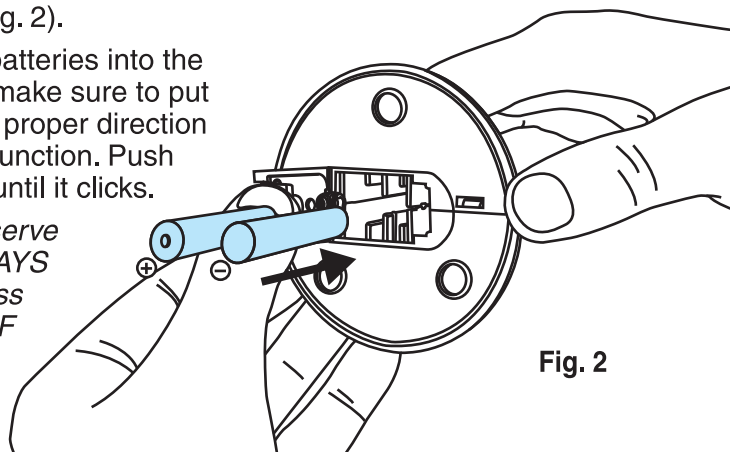


Fig. 2

5. TURN ON THE WIRELESS TRANSMITTER:

Place the Wireless Transmitter on a flat and stable surface, and turn the Transmitter on by switching the 'ON/OFF' button to the ON position (Fig. 5).

NOTE: For best reception, place the Wireless Transmitter so that it is in plain sight.

WARNING: To avoid hearing damage, make sure the volume on your television is turned down before using the Headphones.


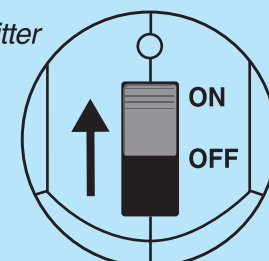



Fig. 5

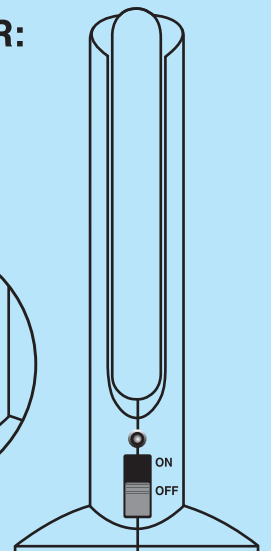

CONNECT WIRELESS TRANSMITTER TO YOUR TV:

Take the audio cables on the back of the Wireless Transmitter and plug the cables into the corresponding audio-out jacks by matching the red and white cables with the red and white jacks on the TV. (see Fig. 3)

NOTE: For best reception, unwind audio cables, and pull straight so there are no coils or tangles

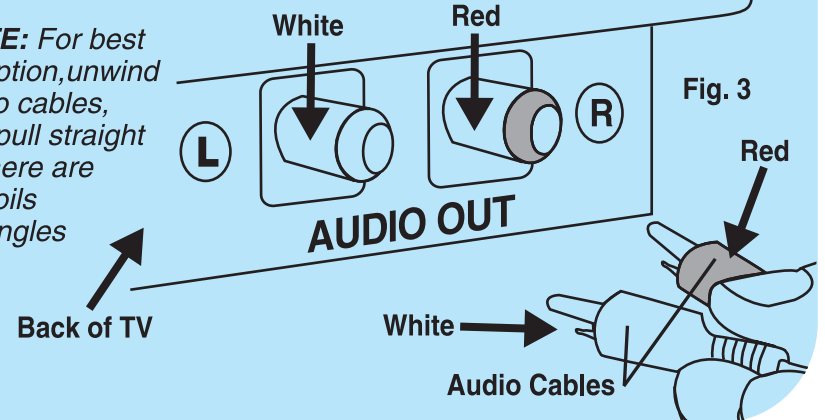

4.

NOTE: On some newer models, the Audio-Out jacks may be located on the front or side panel of the TV, make sure they are not marked Audio-In. (Fig. 4)

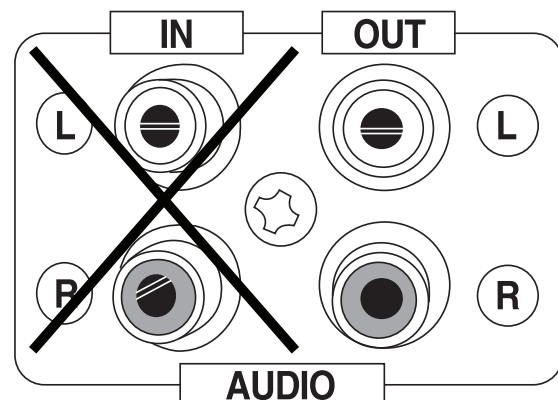


Fig. 4

6.**ADJUST THE HEADPHONES:**

Place Headphones over your ears.

NOTE: Headphones can be adjusted to better fit your head. To adjust your Headphones, gently pull down on each earpiece until they fit comfortably and snug on the ear. (Fig. 6)

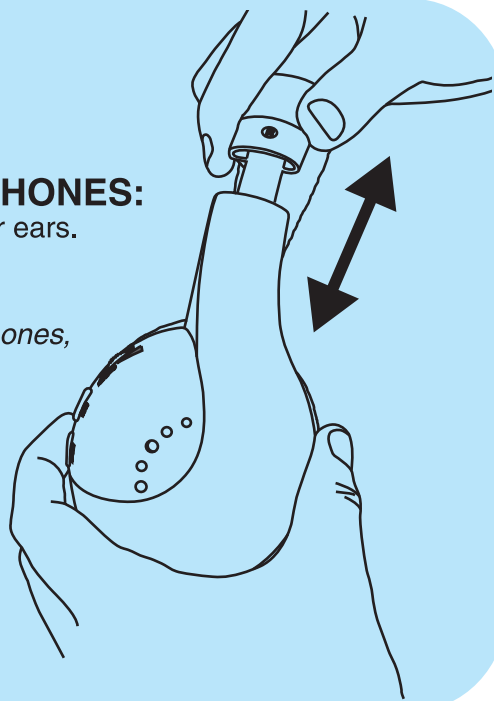


Fig. 6

8. TUNE HEADPHONES TO YOUR TV:

1. Press the 'RESET' button.
2. Press the 'SCAN' button once. You should now hear your TV through the headphones.

NOTE: If you do not hear your TV, you may need to press the 'SCAN' button additional times.

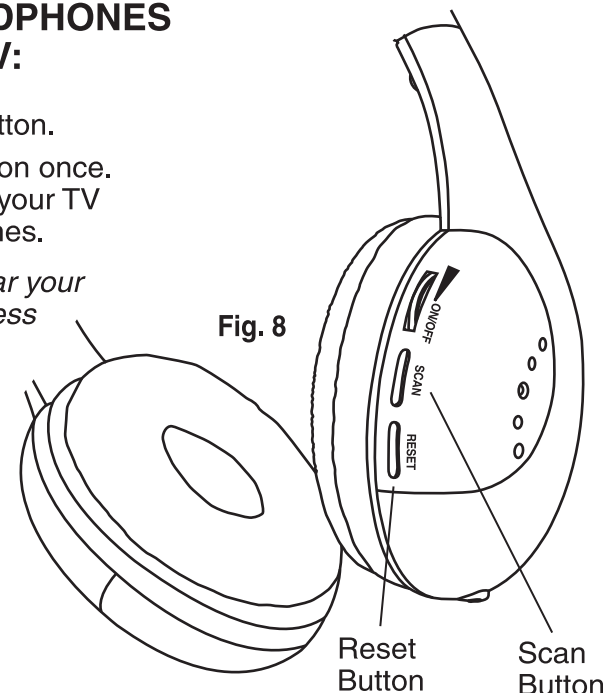


Fig. 8

TURN ON THE HEADPHONES:

1. Find the 'ON/OFF' dial on the left earpiece, and slowly turn the dial until it clicks. (Fig. 7).
2. Gradually raise the volume on the Headphones until you hear a buzzing sound OR local FM station.

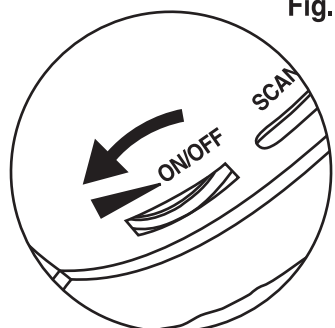
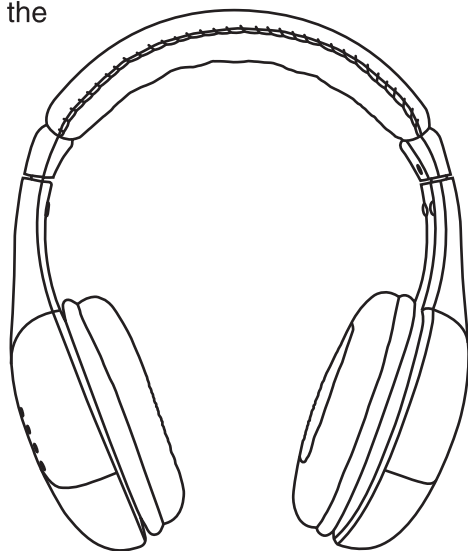
7.

Fig. 7

**9.****USING THE FM RADIO:**

1. Ensure the Transmitter button is switched to the 'OFF' position (Fig. 9).
2. Find the 'ON/OFF' dial on the left earpiece, and slowly turn the dial until it clicks. (Fig. 10).
3. Gradually raise the volume on the Headphones until you hear a buzzing sound or local FM station.
4. Press the 'RESET' button once.
5. Press the 'SCAN' button until you reach your desired FM station.

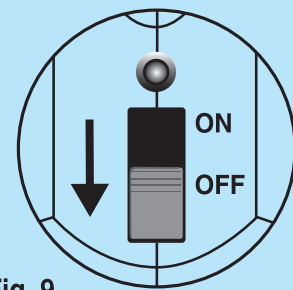


Fig. 9

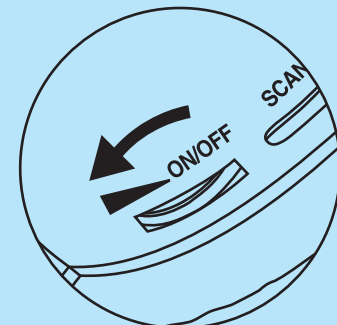


Fig. 10

CLEANING THE HEADPHONES:

Gently wipe down the vinyl part of the earpiece cushions with a damp cloth.

CAUTION: Use caution when wiping down vinyl cushions to avoid wetting the headphone speakers, which may result in electrical damage.

CARE AND STORAGE

- Avoid storage in extreme heat or cold.
- Avoid exposure to liquids and high humidity to ensure proper speaker function.

LIMITATION OF LIABILITY

Liability limited to the purchase price of this product.

TeleBrands Corporation shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by: TeleBrands Corp.
Fairfield, NJ 07004
www.telebrands.com

Made in China
© 2011 Telebrands Corp.