

RCA

2-Line DECT 6.0 Cordless Handset Telephone With DECT 6.0 Cordless Headset User's Guide



Please read this manual
before operating product
for the first time.

Model TC25211

Equipment Approval Information

Your telephone equipment is approved for connection to the Public Switched Telephone Network and is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA.

Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company.

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

Notes

- This equipment may not be used on coin service provided by the telephone company.
- Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
- Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.
- If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this product does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

US Number is located on the cabinet bottom

REN number is located on the cabinet bottom

- **RJ14C for line 1 and RJ11C for line 2**

List all applicable certification jack Universal Service Order Codes ("USOC") for the equipment. For some types of analog and digital systems, list associated Facility Interface Codes ("FIC") and Service Order Codes ("SOC"). These are required when the customer orders service from the local telephone company. Refer to Alliance for Telecommunications Industry Solutions ("ATIS") Technical Report No. 5 for a more extensive listing of jack configurations and their designations (e.g., RJ11C), or refer to the Telcordia NC/NCITM Decoder for a full listing.

Rights of the Telephone Company

Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations.

The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and **Receiver**.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office,

Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

Warning: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter."

For body worn operation, this handset has been tested and meets the FCC RF exposure guidelines. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Licensing

Licensed under US Patent 6,427,009.

Hearing Aid Compatibility

This telephone system meets FCC standards for Hearing Aid Compatibility.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



 <p>THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT</p>	<p>CAUTION: RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT</p>
<p>SEE MARKING ON BOTTOM / BACK OF PRODUCT</p>		

Table of Contents

Equipment Approval Information	2	Language	18
Inter ference Information	3	Display Contrast	18
FCC RF Radiation Exposure Statement	4	Sound Settings	18
Licensing	4	Ring Tones	18
Hearing Aid Compatibility	4	Ring Volume	19
Introduction	7	Key Touch Tone	19
Parts Checklist	7	Voice Mail	19
Telephone Jack Requirements	8	Call VM.....	19
INSTALLATION.....	8	Settings	19
Digital Security System	8	Priority Settings	20
Important Installation Guidelines	8	Priority Line.....	20
Handset Layout	9	Priority Mode	20
Headset Layout	10	Restore Setting	20
Base Layout	10	Telephone Operation	21
INSTALLING THE PHONE	11	Making Calls with the handset	21
INSTALLING THE HEADSET BATTERY	11	Making Calls with the Speakerphone	21
HEADSET SET UP	12	Making a Call with the cordless Headset	21
EAR HOOK ATTACHMENT	13	21
TO SWITCH FROM EAR TO EAR	13	Making Calls with a wired Headset	21
IN EAR ATTACHMENT	13	Pre-dialing	22
Base Station	14	Answering a Call	22
PROGRAMMING THE TELEPHONE	15	Switch Between the Speakerphone, Handset, and Headset	22
Standby Screen	15	Mute	22
Programming Functions	15	Flash	22
Phone Setting	15	Inserting a Pause in the Dialing Sequence	23
Date/Time	15	Redial	23
Set Date/Time	15	Reviewing the Redial Numbers	23
Set Format	16	Storing a Redial Record in PhoneBook	23
Time Format	16	Ringer On/Off	24
Date Format	16	Speakerphone, Handset, and Headset Volume	24
Dial Mode	16	Hold	24
Area Code	16	Conference Calls.....	24
2nd Call Alert	17	Page	24
Auto Answer	17		
Handset Name (Only applicable for handset)	17		
Display Setting	18		

Table of Contents

Auto Standby	25	You experience static, noise, or fading in and out	31
Ring Indicator on Headset	25	Memory dialing doesn't work	31
Visual Indicators on Headset	25	Unit locks up and no communication between the base and cordless handset	32
CALLER ID (CID)	25	Date/Time setting is restored to default setting	32
Receiving and Storing CID Records	25	Caller ID Solutions	32
Reviewing CID Records	25	No Display	32
Saving a CID Record to Phone Book Memory	26	No Caller ID	32
Deleting a CID Record	26	Battery	32
Deleting All Call Records	26	General Product Care	32
Dialing Back	26	Causes of Poor Reception	33
If You Programmed Your Local Area Code	26	Service	33
If you Did Not Program Your Local Area Code	27	Warranty	34
Call Waiting Caller ID	27		
Phone Book (Directory) Memory	27		
Adding Phone Book Entries	27		
Reviewing Phone Book Records	28		
Editing a Phone Book Record	28		
Deleting a Phone Book Record.....	28		
Deleting all Phone Book Record	28		
Dialing a Phone Book Record	29		
Dial a phone book record while reviewing it	29		
Speed dial function	29		
Speed dial out	29		
Speed dial number Store	29		
Changing The Battery	30		
Display Messages	30		
Handset Sound Signals	31		
Troubleshooting Guide	31		
Telephone Solutions	31		
No dial tone	31		
Dial tone is ok, but can't dial out	31		
Handset does not ring	31		

Introduction




CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

Parts Checklist

Make sure your package includes the following items:

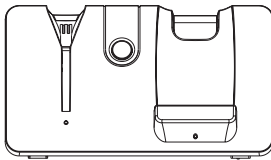

Base



Handset




Handset Battery
Compartment
Cover



Base
AC power adaptor



Telephone 2 - Line Cords

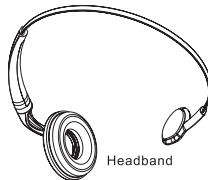

Headband



Handset



Handset battery pack



Handset Battery
Compartment
Cover



Ear Hook



In Ear




Headset Battery



Belt Clip

Telephone Jack Requirements

To use this phone, you will need an RJ11C (for a single line) or a RJ14C (for two lines) type modular telephone jack, which might look like the one pictured here, installed in your home. If you don't have a modular jack, call your local phone company to find out how to get one installed.

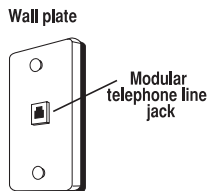

INSTALLATION

Digital Security System


Your cordless phone uses a digital security system to protect against false ringing, unauthorized access, and charges to your phone line.

INSTALLATION NOTE: Some cordless telephones operate at frequencies that may cause or receive interference with nearby TVs, microwave ovens, and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV, microwave ovens, or VCR. If such interference continues, move the cordless telephone farther away from these appliances. Certain other communications devices may also use the 1.9 GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9 GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone systems, and some long-range cordless telephone systems.


Important Installation Guidelines

- Avoid sources of noise and heat, such as motors, fluorescent lighting, microwave ovens, heating appliances and direct sunlight.
- Avoid areas of excessive dust, moisture and low temperature.
- Avoid other cordless telephones or personal computers.
- Never install telephone wiring during a lightning storm.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch non-insulated telephone wires or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.


Handset Layout

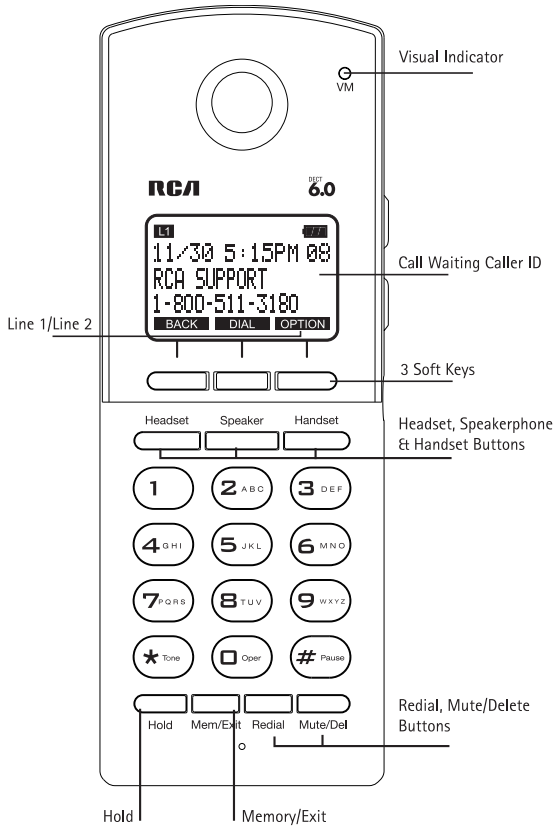

Headset Layout

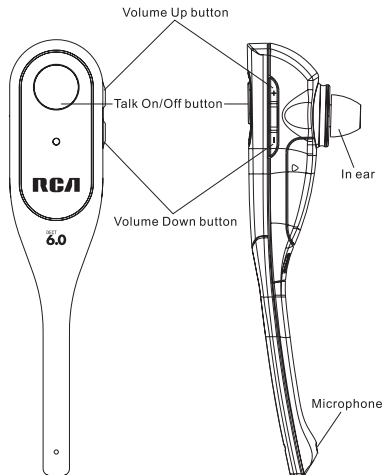

Base Layout

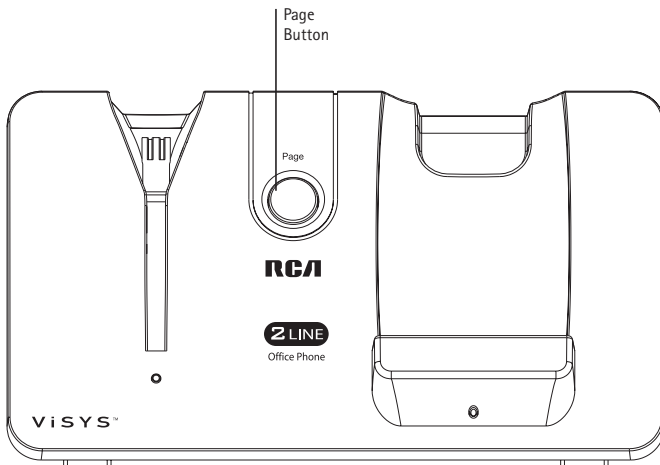

INSTALLING THE PHONE

Installing the Handset Battery

NOTE: You must connect the handset battery before use.




CAUTION: To reduce the risk of fire or personal injury, use only the Nickel-metal Hydride (Ni-MH) battery model T-T104 (GP, 2.4V, 550mAh), which is compatible with this unit.

Risk of explosion if battery is replaced by an Incorrect type. Dispose of used batteries according to the instructions.

1. Locate battery which is packaged inside a plastic bag and is separate from the handset.
2. Locate the battery compartment on the back of the handset.
3. Plug the battery pack cord into the jack inside the compartment.

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

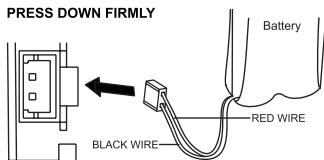

4. Insert the battery pack.
5. Close the battery compartment by placing the handset back cover slightly higher than the handset and then sliding the cover down into position.


INSTALLING THE HEADSET BATTERY

NOTE: You must connect the headset battery before use.



CAUTION: To reduce the risk of fire or personal injury, use only the Telefield NA Inc. approved Li-Polymer battery Model T-T101 (A.E., 3.7V, 240mAh), which is compatible with this unit.

Risk of explosion if battery is replaced by an Incorrect type. Dispose of used batteries according to the instructions.

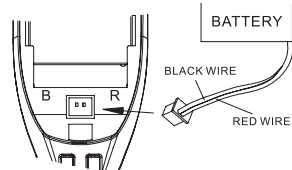

1. If the battery door is attached, press on both sides of the battery compartment cover and lift the cover up and off.
2. Insert the battery into the battery compartment with the warning label facing Up.
3. Push the battery plug into the connector inside the compartment according to the color-coded label and place the wires neatly inside the compartment.
4. Insert the tab on the bottom of the battery cover into the battery compartment. Press down gently on the battery cover until it snaps into place.
5. Place cordless headset in charger. Plug the power supply cord into the power jack on the bottom of the charger and the other end into an electrical outlet. Place headset in the charger. Within a few seconds, the charge indicator should illuminate, verifying the battery is charging.
6. Allow the unit to charge for 14 hours prior to first use. If you don't properly charge the unit, battery performance may be compromised.


NOTE: Remove the ear hook from the headset before battery replacement.

HEADSET SET UP

Headband Attachment

Attaching the headset to the headband:

1. Remove ear hook if currently attached to the headset.
2. Insert the earpiece into the headband ring.
3. Push the earpiece towards the headband ring until it clicks into place.
4. Adjust the headband to fit your head comfortably. Adjust and rotate the angle of the headset until the microphone is pointing toward your mouth.

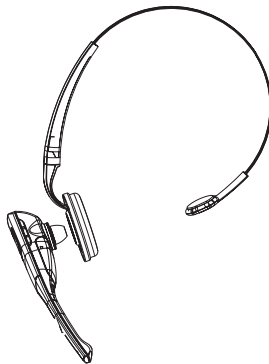

NOTE:

To wear on the other ear, rotate the headset within the headband ring.

Firmly grip the padded earpiece with one hand, adjusting the headset microphone up or down. To remove the headset from the headband, hold the headset with one hand and the headband ring with the other hand. Twist and pull the headset gently until it separates from the ring of the headband.

NOTES:

When you use the headband, you can use the highest in ear tip to keep the volume state.



EAR HOOK ATTACHMENT

To attach the ear hook to the headset.

1. Remove the headband if currently attached to the headset.
2. Insert the earpiece into the ear hook.
3. Press the ear hook onto the earpiece until it clicks into place
4. Hook the headset onto the desired ear and adjust the angle of the headset until the microphone is pointing towards your mouth.

Note: Insert ear hook into either side of ear hook ring, matching with the L or R marked on ear clip ring to either your left or right ear.

Note: Adjust the ear hook to your ear shape comfortably.

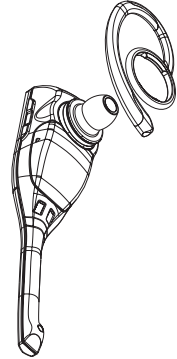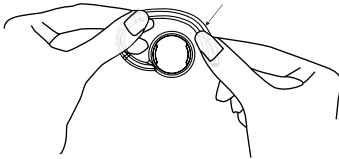

TO SWITCH FROM EAR TO EAR

Unplug the ear hook from ear hook ring.

Insert the ear hook to ear hook ring with L mark for Left ear.


Insert the ear hook to R mark for Right ear.

Rotate microphone boom to reposition nearer to mouth.

Note: Ear hook is made out of a flexible material that can be reshaped to fit your ear. Gently manipulate into the desired shape for maximum comfort.

IN EAR ATTACHMENT

If the Earplug is bigger or smaller than your ear, you can change the In-Ear tip for maximum comfort.

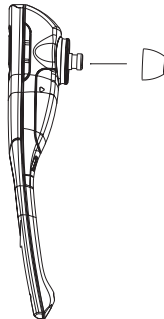


Base Station


The phone must be connected to two line (RJ14C) wall jacks to accommodate both lines.

1. Choose an area near an electrical outlet and a telephone wall jack (RJ11C), and place your cordless telephone on a level surface, such as a desktop or tabletop. If you choose to, you may also mount it on the wall.
2. Plug the power supply cord into the power jack on the back of the base and the other end into an electrical outlet.
3. Connect the telephone line cords:

If you have 2 single-line wall jacks installed in your home or office, you can use adaptors/couplers (not included) to combine the 2 single telephone lines into 1 dual line. The adaptor/coupler may look similar to the one pictured here and can be purchased from your local telephone products retailer.

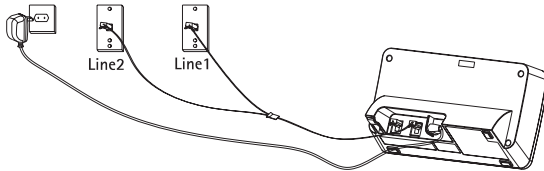

Or, you can plug the two included single line telephone cords in to the two jacks on the back of the telephone.

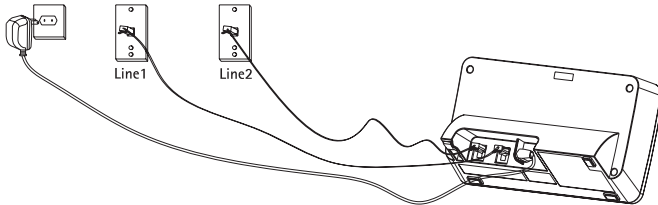

4. Place the handset and headset in the base cradle. The charge/in use indicator turns on, verifying the battery is charging.
5. Allow the phone to charge for 14 hours prior to first use. If you don't properly charge the phone, battery performance is compromised.



CAUTION: Use only the **T-T007** power adaptor that came with this unit. Using other power adaptors may damage the unit.

Use only **Class (Classe) 2 Power Source 7.5V DC 500mA**.

PROGRAMMING THE TELEPHONE

Standby Screen

The handset displays the handset name, date, time, battery status, the quantity of new calls and the three soft keys status.

NOTE: The three soft keys will change depending on the status of the phone or what menu you are in.

Programming Functions

The system uses a menu structure to give you access to all of the built-in features. You may program the following items in main menu: Phone Setting, Display Setting, Sound Settings, Voice Mail, Priority Settings and Restore Setting.

NOTE: If the handset is out of range, Setup BS and Date/Time are not programmable, and Unavailable displays as you try to enter these two menus.

NOTE: During programming, you may press the back soft key at any time to return to the previous menu, and press and hold back soft key for about 2 seconds to exit the the idle mode.

NOTE: If no key is pressed for 30 seconds, the handset will automatically the menu and return to the standby screen.

Phone Setting

1. Make sure your phone is in standby mode (not in talk mode).
2. Press the Menu soft key on HS the handset to go to the main menu.
3. Press VOL (- or +) button to scroll to Phone Setting.
4. Press Select soft key to confirm and you may program the following items: Date/Time, Dial mode, Area Code, Auto Answer, 2nd Call Alert and Handset Name.

Date/Time

From the Phone Setting Menu

1. Press the VOL (- or +) button to scroll to Date/Time sub-menu.
2. Press Select soft key to confirm and you may program the following items: Set Date/Time, Set Format.

Set Date/Time

From the Date/Time sub-menu

1. Use VOL (- or +) button to select Set Date/Time.
2. Press OK soft key to confirm.
3. LCD will display last set time (or, if the device is new or has been reset to default, the LCD will display 12:00AM 01/01/10)
4. Use the dial-pad to enter digits for the current time and date.

Note: Use ****** button or press AM/PM soft key to set the time AM or PM.

NOTE: Enter the Year as a 2-digit number. For instance, enter 10 for 2010, 11 for 2011, etc.

5. Press **SAVE** softkey to confirm the setting, a confirmation tone will indicate that your selection has been saved.

Note: If you subscribe to Caller ID service, the current date/time is set automatically when you receive your first CID record and will override manually set date/time.

Set Format

From the Date/Time Menu:

1. Press the VOL (- or +) button to scroll to Set Format.
2. Press OK soft key to confirm and you may program the following items: Time Format and Date Format

Time Format

From the Date/Time Menu:

1. Use the VOL (- or +) button to scroll to Time Format.
2. Press the OK soft key.
3. Use the VOL (- or +) button to scroll to select either 12 Hours or 24 Hours.
4. Press the OK soft key to select.
5. A confirmation tone will indicate that your selection has been saved.

Date Format

From the Date/Time Menu:

1. Use the VOL (- or +) button to scroll to Date Format.
2. Press the OK Soft key.
3. Use the VOL (- or +) button to scroll to select either DD/MM or MM/DD format.
4. Press the OK Soft key.
5. A confirmation tone will indicate that your selection has been saved.

Dial Mode

From the Phone Settings Menu:

1. Use the VOL (- or +) button to scroll to Dial Mode.
2. Press the SELECT soft key.
3. Use the VOL (- or +) button to scroll to select either Line 1 or Line 2.
4. Press the OK soft key to select.
5. Press the OK Soft key.
6. A confirmation tone will indicate that your selection has been saved.

Area Code

From the Phone Settings Menu:

1. Use the VOL (- or +) button to scroll to Area Code.
2. Press the Select soft key.

3. Use the dial-pad to enter your area code.
 4. Press the OK soft key to confirm your entry.
 5. A confirmation tone will indicate that your entry has been saved.
- Note: The area code default setting is empty.*

2nd Call Alert

From the Phone Settings Menu:

1. Use the VOL (- or +) button to scroll to 2nd Call Alert.
 2. Press the Select soft key.
 3. Use the VOL (- or +) button to scroll to select either On or Off.
 4. Press the **SELECT** Soft key to select.
 5. A confirmation tone will indicate that your selection has been saved.
- Note: The default setting is On.*

Auto Answer

This option allows you to pick up the handset from base to answer an incoming call without pressing the Handset/SPKR buttons or L1/L2 soft keys.

From the Phone Setting Menu:

1. Press the VOL (- or +) button to scroll to the Auto Answer sub-menu.
 2. Press the Select soft key.
 3. Use the VOL (- or +) button to scroll to select either On or Off.
 4. Press the **SELECT** Soft key to select.
 5. A confirmation tone will indicate that your selection has been saved.
- NOTE: The default setting is Off.*

Handset Name (only applicable for handset)

From the Phone Setting Menu:

1. Press the VOL (- or +) button to scroll to the Handset Name sub-menu.
2. Press Select soft key to enter the menu. The default name is Handset.
3. Use the touch-tone pad to enter a name (up to 11 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter l. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter l; press the 8 key **once** for the letter T; press the 4 key twice for the letter H.

*NOTE: If you make a mistake, press VOL (- or +) button to move the cursor forward or backward, and then use the **Clear soft key** to backspace and delete one character at a time.*

NOTE: To avoid confusion, ABC/abc is a soft key to switch/toggle between the upper case & low case of characters during text edit.

4. Press the **Save** soft key to save your name. You will hear a confirmation tone.

Display Setting

1. Make sure your phone is in standby mode (not in talk mode).
2. Press the Menu soft key on the handset to go to the main menu.
3. Press VOL (- or +) button to scroll to Display Setting.
4. Press Select soft key to confirm and you may program the following items: Languages, [Display contrast](#).

Language

From the Display Setting Menu:

1. Press the VOL (- or +) button to scroll to the Language sub-menu.
2. Press Select soft key to enter the menu.
3. Use the VOL (- or +) button to select English, Francais or Espanol. The default setting is English.
4. Press the OK soft key to save your selection.

NOTE: The default setting is English.

Display contrast

From the Display Setting Menu

1. Press the VOL(- or +) button to scroll to the [Display contrast](#) sub-menu.
2. Press Select soft key to enter the menu. The MIN and MAX contrast scale shows on the display.
3. Use the VOL(- or +) button to adjust the contrast. The display instantly adjusts with each press of the VOL(- or +) button.
4. Press the **Select** soft key to save the desired contrast level.

NOTE: The default setting is level 3.

Sound Settings

1. Make sure your phone is in standby mode (not in talk mode).
2. Press the Menu soft key on the handset to go to the main menu.
3. Press VOL(- or +) button to scroll to Sound Setting.
4. Press Select soft key to confirm and you may program the following items: Ring Tone, Ring Volume and [Key Touch Tone](#).

Ring Tones

1. Use the VOL (- or +) button to scroll to Ring Tones.
2. Press the Select Soft key.
3. Use the VOL (- or +) button to scroll to select either Line 1 or Line 2.
4. Press the Select Soft key to select.
5. Use the VOL (- or +) button to scroll to select any of eight unique ring tones.
6. Press the Select Soft key to select.
7. A confirmation tone will indicate that your selection has been saved.

Note: The line 1 default ring tone is ring tone 1 and the line 2 default is ring tone 2.

Ring Volume

There are 6 volume levels for your selection. They are Volume 1 to 5 and Ringer Off.

From the Sound Settings Menu:

1. Press the VOL (- or +) button to scroll to the Ring Volume sub-menu.
2. Press Select soft key to enter the menu.
3. Use the VOL (- or +) button to scroll to select either Line 1 or Line 2.
4. Press the Select Soft key to select.
5. Use the VOL (- or +) button to scroll to select the volume level. The default setting is VOL 3.
6. Press the Select soft key to save your selection.

Key Touch Tone

From the Sound Settings Menu:

1. Press the VOL (- or +) button to scroll to the **Key Touch Tone** sub-menu.
2. Press Select soft key to enter the menu.
3. Use the VOL (- or +) button to select On or Off.
4. Press the Select soft key to save your selection and Saved shows in the display.

NOTE: The default setting is On.

Voice Mail

This feature is used to conveniently your voicemail provided by your telephone service provider.

NOTE: You must subscribe to telephone service provider-offered voicemail on at least one phone line in order for this feature to operate.

1. Make sure your phone is in standby mode. (not in talk mode)
2. Press the Menu soft key to go to the main menu.
3. Press VOL (- or +) button to scroll to Voice Mail.
4. Press OK soft key to confirm and you may program the following items: Call VM and Settings

Call VM

From the Voice Mail Menu:

1. Press VOL (- or +) button to scroll to Call VM.
2. Press OK soft key
3. Use the VOL (- or +) button to toggle between Line 1 and Line 2 and press the OK soft key to select.
4. The phone will dial your voicemail access number. You may proceed to access your voicemail per your service provider's instructions.

NOTE: The default setting is empty.

Settings

From the Voice Mail Menu:

1. Press VOL (- or +) button to scroll to Settings.
2. Press OK soft key
3. Use the VOL (- or +) button to toggle between Line 1 and Line 2 and press the OK soft key to select.
4. Use the dial pad to enter the call-in access number for your voicemail. Press the Clear soft key to backspace and delete characters, if necessary.
5. Press OK soft key.
6. A confirmation tone will indicate that your selection has been saved.

Priority Settings

1. Make sure your phone is in standby mode (not in talk mode).
2. Press the Menu soft key on the handset to go to the main menu.
3. Press VOL (- or +) button to scroll to Priority Settings.
4. Press Select soft key to confirm and you may program the following items: Priority Line, Priority mode.

Priority Line

From the Priority Settings Menu:

1. Use the VOL (- or +) button to scroll to Priority Line.
2. Press the Select soft key.
3. Use the VOL (- or +) button to scroll to select Auto, Line 1 or Line 2.
4. Press the OK soft key to select.
5. A confirmation tone will indicate that your selection has been saved.

NOTE: the default setting is Line 1.

Priority Mode

From the Priority Settings Menu:

1. Use the VOL (- or +) button to scroll to Priority Mode.
2. Press the Select soft key.
3. Use the VOL (- or +) button to scroll to select Handset, Headset or Speaker.
4. Press the **SELECT** soft key to select.
5. A confirmation tone will indicate that your selection has been saved.

NOTE: The default setting is Handset.

Restore Setting

From the Phone Settings Menu:

1. Use the VOL (- or +) button to scroll to Restore Setting.
2. Press the Select soft key.
3. Display shows Restore?

Warning: Pressing **YES** will return phone to its default state. This will erase **redial list records**, date/time and all menu selections.

4. Press the YES soft key to confirm.

5. The LCD will display Please Wait... followed by Initialization...
6. A confirmation tone will indicate that your phone has been restored to its default state.

Telephone Operation

Your phone provides the convenience of accessing two separate telephone lines, each obtained from the telephone company and each having its own phone number.

Making Calls with the Handset

1. Press the HANDSET button, the priority line which set in menu will go off hook if both lines are available.

OR

Press a LINE softkey to select a line.

2. Wait for a dial tone then dial a phone number.
3. Press the END soft key when finished.

Making Calls with the Speakerphone

1. Press the SPEAKER button, the priority line which set in menu will go off hook if both lines are available.

OR

Press a LINE soft key to select a line, then press SPEAKER button to change to Speaker phone mode

2. Wait for a dial tone then dial a phone number.
3. Press the **END soft key** when finished.

NOTE: If a line goes off-hook, the call timer counts time until all the lines go on hook. The timer works for 2 lines.

Making a Call with the cordless Headset

1. Press the Talk On/Off button on the headset OR the HEADSET button on the handset to get a dial tone.
2. When finished, press the Talk on/Off button on the headset OR the **END soft key** on the handset to hang up.

Making Calls with a wired Headset

1. Connect the headset plug to the headset jack on the side of the Handset.
2. Adjust the headset to rest comfortably on top of your head and over your ear.
3. Move the microphone to approximately 2 to 3 inches from your mouth.
4. Press the HEADSET button and the phone automatically selects first available line, if both lines are available, the priority line will be used.
5. Wait for a dial tone, then dial a phone number using the handset dial pad.
6. Press End soft key when finished.



CAUTION: For servicing or replacement, you can purchase a suitable headset through service center or retailer shop.

NOTE: Headset performance may vary depending on the quality of the headset.

Pre-dialing

1. With the phone idle, manually enter the telephone number. The telephone number shows in the display.
2. Press the Dial soft key, SPEAKER button, HANDSET button, HEADSET button or Line 1 or Line 2 soft key to open a line, and the telephone number is automatically dialed.

Answering a Call

1. Press the HANDSET button to answer the call in handset mode, OR
2. Press the SPEAKER button to answer the call in speakerphone mode, OR
3. Press the Line soft key to answer the call in the [handset](#) mode, OR
4. Press the HEADSET button or Talk on/off button on headset to answer the call in headset mode.
5. When finished, press the End soft key.

NOTE: If you have turned the Auto Talk function on, you can pick up the handset from the base to answer the incoming call directly, without pressing any buttons.

NOTE: Adjust the headset volume by pressing the VOL (- or +) button during a call.

Switching Between the Speakerphone, Handset, and Headset

To switch to the speakerphone, press SPEAKER button on handset.

To switch to the headset, press the HEADSET button or Talk On/Off button on headset to enable the headset, and the headset indicator turns on.

To switch to the cordless handset receiver, press the HANDSET button to enable the handset receiver.

NOTE: If a wired headset is plugged into the jack on the base, the wireless headset will be temporarily disabled.

Mute

To have a private, off-line conversation, use the MUTE feature. The party on the other end of the line cannot hear you, but you can still hear them.

1. Press MUTE button to activate the mute feature. The mute indicator turns on.
2. Press MUTE button again to turn it off.

Flash

If you subscribe to Call Waiting service from your telephone service provider and you receive an incoming call on while a call is currently active on the same line, you will hear an audible tone to indicate another call is waiting.

Also, Caller ID information (if available) for the waiting call will be displayed.

1. To connect to the waiting call, press the FLASH [soft key](#) on your phone. This will place the original call on hold and connect you to the new incoming call.
2. To switch between the two calls, press the FLASH [soft key](#).

Inserting a Pause in the Dialing Sequence

Press the #/Pause button twice to insert a delay in dialing sequence when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.) Each pause counts as one digit in the dialing sequence, and is shown as P in the display.

Redial

1. Press the SPEAKER button, the priority line which set in menu will go off hook if both lines are available.

OR

Press a Line soft key to select a line, then press SPEAKER button to change to Speaker phone mode

2. Press the REDIAL button. The redial number list is shown in the display.

3. Use the VOL (- or +) button to select the number, press the dial soft key to dial the desired number.

NOTE: If the number is longer than 32 digits, only the first 32 digits will be saved in the redial list.

Reviewing the Redial Numbers

Your phone records up to three previously dialed phone numbers.

1. When the phone is idle, press the REDIAL button.

2. Use the VOL (- or +) button to view the last three previously dialed numbers.

3. While the preferred number is displayed, press the HEADSET, SPEAKER, HANDSET, Dial soft key, or a Line soft key to dial the phone number.

NOTE: If you do not select a line button, the line is automatically opened and the number is dialed accordingly.

Storing a Redial Record in Phone Book

1. Make sure the phone is in standby mode (not in talk mode).

2. Press the REDIAL button, then use the VOL (- or +) button to scroll to the desired redial number.

3. Press the Option soft key, then use the VOL (- or +) button to scroll to Store, press Select soft key to enter edit mode.

4. Enter name shows in the display. Input a name. Please refer to section "Handset Name" for name editing method.

NOTE: A name must be input otherwise the record cannot be stored.

5. Press the Save soft key, Enter number shows in the display.

6. Edit the numbers with the dial pad.

7. Press the Save soft key to enter VIP Tone Melody selection.

8. Use the VOL (- or +) button to scroll to the desired melody.

9. Press Select soft key and a tone will confirm your selection. Repeat steps 2 through 7 to

save other records.

Ringer On/Off

1. Make sure the phone is in standby mode (not in talk mode).
2. Press the VOL (- or +) button to enter.
3. Use the VOL (- or +) button to scroll to Line 1 or Line 2, press Select soft key to confirm.
4. Use the VOL (- or +) button to scroll to your selection. The default setting is VOL 3.
5. Press the Select soft key to save your selection and the new volume setting shows in the display.

NOTE: If you choose the ringer OFF, L1/L2 RINGER OFF shows in the display.

Speakerphone, Handset, and Headset Volume

While the phone is in use, during the desired mode, press the VOLUME up or down buttons until you reach a comfortable listening level. The phone stores the setting after the last button press.

Hold

In Talk mode, press the HOLD button on handset to hold the line. Line X ON HOLD shows in the LCD display, and the line icon will flash.

When the line is on hold, the hold alert tone will remind both the person on hold and the user that the call is still on hold.

Press the corresponding Line soft key (on handset) to release the hold and pick up the call again.

Conference Calls

3-way conference call with two lines:

1. During a call on Line 1, press the HOLD button to put the call on hold.
2. Press the Line 2 soft key on the handset to get a dial tone. Dial the other number, and then talk to the other person.
3. The originating caller can then press the Conf soft key shown on the display to establish a 3-way conference between the two lines.
4. When finished, press the **End** soft key to end the call.

Note: After you enter a 3-way conference, press Line 1 or Line 2 soft key to talk with the desired line, and the other line will be released automatically.

Page

The page feature helps you locate a misplaced handset.

1. Press the PAGE button on the base. The handset beeps and Page from Base shows in the handset display.
2. To cancel the page, press the PAGE button on the base, or press any key on the handset. Otherwise the paging will last for 2 minutes.

Auto Standby

If you place the handset in the cradle while the handset is off the hook (during a call), the call is automatically disconnected.

Ring Indicator on Headset

The red LED will flash when there is an incoming call or the base is paging the wireless headset.

Visual Indicators on Headset


Charge Indicator on the Headset

While charging, the LED on the headset will glow blue.

CALLER ID (CID)

IMPORTANT: In order to use this unit's Caller ID features, you must subscribe to either the standard Name/Number Caller ID Service or Call Waiting Caller ID Service. To know who is calling while you are on the phone, you must subscribe to Call Waiting Caller ID Service.

The summary screen shows the current time, current date, number of new CID records to be reviewed or total number of records saved to CID memory. It is displayed until any button is pressed.

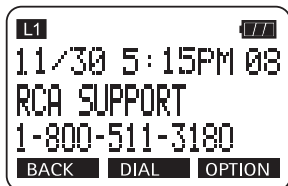

Receiving and Storing CID Records

This unit receives and displays information transmitted by your local phone company. This information can include the phone number, date and time; or the name, phone number, date and time. The unit can store up to 99 calls for later review. When the memory is full, a new call automatically replaces the oldest call in memory. NEW appears in the display for calls received that have not been reviewed. The line number for the call received is also displayed.

Reviewing CID Records

- Press the MEM button and then press the CID softkey to enter the Call log review mode.
- Use VOL (- or +) button to scroll through the call records.

Note: Press the MEM/Exit button to exit the memory during reviewing.

Saving a CID Record to Phone Book Memory

1. While viewing a CID record, press the Option soft key.
2. Use the VOL(- or +) button to scroll to Store, press the Select soft key to enter edit mode.
3. Enter Name shows in the display. Input a name. Please refer to section "Handset Name" for name editing method.

NOTE: A name must be input otherwise the record cannot be stored.

4. Press the Save soft key, Enter number shows in the display.
5. Edit the numbers with the dial pad.
6. Press the Save soft key to enter VIP Tone Melody selection.
7. Use the VOL (- or +) button to scroll to the desired melody.
8. Press Select soft key and you will hear a confirmation tone. Repeat steps 2 through 7 to save other records.

Deleting a CID Record

1. While viewing a CID record, press the Option soft key.
2. Use the VOL (- or +) button to scroll to Delete, press Select soft key to enter Delete mode.
3. Delete? Will show in the display, press OK soft key to confirm, and you will hear a confirmation tone.

Deleting All Call Records

This feature allows you to clear all CID records at once.

1. While viewing a CID record, press the Option soft key.
2. Use the VOL (- or +) button to scroll to Delete All, press Select soft key to enter Delete all mode.
3. Delete all? Will show in the display, press OK soft key to confirm.
4. A confirm tone emit and Empty shows in the display for about 3 seconds.

Dialing Back

When reviewing CID records, you can dial back the numbers showing on the display by pressing the HEADSET button, the HANDSET button, the SPEAKER button or either the Line 1 or Line 2 soft key.

If You Programmed Your Local Area Code

1. When reviewing CID records, use the VOL (- or +) button to display the number you want to dial.
2. If you see a number with 7 digits (i.e.555-1234), then the call was received from within your area code. However, this does not guarantee the call is a local call. If you see a number with 11 digits (i.e.1-234-555-1234), then the call received was not from your area code.
3. To adjust the phone number format, press Option soft key and then use the VOL (- or +) button to enter Format mode, press Format soft key to change the format. For instance, a 7-digit local number sometimes cannot be dialed because it requires a 10-digit or 11-digit

format. Use the Format soft key to scroll through 7, 10 and 11-digit numbers.

Number of digits	Explanation	Example
	7-digits: 7-digit telephone number	(i.e.555-5555)
	10-digits: 3-digit area code +7-digit telephone number	(i.e.123-555-5555)
	11-digits: long distance code 1 +3-digit area code +7-digit telephone number	(i.e. 1-123-555-5555)

4. To dial the displayed number, select a line or press HANDSET, SPEAKER, or HEADSET button.

If You Did Not Program Your Local Area Code

1. Use the CID button to display the number you want to dial. You will only see 10-digit numbers (i.e.123-555-1234).
2. Press HANDSET, SPEAKER, or HEADSET button to dial back. You may adjust the number format by entering the Format mode before dialing.

Call Waiting Caller ID

This feature allows you to see who is calling when you hear the call waiting beep. The caller identification information appears in the display after you hear the tone.

- Press the FLASH soft key to put the person to whom you're talking on hold and answer the incoming call.

IMPORTANT: To use all the features of this unit, you must subscribe to either the standard Name/Number Caller ID Service or Caller ID with Call Waiting Service. To know who is calling while you are on the phone, you must subscribe to Caller ID with Call Waiting Service.

Phone Book (Directory) Memory



You may store data in the Phone Book Directory. The Phone Book stores up to 16 characters and 32 digits.

The records are stored by alphabetically ascending order.

Adding Phone Book Entries

1. Make sure the phone is in standby mode (not in talk mode).
 2. Press the MEM button and then press the DIR soft key to enter Phone book review mode.
 3. Press the Option soft key, use VOL (- or +) to select **NEW ENTRY**.
 4. Press the Select soft key, Enter name shows in the display.
 5. Input a name. Please refer to section "Handset Name" for name editing method.
- NOTE: A name must be input otherwise the record cannot be stored.*
6. Press the Save soft key, Enter number shows in the display.
 7. Edit the numbers with the dial pad.

8. Press the Save soft key to enter VIP Tone Melody selection.
9. Use the VOL (- or +) button to scroll to the desired melody.
10. Press Select soft key, and you will hear a confirmation tone.

Reviewing Phone Book Records

1. Make sure the phone is in standby mode (not in talk mode).
2. Press the MEM button and then press the DIR soft key to enter Phone book review mode.
3. Use VOL (- or +) button to scroll through the call records.

-OR-

Press the number keys to go to the name of the records started with the corresponding character.

Note: Press the MEM/Exit button to exit the memory during reviewing.

Editing a Phone Book Record

1. When reviewing the phone book records, use the VOL (- or +) button or the number keys to scroll to the desired record.
2. Press the Option soft key, use VOL (- or +) to select **EDIT ENTRY**, then press the Select soft key to enter edit mode.
3. Enter name shows in the display. You may now change the name, if desired. Please refer to section "Handset Name" for name editing method.
4. Press the Save soft key, Enter number shows in the display.
5. Edit the numbers with the dial pad.
6. Press the Save soft key to enter VIP Tone Melody selection.
7. Use the VOL (- or +) button to scroll to the desired melody.
8. Press Select soft key, and you will hear a confirmation tone.

NOTE: Press the Back soft key to keep the previous setting (making no changes) and return to the standby mode.

Deleting a Phone Book Record

1. While viewing a Phone book record, press the Option soft key.
2. Use the VOL (- or +) button to scroll to Delete, press Select soft key to enter Delete mode.
3. Delete? Will show in the display, press OK soft key to confirm and you will hear a confirmation tone.

Deleting all Phone Book Record

This feature allows you to clear all Phone Book records at once.

1. While viewing a Phone Book record, press the Option soft key.
2. Use the VOL (- or +) button to scroll to Delete All, press Select soft key to enter Delete all mode.
3. Delete all? Will show in the display, press OK soft key to confirm.
4. You will hear a confirmation tone and Empty will show in the display for about 3 seconds.

Dialing a Phone Book Record

Dial a phone book record while in talk mode:

1. Make sure the phone is in use (in talk mode) by pressing the HANDSET, SPEAKER button, HEADSET button, or by selecting a Line.
2. Press the MEM button and then press the DIR soft key to enter Phone book review mode.
3. Use VOL (- or +) button to scroll to the desired record.
4. Press the Dial soft key to dial the number.

-OR-

Dial a phone book record while reviewing it:

1. Make sure the phone is in standby mode (not in talk mode).
2. Press the MEM button and then press the DIR soft key to enter Phone book review mode.
3. Use VOL (- or +) button to scroll to the desired record.
4. Press the HANDSET, SPEAKER, **HEADSET button or DIAL soft key**. The number will dial automatically.

Speed dial function

This function allows user to dial out the numbers which stores in the 0~9 location quickly.

Speed dial out

1. Make sure the phone is in standby mode (not in talk mode).
2. Press the MEM button and then press the SPEED soft key, the display will show "Select button Location".
3. Press the digit button (0~9) to select the Speed dial location.

If the location is not empty, the unit will seize the line automatically and then dial out the numbers which stored in the location.

Note: if the location is empty, the unit will emit an error tone and enter Speed dial store mode.

Speed dial numbers Store

1. Make sure the phone is in standby mode (not in talk mode).
2. Press the MEM button and then press the SPEED soft key, the display will show "Select button Location".
3. press the "Edit" soft key and then press the digit button (0~9) to select the Speed dial location.
4. Enter name shows in the display. Input a name. Please refer to section "Handset Name" for name editing method.
5. Press the Save soft key , Enter number shows in the display.
6. Edit the numbers with the dial pad.
7. press the SAVE soft key to confirm, the location will store the number and can be dial out follow the speed dial steps.

Changing The Battery



Handset battery

CAUTION: To reduce the risk of fire or personal injury, use only the Telefield NA Inc. approved Nickel-metal Hydride (Ni-MH) battery model T-T104 (GP, 2.4V, 550mAh), which is compatible with this unit.

Headset battery

CAUTION: To reduce the risk of fire or personal injury, use only the Telefield NA Inc. approved Li-Polymer battery Model T-T101 (A.E., 3.7V, 240mAh), which is compatible with this unit.

1. Make sure the telephone is in standby mode (not in TALK mode) before you replace battery.
2. Remove the battery compartment door.
3. Disconnect the cord attached to the battery pack and remove the battery pack from the handset.
4. Insert the new battery pack and connect the cord to the jack inside the battery compartment.
5. Put the battery compartment door back on.
6. Place handset in the base or handset charge cradle to charge. Allow the handset battery to properly charge (for 14 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance may be compromised.

Display Messages

The following messages show the status of the phone, provides Caller ID information, or helps you set up and use your phone.

BLOCKED	Indicates the person is calling from a number which is blocked from transmission.
DELETE ALL?	Prompt asking if you want to erase all records.
DELETE?	Prompt asking if you want to erase the current record.
ENTER NAME	Prompt telling you to enter a name.
ENTER NUMBER	Prompt telling you to enter a telephone number.
NEW CALLS	Indicates call or calls which have not been reviewed.
HANDSET NAME	Prompt telling you to enter a user name for the handset.
UNAVAILABLE	The handset is not yet registered or is out of range.
NO LINE	Indicates that the telephone line is not connected.
EMPTY	Indicates there are no CID records in memory.

PAGE FROM BASE Someone pressed the **PAGE** button on the base.

UNKNOWN Indicates incoming call is from an area not serviced by CID or the CID information was not sent.

Handset Sound Signals

Signal	Meaning
A long warbling tone (with ringer on)	Signals an incoming call
Three short beeps (several times)	Page signal
One beep every 14 seconds	Low battery warning

Troubleshooting Guide

Telephone Solutions

No dial tone

- Check or repeat installation steps:

Make sure the base power cord is connected to a working electrical outlet. Make sure the telephone line cord is connected to the base and the wall jack.

- Connect another phone to the same jack. If it doesn't work, the problem might be your wiring or local service.
- The handset may be out of range of the base. Move closer to the base.
- Make sure the battery is properly charged (for 14 hours).

Dial tone is ok, but can't dial out

- Make sure the type of phone service you are subscribed to is TONE or PULSE.

Handset does not ring

- Make sure the handset ringer is set to on.
- The handset may be out of range of the base. Move closer to the base.
- You may have too many extension phones on your line. Try unplugging some extensions.
- Check for a dial tone. If no dial tone is heard, see "No dial tone".

You experience static, noise, or fading in and out

- The handset may be out of range of the base. Move closer to base.
- Make sure base is not plugged into an electrical outlet with another household appliance. If necessary, relocate the base.
- Charge the battery (for 14 hours).

Memory dialing doesn't work

- Did you follow proper dialing sequence?

Unit locks up and no communication between the base and cordless handset

- Unplug the power adaptor from the electrical outlet and the bottom of the base. Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base and electrical outlet. Reconnect the battery and charge for 14 hours.
-

Date/Time setting is restored to default setting

- May be caused by power failure. Set Date/Time again.
-

Caller ID Solutions

No Display

- Charge the battery (for 14 hours). Or replace the battery.
 - Make sure the unit is connected to a non-switched electrical outlet. Disconnect the power adaptor from the base and reconnect it.
-

No Caller ID

- You must be subscribed to the standard Name/Number Caller ID service from your local telephone company to receive CID information.
-

Battery

If you experience any of the following problems, even after recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- Limited range

General Product Care

To keep your unit working and looking good, follow these guidelines:

- Avoid dropping the handset, as well as other rough treatment to the phone.
- Clean the phone with a soft cloth.
- Never use strong cleaning agents, paint thinner, abrasive powder, alcohol, or other chemical products to clean the unit. Doing so will damage the finish.
- Retain the original packaging in case you need to ship the phone at a later date.
- Periodically clean the charge contacts on the handset and base with a clean pencil eraser

Causes of Poor Reception

- Aluminum siding.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals.
- You're too close to appliances such as microwaves, stoves, computers, etc.
- Atmospheric conditions, such as strong storms.
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You're out of range of the base.

Service

If trouble is experienced with this equipment, for repair or warranty information, please contact customer service at 1-800-511-3180. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

This product may be serviced only by the manufacturer or its authorized service agents. Changes or modifications not expressly approved by Telefield NA Inc. could void the user's authority to operate this product. For instructions on how to obtain service, refer to the warranty included in this guide or call customer service at 1-800-511-3180.

Or refer inquires to:

Telefield NA Inc.
Manager, Consumer Relations
4915 SW Griffith Dr. #205
Beaverton, Or 97005

Attach your sales receipt to the booklet for future reference or jot down the date this product was purchased or received as a gift. This information will be valuable if service should be required during the warranty period.

Purchase date _____

Name of store _____

Warranty

Limited Warranty

What your warranty covers:

- Defects in materials or workmanship

For how long after your purchase:

- Two years, from date of purchase

What we will do:

- Provide you with a replacement unit. The exchange unit is under warranty for the remainder of

the original product's warranty period.

How you get service:

- Locate your proof of purchase in the form of a bill of sale or receipted invoice which is evidence

that the product is within the warranty period. Proof of warranty eligibility is required and must be presented to obtain warranty service.

- Contact RCA Customer Care at (800) 511-3180. Our representatives will help you troubleshoot and diagnose the problem. As you may be asked to disconnect your RCA telephone from its power source, you must call from another telephone. If the issue cannot be resolved by our Customer Care Team, you will be issued an RMA (Return Merchandise Authorization) number and be given instructions on how to submit your proof-of-purchase paperwork and where to send your defective merchandise.

- You will be responsible for shipping the defective unit back to our warranty fulfillment center at your own expense. You are responsible for damage or loss during shipment so insuring the product during return shipping is highly recommended.

- We will ship a replacement to you freight pre-paid.

What your warranty does not cover:

- Customer instruction. (Your Instruction Book provides information regarding operating instructions and user controls. Additionally, our Customer Care Center is staffed 24x7 with product experts that can assist you with any questions that may arise during setup and use of your RCA telephone.
- Installation and setup service adjustments
- Batteries
- Damage from misuse or neglect
- Products that have been modified or serviced outside the USA
- Products purchased from non-authorized retailers, dealers or resellers

- Products purchased or serviced outside the USA
- Acts of nature, such as, but not limited to lightning damage

Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY TELEFIELD NA INC., ITS AGENTS, OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TELEFIELD NA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF OREGON. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA, Mexico or Canada:

This warranty does not apply. Contact your dealer for warranty information.

Visit the RCA web site at www.rca4business.com

Please do not send any products to the Oregon address listed in this manual or on the carton. This will only add delays in service for your product.

**Telefield NA Inc.
4915 SW Griffith Dr. #205
Beaverton, Or 97005**

RCA is a trademark of RCA Trademark Management S.A.,
Used under license.

© 2011. All rights reserved.

Model: [TC25211](#)

T0000131 (Rev. 1 E)

11-11

Printed in China