

I700 Phone

User's Manual

About this manual

Welcome to the I700 Phone. This Phone comes with two parts.

'Before you start'

'Operation Instruction'

Before using your I700 Phone, read 'Before you start' for overview of features, basic setup, and other important details.

After you have become familiarized with its basic functionality, refer to the operation Instruction for detailed features, less common tasks, and for maintaining your I700 Phone.

These manuals can also serve as a source of information if you have problems operating your I700 Phone.

I. Before you start

A. FEATURES

1.Unpacking

2.Phone Layout

3. Display Layout

4. Battery

5. SIM Card

6. T-Flash

7. Headset

8. USB Cable

B. Basic usages

1. Power On/Off

2. Call Function

3. Multimedia Function

4. Text Input mode

5. Phone Book

II. Operation Instruction

A. Menu Operation

1. Phone Book

2. Message Center

3. Call Histroy

4. Settings

5. Multimedia

6. Fun & Games

7. User Profiles

8. Organizer

9. Services

10. Communications

11. Shortcuts

B. Trouble Shooting

C. Safety Information

D. Glossary

I. Before you start


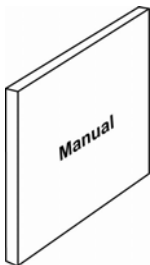



I700 Phone



A. Features

1. Unpacking

Your package list is as shown below

Handset	Manual	Travel Adaptor	Earphone	USB Cable (Optional)
				

2. Phone Layout

The following illustration shows the main elements of your phone.

2.1 LCD

The Main LCD is TFT LCD and has 260K colors and the Sub LCD is STN LCD and has 65K colors.

You can be enjoy the more clear LCD color with your I700 phone






2.2 Camera


You can take a photo with I700's embedded digital camera. I700 has 1.3 Mega pixels camera module, you can enjoy highly qualify digital photo with your I700 phone.





2.3 Slide Type

I700 is slide type phone. You can open the slide as follows;




2.3 Keys Description

Function Keys	
Left Soft Key 	<p>[Basic Function] Performs the functions indicated by the text in the left-bottom line of the display screen. Usually works as 'selection' key</p> <p>[Idle Mode] Enter main menu</p> <p>[MPEG4 Mode] Play & Pause MPEG4 file</p>
Right Soft key 	<p>[Basic Function] Performs the functions indicated by the text in the right-bottom line of the display screen. Usually works as 'backward' key</p> <p>[Idle Mode] Enter Phonebook list menu</p> <p>[MPEG4 Mode] Stop playing MPEG4 file</p>
	Makes or answers a call. In the idle mode, launches the call log menu.
	Ends a call. Also switches the phone on or off when pressed and held. In the menu, returns to the idle mode or cancels your input.
	Clear Key, Usually works as 'cancel' key
FWD	Play next MP3
PLAY/PAUSE	Play or Pause MP3
BACK	Play previous MP3




Navigation Keys	
	<p>[Idle Mode] Enter WAP browser mode (press and hold) Left soft key function (short press)</p> <p>[Text Input Mode] Switch the input methods</p>

	<p>[Basic Function] move the cursor or selection bar up (Text edit mode or menu mode)</p> <p>[Idle Mode] Enter the SMS menu.</p> <p>[Camera Mode] Magnify the image (Digital Zoom Function)</p> <p>[MP3 Mode] Play & Pause MP3 file</p>
	<p>[Basic Function] move the cursor or selection down (Text edit mode or menu mode)</p> <p>[Idle Mode] Enter tone setup menu</p> <p>[Camera Mode] Reduce the image (Digital Zoom Function)</p> <p>[MP3 Mode] Stop playing MP3 file</p>
	<p>[Basic Function] move the cursor or selection left (Text edit mode or menu mode)</p> <p>[Idle Mode] Enter the Alarm menu.</p> <p>[Camera Mode] Adjust EV Level</p> <p>[MP3 Mode] Go to previous MP3 file</p> <p>[MPEG4 Mode] Speed Rearward</p>
	<p>[Basic Function] move the cursor or selection right (Text edit mode or menu mode)</p> <p>[Idle Mode] Enter the Calendar / Schedule menu</p> <p>[Camera Mode] Adjust EV Level</p> <p>[MP3 Mode] Go to next MP3 file</p> <p>[MPEG4 Mode] Speed Forward</p>

Navigation key Image가 다름.


Alphanumeric Keys	
	<p>[Press] Enter number and string</p> <p>[Press and Hold]  : Enter '+' (international call)  : On and Off silent mode</p> <p>[Video Play Mode] Wide screen view</p>

  Key pad Image가 다름.

Side Keys	
	<p>[Basic Function] move the cursor or selection bar up in menu mode</p> <p>[Idle Mode] Increase the key-tone volume</p> <p>[MP3 Mode & MPEG4 Mode] Increase the volume</p>
	<p>[Basic Function] move the cursor or selection down (Text edit mode or menu mode)</p> <p>[Idle Mode] Decrease the key-tone volume</p> <p>[MP3 Mode & MPEG4 Mode] Decrease the volume</p>
	<p>[Short Press] Enter the Camera Mode</p> <p>[Press and Hold] Enter the Take Video Record Mode</p>

3. Display Layout

3.1 Display Screen

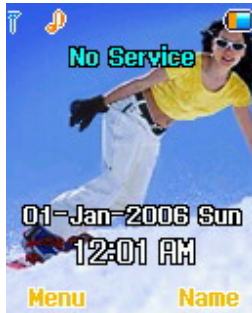

← Fixed Icon Area

← Network Status Area

← User Setting Screen Area

← Time & Date Area

← Soft Key Area

3.1.1 Fixed Icon Area:

8 fixed icons are displayed indicating the phone status.

3.1.2 Network Status Area:

Network name registered is displayed.

If there is no GSM network coverage, No Service is displayed.

If you are in the coverage area of a GSM network but you are not allowed to register to the network, Emergency is displayed.

3.1.3 User Setting Screen Area:

Digital Clock , Analog Clock , Images is displayed according to the setting of Wallpaper Select menu.

If you set to get the broadcast message from the network, you can see it on the idle screen. For details of how to activate and deactivate it, please see Cell Broadcast menu in A2. In this case, the User setting screen Area updates the received broadcast messages. If you want to go back to default screen, press [END].

! Note: The broadcast message service may not be available on all networks.

3.1.4 Time & Date Area

Current time and date is displayed in the Time & Date Area.


3.1.5 Soft Key Area:

The functions assigned to the right and left soft keys.

3.1.6 Icons Descriptions

Icon	Description
Rssi Bar	Shows the received signal strength. The greater the number of bars, the better the signal strength.
Battery Bar	Shows the current battery charge level. The green area shows charge level of battery.
	Appears when the alarm clock is set.
	Appears GPRS Mode is on
	Indicate the phone number line you select
	Show Phone Lock mode
	Roaming
	Appears when you miss call
	Appear when e-mail has been received
	Appear when FAX has been received
	Appears when Voice mail has been received
	Appears when SMS has been received
	Appears when MMS has been received
	Appears when MMS client is busy
	Appears when phone is mute mode
	Appears when alert mode is selected as ring
	Appears when alert mode is selected as Silent
	Appears when alert mode is selected as Vibrator
	Appears when alert mode is selected as Vibration and Ring
	Appears when alert mode is selected as Vibration then Ring
	Appears when WAP push is arrived
	Appears when stopwatch application is undergoing

3.2 Camera Mode Screen

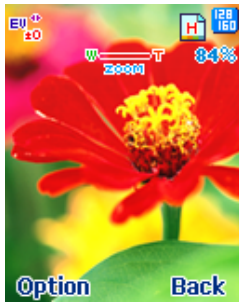

← Menu & Control Area

← Preview Area

← Soft Key Area

3.2.1 Preview Area :

You can see a preview shot before you take a photo.

3.2.2 Control Area:

You can see the status of photo mode setting with this control area. Each icon of control area has specific functions. The following table describes what the icons mean.

Functions	Icons
Zoom	
Exposure Value	
LED Highlight	
Delay timer	
Continuous shot	
Night mode	
Image quality	
Image size	

Icon다름.

3.3 MP3 Mode Screen



← MP3 File Info Area

← MP3 Control Area

← Soft Key Area


3.3.1 Icon Description

Icons	Description
	Play MP3 file
	Pause MP3 file
	Stop playing MP3 file
	Go to Previous MP3 file
	Go to Next MP3 file
	Show volume strength level
	Show phone icon when MP3 file from phone
	Show memory card icon when MP3 file from RS MMC card

4. Battery


4.1 How to attach the battery

- Align the bottom of the battery with the slot in the bottom of the phone.
- Then sit the battery on the back of the phone until it clicks into place.

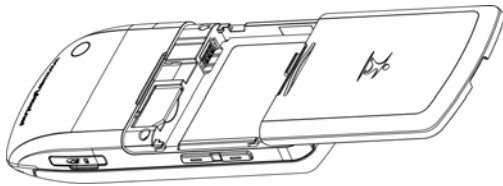

4.2 How to remove the battery

- a. Turn off your phone first.
- b. Push up the battery release latch
- c. Slowly lift the battery away from the up.

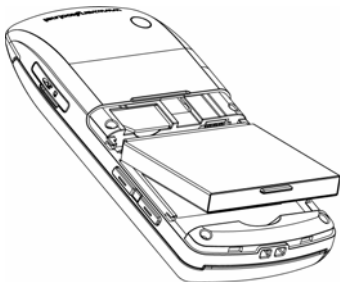

4.3 How to charge the battery

- a. Plug your charger in the wall socket.
- b. Connect the other end to the interface connector on the bottom of the phone.



! Note

The phone will automatically check the battery status while the charger connector is installed on the phone. Once it detects that the battery level

- Full status, it automatically recharges the battery.
- Normally the phone completes battery charging in one hour.
- For a new or completely discharged battery, it takes at least 4 hours of charging to achieve optimum performance.
- You can make calls while charging your phone.
- Do not charge the phone without the battery in place.

- User Information regarding FCC label requirements.

The label will be visible at the time of purchase because the battery is installed by the user before the first use.

5. SIM Card

SIM Card provides additional services and functions besides making a call.

These functions will only display and work on the menu of the phone if your SIM card supports them.

Some menu may not be shown depending on the SIM card supplied.


The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) regarding availability of services related to the SIM card, application information and the costs.

5.1 How to place the SIM card

Ensure the phone is powered off and the travel charger is detached first before you start the following steps.


Orientate your SIM card with its gold contacts facing downwards and push it fully into the holder as show below.

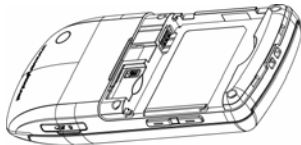

5.2 How to remove the SIM card

Ensure the phone is switched off and the travel charger is detached first before you start the following steps.

- a. Remove the battery.
- b. Remove the SIM card from the holder.

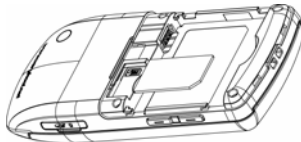

! Note: The SIM card is a computer chip containing information about your subscription, security, phonebook etc. When you register as a subscriber with GSM network operator, you are provided with the SIM card. Always handle the SIM card with care and insert with the gold contacts facing down.


6. T-Flash

T-Flash provides more big flash memories for MP3 and MPEG4 depend on memory card size.

5.1 How to place the T-Flash

Ensure the phone is powered off and the travel charger is detached first before you start the following steps.


- a. Pull out the T-Flash rubber in the direction of the arrow**
- b. Insert a T-Flash and then push into the T-Flash holder**
- c. Stop up the T-Flash rubber**

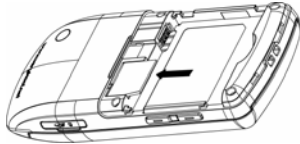

5.2 How to remove the T-Flash

Ensure the phone is switched off and the travel charger is detached first before you start the following steps.

- a. Pull out the T-Flash rubber**
- b. Push the T-Flash card and then remove it**
- c. Stop up the T-Flash rubber**

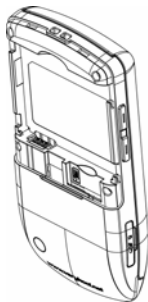

6. Headset

Insert the headset plug into the jack on the left side of your phone marked



You can answer or end a call by pressing the hook button on the headset.

When you receive an incoming call while a call is in progress, you can answer the incoming call by pressing the hook button on the headset. (The first call is automatically put on hold.)

You can make the last number dialed call by pressing the hook button when the screen is idle.

The last number dialed is launched by pressing the hook button, and then the call will be made by pressing the hook button again.



! Note: If the headset is plugged in, your phone's standby time will be reduced. Therefore, please remove the headset when not in use.

7. USB cable

1. Connect the USB connector to USB port of PC (Desktop or Notebook)



2. Connect the other end to the interface connector on the bottom of the phone



Two functions are available via USB connection.

7.1 Data transfer with PC

When you connect your phone with PC by USB cable, the following window is shown up on you phone LCD.

- Mass Storage : You can use your phone as external memory
=> MP3 file, Image File, Photo File
- **Webcam: You can use your phone as a external camera.**
- COM port : You can synchronize your phone data with PC by using 'Phonesuite' program
=> Phonebook, SMS message, Image file, i-meldody file

! Note : Refer to additional manual 'Phonesuite' regarding Synchronization function.

7.2 Charging

Your phone is on charging status automatically while USB cable connected with PC.

B. Basic Operation

1. Power On/Off

To switch your phone On and Off, make sure that the battery is inserted.

- To switch your phone on, press and hold down [END] until you hear the power-on melody.
- To switch your phone off, press and hold down [END] until you hear the power-off melody.

! Note : Some SIM card may be protected with PIN. If Enter PIN is prompted, enter your PIN and then press [Ok soft key]. For more details, please see Security Setting in 'Operation – Menu'.

2. Call Function

2.1 Making a Call

To make a call with your phone, insure that phone screen is idle mode, then key in the area code and phone number using the numeric keys and press the Dial & Menu confirmation key.



You can hear the connect tone when the call is answered by the called person, if you set the Connect tone to ON.

2.2 Making International Calls

Press and hold the '0' key to display "+" character.

Please Key in the country code, area code (without the leading zero) and the phone number. And then press the Dial & Menu confirmation key. The '+' tells the network that the call is international.

2.3 Edit Phone Number

Key	Description
	[Press] Delete a digit on the left side of cursor [Press and Hole] Delete the whole digit
	Move cursor to the digit you want to edit

2.4 Using Phonebook

You can store the names and phone numbers dialed regularly in the SIM card and phone memory.

- See Phonebook List : If you want to go to the phonebook list, push right soft key, and then choose the name what you want to find using Navi-Up & Down keys. Push Dial key when you want to make a call or push left soft key to go to option menu.
- Search Phonebook : If you want to search phonebook list with special name, **push right soft key and then** push navi-down key, and then enter the name what you want to find. Input full name or even a start letter and select “OK” menu. If there is the name you want to call, choose the name by moving navi-up & down key. Push Dial key when you want to make a call or push left soft key to go to option menu.

2.5 Making a Call from Message

You can make a call from message by pushing Dial & Menu Confirmation key when the message you want to call back is highlighted. And you can also make by choosing “Call Back” Menu in the option of “Inbox” after you read a message.

2.6 Redialing the last Number

The phone stores the last **30** numbers dialed. To recall any of these numbers, proceed as follows.

- Press the Dial key to display a list of the last numbers.
- Use Up & Down navigation keys to scroll through the numbers until the required number is highlighted.
- Dial the number highlighted

2.7 Ending a Call

When you have finished your call, briefly press the Menu exit key, or close the slide.

2.8 Answering a Call

When you answer a call, the phone rings or vibrates according to the setting with the incoming call animation.

When the caller can be identified, the caller’s phone number and name, if stored in phonebook, will be displayed. If the caller cannot be identified, only the caller’s phone number will be displayed.

- Press the Dial & Menu confirmation key. If the **Any key Answer** option is set to **ON**, you can press any key to answer a call except for the power on/off key when the slide is open.
 - To reject an incoming call, press and hold the volume keys on the right side of the phone without opening the slide.

- If the **Cover Answer** option is set to **ON**, you do not need to press any key. You can answer the call simply by opening the slide when the slide is closed.
- End the call by closing the phone or pressing the Menu exit key.
-

2.9 Emergency Call

Ensure that the phone is switched on and in service.

Enter the emergency number (Official emergency number or another official emergency number) and press the Dial & Menu confirmation key. Give your location. Do not end the call until given permission to do so.

End the call by closing the slide or pressing the Menu exit key.

! Note : In the situation such as power-on that **Enter Lock Code** or **Enter PIN** is prompted, Some network may not allow the emergency call and may request to insert SIM card.

2.10 Entering a “Pause” Character in a Dial String

A pause (“P”) character may be entered into a dial string by pressing the left special function key(“*”) three times.

2.11 Adjusting Earpiece Volume

During a call, you can adjust the earpiece volume by pressing up side or down side of key on the right side of this phone. If you want to change keypad tone, press up side or down side of volume key in idling mode.

2.12 Using the Earphone

If you insert the earphone to the jack of your phone, you can use it in the same way as your phone's earpiece and microphone.

You can answer or end a call by pressing the hook button on the earphone.

To answer another call while you are on the phone, you can answer the waiting call by pressing the hook button on the earphone.

3. Multimedia Function

3.1 Camera

If you want to take a photo, please follow the procedure as below

- Open the slide.
- Press 'Camera' key to enter camera mode
- Press 'Wap' key to take a photo
- If you want to save the image, press save button and write the title, otherwise press back button.

! Note: For more detailed information about this and other functions of camera, you can refer to the below menu. (II Operation instruction => A. Menu Operation => 2. multimedia)

3.2 Video Recorder

If you want to take a video in your phone, choose the [Video Recorder] menu in [Multimedia] menu.

- Open the slide.
- Choose the [Video Recorder] menu in [Multimedia] menu **or press and hold "Camera key" to enter video recorder mode**
- Press the 'Wap' key to take a video.

! Note: For more detailed information of the functions of camcorder, you can refer to the below menu (II Operation instruction => A. Menu Operation => 2. multimedia)

3.3 Video player

If you want to play MPEG4 file, please follow the procedure as below

- Open the slide
- Choose the [Video Player] menu in [Multimedia] menu.
- Press 'Wap' key to play MPEG4 file.

! Note: For more detailed information of the functions of Video Player, you can refer to the below menu (II Operation instruction => A. Menu Operation => 2. multimedia)

3.4 MP3 player

If you want to play MP3 file, please follow the procedure as below

Case 1

- Open the slide

- Choose the [MP3] menu in [Multimedia] menu.
- Press play button to play MP3 file or press left soft key (List) to enter MP3 file list

Case 2

- **Press and hold the play key on the slide closed status.**

! Note: For more detailed information of the functions of MP3 Player, you can refer to the below menu (II Operation instruction => A. Menu Operation => 2. multimedia)

4. Text Input Mode



4.1 Text Input mode general





You can input and edit text by this phone.

- Write and edit a message (SMS/MMS)
- Enter Name (Phonebook)
- Search mode
- Write and edit the name of photo (Camera)
- Write and edit the name of bookmark and WAP profile (WAP)

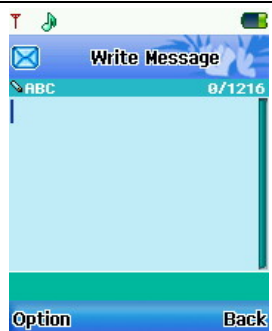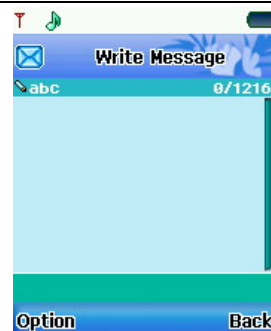




4.2 Text Input Methods








You can use 18 type input modes as follows.

Mode	Screen (SMS write mode)	Mode	Screen (SMS write mode)
Multitap ES		Multitap es	
Smart ES		Smart es	
Multitap ABC		Multitap abc	





Smart ABC		Smart abc	
Multitap PT		Multitap pt	
Smart PT		Smart pt	
Multitap FR		Multitap fr	
Smart FR		Smart fr	
Numeric		Insert Syumbols	










4.3 MultiTap Spanish mode (ES, es)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward




	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Insert a blank or “0”
	Insert symbols (. , - ? ! ' @ : # \$ / _ 1)
	Select Spanish characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
# key 그림	Switch the input methods.
	Switch the input methods.

4.4 Smart Spanish mode (ES, es)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.



	<p>[Press] Move the cursor one line up</p> <p>[Press and Hold] Scroll the cursor upward</p> <p>* When entering a word and highlighted, swap words in database.</p>
	<p>[Press] Move the cursor one line down</p> <p>[Press and Hold] Scroll the cursor downward</p> <p>* When entering a word and highlighted, swap words in database.</p>
	Go back to the idle screen
	Insert a blank or “0”
	Insert stroke ‘:’, ‘:)’, ‘: -)’
	Select Spanish characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.












4.5 MultiTap English mode (ABC, abc)

Key	Description
	[Option Soft Key] Go to option menu screen
	<p>[Press] Clear a character</p> <p>[Press and Hold] Clear the entire entry</p>
	<p>[Press] Move the cursor to the left direction by a character</p> <p>[Press and Hold] Scroll the cursor leftward.</p>



	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Insert a blank or “0”
	Insert symbols (. , - ? ! ' @ : # \$ / _ 1)
	Select English characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.






 





4.6 Smart English mode (ABC, abc)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry


	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward * When entering a word and highlighted, swap words in database.
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward * When entering a word and highlighted, swap words in database.
	Go back to the idle screen
	Insert a blank or “0”
	Insert stroke ‘:’, ‘:)’, ‘: -)’
	Select English characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.













4.7 MultiTap Protugues mode (PT, pt)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry


	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Insert a blank or “0”
	Insert symbols (. , - ? ! ’ @ : # \$ / _ 1)
	Select Portugues characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.

4.8 Smart Portugues mode (PT, pt)

Key	Description
	[Option Soft Key] Go to option menu screen














	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward * When entering a word and highlighted, swap words in database.
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward * When entering a word and highlighted, swap words in database.
	Go back to the idle screen
	Insert a blank or “0”
	Insert stroke ‘.’, ‘:)’, ‘:-)’
	Select Portugues characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.

4.9 MultiTap Franch mode (FR, fr)






Key	Description
	[Option Soft Key] Go to option menu screen

	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Insert a blank or "0"
	Insert symbols (. , - ? ! ' @ : # \$ / _ 1)
	Select French characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.








4.10 Smart French mode (FR, fr)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward * When entering a word and highlighted, swap words in database.
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward * When entering a word and highlighted, swap words in database.
	Go back to the idle screen
	Insert a blank or “0”
	Insert stroke ‘,’ ‘:’ ‘:-’
	Select French characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.
	Switch the input methods.

4.11 Numeric mode

Key	Description
	[Select Soft Key] Accept the string entered on the edit screen [Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Input numbers
	Select Symbols
	Switch the input methods.
	Switch the input methods.

4.12 Insert Symbols mode

Key	Description
	Accept the symbol selected on the symbols screen, and then turns to the edit screen.
	Back to the previous mode.
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen

5. Phonebook

You can store phone numbers and its corresponding names in the memory of your phone and SIM card. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called phonebook.

5.1 Storing a Phone Number

As soon as you start to enter a number, press left soft key (Save) to store the number in the phonebook.

5.1.1 Key in the number to be stored. You can input the number up to 40 digits.

5.1.2 Select the storage from “To SIM” or “To Phone.” You can also check how many you saved and total entries you can store in the storage.

5.1.3 Select a category to edit. To select the category, scroll to the category and press the [Edit] soft key .

- Name : Max. 30 English characters. Press [Edit] to input the characters.
- Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Home Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Company Name : Max. 30 English characters. Press [Edit] to input the characters.
- Email Address : Max. 60 English characters. Press [Edit] to input the characters.
- Office Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Fax Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Birthday : Input the birthday data
- Associate Picture : The phone will display the selected image when you have an incoming call. Select by pressing the navigation key to the right or left. You can select from 4 pre-defined images or select from file manager.
- Associate Video (Select from file / None): Allows you to select incoming call associate video when you receive a call from a person in the group. If you set both picture and video, the video will be displayed when you have a incoming call.
- Associate Sound : Select by pressing the navigation key to the right or left.
- Caller Group : 5 groups (Friends, Family, VIP, Business, Others) or none. Select a caller group by moving the navigation key. If you choose no group, the number is saved and displayed "None."

! Note: If you select the storage as SIM card, the edit category is limited to 'Name / Number / Associate Picture / Associate Sound / Caller Group' and max characters of Name/Numner are limited by SIM.

5.2 Storing a Phone Number using the Phonebook Menu

5.2.1 Enter Phonebook menu on main menu screen.

5.2.2 Scroll to 'Add New Entry' and select it

5.2.3 Select the storage between "To SIM" and "To Phone."

5.2.4 Select a category to edit. To select the category, scroll to the category and press the [Edit] soft key . This is same with "5.1 Storing a Phone Number" for selecting category, edit and save the entries).

5.3 Searching the phonebook list

5.3.1 From Idle Screen: Press the right soft key (name) on the idle mode

5.3.2 From Phonebook Menu : Scroll and select the following menus

- Quick Search : This menu shows the existing list and search window
- Search Entry : This menu only shows search window

II. Operation Instruction

A. Menu Operation

1. Phonebook

Phonebook offers phonebook storage, management and services. You can access to the phonebook from idle screen, phonebook menu, and message writing modes.

From the Phonebook menu, you will have 11 sub menus as following.

1.1 Quick Search

When you select the Quick Search in the Phonebook menu, you will see all entries saved in the phonebook. This function allows you to search the phonebook data by name; simply type in alphabet(s), the phone will show you the search result dynamically.

From the phonebook list, you can also IP Dial, View, Edit, Delete, Copy, Move, Duplicate and send vCard the entry.

- IP Dial: The IP number automatically attach to the number dialed.
- View: allows you to view the entry's contents such as name, number and so on.
- Edit: allows you to edit the entry items.
- Delete: allows you to delete the entry.
- Copy: allows you to copy the entry from SIM to Phone or Phone to SIM. You will have the same entry in a different storage. (SIM + Phone)
- Move: allows you to move the entry from SIM to Phone or Phone to SIM. The entry will be stored in the original storage. (SIM → Phone, Phone → SIM)
- Duplicate: allows you to duplicate the entry in the same storage. You will have the same data in the same storage. (SIM+SIM, Phone+Phone)
- Send vCard: You can send name cards out or save them to archives by means of SMS ,MMS and bluetooth.

1.2 Search Entry

When you select the Search Entry, after storing numbers to the phonebook, you can search them by Name.

1.2.1 Enter a name you want to search in the text input box. Input full name or even a start letter and press the left soft key to [Option].

1.2.2 If there is a name, you want to call, choose the name by moving up & down the navigation key.

1.2.3 Press the Dial key to make a call. However, if there is more than one entry in the selected name, it will display a list. Then you may simply select one entry and press the Dial key to make a call.

The following options are available.

- IP Dial: The IP number automatically attach to the number dialed.
- View: allows you to view the entry's contents such as name, number and so on.
- Edit: allows you to edit the entry items.
- Delete: allows you to delete the entry.
- Copy: allows you to copy the entry from SIM to Phone or Phone to SIM. You will have the same entry in a different storage. (SIM + Phone)
- Move: allows you to move the entry from SIM to Phone or Phone to SIM. The entry will be stored in the original storage. (SIM → Phone, Phone → SIM)
- Duplicate: allows you to duplicate the entry in the same storage. You will have the same data in the same storage. (SIM+SIM, Phone+Phone)
- Send vCard: You can send name cards out or save them to archives by means of SMS ,MMS and bluetooth.

1.3 Add New Entry

Please see [Storing a Number using the Phonebook Menu].

1.4 Copy All

You can copy all phonebook data from SIM card to Phone or from Phone to SIM. It is a useful function if you want to back up your phonebook data from a SIM card to your phone and vice versa.

1.5 Delete All

You can delete all phonebook data in SIM card or Phone. In addition, you can delete the phonebook data one by one.

1.6 Caller Group

You can setup and edit Caller Group profiles as following.

- Edit Group Name: Edit the group name and press the left soft key to [Option] and select "Done" to save the changes.

- Alert Sound: Allows you to select the ring tone to be used when you receive a call from a person in the group. Scroll left and right with the navigation keys.
- Alert Picture: Allows you to select incoming call picture when you receive a call from a person in the group. Scroll with the navigation keys to change the picture and go to the next line to select. Or if you want to view and select, select the [View] soft key and scroll with the left and right navigation keys. To select the picture, press the [OK] soft key (left).
- Alert Video: Allows you to select the video to be used when you receive a call from a person in the group. Scroll left and right with the navigation keys.
- Add Member : After storing numbers in the phonebook, you can search them by Group. You can add or delete member(s) to the group member list. Press [Option] soft key then select "Add," it will display a phonebook list excluding the members already in the group. It is possible to set a member in multiple groups.

1.7 Specials

You can view and edit your mobile phone number (owner number), Service Dial number and SOS number.

- Owner Number: displays your mobile phone number. You can edit owner's name and phone number.
- Service Dial Number: lists up the SIM SDN (Service Dial Number) and allows you to access to the number by pressing the left soft key
- SOS Number – lists up the SOS Number.

1.8 Information & Settings

You can view and edit the settings for the Phonebook as following.

1.8.1 Memory Status

You can check how many names and numbers are stored in the phone book (SIM card and phone memories) or how much free space is remained.

1.8.2 Preferred Storage

You can set your preferred storage either to SIM or to Phone as default storage in the phonebook.

1.8.3 Fields

There are ten fields that you can set on or off in your phonebook entry.

- Home Number
- Company Name

- Email Address
- Office Number
- Fax Number
- Birthday
- Associate Picture
- Associated Video
- Associate Sound
- Caller Group

Press the left soft key to turn on or off the field.

1.8.4 My vCard

: You can edit a vCard and send or save it to archives by means of SMS ,MMS and bluetooth.

1.8.5 Human Voice Prompt

: You can hear the voice prompt of phone number.

1.9 Caller Picture

: You can set Picture to special number(new or selected) or Caller

1.10 Caller Ring Tone

: You can set ring tone to special number(new or selected) or Caller Group.

1.11 Caller Video

: You can set Video to special number(new or selected) or Caller Group.

2. Message Center


With this menu, you can use SMS, MMS, Chat and Broadcast Message. These functions are available depending on network services that your service provider supports.

2.1 Message

2.1.1 Write Message

2.1.1.1 Text Message

The SMS (Short Message Service) function is a network service and your network may not support the service. You can send messages in Fax, Page, E-mail and Text format. To send text messages by phone, you must obtain the SMS center number from your service provider, and enter it on the SC Address option in Profile Settings menu.

When the  icon appears on the status indicators area, it indicates that you have received a new message.

! Note: The SMS service may not be available on all networks. Some network allows it only within its own network.

With this menu, you can write a message and insert EMS objects.

Select [Text Message] menu in the [Write Message] menu.

Make a message. You can insert Template, Object, change format text, Insert PHB Number, Insert PHB Name, and change input method.

After you complete the message, press the [Option] soft key (left) and then select "Done." Choose one of following options.

- Send Only: Sends the message to the recipient phone number. It will not save the message.
- Save and Send: Saves the message, and send it to the required recipient.
- Save: Saves the message so that you can send it later.
- Send to Many: Send the message to multiple recipients. Select Edit List to add up to 10 recipient(s).
- Send by Group: Send the message to the Caller Group. Select a Caller Group from the list.

You can input the number directly or get from the phonebook by pressing the [Search] soft key (left).

The phone will display the Message sending Success or Fail message on the screen for all recipients.

! Note: If you receive a call while you are writing a message, the message will be backup and after hanging up the call, the phone will display [write message] mode. You can finish the message without losing the data.

2.1.1.2 Multimedia Message

The MMS (multimedia messaging service), also called Photo Message, allows end-users to send and receive messages containing multimedia content (including images, video, sound and text). It provides a rich media of personal multimedia messages from between mobile to mobile, and mobile to e-mail.

With this menu, you can write a message and insert Image, Sound, and Attachment from the file manager.

Select [Multimedia Message] menu in the [Write Message] menu.

Make a message. You can edit To, CC, BCC, Subject, and Content.

Max recipients of To, CC, BCC are 20 each

You can input the number directly or get from the phonebook by pressing the [Search] soft key.

After you complete the message, press the [Option] soft key (left) and then select "Done." Choose one of following options.

- Send Only: Sends the message. It will not save the message.
- Save and Send: Saves the message, and send it to required recipient(s).
- Save to Drafts: Saves the message to Drafts. You may send it later.
- Send Options: Validity Period, Delivery Report, Read Report, Priority
- Exit: Exits the Write Message, the phone will ask if you want to save the message.

The phone will display the Message sending Success or Fail message on the screen for all recipients.

! Note: If you receive a call while you are writing a message, the message will be backup and after hanging up the call, the phone will display [write message] mode. You can finish the message without losing the data.

2.1.2 Inbox

With this menu, you can view the new messages or the read messages.

It will display the sender's phone number or name (if stored in the Phonebook) on the list.

If you choose the [Ok] soft key, you can view the message contents.

Press [Option] soft key for the following options:

- Reply : Allows you to reply to the sender.
- Forward: Allows you to forward the message.
- Edit: Allows you to edit the message, and send or save the edited message.
- Delete: Allows you to delete the viewed message
- Delete All: Allows you to delete all messages in the Inbox.
- Use Number: Allows you to call the sender back or save the number to the phonebook.
- Use URL: Allows you to use the URL of the sender.
- Chat: Allows you to use the number of the sender for chat.
- Advanced: Allows you to copy or move the message to phone(SIM)

2.1.3 Outbox

With this menu, you can view the unsent messages you have saved.

Options on saved messages are as following:

- Send: Allows you to send the message again.

- Edit: Allows you to edit the message, and send or save the edited message.
- Delete: Allows you to delete the viewed message
- Delete All: Allows you to delete all messages in the Inbox.
- Use Number: Allows you to call the sender back or save the number to the phonebook.
- Use URL: Allows you to use the URL of the sender.
- Chat: Allows you to use the number of the sender for chat.
- Advanced: Allows you to copy or move the message to phone(SIM)

2.1.4 Sent

You can check the sent messages.

Options on saved messages are as following:

- Forward: Allows you to forward the message.
- Edit: Allows you to edit the message, and send or save the edited message.
- Delete: Allows you to delete the viewed message
- Delete All: Allows you to delete all messages in the Inbox.
- Use Number: Allows you to call the sender back or save the number to the phonebook.
- Use URL: Allows you to use the URL of the sender.
- Chat: Allows you to use the number of the sender for chat.
- Advanced: Allows you to copy or move the message to phone(SIM)

2.1.5 Drafts

You can save your unsent message to Draft menu. You can send the message in Draft menu after finishing message writing.

Options on saved messages are as following:

- Send: Send the saved message to the recipient(s).
- Edit : Edit Message
- Delete: Delete the message.
- Delete All: Delete all messages in the box.
- Use Number: Dial or Save to Phonebook.
- Use URL: Allows you to use the URL of the sender.
- Advanced: Allows you to copy or move the message to phone(SIM)

2.1.6 Delete Folder

You can delete messages in Inbox, Outbox, Send, Drafts and All Folders.

2.1.7 Templates

2.1.7.1 Text Message

You can edit and erase the message templates in this menu. You can store your frequently using messages up to 10. You can store up to 40 letters in each template. You can use the Template by selecting [2.Use Template] option, when you write a message.

Select a template and press the [Option] soft key:

- Edit: allows you to edit the template.
- Erase: allows you to erase the template.
- Write Message: allows you to write a message with the template.

2.1.7.2 Multimedia Message

You can use and edit the MMS templates and write a message in this menu.

Select a template and press the [Option] soft key:

- View: allows you to view and listen to the template message.
- Properties: shows properties of the templates (From, Cc. Subject, Date, and Memory).
- Write Message: allows you to write a message with the template.
 - From, CC., and BCC: allows you to add number(s) or email(s).
 - Subject: allows you to edit the text content.
 - Edit content: allows you to select from text, image, or sound by pressing navigation keys up and down.

2.1.8 Message Settings

2.1.8.1 Text Message

You can setup default Message Information: Profile Setting, Common Settings, Memory Status, Preferred Storage, and Preferred Bearer.

2.1.8.1.1 Profile Setting

Depending on your service provider and service plan, you can set the message profile setting.

You can edit the profile as following:

- Profile Name: edit the profile name.
- SC Address: you have to get the number from your service provider.
- Valid Period: choose from Maximum, 1 hour, 12 hours, 1 day, 1 week
- Message Type: choose from Fax, Page, E-mail, Text

2.1.8.1.2 Common Setting

You can set on or off the following common settings for SMS.

- Delivery Report : This allows you to set delivery report on or off. When this function is set to on, the network informs you whether or not your message has been delivered.
- Reply Path : This menu allows the recipient of your Message to send you a reply via your message centre, if the network provides Message service. Press the [On] or [Off] soft key (left) to turn this option on and off.

2.1.8.1.3 Memory Status

This shows memory status of SMS in your SIM card or Phone.

2.1.8.1.4 Preferred Storage

You can set your preferred storage for the SMS messages: to SIM or Phone.

2.1.8.1.5 Preferred Bearer

You can set your preferred Bearer for SMS.

Bearer options are "Prefer GPRS, Prefer GSM, and GSM Only."

2.1.8.2 Multimedia Message

Within the MMS sub-menu, you can define default values on common parameters for mobile-originated messages. By setting default values for MMS messages, you can experience a more comfortable service. You can set up the MMS related parameters for sending and retrieving the MMS messages.

2.1.8.2.1 Compose

This sets up parameters when you compose MMS messages.

- Creation Mode: You can set the creation mode.
 - Free
 - Restricted
- Image Resizing: You can set the image resizing
 - 160X120
 - 320X240
 - 640X480
 - Off

- Auto Signature: You can set the auto signature.
 - On
 - Off
- Text

2.1.8.2.2 Send

This sets up parameters when you send MMS messages.

- Validity Period : You can select the period in which the service center try to deliver message. When the message expires, message center will not try to deliver the message.
 - Max: Maximum period is what service provider permits.
 - 1 Week
 - 1 Day
 - 12 Hours
 - 1 Hour
- Delivery Report : This allows you to set delivery report on or off. When this function is set to on, the network informs you whether or not your message has been delivered.
- Read Report : You can set whether to receive a read report from every recipient.
- Priority : You can set the priority of MMS message.
 - High
 - Normal
 - Low
- Sliding Timing : You can set how long you want the message to play. Input number(s) in seconds.
- Delivery Time : You can set how soon the phone will send your message.
 - Immediate
 - In One Hour
 - In 12 Hours
 - In 24 Hours

2.1.8.2.3 Retrieve

This sets up parameters when you retrieve MMS messages.

- Home Network
 - Immediate
 - Restricted

- Delayed
- Roaming
 - As Home
 - Delayed
 - Restricted
- Read Report
 - On Request
 - Send
 - Never Send
- Delivery Report
 - On
 - Off

2.1.8.2.4 Filters

You can filter MMS Messages by three categories as following.

- Anonymous (Allow/Reject)
- Max Size (KB) : Input number(s) in Kilobytes.
- Advertisement (Allow/Reject)

2.1.8.2.5 Server Profile

Select from profile list. You can activate the profile or edit the profile.

- Rename profile : edit the profile name.
- Homepage: Enter URL
- Data Account: Select data account from the list.
- Connection Type:
 - WAP : when you select WAP, you can edit IP Address
 - HTTP: when you select HTTP, you can edit the Proxy Address and Proxy Port
- Username : Enter your ID
- Password : Enter your password

2.1.8.2.6 Memory Status

This shows usage count, total memory used, and remaining memory.

2.2 Chat

In this menu, you can chat someone using the SMS.

2.2.1 Chat Room

- Chat Room Info : You can set My Nickname and Remote Number
- Start New : You can send message using SMS.

After sending a message, it displays sent and received message list.

2.3 Voice Mail Server

Your phone is capable of dialing with voicemail server number (if provided by your network). If the voicemail has arrived, your phone displays new message in the idle screen and sets to inform you of the arrival. Select the Voice Mail from the list and press [Option] soft key (left). By selecting the Edit option for editing the Voice Mail server number. By selecting the Connect to Voice option, your phone will dial to the configured number that has been stored in Voice Mail list. You can then listen to the voicemail.

! Note: Voice mail is a network feature. Please contact your service provider for more information.

2.4 Broadcast Message

This network service allows you to receive the broadcast messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in the area where you are. You can even receive the message to be in a particular language (For example, when you are abroad) by changing language selection.

! Note: For more information about broadcast message topics, please contact your service provider.

The following options are available.

- Receive Mode : You can turn the receive mode on and off by pressing the soft key (left). Allows you to enable or disable the reception of the broadcasted text messages.
- Read Message : With this menu, you can read all the broadcasted text messages received. The title area of the screen will display the name of the message subject item. Whenever the phone receives new contents, the phone will update the contents of the message subject.
- Languages : Allows you to select your preferred language for displaying cell broadcast messages. The number of languages you can select depends on your SIM card.
- Channel Setting : Allows you to indicate the channels from which you wish to receive broadcast messages. This menu allows you to read, add and delete the list by using Select, Add, Edit and Delete option. The number of items in the list depends on your SIM card. It will display all items you selected.

! Note: For more information about the available subjects, please contact your network service provider.

3. Call History

With this menu, you can identify all call records that you have dialed, received or missed.

It will display the number and name (if available), together with the date and time at which the call was made or received.

3.1 Missed Calls

This menu lets you view max 30 missed calls. Max number is limited by SIM.

In the missed calls list, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone Book : Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

3.2 Received Calls

This menu lets you see the last 30 received calls.

In the list of received calls, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone Book : Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

3.3 Dialed Calls

This menu lets you view the last dialed calls.

In the dialed calls list, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone Book : Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number

- Edit : Allows you to edit the number and save to the phonebook

3.4 Show All Calls

This menu lets you view the missed, received and dialed calls.

In the All calls list, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone Book : Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

3.5 Delete Call Log

This menu lets you delete all call data of each category at once.

There are 4 categories of call as following.

- Missed Call : Allows you to delete all missed call data
- Dialed Call : Allows you to delete all dialed call data
- Received Call: Allows you to delete all received call data
- Delete All: Allows you to delete all call data

3.6 Call Time

This menu lets you view the timers for calls made and received. The following timers are available.

- Last Call Time: length of the last call
- Total Sent: total length of all calls made since the last reset
- Total Received: total length of all calls received since the last reset.
- Reset All Time: Allows you to reset the call timers

! Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so forth.

3.8 SMS Counter

You can view and reset the numbers of sent and received SMS.

3.9 GPRS Counter

You can view how many GPRS message has been sent and received, and reset the counter.

- Last Sent: Allows you to view the last send GPRS Messages.

- Last Received: Allows you to view the last received GPRS Messages.
- All Sent: Allows you to check the numbers of All GPRS messages sent.
- All Received: Allows you to check the numbers of All GPRS messages received.
- Reset Counter: Allows you to reset the GPRS Counter.

4. Settings

You can change settings for your phone using this menu. There are Phone Setup, Call Setup, Network Setup, Security Setup, and Restore Factory Settings sub menu.

4.1 Phone Setup

With this menu, you can setup settings regarding display and operations of the phone: Time and Date, Schedule Power On/Off, Language, Preferred Input Methods, Display Characteristic, Contrast, Greeting Text, Speed Dial, Dedicated Key, Auto Update of Date and Time, Flight Mode and Misc Setting.

4.1.1 Time and Date

You can set time and date for your phone.

- Set Home City : This menu allows you to set a city as your home city from 57 cities list. Please select the closest city in the list.
- Set Time/Date : This menu allows you to set the current time and date displayed in the idle screen.
 - HH:MM : Input hour in 24 hour format and minute, and then press navigation key down
 - YYYY/MM/DD : Input year, month and day. Press [Ok] soft key (left) to save the time and date.
 - Daylight Saving : Apply summer time.
- Set Format : Allows you to select a time display type between 12 Hour AM/PM type and 24 Hour type. When the time format is in 12 Hour type, you can change AM and PM by Navigation key.
 - Time Format
 - ✓ 24-Hours
 - ✓ 12-Hours
 - Date Format
 - ✓ YYYY/MM/DD (ex. 2004/12/25)
 - ✓ YYYY-MM-DD (ex. 2004-12-25)

- ✓ "MMM DD,YYYY" (ex. "Dec 25, 2004")
- ✓ DD-MMM-YYYY (ex. 25-Dec-2004)
- ✓ DD/MM/YYYY (ex. 25/12/2004)
- ✓ MM/DD/YYYY (ex. 12/25/2004)

4.1.2 Schedule Power On/Off

You can set a schedule for powering on and off your mobile phone. When you schedule the power on or off, the phone will power on or off at every scheduled time. . It is useful when you want to turn off your phone while you are sleeping, and let the phone power on in the morning so that you would not miss any call or alarm.

To set this option, press [Edit] soft key (left) and edit the following options.

- Status (Disable/ Enable)
- Power On/Off: Choose on or off by pressing the left or right navigations keys.
- Time: Input time in 24-hour scale.

4.1.3 Language

This menu allows you to set the display language. Select your preferred language and press [Ok] soft key (left) to save the setting. When you change the language setting, the phone will display in the corresponding language mode.

The following options are available.

- Portuguese
- French
- Spanish
- English

4.1.4 Preferred Input Methods

This menu allows you to define your preferred input method. Once you set the preferred input method, next time you edit in text input mode, it will reflect the setting until you change to another.

The following options are available.

- Multitap ABC
- Multitap abc
- Numeric
- Multitap ES
- Multitap es
- Multitap FR
- Multitap fr

- Multitap PT
- Multitap pt
- Smart ABC
- Smart abc
- Smart ES
- Smart es
- Smart FR
- Smart fr
- Smart PT
- Smart pt

4.1.5 Display Characteristic

This menu allows you to customize how you want your phone display items below.

- Wallpaper : You can select a main LCD wallpaper image as following.
 - System: Select wallpaper image from 10 images including the Analog Clock and Digital Clock.
 - User Define: You can search for images and photos in the File Manager. However, there is a size limitation to use an image as wallpaper image.
- Sub LCD Wallpaper : : You can select a sub LCD wallpaper image as following.
 - System: Select wallpaper image from 10 images.
 - User Define: You can search for images and photos in the File Manager. However, there is a size limitation to use an image as wallpaper image.
- Screen Saver : This menu allows you to set the screen saver setting. The phone will display the selected image in a full screen, when there is no key input on the phone.
 - Setting
 - ✓On/Off
 - ✓Waiting : 5sec, 15sec, 30sec, 1min
 - Select
 - ◆ System: Select screen saver image from 10 images including Analog Clock and Digital Clock
 - ◆ User Define: You can search for images and photos in the File Manager. However, there is a size limitation to use an image as wallpaper image.
- Power On Display : You can select a power on display image or video file as follow
 - System: Select power on display image from 9 images
 - User Define: You can search for images ,photos and video file in the File Manager.

However, there is a size limitation to use an image as wallpaper.

- Power Off Display : You can select a power Off display image or video file as follow
 - System: Select power Off display image from 9 images
 - User Define: You can search for images ,photos and video file in the File Manager.
- However, there is a size limitation to use an image as wallpaper.
- Main Menu Style : You can select the Main Menu style between matrix, list and page style
 - Show Date and Time : You can set the phone to display or hide the Date and Time on the idle screen.
 - Show Owner Number : You can set if you want to display the owner number or not.
 - Show Operator Name : You can set if you want to display the operator name or not.

4.1.6 Greeting Text

The Greeting Text menu allows you to display a greeting text on the idle screen.

You can edit and set the Greeting Text. After you edit the Greeting Text, press the [Done] soft key left to save.

4.1.7 Speed Dial

This menu allows you to enable, disable and edit the speed dial from the number 2 ~ 9 keys.

You can edit the speed dial list in the “Set Number” option. Press [Option] soft key, and select “Edit” and select the entry from the phonebook list.

4.1.8 Dedicated Key

This menu allows you to set the dedicated function for the navigation key in the idle mode.

You can dedicate the Up/Down/Left/Right navigation keys to menus. Select from the menu lists, and press [Ok] key to change the dedicated menu.

! Note : Refer to the menu ‘Shortcuts’ regarding make up the menu list

4.1.9 Auto update of Date and Time

This menu allows the phone to update the current date and time automatically. You can turn on or off this function by pressing the [On] or [Off] soft key (left).

! Note : Some network does not support this function.

4.1.10 Flight Mode

This menu allows using the phone on flight. You can use the Phone Book, Multi Media, File

Manager, Fun & Game, User Profiles and Organizer on flight.

- Normal Mode
- Flight Mode
- Query When Power On

! Note : You can not make a call and incoming call on this menu.

4.1.11 Misc

4.1.11.1 Signal LED

This menu allows you to turn on/off signal LED.

4.1.11.2 LCD Backlight

This menu allows you to adjust the main and sub LCD backlight You can customize the LCD Backlight settings in this menu.

The LCD backlight is automatically off after no key input to save the battery life.

You can set the brightness and time by this menu. The backlight will be off after the time you set.

- Brightness : 1 to 5 Levels
- Time : 5 Sec to 60 Sec

4.1.11.3 Contrast

This menu allows you to adjust the Sub LCD contrast setting from level 1 to level 15. Press the right or left navigation keys to adjust the contrast, while checking the contrast of the sample image

4.2 Call Setup

The following Call Setup features are network services. Please contact your network service provider to check availability and subscribe to the feature if you wish.

4.2.1 Caller ID

This network service informs your Caller ID to the recipient when you call out.

You can set the following options for the Caller ID function as following.

- Set By Network: The network will decide whether to send or hide the Caller ID,
- Hide ID: If you do not want to send your phone number, select [Hide ID] menu.
- Send ID: It will send the Caller ID when you call out.

! Note: Some networks do not allow the user to change this setting.

4.2.2 Call Waiting

This network service informs when someone is trying to reach you during another call. You can specify the call waiting option for voice calls only.

The following options for each service are available:

- **Activate:** activates the call waiting service.
- **Deactivate:** deactivates the call waiting service.
- **Query Status:** displays the status of the call waiting service.

4.2.3 Call Divert

This network service reroutes incoming calls to the number that you specify.

Example: you may wish to divert your business calls to a colleague while you are busy. Call diverting can be set up in the following ways.

You must enter a forward number when you have incoming call(s).

- **Divert All Voice Calls:** diverts all voice calls.
- **Divert If Unreachable:** diverts calls, if you are not in a coverage area of your service provider.
- **Divert If No Answer:** diverts calls, if you do not answer the phone.
- **Divert If Busy:** diverts calls, if you are already making another call.
- **Divert All Data Calls:** diverts all data calls.
- **Cancel All Divert:** cancels all call diverting options.

4.2.4 Call Barring

This network service allows you to restrict your calls. Call barring can be set up in the following ways

- **Outgoing Calls**
 - **All Calls:** prohibits outgoing calls.
 - **International Calls:** prohibits outgoing International calls.
 - **International Except Home:** When abroad, you can only make a call to numbers within the current country and to your home country that is the country where your home network provider is located.
- **Incoming Calls**
 - **All Calls:** prohibits receiving all incoming calls.
 - **When Roaming:** prohibits receiving calls when you are using your phone outside of

your home service area.

- Cancel All : Deactivated all call barring settings. You will be able to make and receive calls normally.
- Change Barring PW : You can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

4.2.5 Line Switching

Some SIM cards support two phone numbers and you can switch the number (line) with this feature.

4.2.6 Call Time Reminder

You can set the call time reminder as the following options

- Off
- Single
- Periodic

4.2.7 Call Time Display

You can set if you want the phone to display the call time or not.

4.2.8 Auto Redial

This option allows you to set redial automatically when the call receiver is busy. If you set [Auto Redial] on, it will redial 10 times to make a call. To redial proceed as following.

When the other party does not answer, the phone automatically hangs up the phone and redials the phone number.

Press the Dial key or hook button on your ear/microphone when you are using ear/microphone

The phone will redial 10 times to make a call

4.2.9 Closed User Group

This menu allows you to fill out a closed user group, and send it to the network. However, this feature is depending on the network's availability.

4.2.10 IP Number

The IP number automatically attach to the number dialed.

You can edit at most 3 IP dial number and use one of them.

4.3 Network Setup

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish. These settings might affect your monthly bill and your phone's network performances.

4.3.1 Network Selection

The Network Selection feature enables you to select automatically or manually the network used when roaming outside your home area.

- New Search : This menu allows you to search new network.
- Select Network : This menu allows you to select network.
- Selection Mode
 - Automatic: You will be connected to the first available network when roaming
 - Manual: The phone scans for the available network, and you can select the network manually,

4.3.2 Preferred Networks

You can set your preferred networks. The phone will list up PLMN list. The following options are available:

- Change Priority : Set the priority by pressing navigation keys to the right or left.
- Delete : Delete the selected preferred network from the list.

4.3.3 GPRS Connection

Press [Change] soft key (left) to change the setting for the GPRS connection. It will switch and save the GPRS connection to set on:

- Always
- When Needed.

4.4 Security Setup

There are six types of security setting categories, and you can optimize security mode by choosing sub menus in "Security Setup" in "Settings" menu. These security settings will help you to keep privacy and to prevent other people from using the phone without your permission.

4.4.1 SIM Lock

When the SIM Lock feature is on, the phone only works with the current SIM. If you turn on the phone with uncertified SIM, the phone will ask the password. Once the correct password has entered, the phone shall work with uncertified SIM.

4.4.2 Auto Keypad Lock

Your phone is a candy bar type and it is likely that the key presses accidentally. To prevent unwanted key presses, you can use this function to key protect.

You can select the Auto Keypad Lock options from none/ 5 sec / 30 sec / 1 min / 5 min.

When the Auto Keypad Lock feature is enabled with such time, user must enter the unlock code, which is 1, 2, and 3 in sequence, each time. You may not make a call or operate the phone if unlock code is not entered. However, answering a call, receiving message are available without entering the unlock code.

4.4.3 Fixed Dial

When the Fixed Dial mode is enabled, the person using this phone can call to the phone numbers stored in the Fixed Dial List only. To make a call to the number not starting the numbers stored in Fixed Dial List, you must enter the PIN2 to disable Fixed Dial mode. If the SIM card does not have PIN2, this feature is not supported.

In the Fixed Dial Mode, you can use several useful functions as following.

- View and Edit: you can see and edit FDN entry after input PIN2.
- Add : you can add FDN entry after input PIN2.
- Delete : you can delete FDN entry after input PIN2.
- SMS : you can send SMS to the phone numbers starting with the numbers stored in FDN.
- Short Type : you can choose short type among Number / Name / Sequence.

4.4.4 Barred Dial

When the Barred Dial mode is enabled, the person using this phone cannot call to numbers in the barred dial list. To make a call to the barred number, you must enter the PIN2 to disable the barred dial mode. If the SIM card does not have PIN2, this feature is not supported.

4.4.5 Change Password

To change the password, input the current password, and then enter the new password.

4.5 Communication

4.5.1 Bluetooth

Bluetooth is a global standard for wireless connectivity. Bluetooth is based on a low cost, short-range radio. Bluetooth technology facilitates the replacement of the cables normally used to

connect one device to another, with one universal short-range radio link. Two Bluetooth devices can talk to each other when they come within a range of 10 meters to each other. Due to their dependence on a radio link, as opposed to alternate technology such as an infrared connection, Bluetooth devices do not require a line-of-sight connection in order to communicate.

4.5.1.1 Power

This menu is switching menu. You can set the switching On or Off the Bluetooth. When highlighted, it shall display a hint indicate the current Bluetooth power status.

4.5.1.2 Inquiry Audio Device

This menu is for search discoverable headset or hand-free devices.

If any Bluetooth connection exists, shall ask user to disconnect the connection first. When highlighted, pressing "OK" shall go to Search Headset screen while pressing "Back" shall go back to previous screen.

4.5.1.3 My Device

My Device list the history for paired device list, user could connect to those device directly. Beside, user could manage the trust list by using My Device menu.

If user did not saved device yet, just display <Empty> and you can have a Search new device option. With this option you can search the all of Bluetooth device.

If user saved device before, you can have options as follows;

- Connect: try to connect the Bluetooth device from handsets.
- Rename: change the saved name.
- Delete: delete the saved Bluetooth device.
- Search new device: search the all of Bluetooth device.

4.5.1.4 Active Device

This menu allows you to check the active device.

4.5.1.5 Setting

To set Bluetooth device visibility and device name. User could be able to set the Bluetooth device visible or not and change device name through setting menu. Besides, user could determinate whether the speaker/microphone route to the connected remote Bluetooth device or not.

4.5.1.5.1 Visibility

Set the visibility status of Bluetooth device, if Bluetooth device is not visible, it could not be found at service discovery procedure. When highlighted, it shall display a hint indicate the

current Bluetooth visibility status. User can select the “On” or “Off” according to current status.

4.5.1.5.2 Change device name

When highlighted, it shall display a hint shows the current Bluetooth device name.

Pressing “Edit” shall enter a general editor screen for user to input the device name.

4.5.1.5.3 Authentication

When other Bluetooth device try to connect the handset, user can decide to make a special PIN Code or not.

4.5.1.5.4 Set Audio Path

User can set the audio path.

4.5.1.5.5 FTP Setting

- Shared Folder
- Access Right (Fully control / Read Only)

4.5.1.6 About : It shows Service List

4.5.2 Java

: Java installation files have the extension .jar or .jad. Install an application by selecting installation file from the file manager and select[install] menu in the [option] menu.

4.5.3 Java Setting

4.5.3.1 Java Audio

: You can select Java audio level(Off/ 1 to 6)

4.5.3.2 Java vibration

: You can select the vibration mode during playing Java application.

4.5.3.3 Java Network

: You can select Java network profile.

4.5.3.4 Heap Size

: It shows the allocated memory for Java application.

4.6 Shortcuts

This allows you can register menu item to dedicate menu list.

You have 40 menu items and can register shortcut menu up to 10 items.

Press the [Edit] soft key (left) to edit the dedicated menu for the shortcut numbers.

Default Shortcut Menus:

- Add New Entry
- Search Entry

- Caller Group
- Owner Number
- Memory Status
- Preferred Storage
- Greeting Text
- Tone Setup
- Volume
- Alarm

The menu items you can register as bellows.

Search Entry	Add New Entry	Caller Group	Owner Number
Memory Status	Preferred Storage	Greeting Text	Volume
Preferred Input Method	Call Divert	Wall paper	Screen Saver
Contrast	Schedule Power On/Off	Phone Lock	Themes
User Profiles	Alert Type	Tone Setup	Received Calls
Dialed Calls	Missed Calls	Calculator	To Do List 추가
Alarm	Calculator	Unit Converter	Currency Converter
BMI	Menstrual	World Clock	Voice Mail Server
MP3 Player	Melody Composer	Bluetooth	WAP
Video Recorder	Video Player	Sound Recoder	Image Viewer
Message Center			

! Note : refer to the menu 'Phone setup – Dedicated key' regarding assign menu item to navigation keys.

4.5 Restore Factory Settings

This feature would reset the telephone to the same settings as those configured at the factory. You will need to input password to restore factory settings.

5. Multimedia

The Multimedia menu provides you several multimedia functions. You can enjoy your phone as multimedia device.

5.1 MP3 player

You can listen to MP3, MIDI, WAVE music files with MP3 player.

Two ways to access to MP3

- By pressing the [Menu] soft key and select 'Multimedia' menu and MP3 player sub menu.
- By pressing the [Menu] soft key and select 'Multimedia' menu and select 'File Manager' menu and select the 'phone' press [Option] and select "Open" to play one file at a time.

To view the music list, press [List] soft key. It will display available music list from the Phone depending on Play List setting. To play the music, press the left or right navigation key, or press [Option] soft key and select "Play."

The following Options are available:

- Play : Play the file
- Detail: displays details of the music file
 - ✓ File name
 - ✓ Channel
 - ✓ Quality
 - ✓ Size
 - ✓ Time
- Add to Rings: Set the music file in the phone memory as a ring tone.
- Refresh List: Refresh the music list.
- Settings
 - Storage : you can select whether to get the music file from phone or card
 - List Auto Generation (On/Off): you can select whether to generate the music list automatically or manually.
 - Skin (Skin 1/2/3): you can select the Audio Player skin depending on your taste.
 - Repeat (One/All/Off): Set repeat option. When you select one or all, it will repeat the selected file or all music files. When you select this option to off, it will play the music file one time and stop.
 - Shuffle (On/Off): Set the shuffle feature on or off. This function is useful if you want to listen to the music in random order rather than from first file to the last.
 - Background Play (On/Off): Set the Audio Player to play the music while you are using the phone other than audio player, such as menu navigation.
 - Equalizer : You can change the equalizer option of MP3 player to Normal, Bass, Dance, Classical, Treble, Party, Pop and Rock.
 - Spectrum Display(Style1/Style2) : You can select the audio player spectrum style on your


taste

- Lyrics Display On/Off : Set the audio player to display lyrics.








5.2 Camera





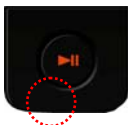





This phone has a 1.3M pixel camera. You can enjoy taking photos and see the saved photos (or images).

Two ways to access to the Camera Preview Mode:

- You can access to Camera preview mode by pressing the '' key in the idle mode.
- You can also use [Camera] menu after pressing the [Menu] soft key (left) to open the main menus and choosing the fifth menu [Multimedia] then [Camera] menu.

You can control camera options by direct control keys as follows

Key	Description
	Take a picture and record a video
	Digital Zoom-up
	Digital Zoon-down
	EV level down
	EV level up
	Effect Setting
	White Balance

	Delay Timer
	Cont Shot
	Night Mode
	Image Quality
	Image Size
	Flash light
	LCD Preview Switch (Main <-> Sub)
	Take a photo and record a video
	Back to previous menu
	Back to idle mode

5.1.1 Camera Options

From the camera preview mode, you can access to the Camera Options by pressing the [Option] soft key (left) for the following options and settings for the Camera.

- Album : By selecting this menu, you can view the saved photos in the Image Viewer.
- Camera Settings
 - Flash (On/Off): You can set the camera flash light on or off with this setting. When the Flash is on, the camera flash will lit on when you take a picture.
 - Shutter Sound (Sound1/2/3/Off) : Allows you to select a shutter sound among three kinds of shutter sounds or turn off the shutter sound. The sound makes you feel the sense of taking a picture.
 - EV (-4/-3/-2/-1/0/+1/+2/+3/+4): You can set the EV (Exposure Value) and the preview will look darker in lower EV and brighter in higher EV.

- Banding (60Hz/50Hz): You can select the sampling bandwidth of the camera sensor. When bandwidth increases, the memory size and the picture quality will increase.
- Cont. Shot : It allows you to take multiple continuous shots by pressing the camera key. You can set this function off or take 1, 3, or 5 continuous shots.
- Delay Timer : It allows you to take a picture with delayed timer. If you set the delay timer at 5 sec, and press the camera key (center navigation key), it will take a picture 5 seconds later. Off/5 sec/10 sec/15 sec
- Image Setting: You can set image size and quality of your photo as following.
 - Image Size: 1280X1024, 640X480, 320,X240, 176X220 and 160X120 are available.
 - Image Quality (Low/Normal/High): allows you to choose the JPEG quality. The captured image memory size will increase if you choose higher quality.
- White Balance : Auto/Daylight/Tungsten/Fluorescent/Cloud/Incandescence
- Scene Mode : Allows you to select scene mode auto or night
- Effect Setting : Allows you to set Image effect among 14 options
 - Normal
 - Grayscale
 - Sepia
 - Sepia Green
 - Sepia Blue
 - Color Invert
 - Gray Invert
 - Blackboard
 - Whiteboard
 - Copper Carving
 - Blue Carving
 - Embossment
 - Contrast
 - Sketch
- Add Frame : It allows you to off or add the frame 1 to 10.
- Self Capture : You can take a self shot by using this menu. Once you turn on this function, the preview screen is shown on the sub-lcd screen.
- Storage : You can select the storage between phone and memory card.
- Restore Default : This menu allows you to restore to the camera's default settings.

! Note : Except 'Restore default', all of above functions are available on the camera preview mode by using shortcut keys.

5.3 Image Viewer

You can see your photos in your phone by choosing [Image Viewer] menu in [Multimedia] menu. It will display the photos with thumbnail, image name, and image size.

There are 8 options as following:

- View: allows you to view the image in full screen. Press the navigation key up and down to view other images.
- Browse Style : allows you to select browse style list or matrix.
- Forward: allows you to forward the image to Wallpaper, Sub Wallpaper, Screen Saver, Power On Display, Power Off Display, Phonebook, MMS and Bluetooth.
- Rename: allows you to edit the image name.
- Delete: allows you to delete the selected image.
- Delete All Files: allows you to delete all images.
- Sort: allows you to sort the image by Name, Type, Time and Size.
- Storage Default: You can select the storage between phone and memory card.

5.4 Video Recorder

This phone has a Camcorder function. You can enjoy recording video and see the saved videos (or Movies).

- To player : By selecting this menu, you can view the saved files in the Video Player.
- Camcorder Setting
 - White Balance (Auto/Incandescence/Cloud/Fluorescent/Tungsten/Daylight)
 - EV (-4/-3/-2/-1/0/+1/+2/+3/+4): You can set the EV (Exposure Value) and the preview will look darker in lower EV and brighter in higher EV.
 - Night Mode:ON/OFF
 - Banding (60Hz/50Hz): You can select the sampling bandwidth of the camcorder sensor. When bandwidth increases, the memory size and the camcorder quality will increase.
- Video Setting : You can set video size and quality of your video as following.
 - Video Quality (Low/Normal/High/Fine): allows you to choose the MPEG4 quality. The recorded video memory size will increase if you choose higher quality.
 - File Size Limit: 95K, 195K, 295K and No Limit are available.
 - Recording Time Limit : 15 sec, 30 sec, 60 sec and No Limit are available.
 - Recording Audio : On and Off are available.
 - Encode Format : H.263 and Mpeg4 are available.
- Effect Setting : Allows you to set video effect among 14 options

- Normal
 - Grayscale
 - Sepia
 - Sepia Green
 - Sepia Blue
 - Color Invert
 - Gray Invert
 - Blackboard
 - Whiteboard
 - Copper Carving
 - Blue Carving
 - Embossment
 - Contrast
 - Sketch
- Storage Default : allows you to storage to Phone or Memory card.
 - Restore Default : This menu allows you to restore to the camcorder's default settings.

! Note : Except 'Restore default', all of above functions are available on the camera preview mode by using shortcut keys.

5.5 Video Player

You can see your recording video in your phone by choosing [Video Player] menu in [Multimedia] menu. It will display the videos with thumbnail, video name, and video size.

You can play .3gp, MP4 files.

There are 5 options as following:

- Play: allows you to view the video in full screen.
- Forward : allows you to forward the saved file to PhoneBook, Screen Saver, Power On Display, Power Off Display, MMS and Bluetooth.
- Rename: allows you to edit the file name.
- Delete: allows you to delete the selected file.
- Delete All Files: allows you to delete all files.
- Sort: allows you to sort the file by Name, Type, Time and Size.
- Storage Default : allows you to storage to Phone or Memory card.

5.6 Photo Editor

With this menu, you can edit the image

5.6.1 Photo Artist

: You can select file and add some effect.

5.6.2 Image Tile

: You can select files and edit tile image.

5.6.3 Slide Show

: You can select folder and see the slide show of files in that folder.

5.7 Sound Recorder

With this menu, you can record sound in AMR, AWB and WAV format and use it as voice memo, ring tone, MMS and EMS attachment.

1. When there is no record file in the Sound Recorder, there are two options:

- Record : Start recording
- Settings : Select recording the sound in AMR, AWB and WAV format

2. If you have more than one record file, there are 8 options:

- Record: Start recording.
- Play: when there is a file in the list, it will play the recorded sound file.
- Append: Record right after the selected sound file.
- Rename: Change the file name.
- Delete: Delete the selected file.
- Delete All: Delete all files in the sound record list.
- Settings :
 - Select Pref storage in Phone and Card.
 - Select recording file format in AMR, AWB and WAV
- Forward
 - To User Profile: allows you to use the sound file as a Ring Tone. ○
 - To MMS: allows you to write an MMS message with the selected sound file.
 - To Bluetooth: allows you to send the sound file through the bluetooth.













 

5.8 Melody Composer

With this menu, you can create an iMelody file.

5.7.1 Compose a melody

When you first use the Melody Compose, press the [Add] soft key (left)

Start composing a melody pressing the numeric keys. The following are the descriptions.

Key	Description
	Insert 'Do'
	Insert 'Re'
	Insert 'Mi'
	Insert 'Fa'
	Insert 'Sol'
	Insert 'La'
	Insert 'Si'
	Insert Vibration – allows the phone vibrates.
	Insert Light – allows the LED lit.
	Insert Rest – indicates the rest place.
	Increases or decreases the note () and rest ()
	Changes the accidentals. Press 1~7 and then press the sharp key; the musical scale will be switched with between Sharp (#) / Flat

5.7.2 Options

There are four options while you are editing

- Play: Play the composed file before you save the file.
- Play Speed : Set the melody speed (Fast / Normal / Slow)
- Select Instrument : Choose the instrument (Piano / Guitar / Violin / Saxophone / Steel Drums)

/ Flute / Harmonica / Trumpet / Music Box / Xylophone)

- Save: Save the melody

Press the [Option] soft key and select “Save.” Edit and save a file name by pressing the [Option] soft key (left) and select “Done.”

If you have more than a record file,

Press the [Option] soft key (left), and select ‘Add’ to start composing a melody.

There are 7 options:

- Play : Play the selected file.
- Edit : Edit the composed music.
- Add : Compose a new music file.
- Rename : Rename the selected file.
- Delete : Delete the selected file.
- Delete All Files: Delete all files in the list.
- Forward : Forward the composed file to the following usages.
 - To User Profile: allows you to forward the sound file to User Profile as a Ring Tone.
 - To MMS: allows you to write an MMS message with the selected sound file.
 - To EMS: allows you to write an EMS message with the selected sound file.
 - To Bluetooth: allows you to write an EMS message with the selected sound file.


5.8 Sound Effect

You can change the equalizer option of MP3 player to Normal, Bass, Dance, Classical, Treble, Party, Pop and Rock.

5.9 File Manager

This menu allows you to see the total memory used and free space in the storage.

5.9.1 Drive

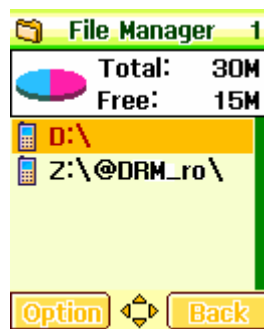

←Total Memory Status Graphic

←Drive Selection List

There are options as following

- Open : Open the drive to see the folder or files in the drive
- Create Folder : Create a folder in the drive
- Format : Format the drive

! Note : All of data in the drive will not be recovered after you format the drive.

5.9.2 Folder




←Current Folder Information (Date)

←Folder Selection List

There are options as following

- Open : Open the folder to see the files in the folder
- Create Folder : Create a sub-folder in the folder
- Rename : Rename the selected file.
- Delete : Delete the folder
- Sort : There are five sorting ways as follows
 - By Name
 - By Type
 - By Time
 - By Size
 - None

5.9.3 File

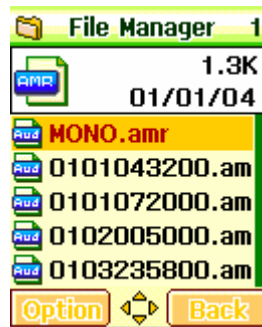

←Current File Information (Date & Size)

←File Selection List

There are options as following

- Play or View : Play a sound file or view an image or photo file
- Forward

Sound File	Image or Photo File
<ul style="list-style-type: none"> ■ To User Profile: allows you to use the sound file as a Ring Tone In case of Sound File ■ To MMS: allows you to write an MMS message with the file. ■ To Bluetooth: allows you to send file through bluetooth 	<ul style="list-style-type: none"> ■ To Wallpaper : Set the image as an wallpaper ■ To Sub Wallpaper : Set the image as an sub wallpaper ■ To Screen Saver : Set the image as a screen saver ■ To Power On Display : Set the image as a power on display ■ To Power Off Display : Set the image as a power off display ■ To PhoneBook : Set the image (In case of under 20Kbyteys) ■ To MMS: allows you to write an MMS message with the file. ■ To Bluetooth: allows you to send file through bluetooth

- Detail : See the detail information (Data & Size)
- Rename : Rename the selected file.
- Copy : Copy the file to the other folder
- Move : Move the file to the other folder
- Delete : Delete the selected file.
- Delete All Files : Delete all files in the list.
- Sort : There are five sorting ways as follows
 - By Name

- By Type
- By Time
- By Size
- None

6. Fun & Games


6.1 Games

This phone has three games for your enjoyment.




6.1.1 Copter

This game is arcade game.

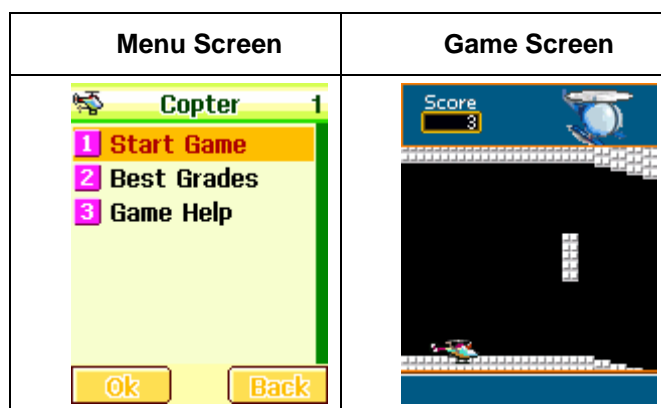You have to drive the copter and prevent it from crashing into the obstacle, ground, ceiling.





* Key Description

Key	Actions
	Move the copter up (When you do not press this key, the copter go down to the ground automatically)
	Pause the game
	Quit the game and back to game menu







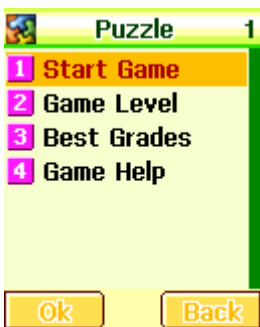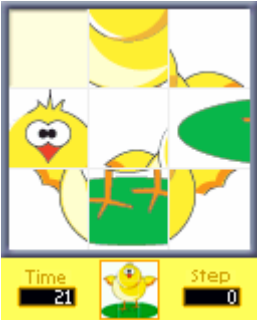



6.1.2 Puzzle

This game is puzzle game.

There are scattered images at the beginning of the game. You have to make them the original image.

Menu Screen	Game Screen
	



* Key Description

Key		Actions
Numeric keys	Navi-keys	
		Make a picture go upward
		Make a picture go downward
		Make a picture go leftward
		Make a picture go rightward
		Pause the game
		Quit the game and back to game menu







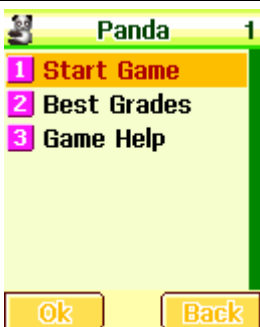




6.1.3 Panda

This game is arcade game.

Panda is alone in the bamboo forest. You have to control the panda to attack bugs or prevent touch them. If the clock fall from the top, you have to get it to extend the playing time.

Menu Screen	Game Screen
	

* Key Description

Key		Actions
Numeric keys	Navi-keys	
		Move the panda upward
		Move the panda downward
		Move the panda leftward
		Move the panda rightward
		Attack bugs from the underside
		Pause the game
		Quit the game and back to game menu

6.1.4 Game Setting

You can select the game setting. This will be applied to the game plays.

Press the left or right navigation key to select the setting and press the [Ok] soft key to save the setting.

- 1) BGM (On/Off): allows you to set the background music on or off while you are playing a game
- 2) Sound Effect (On/Off): allows you to set the audio sound on or off while you are playing a game.
- 3) Game Vibration (On/Off): allows you to set the vibration on or off while you are playing a game.

6.2 Themes

You can set the theme of your phone display style. You can choose a theme regarding the menu title bar, select bar, and soft key bar color themes.

6.2 Image Editor

: With this menu, you can draw picture.

7. User Profiles

You can use the sound setting features to customize various settings depending on environments.

- General
- Meeting
- Outdoor
- Indoor
- Headset
- Bluetooth

! Note : Headset mode has no 'activate' menu because the activation of Headset mode is automatically on when you plug the headset to your phone in.

Select each environment and select "Activate" to activate the setting or elect "Customize" to customize the sound and light settings on each environment.

7.1 Tone Setup

This menu customizes the tones in the following setups.

7.1.1 Incoming Call

This option allows you to select the required ring tone. You can set the ring tone from sound files downloaded from WAP download, MMS and EMS. You can also forward files from Phone Memory to this User Profile. Each time you select a tone, the phone will play it for a few seconds.

7.1.2 Alarm

This option allows you to select the alarm sound. You can set the alarm tone from sound files downloaded from WAP download, MMS and EMS. You can also forward files from Phone memory to this User Profile. Each time you select a tone, the phone will play it for a few seconds.

7.1.3 Power On

You can select power on sound from 4 tones or silent. The phone will play the Power On tone, when you power on the phone by pressing the End/Power key.

7.1.4 Power Off

You can select power on sound from 4 tones or silent. The phone will play the Power Off tone, when you turn off the phone by pressing the End/Power key.

7.1.5 Cover Open

You can select cover open sound from 6 tones or silent.

7.1.6 Cover Close

You can select cover close sound from 6 tones or silent.

7.1.7 Message Tone

You can select message sound from 5 tones or silent. The phone will play the Message Tone you selected, when you receive a message.

7.1.8 Keypad Tone

You can select the tone that the keypad generates when you press a key by this menu

- Silent: the keys do not make any sound
- Click: the keys will make “click” sound.
- Tone: the keys will make “tone” sound. (DMTF Tone)
- Custom Tone 1 : the key will make “Custom Tone 1” sound.
- Human Voice Tone 1 : the key will make human voice tone.

7.2 Volume

This option allows you to adjust the ringing volumes of keypad, call alert, alarm and message alert. You can set different volume levels for the Ring Tone, Key Tone and Effect sound.

7.3 Alert Type

This option allows you to customize the alert type. This setup will control the alerts your phone might play. You can customize the alert types as following.

- Ring : the phone rings the ring tone selected with the [Tone Setup] option (8.1.1).
- Vibration Only : the phone vibrates without ringing.
- Vibra and Ring : the phone vibrates and rings simultaneously.
- Vibra then Ring: the phone vibrates first then rings.

7.4 Intelligent Call Alert

Once this function is on, the phone number of other person who is calling to you is read in voice tone when you receive a call.

7.5 Ring Type

You can set the ring type for playing the ring tones.

- Single: plays the ring tone once.
- Repeat: plays the ring tone in repeated matter.
- Ascending: plays the ring tone with ascending volume.

7.6 Extra Tone

You can turn on or off the tone of following alerts.

- Warning
- Error
- Camp On
- Connection

7.7 Answer Mode

You can select the way when you answering an incoming call

- Cover Answer : To answer a call, you have to cover open
- Any Key : To answer a call, you have to click any key of your phone

8. Organizer

8.1 Calendar



The calendar helps you to keep track of memos, calls that you need to make, anniversaries, and To-Do.

First, choose the date you want to view by moving the navigation keys. Move to the previous or the next month by pressing the side volume keys located on the right side of the phone, and then press the [Option] soft key (left).

There are two Options as following:

8.1.1 View Tasks

Allows you to view the task list and add task(s) on the selected date.

From the Task List, there are five Options available:

- View: allows you to view the details of the selected task.
- Add: allows you to add a task.
- Edit Task: allows you to edit the selected task.
- Delete Task: allows you to delete the selected task.
- Delete All: allows you to delete all tasks listed on the selected date.
- Send vCalendar : allows you to send a task using a vCalendar format through SMS, MMS, Bluetooth and to save it.

8.1.2 Jump To Date

Allows you to jump to the date you input in the date box (YYYY / MM / DD).

8.2 To-Do List

You can view all saved tasks. It displays a task or tasks saved in the Organizer. To-Do List shows the notes of the tasks from the oldest task to the latest task.

- View: allows you to view the details of the selected task.
- Add: allows you to add a task.
- Edit Task: allows you to edit the selected task.

- Delete Task: allows you to delete the selected task.
- Delete All: allows you to delete all tasks listed on the selected date.
- Send vCalendar

8.3 Alarm

This menu allows you to set the alarm to ring at a specific time. You can save up to 5 alarms.

The following Edit options are available.

1. Alarm (On/Off)
2. Time (HH:MM): input the hour in 24 hour scale and minute.
3. Repeat (Once / Every Day / Day (S, M, T, W, T, F, S) / Weekly / Monthly): select the repeat characteristics of the task.
4. Snooze : You can set the snooze interval from 1 to 10.
5. Alert Type : You can select alert type from Vibra and Ring, Ring and Vibration Only.

After you completed editing the options, press the [Done] soft key (right) to save the changes.

To stop the alarm when it rings, press the [Stop] soft key (left) to stop the alarm or press the [Snooze] soft key (right) to snooze the alarm so that it will remind you again in four minutes.

8.4 World Clock




This feature allows you to check the current time for Greenwich Mean Time (GMT) and major cities around the world, using the right and left navigation keys.

The screen shows the;

- City name
- Current date and time
- Day or Night icon (☀️ 🌙)

To set the time zone of your location, select the city corresponding to your time zone by pressing the left and right navigation keys. The phone will display the local date and time.

8.5 Calculator

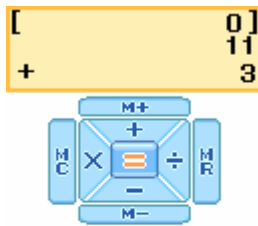

Using this feature, you can use the phone as a calculator. The calculator performs the basic arithmetic functions and memory functions; Addition, Subtraction, Multiplication and Division; Add to Memory, Subtract to Memory, Memory Clear and Memory Read.

To perform a calculation:

- Enter the first number using the numeric keys.
- Press the up navigation key once to use [+] (add), and twice to use [M+] (add to the previous result).
- Press the navigation key down to use [-] (subtract), and twice to use [M-] (subtract to the previous result).
- Press the right navigation key once to use [x] (multiply), and twice to use [MC] (erase the previous result)
- Press the left navigation key once to use [/] (divide), and twice to use [MR] (memory read).
- Press the sharp key (#) to enter a [.] (Decimal point).
- Enter the next number.

Repeat Steps 2 to 3 as many times as required.

To calculate the result, enter the [Ok] soft key.

When you have finished, press the [Back] soft key (right) or the End key to exit.

8.6 Unit Converter


You can convert from one type of unit to another with this function.

To convert a value:

- Select the weight or length options.
- Press the left or right navigation keys and select the type of conversion to be performed.
(Example: Kg <-> Pound)

- Using the up and down navigation keys, place the cursor on the desired unit
- Input the value to be converted, and then press [Ok] to get the result.
- You can enter a decimal point (.) using the # key.

8.7 Currency Converter

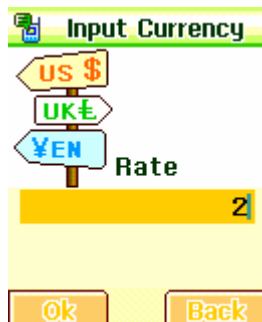

You can convert currency if you know the exchange rate.

To convert currency:

- Input a currency rate.
- Press the [Ok] soft key (left).
- Press the left or right navigation keys to choose how you want the currency to be calculated.
(xxx:1 or 1: xxx)
- Press down the navigation key and input the local currency value.
- Press the [Ok] soft key (left) to get the result.

If you want to convert other local amount, press the up navigation key and select the currency convert type (xxx:1 or 1: xxx), and repeat the 4) and 5). If you want to convert with other currency rate, press the [Back] soft key.

8.8 Health

With the Health menu, you can check your health.

8.9 BMI



BMI is the Body Mass Index. BMI is an index for your health, keeping in the Normal range is recommended for your health. Low BMI and high BMI both are critical for the health.

	Thin	Normal	Fat
Female	~ 18	18 ~ 23	23 ~
Male	~ 20	20 ~ 25	25 ~

8.10 Menstrual



Input the information as following:

1. Last Mens Date
2. Average Period

- Press the [Ok] soft key to get the menstrual calendar.
- The calendar will display P.P and Menses periods as following.
- P.P (yellow color): indicates for the possible periods to get pregnant.
- Menses (orange color): indicates your menstrual periods.
- Press the side volume keys to scroll through months, and press the navigation keys to navigate through dates.

When you press the [Ok] soft key on the selected date, it will calculate the possibility of pregnancy.

8.9 E-Book Reader

: With this E-Book Reader, you can read a text file(ASCII/UCS2/UTF8)

8.10 Stopwatch

This is a tool to measure time for various sports, running, swimming races, or car races.

8.10.1 Typical Stopwatch

There are Split Timing and Lap Timing stopwatch functions in this typical stopwatch menu.

8.10.1.1 Split Timing



Split Timing is useful for measuring each player's record from start. The timing will be recorded earliest to latest.

- Press [Split] to measure the timing and press again for next timing, and so on.
- Press [Stop] when you are done measuring the timing. If you want continue, press the [Resume] soft key. You can record up to 20 measurements per a record.
- It will ask if you want to save. Press [Yes] to save.
- Edit the name for the record. Press [Option] and select "Done" to save.
- You can view the record by selecting 11.5.1.3 View Record and press the [Option] soft key (left) and select "View."

8.10.1.2 Lap Timing



You can use the Lap Timing function to measure each lap record.

- Press [Lap] to measure the timing and press again for next lap timing, and so on.
- Press [Stop] when you are done measuring the timing. If you want continue, press the [Resume] soft key. Repeat this step for the other stopwatches. You can record up to 20 measurements per a record.
- It will ask if you want to save. Press [Yes] to save.
- Edit the name for the record. Press [Option] and select "Done" to save.
- You can view the record by selecting 11.5.1.3 View Record and press the [Option] soft

key (left) and select "View."


8.10.1.3 View Record

When you save the timing records from the Split Timing and the Lap Timing, it will be saved and listed in this menu.

Press the [Option] soft key and select from the following options:

- View: allows you to view the timing record.
- ⇒ Press the up and down navigation keys to scroll among the records.
- Delete: allows you to delete the selected record.
- Delete All: allows you to delete all records.

8.10.2 nWay Stopwatch

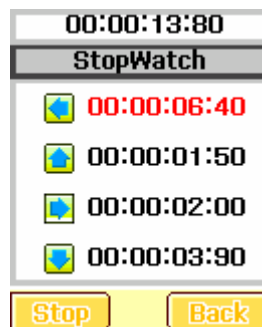

You can use 4-way navigation keys for measuring times for each direction.

When you press a navigation key, the direction stopwatch will start timing, and other direction stopwatch will pause the timing. When you press the paused direction's navigation key, the stopwatch will resume timing.

Multipurpose stopwatch provides a useful tool to monitor the time consumption for up to 3 events. For example, in a meeting, user wants to monitor the total speech time for each individual participant. Another example is that user want to monitor a period of time, how much time he spent on working, browsing web, dealing with email and meet.

- Reset all : press left soft key long .

9. Services

This menu allows you to access WAP service and Data Account set-up.

! Note : If you use a SIM card that provides additional services, the GSM Access menu displays. For details, please see your SIM card instructions.

9.1 WAP

You can connect to WAP site by this phone, and use the services provided by the sites. The WAP browser works as Internet browser of PC.

9.1.1 Homepage

When you choose [Homepage] menu, WAP browser opens the main page of home site that you had activated among the sites in [Profile].

9.1.2 Bookmarks

You can make bookmark data in your phone. And, you can connect to the site directly.

There are 5 options as following.

- Goto : Go to the selected bookmark
- Edit : Edit the name and URL of the selected entry
- Delete : Delete the selected entry
- Delete All : Delete all entry
- Add Bookmark : Add new bookmark

9.1.3 Recent Pages

When you choose [Recent Pages] menu, WAP browser opens the latest WAP page.

9.1.4 Enter Address

If you know the URL of the site, you can go to the site directly by inputting the URL.

9.1.5 Settings

This option allows you to set the WAP settings. There are five profiles of sites in this phone. You can activate one of them as a home site and change or set each profile.

! Note : The available number of profiles are varies on your country)

There are 6 options as following.

- Edit Profile: Shows the name of selected profile and you can edit the profile(s).
- Browser Options: Time out, Show Image
- Service Message Setting: On/Off
- Clear Cache: clears the most recent site files that you have downloaded in the temporary

memory.

- Clear Cookie: deletes cookies in the memory.
- Trusted certificates : This function is to indicate your trusted certificate when browsing and also delete the trust list into the browser if needed.

9.2 Data Account

This menu allows you to change the settings for the GSM and GPRS network services. For further details, contact your service provider.

9.2.1 GSM Data

This setting allows you to change the settings for the GSM Data network as following.

- Account Name: Edit the account name.
- Number: Enter the server phone number.
- User Name: Enter the user name required to connect to GSM Data network.
- Password: Enter the password required to connect to GSM Data network.
- Line Type: Choose a network connection type between Analogue and ISDN.
- Speed: Select the desired speed from 9.6 Kbps, 14.4 Kbps and 4.8Kbps.
- DNS : Enter the DNS IP address

9.2.2 GPRS

This setting allows you to change the settings for the GSM Data network as following.

- Account Name: Edit the account name.
- APN: Enter the access point name used for the address of the GPRS network gateway.
- User Name: Enter the User Name required to connect to GPRS network.
- Password: Enter the password required to connect to GPRS network
- Auth. Type: Select the authorization type from Normal and Secure.

B. Trouble Shooting

If you meet a trouble on your phone operation, please check the followings.

These checks enable you to save the time and expense due to the unnecessary after-service.

1. When Enter PIN appears at the power-up.

The PIN check is currently enabled.

You must enter the PIN supplied together with your SIM card. You can disable the PIN check if you want, please see Security Setting menu in section F.

2. When Insert SIM screen appears at the power-up.

Please check that your SIM card is inserted adequately.

3. When Enter Lock Code appears at the power-up.

Your phone is phone locked.

You must enter the Lock Code supplied together with your phone.

4. No Service appears.

You probably are in the area out of the coverage of a GSM/DCS network.

5. If any tone is not generated when you press a keypad.

You need to check the Silence Mode setting.

You need to check the Type and Volume option of Key Tone menu.

You need to check Profiles menu.

6. If an audible alert is not made when a call is received.

You need to check the Silence Mode setting.

You need to check the Type and Volume option of SMS Alert Tone menu.

You need to check Profiles menu.

7. If an audible alert is not made when an alarm is expired.

You need to check the Silence Mode setting.

8. If an outgoing call is not made.

You have probably set an outgoing calls barring option. You need to check Call Barring menu.

9. If an incoming call is not made.

You have probably set an incoming calls barring option. You need to check Call Barring menu.

10. If an outgoing SMS message is not sent.

You need to check the Message Centre option in Message Setup menu.

11. If all audible key tones are muted and all audible alerts are changed to vibrator alert.

You need to check the Silence Mode setting.

By just pressing and holding [VOLUME-CENTRE] on the idle screen, you can escape or enter the mode.

12. If some menus relevant to the sound are not visible on the Sound Setting menu.

You need to check Silence Mode setting.

By just pressing and holding [VOLUME-CENTRE] on the idle screen, you can escape or enter the mode.

C. Safety Information

For the efficient and safe operation of your phone, observe these manual-lines.

1. Everyday Use of Your Phone

For normal operating position, hold your phone as you would any other telephone, with the antenna pointed up and over your shoulder.

Do not touch the antenna unnecessarily when your phone is in use, as this will affect call quality and may cause the phone to operate at a higher power level than otherwise needed.

As with any other radio transmitting equipment, you are advised that for the satisfactory operation of your phone and for your own safety, you should use your phone only in the normal operating position.

2. Using Your Phone in a Vehicle

Safety comes first, and is the ultimate responsibility of the driver. Please:

Give full attention to driving – driving safely is your first responsibility.

Use Hands-free Kit, if available.

If you have those kits make sure it is done pre-programmed numbers where possible, and keeping calls brief and to a minimum.

If you don't have a Hands-free Kit, pull off the road and park your vehicle before making or answering a call in driving conditions so require.

3. Non-ionizing Radiation (exposure to Radio Frequency Signals)

Your phone is a low power radio transmitter and receiver. When it is on, it receives and also sends the radio frequency (RF) signals. Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone. RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Consult your vehicle manufacturer and the manufacturer of any equipment that has been added to the vehicle.

4. Pacemakers

The Health industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. Users with pacemakers:

Always keep your phone at least 20 cm (6inches) from your pacemakers when the phone is switched on.

Do not carry your phone in your breast pocket.

Use the ear opposite the pacemakers to minimize the potential for interference.

Switch off your phone immediately if you suspect that interference is being caused.

5. Hearing Aids

Some mobile phones, including your mobile phone, may interfere with certain hearing aids. In the event of such interference you may consult the hearing manufacturer to discuss alternatives.

6. Other Medical Devices

If you use any other medical devices, please consult a physician or the manufacturer of the medical devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Always check the regulations of the healthcare facilities, which generally request that all mobiles are switched off on entry.

7. Operating Environment

Remember to follow any special regulations in force in any area, and always turn off your phone wherever it is forbidden to use it, or when it may cause interference or danger.

8. Aircraft Safety

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft.

9. Explosive Atmospheres and Materials

Turn your phone off and do not remove the battery when in any area with a potential explosive atmosphere and obey all signs and instructions. You must observe restrictions on the use of radio equipment in fuel depots; below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; areas with signs about explosive atmospheres or where blasting operations are in progress; any other areas where you would normally be advised to turn off your vehicle engines.

10. For Vehicle Equipped with an Air Bag

An air bag inflates with great force. Do not place objects, including both installed and portable wireless equipment, in the area over the air bag or in the air bag development area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

11. Battery Charging

Do not charge the phone without the battery in place.

12. SAR information

This wireless phone meets the government's requirements for exposure to radiowaves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless fixed phone employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and location (e.g., worn on the body) reported to the FCC. The highest SAR values for this model phone when tested for use on the head and body were 0.499W/kg (GSM 850MHz head), 0.619W/kg (GSM 850MHz body) 1.400W/kg (GSM 1900MHz head) and 0.512W/kg (GSM 1900MHz body).

While there may be differences between the SAR levels of various phones and at various positions, they all met the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The SAR Body-worn testing was performed with a 15mm air gap. The Users must be informed that they must maintain 15mm separation to the body when using body-worn accessories and the accessories must not contain metallic components.

D. Glossary

Cell Broadcast

This network service allows you to receive the broadcasted text messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in the area where you are.

CUG (Closed User Group)

This network service allows the restriction of calls to and from a selected user group.

DTMF (Dial Tone Multi Frequency)

Codes sent as tone signals. Used for telephone banking, for accessing an answering machine, etc.

GSM

Global System for Mobile communication. This is a digital mobile telecommunication system that is used in most of the world.

GPRS

This is an abbreviation of General Packet Radio Service which enables a packet data communication with a high-speed.

Network Service Operator

To be able to use your phone, you need a subscription to a network. You get this subscription from a network operator, together with a SIM card that you need to use with your phone.

MMS (Multimedia Message Service)

This is an abbreviation of Multimedia Messages Service. The data including text, image, sound and movie can be sent with this service.

MP3

MP3 (MPEG-1 Audio Layer-3) is a standard technology and format for compression a sound sequence into a very small file (about one-twelfth the size of the original file) while preserving the original level of sound quality when it is played

PIN (Personal Identification Number)

The code is to establish authorization for access to certain functions or information in your SIM card. The PIN code comes with your subscription. It may be a four to eight digit number and can be changed as required.

PIN2 (Personal Identification Number 2)

The code is an authorization code to access certain special field in your SIM card. The PIN2 code does not come with your subscription in some country.

Roaming

Use of your phone when you are outside your subscription network area.

SIM (Subscriber Identity Module)

It contains subscriber details, security information and memory for a personal directory of numbers.

SMS (Short Message Service)

Messages to be sent and received via the network service operator's message centre to your mobile phone. To use this service, it must be supported from your network.

WAP (Wireless Application Protocol)

A standard specifically created for mobile communications devices and gives fast and easy access to Internet information and services.