

# Venue 10 Pro

5000 Series


## Quick Start Guide

Quick Start Guide  
Quick Start Guide  
Quick Start Guide  
Quick Start Guide




### 1 Connect the power adapter and turn on your computer

Connect the power adapter and turn on your computer  
Connect the power adapter and turn on your computer  
Connect the power adapter and turn on your computer  
Connect the power adapter and turn on your computer

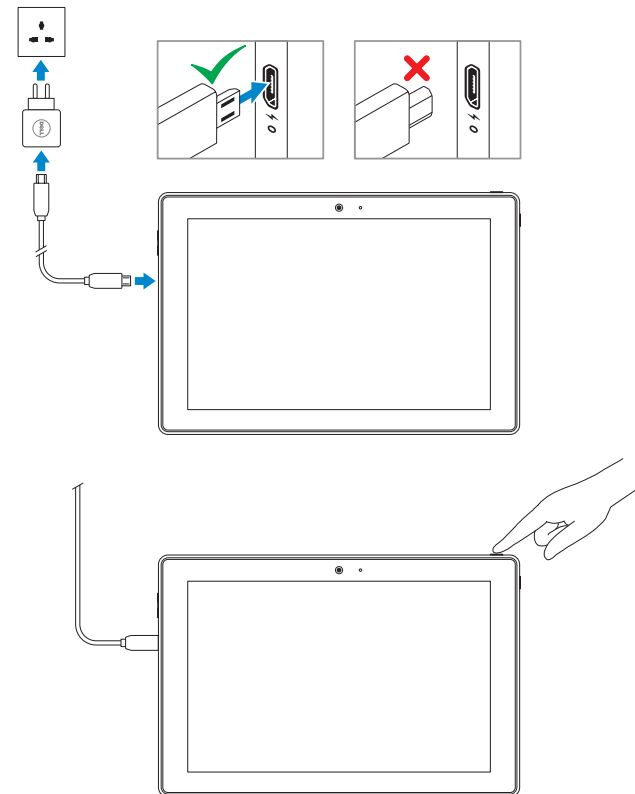


### 2 Finish Windows setup

Finish Windows setup | Finish Windows setup  
Finish Windows setup | Finish Windows setup

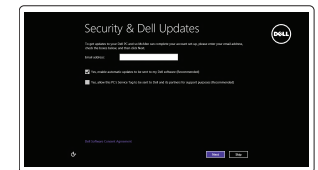


**Enable security and updates**  
Enable security and updates  
Enable security and updates  
Enable security and updates  
Enable security and updates

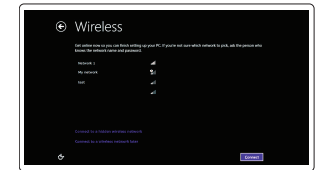

**Connect to your network**  
Connect to your network  
Connect to your network  
Connect to your network  
Connect to your network

- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- NOTE:** If you are connecting to a secured wireless network, enter the password for the wireless network access when prompted.

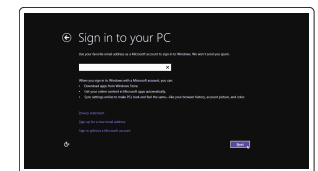

**Sign in to your Microsoft account or create a local account**  
Sign in to your Microsoft account or create a local account  
Sign in to your Microsoft account or create a local account  
Sign in to your Microsoft account or create a local account  
Sign in to your Microsoft account or create a local account



### 3 Register your tablet

 Register your tablet  
Register your tablet  
Register your tablet

[dell.com/support/retail](http://dell.com/support/retail)


### Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)  
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)  
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)  
Insert optional microSD memory card (sold separately) and micro-SIM card (on LTE/HSPA+ models only)

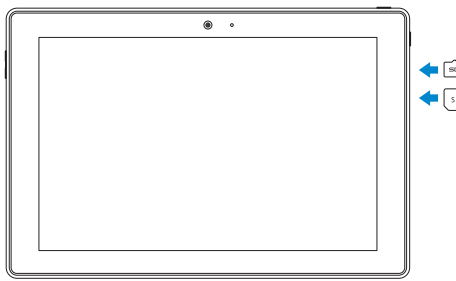

### Locate your Dell apps

 Locate your Dell apps | Locate your Dell apps  
Locate your Dell apps | Locate your Dell apps




**Register your computer**  
Register your computer | Register your computer  
Register your computer | Register your computer



**Dell Backup and Recovery**  
Dell Backup and Recovery | Dell Backup and Recovery  
Dell Backup and Recovery | Dell Backup and Recovery



**My Dell**  
My Dell | My Dell  
My Dell | My Dell

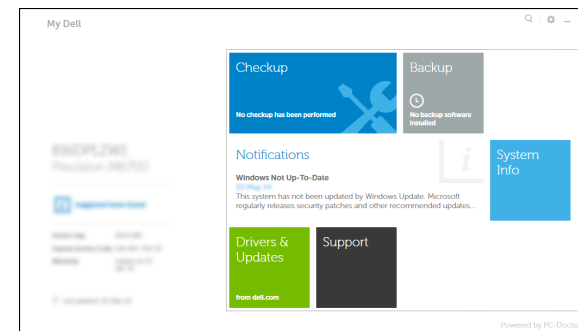


- NOTE:** For more information, see *Owner's Manual* at [dell.com/support/manuals](http://dell.com/support/manuals).
- NOTE:** For more information, see *Owner's Manual* at [dell.com/support/manuals](http://dell.com/support/manuals).
- NOTE:** For more information, see *Owner's Manual* at [dell.com/support/manuals](http://dell.com/support/manuals).
- NOTE:** For more information, see *Owner's Manual* at [dell.com/support/manuals](http://dell.com/support/manuals).

### Learn how to use Windows

Learn how to use Windows | Learn how to use Windows  
Learn how to use Windows | Learn how to use Windows





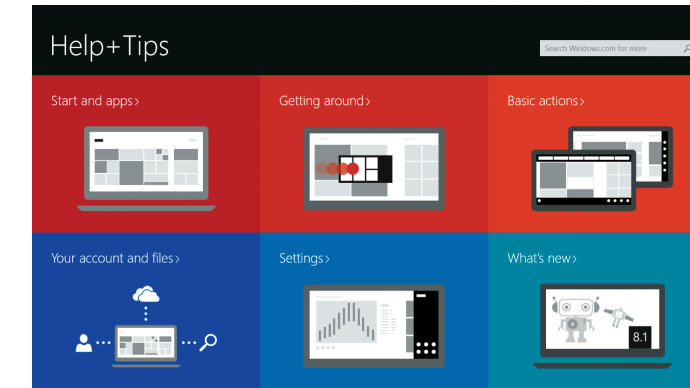







**Help and Tips**  
Help and Tips | Help and Tips  
Help and Tips | Help and Tips



### Connect to a network — optional

Connect to your network — optional  
Connect to your network — optional  
Connect to your network — optional  
Connect to your network — optional



In the charms sidebar, tap **Settings** , tap the **Wireless** icon , select your network, and tap **Connect**.  
In the charms sidebar, tap **Settings** , tap the **Wireless** icon , select your network, and tap **Connect**.  
In the charms sidebar, tap **Settings** , tap the **Wireless** icon , select your network, and tap **Connect**.  
In the charms sidebar, tap **Settings** , tap the **Wireless** icon , select your network, and tap **Connect**.  
In the charms sidebar, tap **Settings** , tap the **Wireless** icon , select your network, and tap **Connect**.

- NOTE:** You may need to activate your network service before connecting.
- NOTE:** You may need to activate your network service before connecting.
- NOTE:** You may need to activate your network service before connecting.
- NOTE:** You may need to activate your network service before connecting.

## Product support and manuals

Product support and manuals  
Product support and manuals  
Product support and manuals  
Product support and manuals

## Contact Dell

Contact Dell | Contact Dell  
Contact Dell | Contact Dell

## Regulatory and safety

Regulatory and safety | Regulatory and safety  
Regulatory and safety | Regulatory and safety

## Regulatory model

Regulatory model | Regulatory model  
Regulatory model | Regulatory model

## Regulatory type

Regulatory type | Regulatory type  
Regulatory type | Regulatory type

## Computer model

Computer model | Computer model  
Computer model | Computer model

## Información para NOM, o Norma Oficial Mexicana

La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):

### Importador:

Dell México S.A. de C.V.  
Paseo de la Reforma 2620 - Piso 11.  
Col. Lomas Altas  
11950 México, D.F.

Número de modelo reglamentario:	T14G
Voltaje de entrada:	100 VAC–240 VAC
Corriente de entrada (máxima):	0,3 A
Frecuencia de entrada:	50 Hz–60 Hz
Corriente de salida:	2 A
Voltaje de salida:	5 VDC



dell.com/support

dell.com/support/manuals

dell.com/contactdell

dell.com/regulatory\_compliance

T14G

T14G001

Venue 10 Pro 5055


Venue 10 Pro 5055 WWAN

Venue 10 Pro 5055 series [ZHCN only]

## Connecting the keyboard

Connecting the keyboard | Connecting the keyboard

Connecting the keyboard | Connecting the keyboard

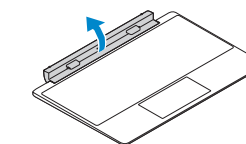

### Turn the dock panel outwards to 90 degrees.


Turn the dock panel outwards to 90 degrees.

Turn the dock panel outwards to 90 degrees.

Turn the dock panel outwards to 90 degrees.

Turn the dock panel outwards to 90 degrees.

Turn the dock panel outwards to 90 degrees.

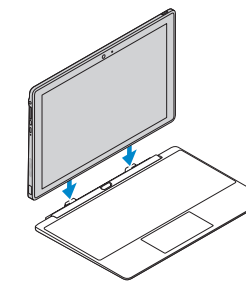

### Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.


Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

Align the dock latches with the tablet dock-guides and dock the computer to the keyboard dock.

## Disconnecting the keyboard

Disconnecting the keyboard | Disconnecting the keyboard

Disconnecting the keyboard | Disconnecting the keyboard

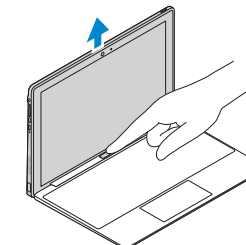

### Press the undock button and remove the computer.

Press the undock button and remove the computer.

Press the undock button and remove the computer.

Press the undock button and remove the computer.


Press the undock button and remove the computer.

Press the undock button and remove the computer.

Press the undock button and remove the computer.

## Modes

Modes | Modes | Modes

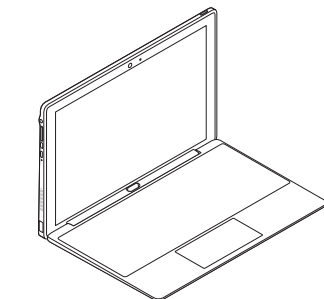


### Laptop mode

Laptop mode

Laptop mode

Laptop mode

Laptop mode

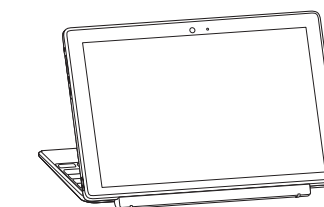

### Media mode

Media mode

Media mode


Media mode

Media mode

Media mode

## Features

Features | Features | Features | Features

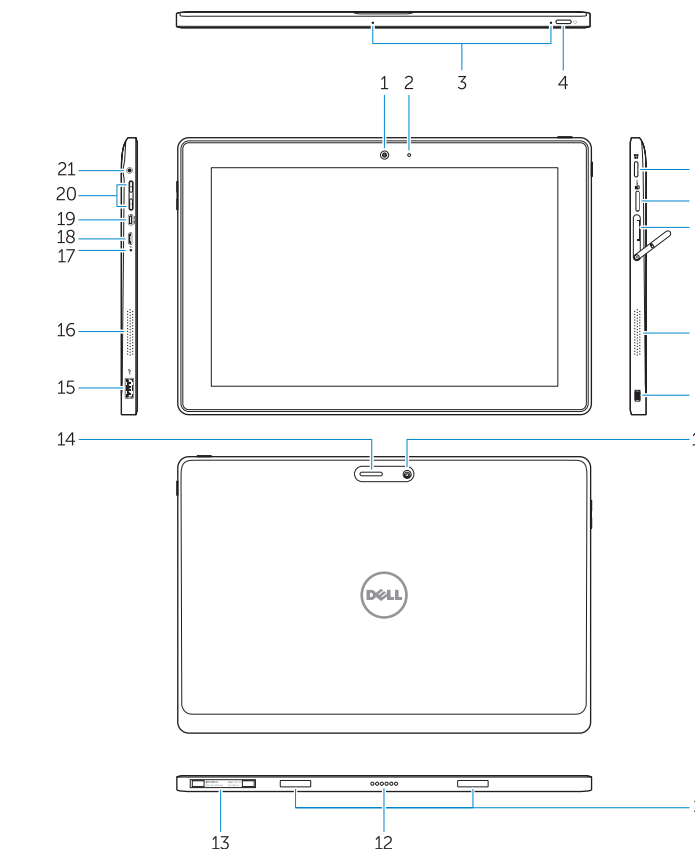

1. Camera
2. Camera-status light
3. Microphones
4. Power button
5. Windows button
6. MicroSD memory card reader
7. Micro-SIM reader (LTE/HSPA+ models only)
8. Speaker
9. Noble security-cable slot
10. Back camera
11. Dock-guide slots
12. Dock pins
13. Service-tag label
14. Wi-Fi / WWAN status light
15. USB 2.0 connector
16. Speaker
17. Battery-status light

18. Micro USB power connector
19. Micro HDMI connector
20. Volume buttons
21. Audio connector

### Keyboard dock

22. Dock pins
23. Dock latches
24. Undock button
25. Touchpad

### Pen (Optional)

26. Pen Tip (replaceable)
27. Programmable buttons
28. Pen loop

1. Language2
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

1. Language3
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

1. Language4
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

1. Language5
2. Language language language
3. Language
4. Language language
5. Language
6. Language language language
7. Language language
8. Language language language
9. Language language language
10. Language language
11. Language
12. Language language language
13. Language language
14. Language language language
15. Language
16. Language language
17. Language language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language

18. Language
19. Language language language
20. Language
21. Language language
22. Language language language
23. Language
24. Language language language
25. Language language
26. Language language language
27. Language
28. Language language