

Contents

Unpack

Make sure you have each item

Your phone

Button, features, and locations

Get started

First steps to operate your phone

Menu functions

All menu options listed

Solve problems

Help and personal needs

Health and safety information

Unpack

Make sure you have each item

Phone	Power Cable
Speaker	MIC
Antenna (GPS, CDMA)	User's Manual

You can obtain the following accessories for your phone from your local Telit dealer.

- **CDMA Antenna**
- **External MIC**
- **Headset**
- **Main Power Cable**
- **GPS Antenna**
- **External Speaker**
- **Data link cable**

Get started

First steps to operate you phone

Power on or off

Power on

Do not turn on the phone when mobile phone use is prohibited.

1. Open the phone.

2. Press and hold [Φ] to turn on the phone.

Power off

1. Open the phone.

2. Press and hold[Φ].

Keys and display

Key(s)	Description
Soft keys	Perform the function indicated on the bottom line of the display
Navigation keys	In Idle mode, access menu options directly. In menu mode, scroll through the menu options.
Menu/OK key	In Idle mode, enters Menu mode. In Menu mode, selects the highlighted menu option.
Send Key	Sends or answers a call. In Idle mode, retrieves the last number dialed, missed, or received.
Back key	Deletes characters from the display. In Menu mode, returns to the previous menu level.
End key	Ends a call. In Menu mode, cancels input and returns the phone to Idle mode.
Numeric	Enter numbers, letters, and some special characters.

keys

*** /# key** **Enter special characters.
Use for some special functions.**

GPS key **Accesses the Telmap.**

Volume **Adjusts the phone volume.**

keys(on the left) **In Idle mode, with the phone open, adjusts the keypad tone volume. With the phone closed, hold down to turn on the backlight.
In Menu mode, scrolls through the menu options.**

Power key **Hold down to switch the phone on and off.**
[Φ]

Overview of menu functions

To access Menu mode, press [MENU] in Idle mode.

1. Phone Book

1. Find
2. Add Name
3. My Number
4. Memory Status
5. Speed Dial

2. Call history

1. All Calls
2. Misses
3. Received
4. Dialed
5. Call Duration

3. Settings

1. Sounds
2. Display
3. Security
4. Others

4. Navigator

During a call

1. Mute
2. Phone Book
3. Call history
4. Phone Info.

Menu functions

All menu options listed.

Phone Book

You can store phone numbers in your phone.

To access this menu, press [MENU] in Idle mode and select **phone book** .

Find

This menu allows you to find an entry using a person's name, entry number, or group name in your Phone Book.

Add Name

This menu allows you to add a new enter to your Phone Book. A name can contain up to 3 numbers in different categories; Home, Office, Cellular.

My Number

In this menu, you can view your phone number.

Memory Status

In this menu, you can view your phonebook memory status.

Speed Dial

Speed dialing allows you to press and hold a key (or keys) to dial the number associated with those key(s).

There are three types of speed dialing; 1-touch, 2-touch, and 3-touch dialing.

Call history

Use this menu to view the calls you have dialed, received, or missed.

To access this menu, press [MENU] in Idle mode and select **Call history** .

All Calls

Use all calls to view received, dialed, and missed calls for your phone. You can also use all calls to erase your call history and view Call Timers. While viewing all calls, you have options such as saving recent call numbers to your phonebook, and editing numbers before saving.

Missed

The phone stores up to 30 of the most recent numbers you have failed to answer. When you access this menu, a list of the missed calls displays.

Received

This menu lets you view up to 30 of the most recent calls you have received if you subscribe to the Caller Line Identification service. Contact your service

provider for further details about this service. When you access this menu, a list of the received calls displays.

Dialed

If Caller Line Identification is available, your phone keeps a list of the 30 most recent dialed calls that you have made. Contact your service provider for the availability.

Call Duration

In this menu, you can see view Call Timers. There is the duration of all calls for your phone.

Settings

Many different features of your phone can be customized to suit your preferences.

To access this menu, press [MENU] in Idle mode and select **Settings** 

Sounds

This menu enables you to customize various settings for sounds.

In this menu, you can:

- adjust the ringer volume for calls.
- adjust voice volume for calls, and key tone volume.
- change the keypad sound (off/beep), alerts the sound about connect and disconnect.
- set the unique ringer melody.

Display

This menu enables you to customize various settings for display and the lights.

In this menu, you can:

- change the Theme(standby, power on and off, received call, dialed call)
- set a Banner message to be displayed.
- adjust the brightness of the main display.
- select whether or not the keypad light is on.

Security

Your phone provides you with various security options, including a user-programmable lock code and special number features.

To access the Security menu, you must enter the 4-digit lock code. It is to "0000" at the factory.

In this menu, you can:

- lock your phone and services so that other people cannot use your

phone and the additional services.

- change your current lock code to a new one.
- store emergency numbers.
- delete your phonebook entries and call history lists.
- change NAM numbers of your phone.
- reset your phone.

Others

In this menu, you can:

- set how to answer receiving calls.
- turn the automatic answering features on or off.
- select one of English and Hebrew for the display text.
- view your number and view the software versions of your phone.

During a call

In this menu, you can:

- set mute and unmute mode.
- access your phone book menu.
- view all your call history.
- view your number and view the software versions of your phone.

Solve problem

Help and personal needs

Health and safety information

Exposure to Radio Frequency(RF) Signals

**Acknowledging Special Precautions
and the FCC and Industry Canada Notice
FCC Notice**

Safety Information

To maintain compliance with the FCC's RF exposure guidelines, this equipment should be installed and operated with minimum separation distance of 20cm between the radiator and your body. Use only the supplied antenna. Unauthorized antenna, modification, or attachments could damage the transmitter and may violate FCC regulations.

Appendix A: CERTIFICATION INFORMATION (SAR)
THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS
FOR EXPOSURE TO RADIO WAVES.

**Appendix B: Guide to Safe and Responsible Wireless
phone Use**

Cellular Telecommunications & Internet Association "Safety is the
most important call you will ever make"

Appendix C: Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. What kinds of phones are the subject of this update?

STANDARD LIMITED WARRANTY

What is Covered and For How Long?