

NEWGEN/7 Series

TeraValue Co, Ltd.

Suite 509 kyonggi Venture Bldg, korea Design Center, #344-1,
Yatap-1 dong, Bundang-Gu, Sungnam-si, Kyonggi-Do, 463-070, Korea
Tel : +82- 31- 788-7375 / Fax : +82- 31- 788-7857 / <http://www.teravalu.com>

My Digital Color Audio

NEWGEN/7 Series

MP3 Player / FM Radio / Stopwatch
Voice Recording / WMA Encoding
Color LCD / JPEG Image Playback
Li-Polymer Rechargeable Battery

Users Guide



TeraValue

NEWGEN7 Precautions

Thank you for purchasing NewGen 7 Series of TeraValue.
 If you are a Win 98 user, install Win 98 driver first before using NewGen 7 series.
 For safe use of NewGen7 series, please thoroughly read this User Manual.

- Disconnecting the USB cable while upgrading the firmware will cause a critical damage to the product.
- If the user formats a memory in PC Window, a critical damage may be caused in this device.
- For Win98 OS, install Win98 driver included in the provided CD before using the product.

- This device is certified as a household electronic and electronic wave safety. It can be used anywhere that is permitted.
- TeraValue reserves all copyrights of this Users Guide. copying and using partial or entire part of this Users Guide without permission of TeraValue is strictly prohibited.

NEWGEN7 Warranty

◆ Warranty ◆

1. This product has been manufactured under strict quality control and inspections.
2. For breakdowns occurring within the warranty period (one year) under normal operating conditions, TeraValue provides free repair services.
3. However, if the breakdown is due to reasons mentioned below, TeraValue may charge service fees.
4. Please fill in the Warranty card and keep the warranty card for free repair services.
5. When a problem occurs, contact the sales office of TeraValue at the following address.

- ※ For breakdowns due to the following reasons, service fees will be charged
- Breakdowns due to user's mishandling
 - Breakdowns due to unauthorized remodeling
 - Breakdowns due to natural disasters - fires, seawater, flood, earthquake, etc.

Product Name		Model Name	
Serial Number			
Customer	Name	Tel	
	Add		
Sales Office	Name	Tel	
	Add		Name
Purchase Data		Warranty Period	One Year
Seller	Name	TeraValue	Tel +82-31-788-7375
	Add	Suite 509 Kyounggi Venture Bldg, Korea Design Center, #344-1, Yatap-1dong, Bundang-Gu, Sungnam-si, Kyounggi-Do, 463-070, Korea	
Please fill in Customer, Sales Office and Purchase fields in this form when you purchase a product.			

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC ID:QAWNEWGEN7

Made in Korea

FCC RF INTERFERENCE STATEMENT

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technical for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment,

NEWGEN7

Contents

1	NewGen7 Basic Information	4
	1. Accessories 2. Precautions for safety 3. Features 4. Locating the controls 5. LCD screen(Play, FM Mode etc)	
2	Getting Started	10
	1. Win98 Driver Installation 2. Basic operation(Turning ON , OFF, Basic Functions etc) 3. Connecting to the PC(Using USB cable) 4. Downloading music files and other files into the device 5. Creating folders in the device	
3	Basic Functions	20
	1. Listening to Music(MP3, WMA, OGG etc) 2. Operating the FM Tuner 3. Recording Voice 4. Recording External Audio Source(Encoding) 5. Playlist 6. Bookmark 7. Stopwatch * Other Function – AVATA	
4	Menu (User operating Functions)	31
	1. Setting(Menu – User defined Functions) 1) Sound 2) Display 3) Record 4) Play 5) Timer 6) System 2. Firmware and Font Upgrade	
5	Customer Service	39
	1. Trouble shooting 2. Internet Customer Support 3. Specifications and Warranty	

NEWGEN7

1. Accessories

Basic Contents



Stereo Earphone



Carrying Case



 
Neck strap




Users Guide




Installation CD



USB cable

 


Encoding cable

 


USB Recharger

 Optional Contents



Arm band

 

mini-sized USB cable

※ Accessory items may be added or changed according to functional improvement.

Basic Information

2. Precautions for safety

 
Connecting the USB port while the product is operating may damage the product.



Do not repair, disassemble or remodel the product at your own choice.



Storing the product in a dusty, hot humid or soot-covered place may cause a product breakdown

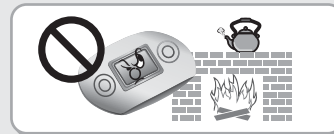

When carrying this device in a pocket or wearing it around the neck, Be careful not to get bruise or hurt other people,



Protect the product from severe shock and vibration, and do not drop the product.



3. Features

1. Graphic Color LCD

NewGen 7 comes with Full colored LCD which displays picture and Screen saver.

2. Various AVATA and Screen Saver Display

You can display AVATA, when turning ON and Listening to music

3. Playback MP3 / OGG / WMA and WMA Encoding

You can OGG, WMA, as well as play MP3

WMA Encoding enables file size to be less than half of MP3 files with the same sound quality

4. High capacity internal rechargeable Battery

Li-Polymer Rechargeable Battery, 550 mA, 3.7V

5. Power Navigation

Perfect GUI, Pop-up Menu, No-Limit of folder numbers, adding to playlist

6. FM Radio

You can listen to FM stations in the world and record FM easily with one-touch

7. Playback speed control

For Language practice

Basic Information

8. High Quality sound

3D sound, Base, Equalizers, 24bit Codec give you live feel of sound

9. Special Functions

Playlist – function to make a list for the file to listen

Bookmark – Bookmarking function

10. Removable storage media

UMS(USB Mass Storage)class USB 1.1 plug & play

11. Upgradable Firmware

You can enjoy the device with upgraded Firmware, as if the device is new

12. Lyric display

Supporting LRC files, image files

13. Supporting Various operating systems


Windows 98 SE / ME / NT / 2000 Pro / XP

Over Mac OS 8.1 / Linux 2.4.18


NEWGEN 7

4. Locating the controls

 Front View

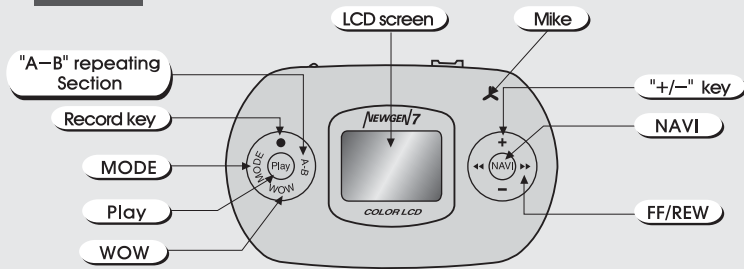


Side view

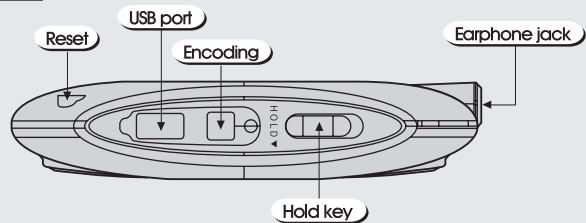 

Basic Information

5. LCD Screen

 ■ Playback Mode

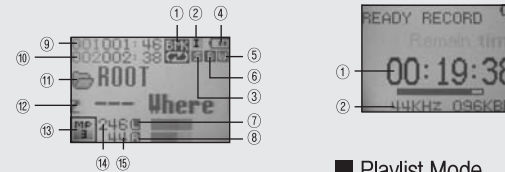

- | | |
|----------------------|----------------------------------|
| 1. Repeating Mark | 9. Song number/play time |
| 2. Intro | 10. Total song number /play time |
| 3. Shuffle | 11. Folder name / Tag |
| 4. Battery Indicator | 12. singer and song title |
| 5. "WOW" Indicator | 13. File type |
| 6. "Bookmark" | 14. Bit rate |
| 7. Equalizer (left) | 15. Sampling Frequency |
| 8. Equalizer (right) | |

■ FM Radio Mode



1. Frequency
2. Preset
3. Mono / Stereo

■ Voice Recording Mode



1. Remaining time for Recording
2. Sampling Frequency / Bit rate

■ Encode Mode



1. Remaining time for Recording
2. Sampling Frequency / Bit rate

■ Playlist Mode



■ Bookmark Mode



■ Stopwatch Mode




1. Time
2. Lap time

NEWGEN 7

1. Win98 Driver Installation

Please complete the steps in this section before attaching your Player to your PC for using removable disk.

 1step : Insert the installation CD into the CD-ROM drive

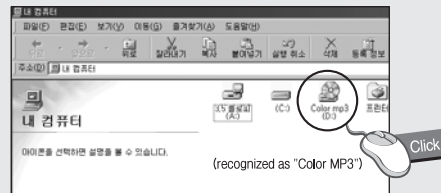

2step : Select Win98 folder

 


3step : Click Install.bat file icon.




Getting Started

4step : Installation is in progress in DOS Mode.
(Please make sure to reboot your computer after Installation)

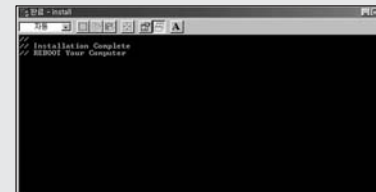

After checking the "Installation complete / Reboot your computer", close the window and reboot your computer

 5step : Connect the USB cable to the USB port of your computer.

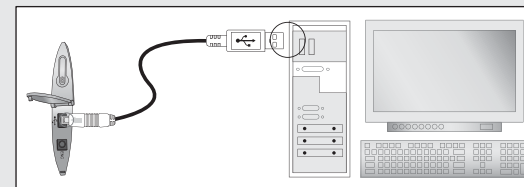


Connect USB cable after turn on the player

※ After connecting the USB cable, you can see the following on LCD screen and computer

- 1 LCD Screen ⇨
- 2 On the computer

 USB Connect !
UMS

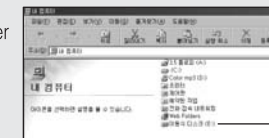

removable disk

NEWGEN7

2. Basic operation (Turning ON, OFF, Basic Functions etc)

1 Turning ON/OFF of power

Turn ON : "Play" button (shortly) Turn OFF : "Play" button (Longer)

 


"Play" (shortly)



"Play" (Longer)

2 Basic operation

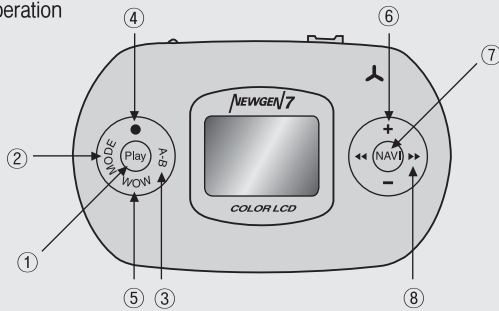

※ short : Press Button shortly / long : Press Button longer

1

- ① Power : ON (Short) / OFF (Long)
- ② Play (Song, file - short)
- ③ Pop-up menu / Execution (In navigation condition - short)

2

- Move to each Function
- MP3 / FM radio / Voice recording / Encoding / Playlist / Bookmark / Stopwatch

3

- ① Play mode change - in stop condition (short)

All - All - PLT - PLT - BMK - BMK - DIR - DIR
1 1 1 1 1 1

- ※ All : all folder / PLT : playlist / BMK : Bookmark / DIR : directory
- ② Repetition zone (short in sequential order while playing)
- ③ Save Radio channel (short while in Radio Playing)

Getting Started

4

- ① Repeat only one song in playing (short) / designate Bookmark (long) - in playing
- ② Begin / stop recording - on recording mode (short)
- ③ Record lap time - on Stopwatch mode (short)
- ④ Move to the previous step - on Main and Navi mode (short)

5

 
- ① 3D sound (short) - in playing
- ② Equalize (long - 6 Eqs) - in playing

6

- ① Raising up volume (short)
- ② Move the cursor up - (short in Navi condition)
- ※ the "-" button is for lowering the volume / the cursor moves down

3 To recharge Battery


- i) Recharge with USB Recharger
 - ii) Recharge by Connecting the USB cable to your computer
- ⇒ Takes 3 hours when fully discharged

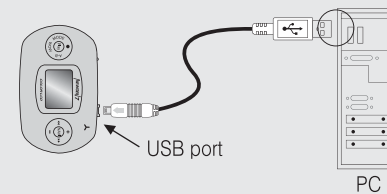

Connect the USB cable after turning on the device

3. Connecting to the PC (Using USB cable)

 1. For User of Win ME / 2000 Pro / XP : the computer recognizes the NewGen 7 as "Removable disk" automatically, when NewGen 7 is connected to the computer and there is no need for any other device driver installation.
 2. For Win 98 User : Install win 98 driver with provided CD.
(Refer to the P. 10)
- ※ The procedure is as following, after installation Win 98 driver and connect device to the computer with USB cable.

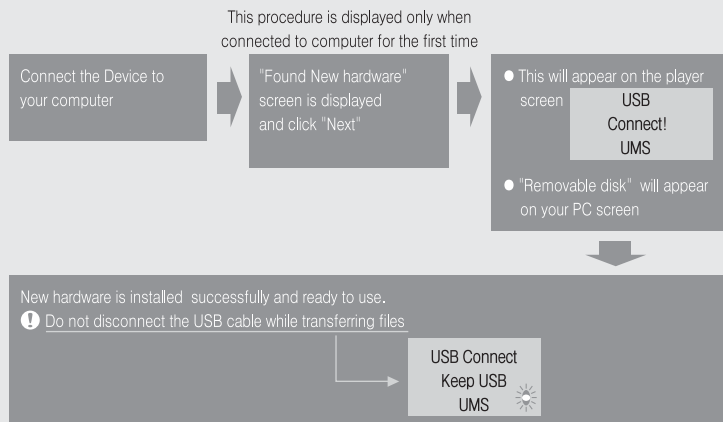

4. Downloading music files and other files into the device

File downloading in Window Explorer

1. Connect the player to your PC : "Removable disk" will appear
2. copy desired files.
3. Paste them in " Removable disk"

 
1 file downloading to the player

– Open window Explorer after connecting the player to your PC



← This will appear on player screen when connected

– "Removable Disk" will appear on the left side of window explorer

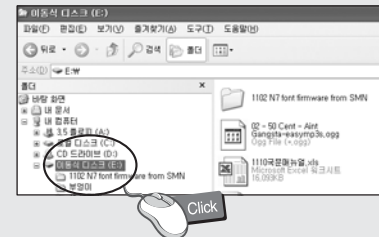


Check the "Removable disk" recognized on the window explorer

NEWGEN 7

② Select the desired files on the PC

 Select the desired files : place cursor on them and click on right mouse button.

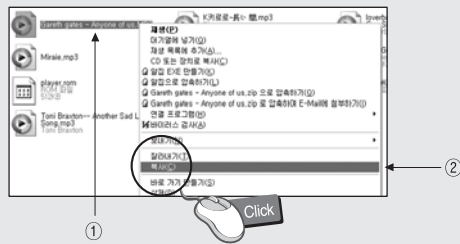

1. Select the desired files
2. Select "copy" pressing right button of mouse

Getting Started

③ Paste the copied files to "Removable disk"



Paste the copied files to "Removable disk"

 
1. Open "window Explorer"
2. Double click on "Removable disk"
3. Press the right button of mouse and select "paste" on "Removable disk"
4. Download copied files to "Removable disk"

5. Creating folders in the device

Create Folders to sort out various files.

Ex) songs in "song folder" / language files in "language folder"

1 Creating folders in the device

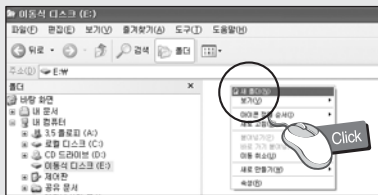

Creating folders in the device

"Removable disk" ⇒ Press the right mouse button ⇒ Select "New folder" ⇒ Create "New folder"

Getting Started

2 To Rename the existing folder

Press the right mouse button on existing folder
 – Select "Rename" and Type the desired name.

※ copy the desired files to creat folder.

